

SUPPLEMENT
UNCLASSIFIED


X66-92865 e.1

NASA

PROJECT GEMINI

**familiarization
manual**

**RENDEZVOUS and DOCKING
CONFIGURATIONS**

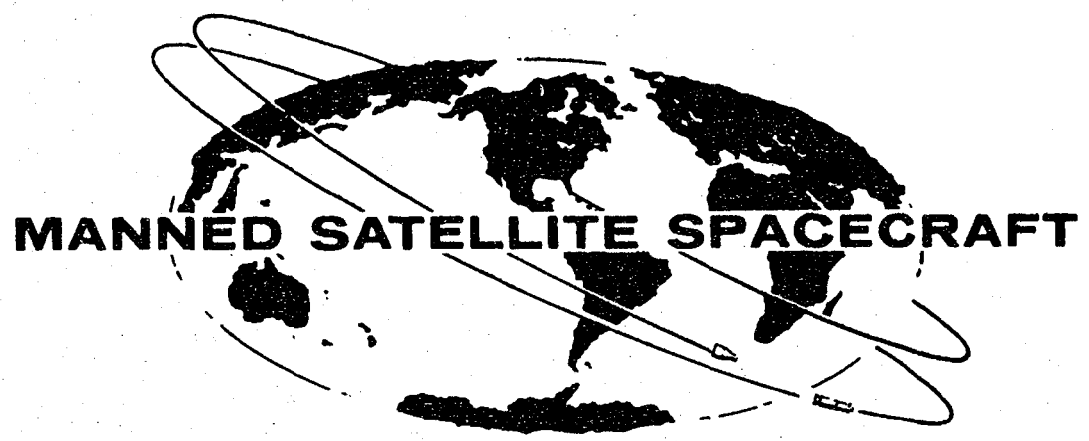

MCDONNELL

UNCLASSIFIED

CONFIDENTIAL

UNCLASSIFIED
UNCLASSIFIED

MAC
CONTROL NO. C-120283

NASA

X66-92868

PROJECT GEMINI

SUPPLEMENT

familiarization manual

SEDR 300

COPY NO. 207

RENDEZVOUS and DOCKING CONFIGURATIONS

THIS PUBLICATION SUPPLEMENTS
SEDR 300 VOLUME II

LIBRARY

MAR 26 1970

MANNED SPACECRAFT CENTER
HOUSTON, TEXAS

MCDONNELL

UNCLASSIFIED

NOTICE: This material contains information affecting the national defense of the United States within the meaning of the Espionage Laws, Title 18, U.S.C., Sections 793 and 794, the transmission or revelation of which in any manner to an unauthorized person is prohibited by law.

GROUP-4
DOWNGRADED AT 3-YEAR INTERVALS;
DECLASSIFIED AFTER 12 YEARS

31 MAY 1965

UNCLASSIFIED

~~CONFIDENTIAL~~
UNCLASSIFIED

GUIDANCE and CONTROL SYSTEM



Section VIII

TABLE OF CONTENTS

TITLE	PAGE
GENERAL.....	8-3
ATTITUDE CONTROL AND MANEUVER ELECTRONICS	8-13
INERTIAL GUIDANCE SYSTEM	8-41
HORIZON-SENSOR SYSTEM	8-183
RENDEZVOUS RADAR SYSTEM	8-211
COMMAND LINK	8-249
RENDEZVOUS EVALUATION POD.....	8-265
TIME REFERENCE SYSTEM	8-277
PROPULSION SYSTEM	8-311

UNCLASSIFIED

8-1/-2

 
~~CONFIDENTIAL~~

UNCLASSIFIED

~~CONFIDENTIAL~~
SEDR 300



PROJECT GEMINI



GUIDANCE AND CONTROL - GENERAL

GENERAL

The Gemini spacecraft is equipped with highly advanced guidance and control systems. Seven separate systems provide the guidance information and control capability required to perform a rendezvous mission. In addition to the seven on-board systems a target vehicle is required. Two types of target vehicles are utilized; the Agena target vehicle and the rendezvous evaluation pod. Guidance information can be either measured or computed as the occasion demands. The references utilized for guidance information are: inertial measurements, earth horizon, radar target and time. Attitude control is provided about three (pitch, roll, and yaw) axes and is either manual or automatic as desired. A mode selector allows the pilot to select the type of control used. An attitude hand controller, located for use by either pilot, is utilized for manual attitude control. Velocity control is provided along three (longitudinal, vertical, and lateral) translational axes. A maneuver controller is utilized for manual velocity control. No provision is made for automatic velocity control. Information required by the pilot for manual attitude and velocity control is displayed by the appropriate guidance system. Control of the Agena target vehicle is provided by the command link system. Guidance information and control capability for the rendezvous mission are provided by the following:

- a. Attitude Control and Maneuver Electronics (ACME).
- b. Inertial Guidance System (IGS).
- c. Horizon Sensors

UNCLASSIFIED

8-3

~~CONFIDENTIAL~~

~~CONFIDENTIAL~~
SEDR 300

UNCLASSIFIED



PROJECT GEMINI



- d. Rendezvous Radar System.
- e. Command Link.
- f. Rendezvous Evaluation Pod. (REP)
- g. Time Reference Systems (TRS).
- h. Propulsion System.

SYSTEM FUNCTIONS

The various guidance and control systems are all functionally related. The functional relationship between each of the systems is illustrated in Figure 8-1.

Attitude Control and Maneuver Electronics

The attitude control and maneuver electronics system converts input signals to thruster firing commands for the propulsion system. Input signals to ACME are provided by the attitude hand controller, the IGS, or the horizon sensors depending on the mode of operation.

Inertial Guidance System

The inertial guidance system provides inertial attitude and acceleration information, guidance computations, and displays. The inertial attitude and acceleration information is used for computations and display purposes. Computations are used for back-up ascent guidance, rendezvous guidance and re-entry guidance. Displays are utilized by the crew for reference information and as a basis for manual control.

UNCLASSIFIED

8-1
~~CONFIDENTIAL~~

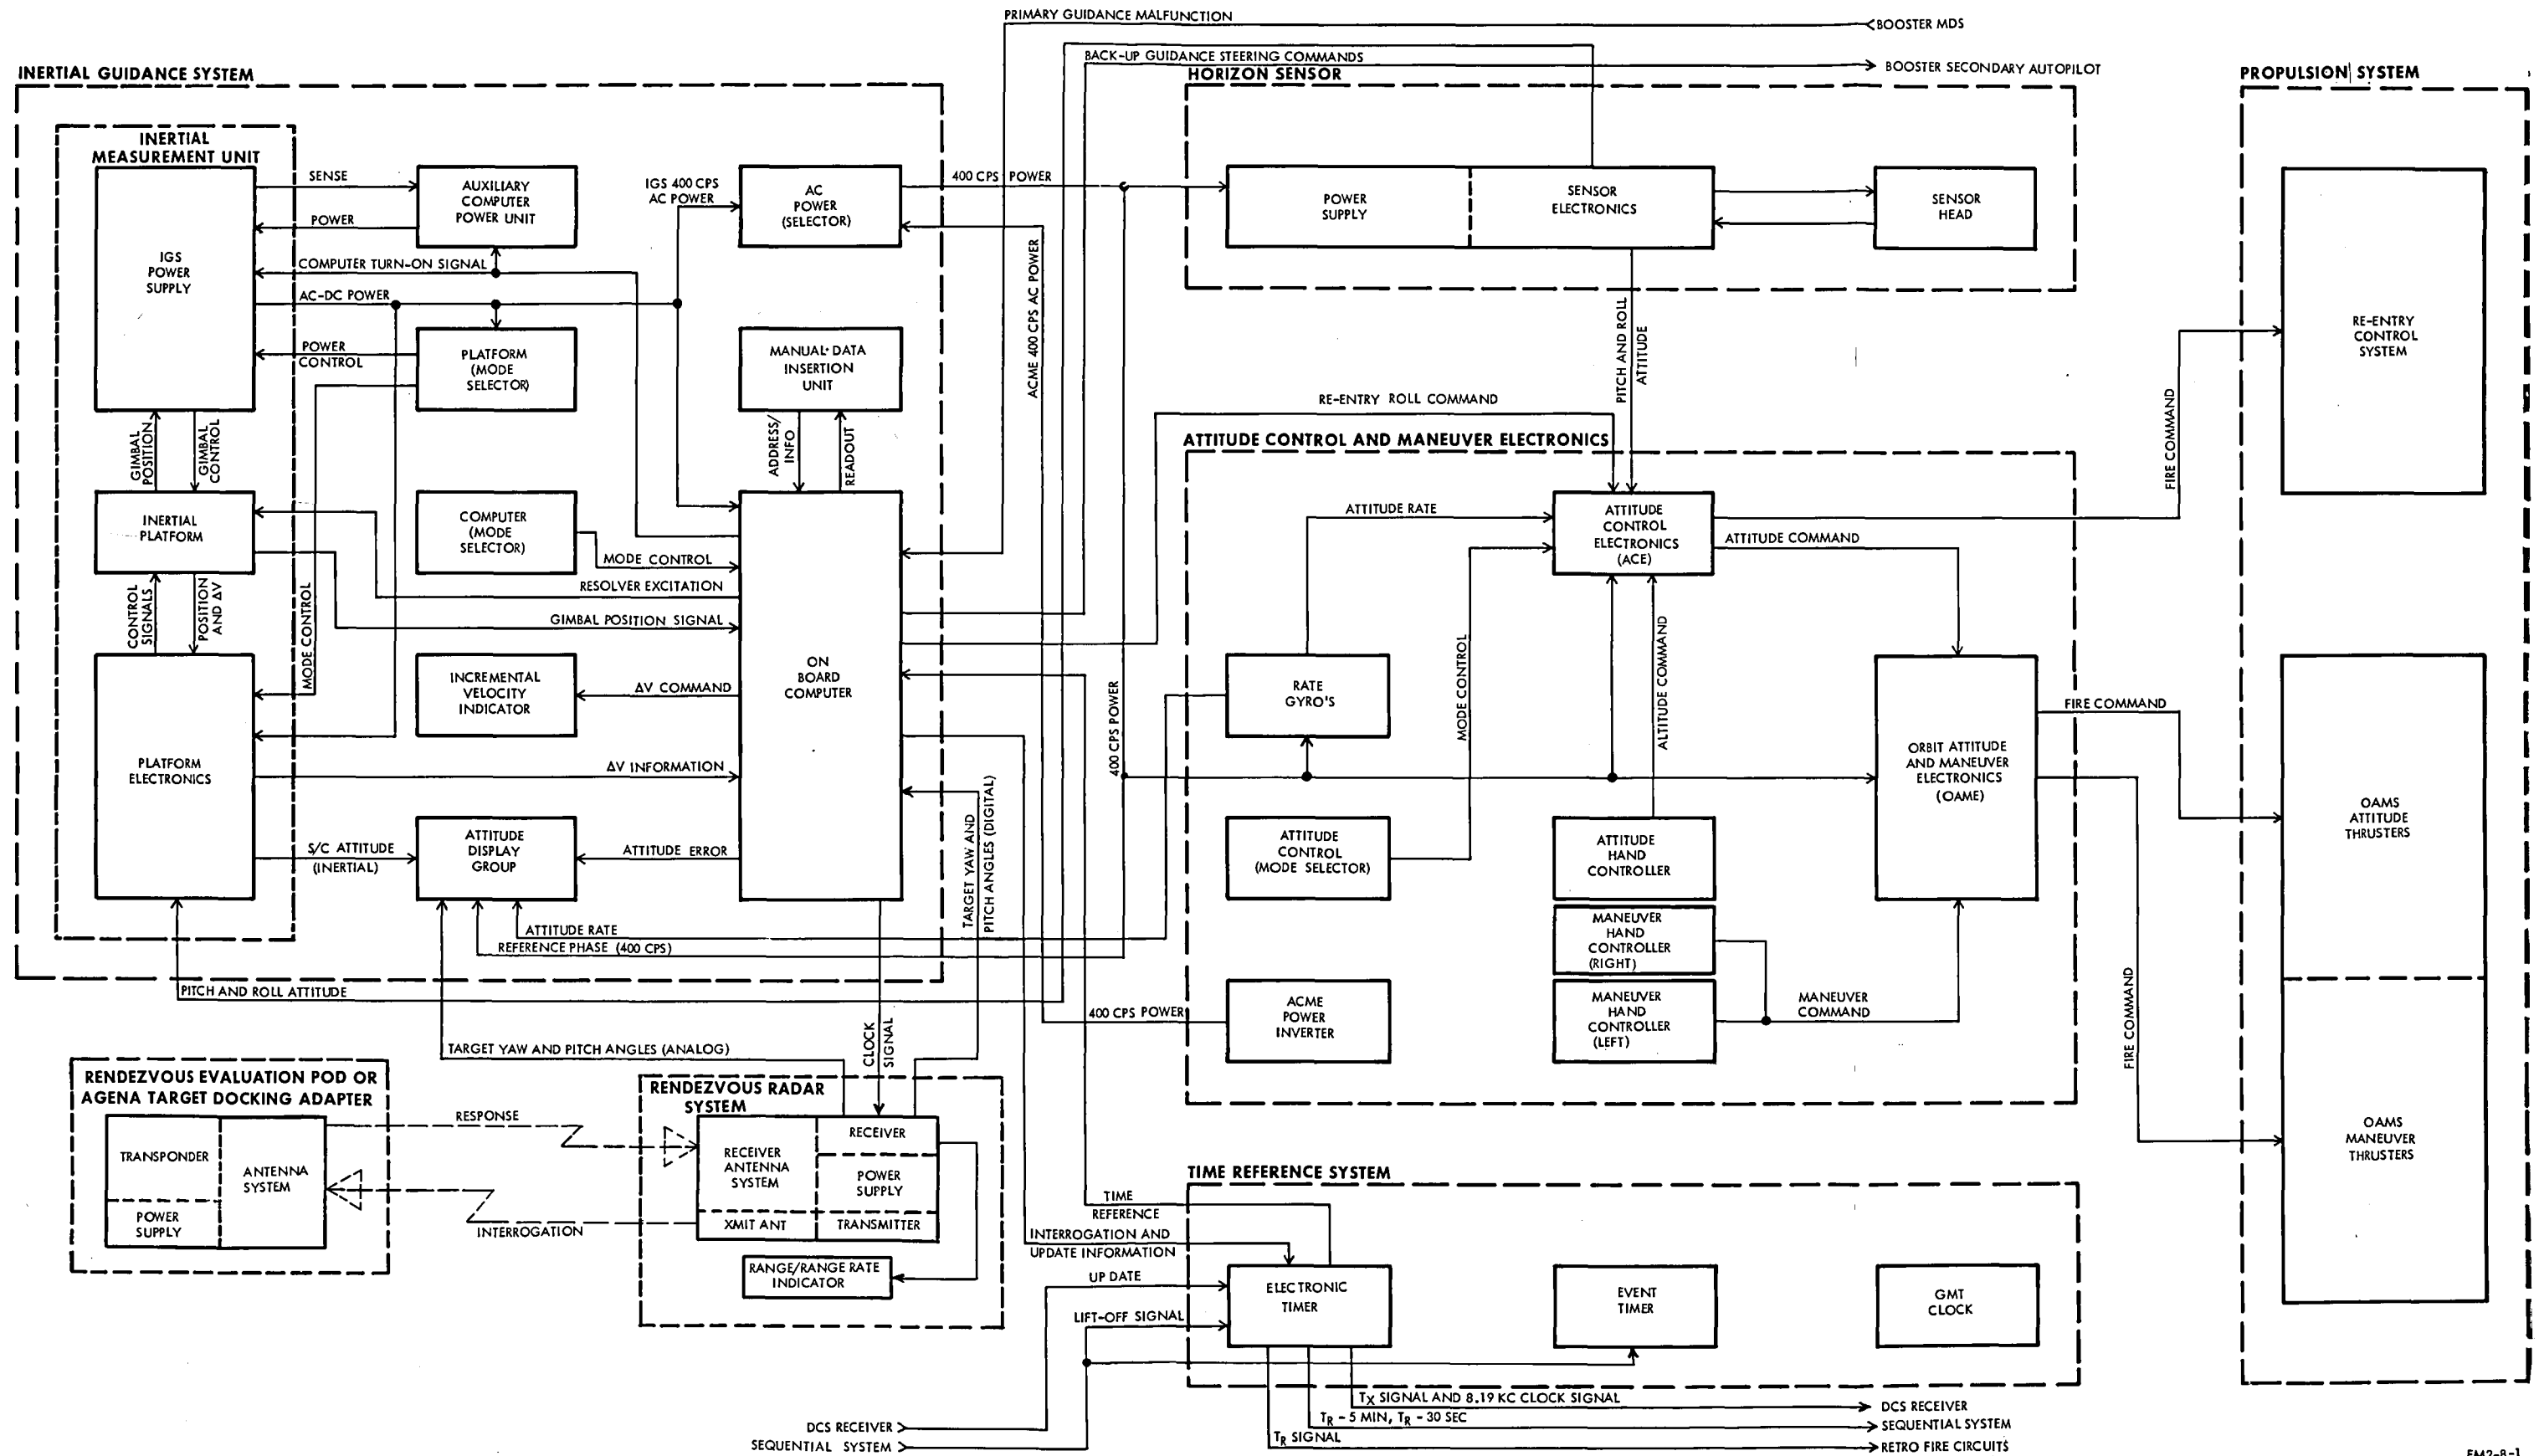



Figure 8-1 Guidance and Control Functional Block Diagram

UNCLASSIFIED

~~CONFIDENTIAL~~
SEDR 300



 PROJECT GEMINI



Horizon Sensors

Horizon sensors provide a reference to the earth local vertical during orbit. Pitch and roll error signals are supplied to ACME for automatic attitude control and to the IGS for platform alignment.

Rendezvous Radar

Rendezvous radar provides target range, range rate and angle information. Target information is used for rendezvous computations and for display purposes. A radar indicator displays target range and range-rate information. Target elevation and yaw angles are selectable for display on the attitude indicator.

Command Link

The command link provides a control capability over the Agena target vehicle. Coded commands, transmitted either through the radar or the umbilical, allow the pilot to activate or de-activate the various systems of the Agena vehicle.

Rendezvous Evaluation Pod

The rendezvous evaluation pod is the target for a simulated rendezvous mission. The pod is carried into orbit in the equipment adapter section of Gemini. Once in orbit the pod is ejected and its systems activated. A radar transponder and acquisition lights in the pod allow the Gemini pilots to perform rendezvous exercises.

UNCLASSIFIED

8-6

~~CONFIDENTIAL~~

UNCLASSIFIED

~~CONFIDENTIAL~~
SEDR 300



PROJECT GEMINI



Time Reference System

The time reference system provides a time base for all guidance and control functions. Time is displayed for pilot reference in both clock and digital form. The TRS also provides timing signals to the computer and the sequential system.

Propulsion System

The propulsion system provides the thrust required for spacecraft maneuvers. Thrusters are provided for both translational and attitude control. Firing commands for the propulsion system are provided by ACME.

GUIDANCE AND CONTROL MISSION

The functions of the guidance and control system are dependent on mission phase. The mission is divided into five phases for explanation purposes. The phases are: pre-launch, launch, orbit, retrograde, and re-entry.

Pre-Launch Phase

Pre-launch phase is utilized for check-out and programming of guidance and control systems. Parameters required for insertion in the desired orbit are inserted in the computer. The IMU is aligned to the local vertical and the desired launch azimuth. Power is turned on to the various systems and mode selectors are placed in their launch position. Check-out and parameter insertion are performed in the last 150 minutes prior to launch.

UNCLASSIFIED

87
~~CONFIDENTIAL~~



Launch Phase

Guidance and control from lift-off through SECO is provided by the booster guidance system. However, in case of booster guidance malfunction the IGS can assume control. Provision is made for either automatic or manual switchover to back-up (Gemini) guidance. Figure 8-2 indicates both methods of switchover and the back-up method of controlling the booster during ascent. The IGS monitors attitude and acceleration parameters throughout the launch phase. Ground tracking information is used to continuously update computer parameters. At SECO the remaining velocity required for insertion is displayed. The command pilot will, after separation, use the propulsion system to increase spacecraft velocity as required for insertion in the desired orbit. Insertion will take place approximately 580 miles down range at an inertial velocity of approximately 25,770 feet per second.

Orbit Phase

Orbit phase is utilized for checkout and alignment of systems, rendezvous maneuvers and preparation for retrograde and re-entry. Immediately after insertion a series of system checks will be performed to assure the capability of guidance and control systems. Guidance computations and measurements are checked for accuracy against ground tracking information. Systems are updated and aligned by ground command (DCS) or by the pilot. After completion of system checks the catch-up and rendezvous maneuvers can be performed. During the final orbit guidance and control systems are re-aligned in preparation for retrograde and re-entry.

PROJECT GEMINI


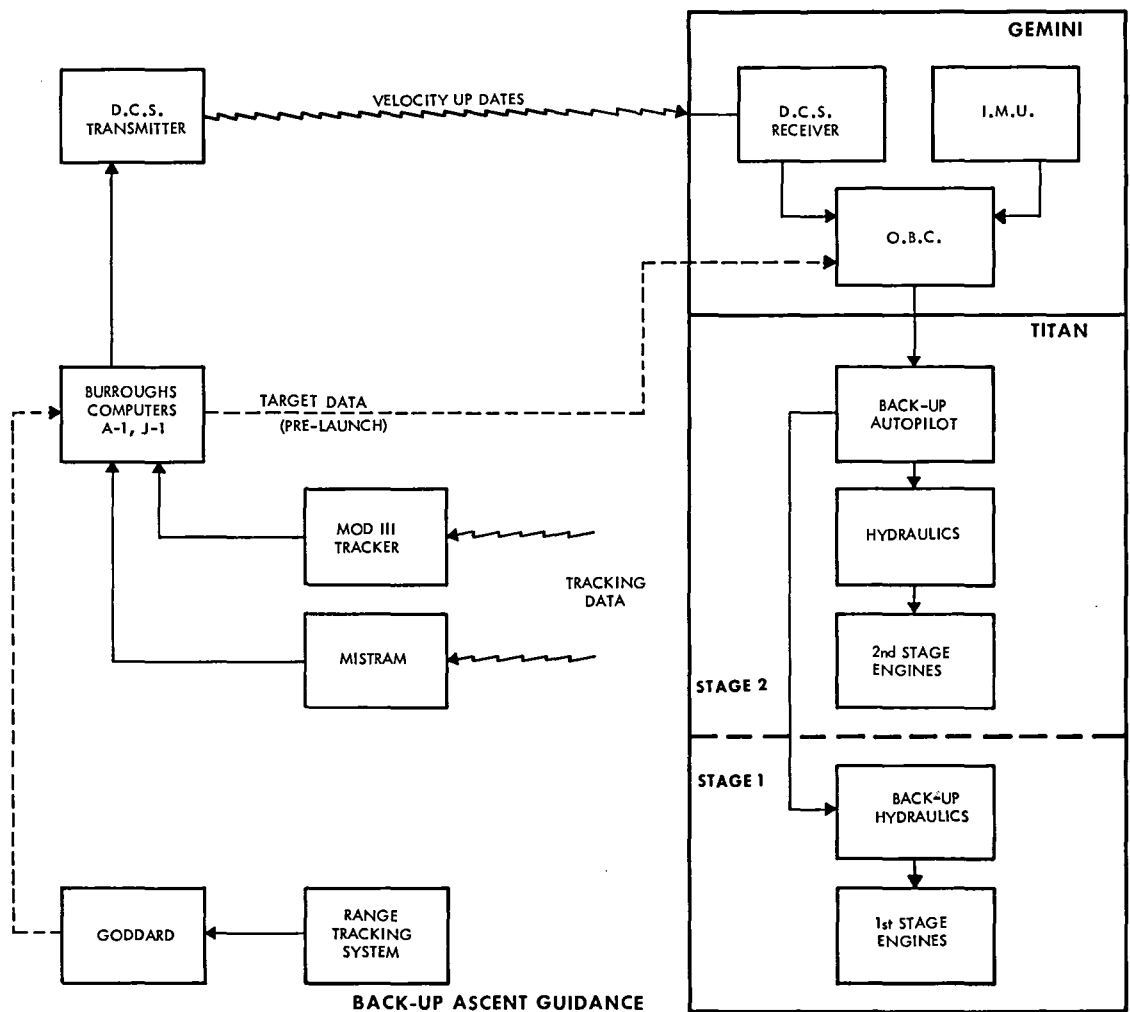


Figure 8-2 Gemini Ascent Guidance (Back-Up)


FM2-8-2

UNCLASSIFIED

~~CONFIDENTIAL~~
SEDR 300

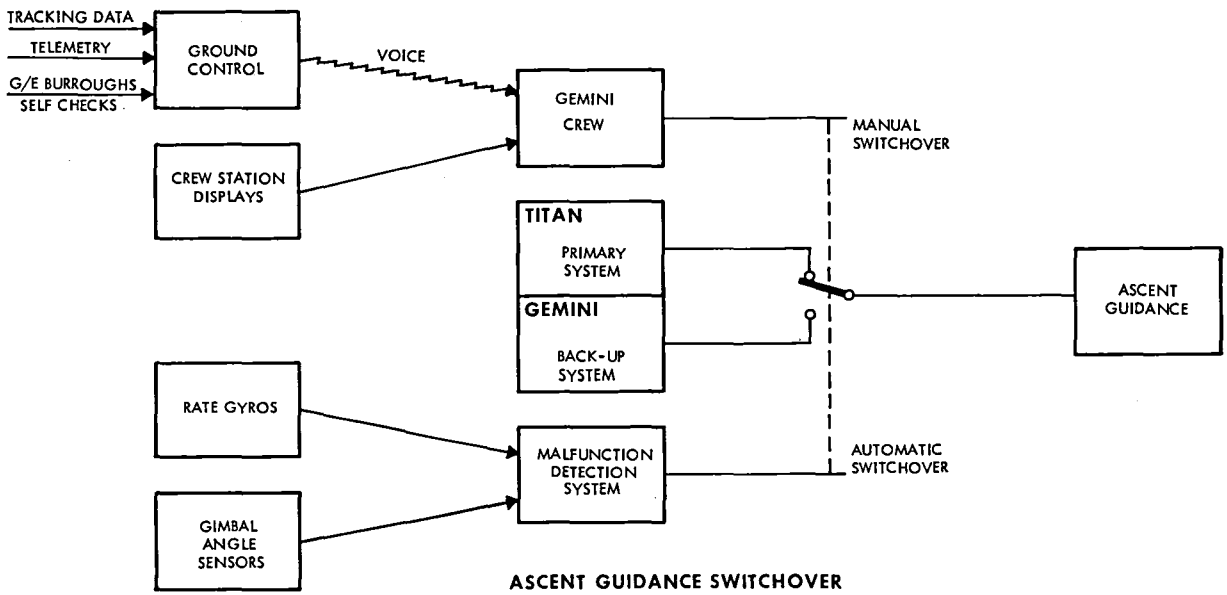

PROJECT GEMINI

 

Retrograde Phase

Retrograde phase begins approximately five minutes before retrofire. The computer is placed in re-entry mode and begins collecting data for re-entry computations. The time reference system provides indications at T_R-256 seconds, T_R-30 seconds, and T_R . At T_R-256 seconds a minus 16 degree bias is placed on the pitch attitude needle. The propulsion system is switched from orbit attitude and maneuver to re-entry control. Spacecraft attitude is controlled manually during retrograde. Retrograde acceleration and attitude are monitored by the IGS and velocity changes are displayed for reference.

Re-Entry Phase

Re-entry phase begins immediately after retrofire. The event timer counts through zero at retrograde and will be counting down from one hundred minutes during re-entry phase. After retrofire the retrograde adapter and horizon scanner heads are jettisoned. Shortly after retrograde the pilot orients the spacecraft to re-entry attitude, (0° pitch, 180° roll, 0° yaw). Re-entry attitude is held until the computer re-entry program starts. At approximately 400,000 feet altitude the computer re-entry program starts and the pilot has a choice of manual or automatic control. For manual control the pilot selects RE-ENT RATE CMD or for automatic control the RE-ENT mode is utilized. In the automatic mode the computer controls spacecraft roll attitude. For either mode of control the flight director is referenced to the computer and indicates computed attitude commands. The purpose of the computer re-entry program is to control the point of touchdown and control re-entry heating. By controlling the

UNCLASSIFIED

8-10
~~CONFIDENTIAL~~

UNCLASSIFIED

~~CONFIDENTIAL~~
SEDR 300



spacecraft roll attitude and rate it is possible to change the down range touch-down point by approximately 500 miles and the cross range touchdown by 40 miles left or right. The relationship between roll attitude or rate and direction of lift is illustrated in Figure 8-3. The roll control starts at approximately 400,000 feet and ends at 90,000 feet. Re-entry phase ends at 80,000 feet when the computer commands an attitude suitable for drogue chute deployment.

UNCLASSIFIED

~~CONFIDENTIAL~~

CONFIDENTIAL

 PROJECT GEMINI 

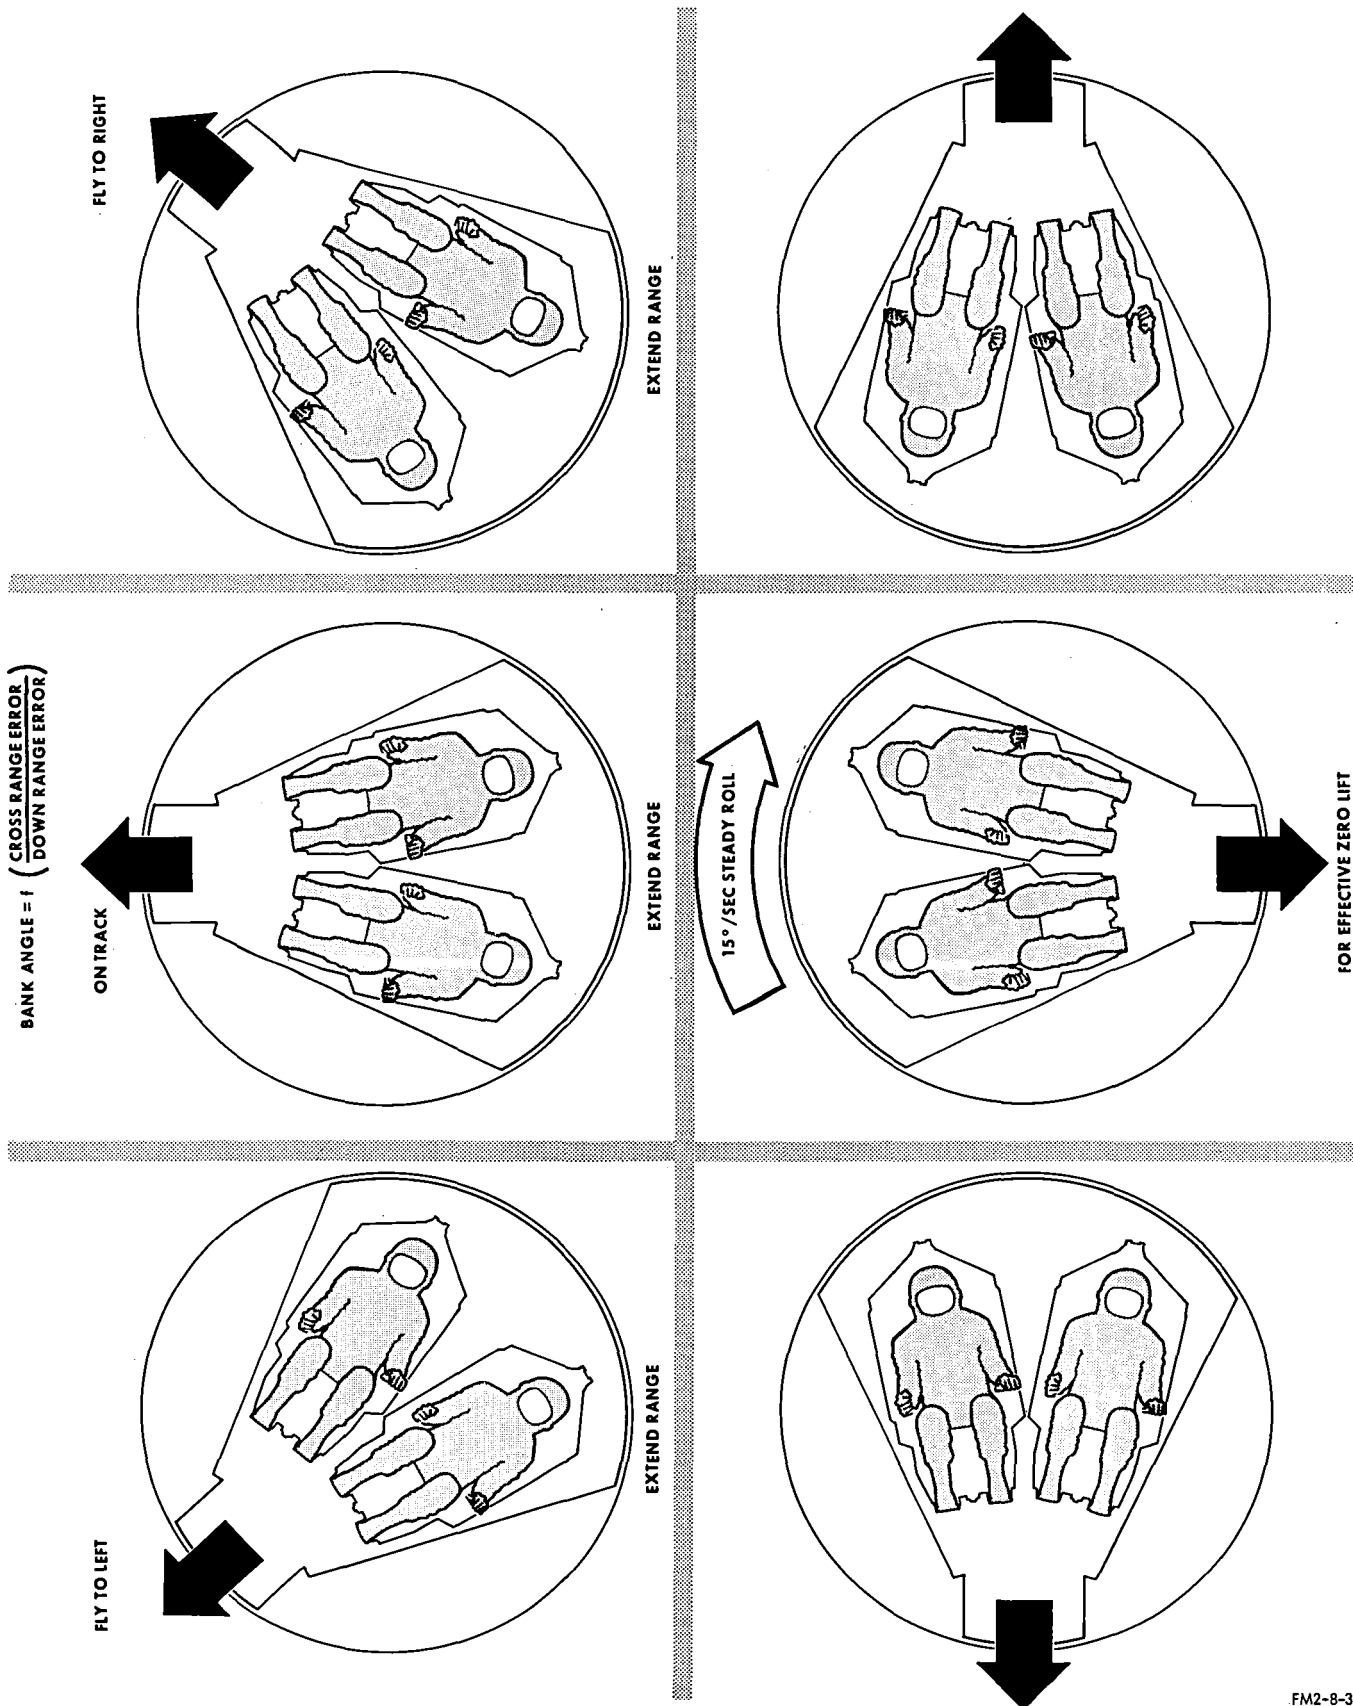


Figure 8-3 Re-entry Control

FM2-8-3

UNCLASSIFIED

~~CONFIDENTIAL~~

ATTITUDE CONTROL AND MANEUVERING ELECTRONICS

TABLE OF CONTENTS

TITLE	PAGE
SYSTEM DESCRIPTION	8-15
SYSTEM OPERATION	8-15
GENERAL	8-15
FUNCTIONAL OPERATION (ACME)	8-16
MODE OPERATION	8-20
SYSTEM UNITS	8-28
ATTITUDE CONTROL ELECTRONICS (ACE)	8-28
ORBIT ATTITUDE AND MANEUVER ELECTRONICS (OAME)	8-36
RATE GYRO PACKAGE	8-39
POWER INVERTER PACKAGE	8-39

UNCLASSIFIED

UNCLASSIFIED

8-13

~~CONFIDENTIAL~~



UNCLASSIFIED
~~CONFIDENTIAL~~
SEDR 300

PROJECT GEMINI

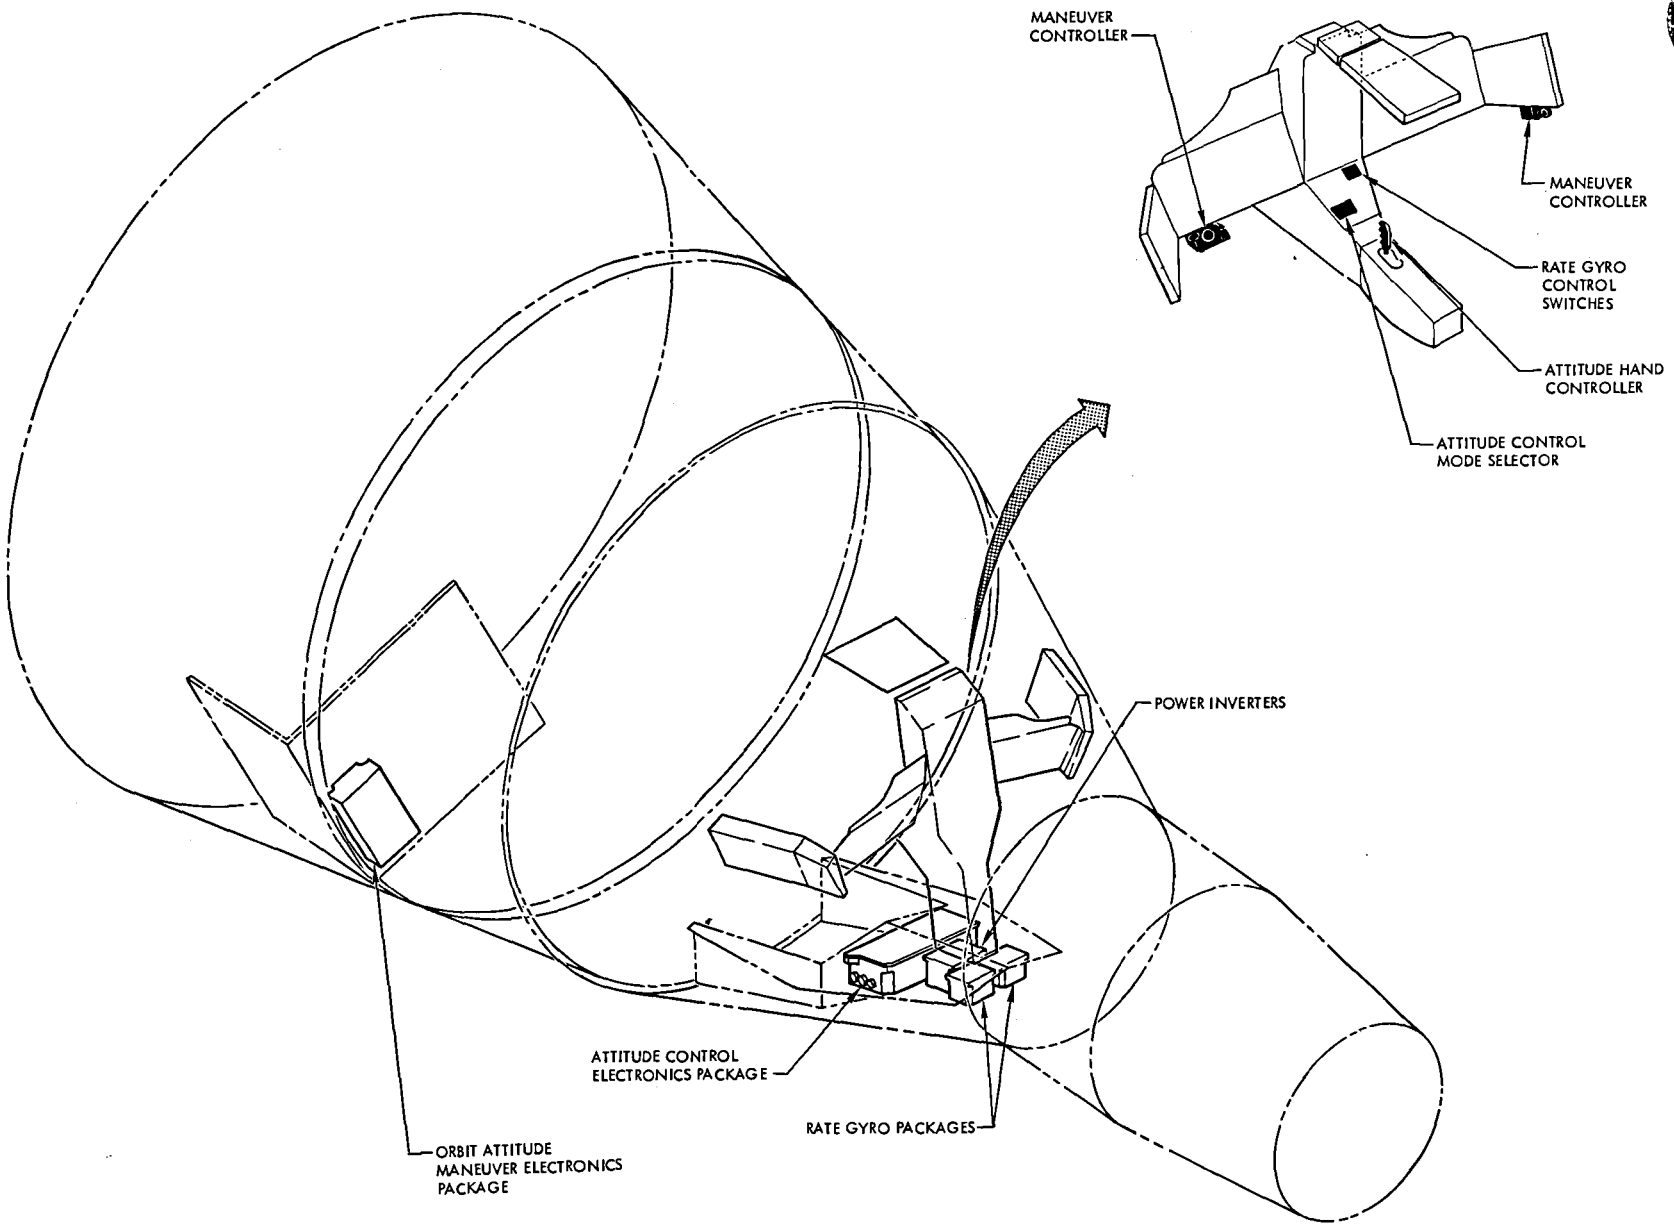
 


Figure 8-4 Attitude Control and Maneuver Electronics

FM2-8-4

UNCLASSIFIED
~~CONFIDENTIAL~~

FORM 8-64


UNCLASSIFIED

~~CONFIDENTIAL~~

SEDR 300



 PROJECT GEMINI



ACME SYSTEM

SYSTEM DESCRIPTION

The Attitude Control and Maneuver Electronics (ACME) System (Figure 8-4) provides the control circuitry to attain and/or maintain a desired spacecraft attitude or velocity. The ACME accepts signal inputs from the attitude hand controller, maneuver hand controller, horizon sensors, platform or the computer; processes the signal(s), and applies a firing command to the appropriate propulsion system solenoid valves. ACME is composed of four separate sub-systems: Attitude Control Electronics (ACE), Orbit Attitude and Maneuver Electronics (OAME), a Power Inverter and two identical Rate Gyro Packages. The ACE, power inverter and rate gyro packages are installed in the center bay of the re-entry module. The OAME package is located in the equipment section of the adapter. Total weight of the ACME System is approximately 40 pounds.

The ACME provides the capability of automatic or manual attitude control, with seven separate, selectable modes of operation. The horizon sensor, the inertial platform or the computer provide the reference for automatic modes of operation. The attitude hand controller provides the input signals for manual modes of attitude control, and the maneuver hand controller provides input signals for translational maneuvers.

SYSTEM OPERATION

GENERAL

The ACME provides attitude control, automatic or manual, during all flight phases of the spacecraft mission. Rate gyro inputs to ACE are used to damp spacecraft

UNCLASSIFIED

8-15

~~CONFIDENTIAL~~

UNCLASSIFIED

~~CONFIDENTIAL~~

SEDR 300



PROJECT GEMINI



attitude rates. Signal inputs are modified by ACME logic and converted into fire commands for the propulsion system.

The ACME functional modes of control are Horizon Scan, Rate Command, Direct, Pulse, Re-entry Rate Command, Re-entry and Platform. Each mode provides a different signal input (or combination of inputs) to be processed by ACE for routing to RCS or OAME solenoid valve drivers. The modes of control are separated into two basic types; automatic attitude control modes (horizon scan, re-entry and platform) and manual attitude control modes (rate command, direct, pulse and re-entry rate command). Display information from control panel indicators is used as reference when manual control modes are selected. Reference information for manual control is supplied by guidance and control sub-systems, and consists of the following: attitude, attitude rates, bank angle and roll commands (from the attitude display group), velocity increments (from the incremental velocity indicator) and range and range rate (from the radar indicator). The control panels also contain the control switches necessary for selection of ACME power and logic circuits and mode of attitude control, along with selection switches for the various ACME redundant options.

FUNCTIONAL OPERATION (ACME)

Attitude Control (See Figure 8-5)

Commands or error signals from the computer, platform, horizon sensors, rate gyros and attitude hand controllers are converted by the ACE into thruster firing commands. The firing commands are routed by a valve driver select system to the RCS or the OAMS attitude solenoid valve drivers.

UNCLASSIFIED

8-16

~~CONFIDENTIAL~~

PROJECT GEMINI

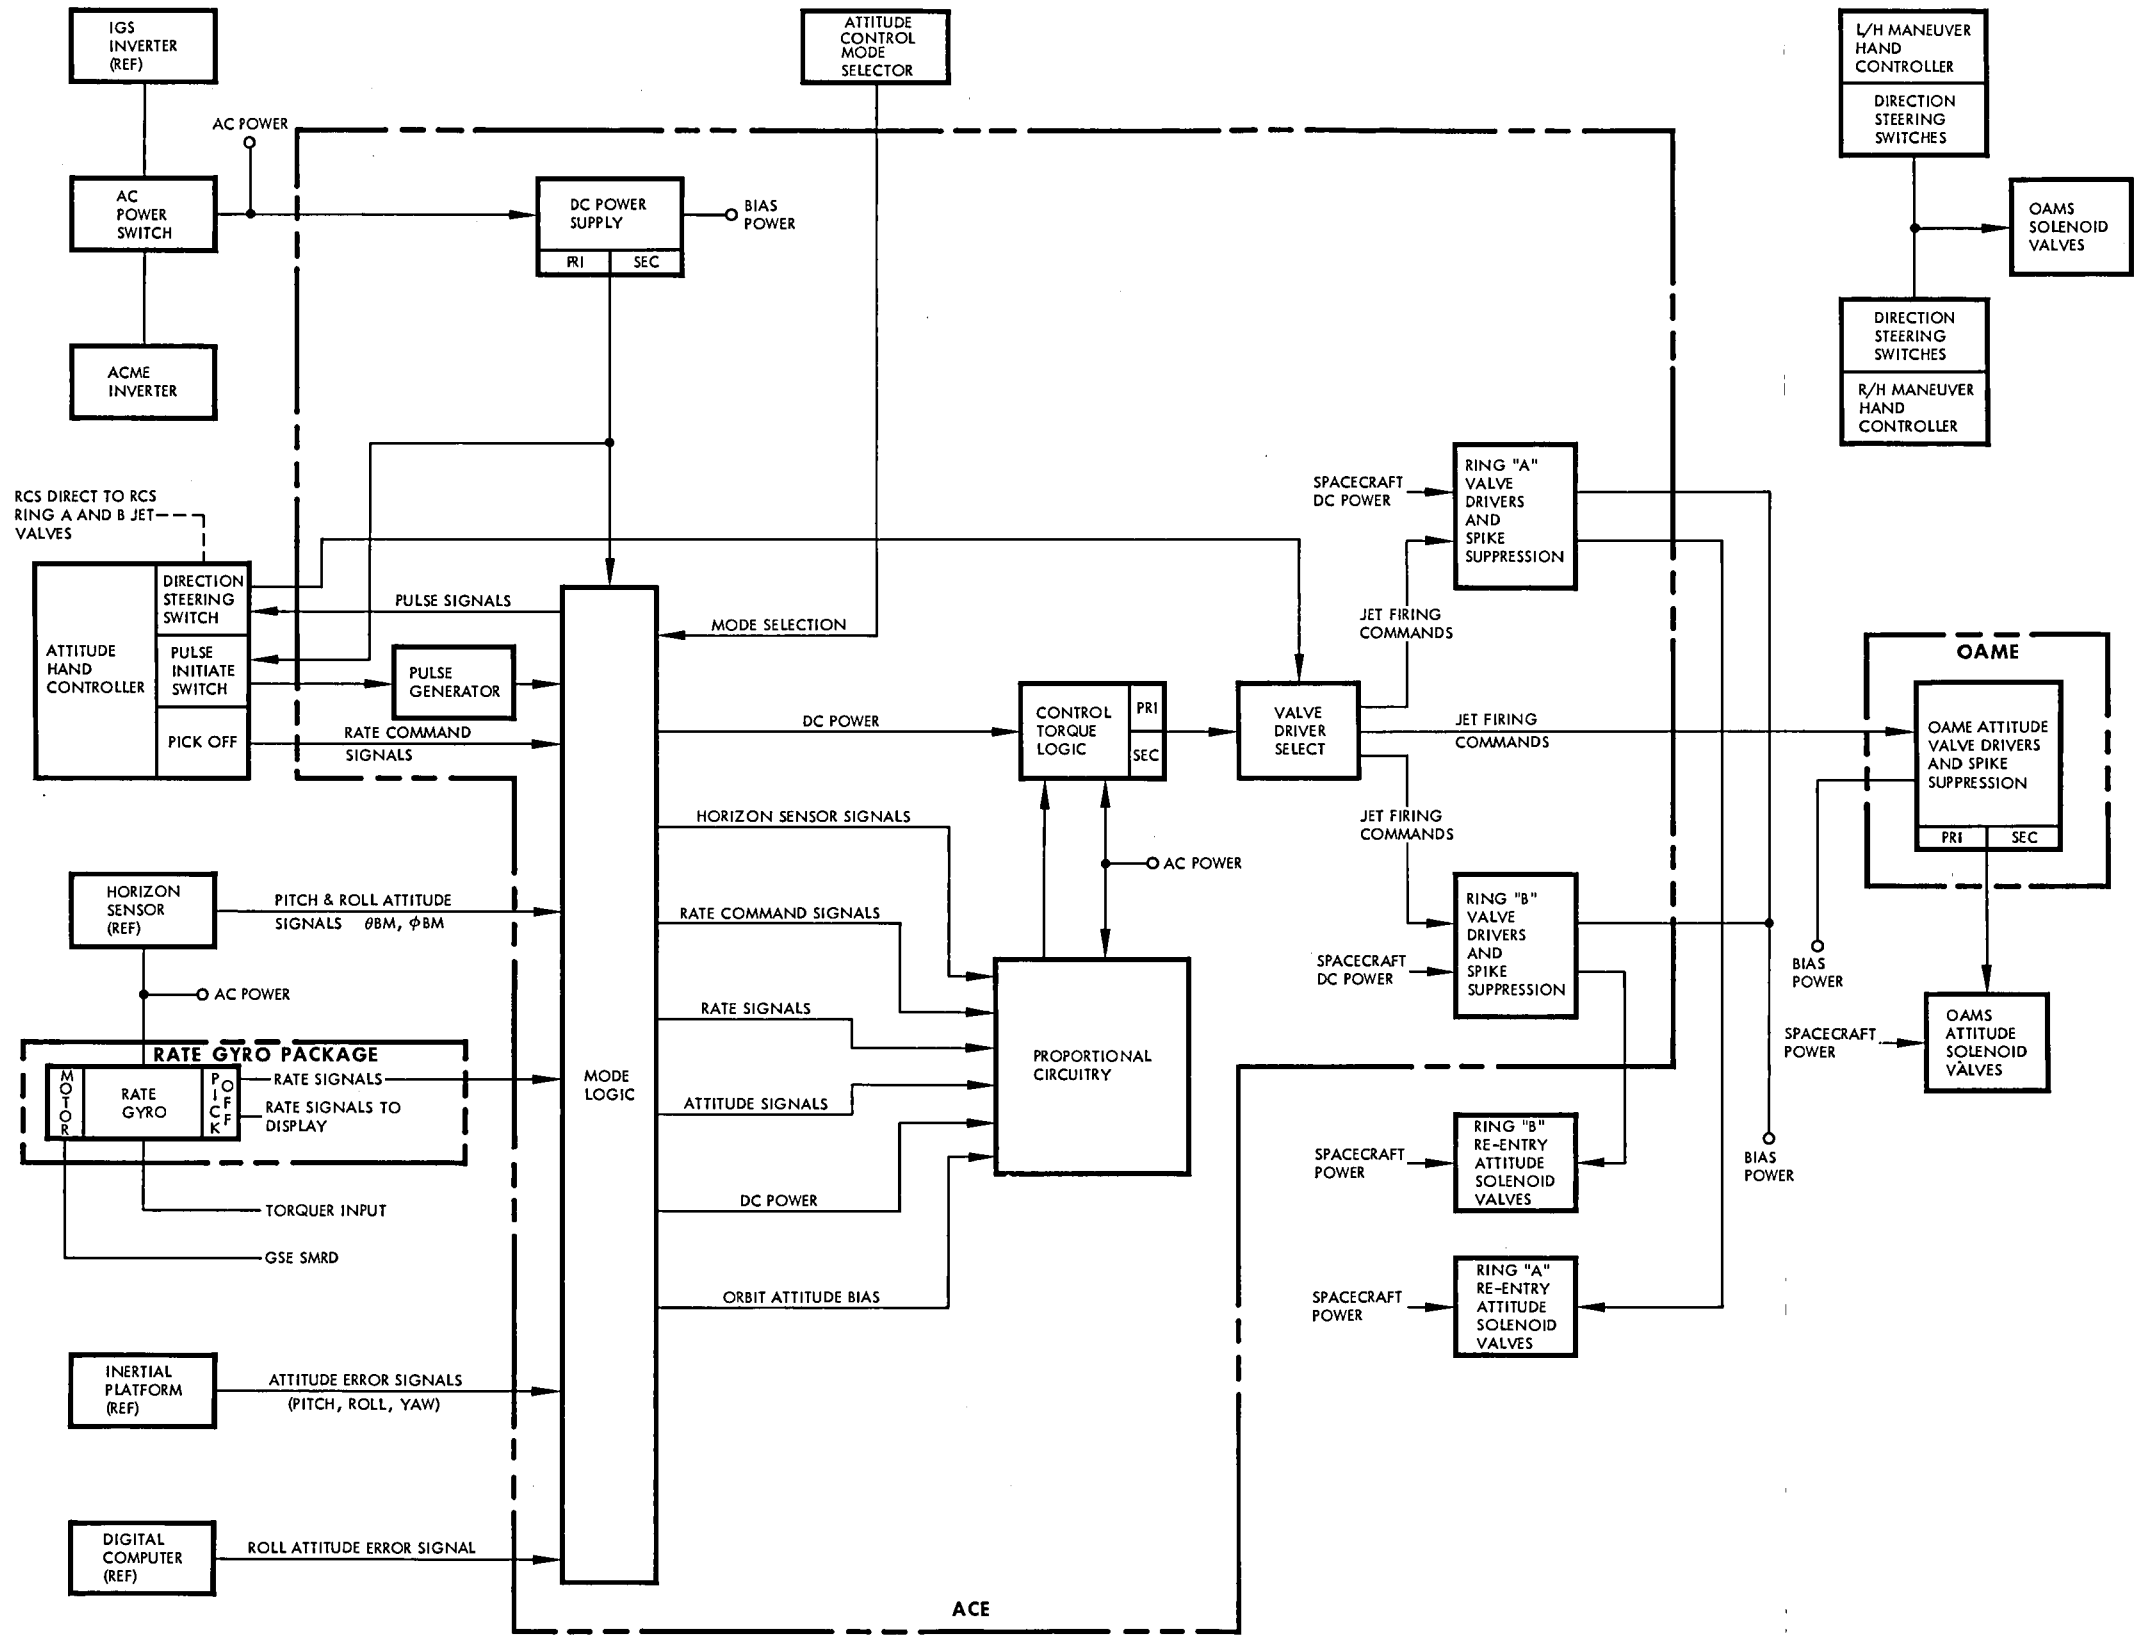


Figure 8-5 ACME Functional Block Diagram

UNCLASSIFIED

~~CONFIDENTIAL~~
SEDR 300



PROJECT GEMINI



Signal inputs to the ACE are of three types: AC attitude signals, DC attitude signals and AC attitude rate signals. These signals are selected and distributed by "ACE mode logic" switching circuits. Selected signals are channeled through the "proportional circuitry" which amplifies, sums and demodulates the signal inputs into a DC analog output. Horizon Sensor (DC attitude) signals are converted to AC prior to entering the proportional circuitry. The analog signals are then converted by "control torque logic" switch circuitry to a positive or negative discrete, the output consisting of either positive jet or negative jet firing commands. These commands are routed by the "valve driver select" system to the "RCS, (ring A and/or ring B) valve drivers", or to the "OAMS attitude valve drivers" for an "on" firing command to the appropriate thruster valves. Zener diode spike suppression circuits, limit the voltages generated across the solenoid valves during current interruptions.

Attitude Hand Controller

Spacecraft attitude may be manually controlled by use of the attitude hand controller and a visual reference. Controller outputs are "rate," "pulse" or "direct" command signals, (plus a hand controller position output to telemetry) depending on the control mode selection. Output signals are produced by (positive or negative attitude) handle movements, about each respective axis, from the centered position. Rate signals produced are proportional to the amount of control displacement from a center deadband. Direct and/or pulse signals are produced when the hand controller is displaced past a preset threshold or "deadband." Pulse signals trigger a calibrated "on" time of a pulse generator in ACE. The control handle must be returned to a neutral position before another single

UNCLASSIFIED

8-18

~~CONFIDENTIAL~~

UNCLASSIFIED

~~CONFIDENTIAL~~
SEDR 300



PROJECT GEMINI



pulse can be commanded. Details of each mode of control may be found in the Mode Operation paragraph.

RCS Direct

The RCS direct mode is selectable as an alternate means of manually firing the RCS thrusters, and by-passes the ACE. The DIRECT position of each of the RCS RING A and/or RING B switches provides a circuit ground to 12 attitude hand controller "RCS direct" switches. The ground is then applied directly to the required thruster solenoid valves through appropriate hand controller displacements. This RCS mode of operation is intended for standby or emergency control only.

Maneuver Hand Controller

Translational maneuvers of the spacecraft, in the horizontal, longitudinal and vertical planes, are commanded by the maneuver hand controller. Displacement of the controller from the centered or neutral position to any of the six translational directions produces a "direct" on command to the respective solenoid valve drivers.

Rate Gyros

The function of the rate gyro package is to sense angular rate about the pitch, yaw and roll axes of the spacecraft and provide an output signal proportional to that sensed rate. Selection of certain control modes provides gyro inputs to ACE for angular rate damping. Additional information concerning the rate gyros may be found in the paragraph on System Units.

UNCLASSIFIED

8-19
~~CONFIDENTIAL~~



PROJECT GEMINI



Power Inverter

The power inverter provides the ACME and horizon sensors with AC power. Spacecraft DC power is converted to 26V, 400 cps. (The GIS inverter provides the primary source of AC excitation.) The ACME inverter is utilized when the IMU is off. Additional information of the power inverter may be found in the paragraph on System Units.

MODE OPERATION

Control of spacecraft attitude is accomplished through the selection of seven functional "modes of control." Each mode of control is utilized for a specific purpose or type of ACME operation in conjunction with various mission phases. Each mode of operation provides either automatic or manual spacecraft control through the switching of input signals to ACE. In addition, the mode logic circuits de-energize all unused circuits within the ACE during use of the horizon scan mode to conserve power. Switching is performed by transistors at the signal level and by relays at the power level. The operation of each mode of control is explained in the following.

Direct Mode (M₁)



In this mode, jet firing commands are applied directly to the RCS or OAME attitude solenoid valve drivers, by actuation of the attitude hand controller "direct" switches (Figure 8-6). Selection of the DIRECT mode applies an "ON" bias voltage to a transistor designated "ground switch A." Conduction of the transistor completes a circuit to ground which is common to one side of the hand controller direct switches. The transistor remains on as long as the direct mode is selected.



UNCLASSIFIED

COVER SHEET
SEDR 300

PROJECT GEMINI

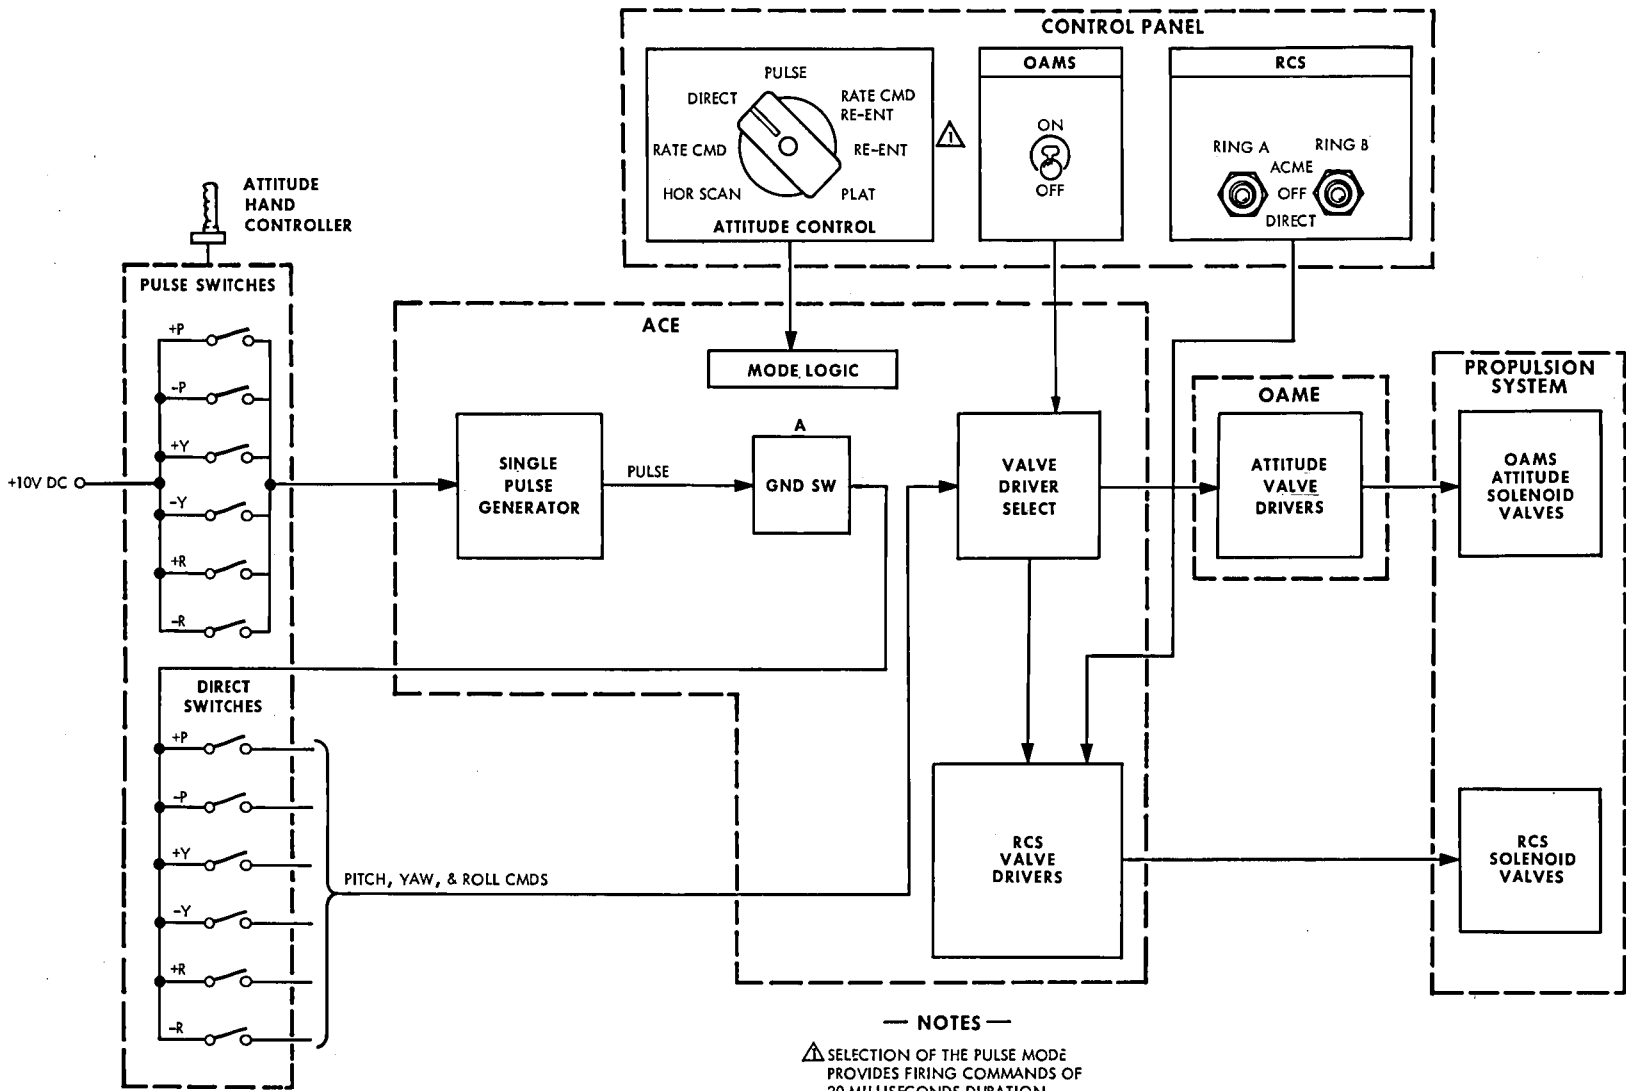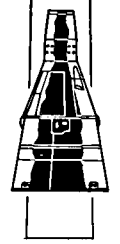

— NOTES —

⚠ SELECTION OF THE PULSE MODE PROVIDES FIRING COMMANDS OF 20 MILLISECONDS DURATION.

LOGIC FUNCTION
A = GND (DIRECT SELECT OR COMMAND PULSE)

Figure 8-6 ACME Simplified Block Diagram (Direct & Pulse Command Modes)

UNCLASSIFIED

8-21

COVER SHEET

**PROJECT GEMINI**

Three sets of six normally open switch contacts provide the command signals in the pitch, yaw and roll axis and will close when the hand controller is moved beyond a preset threshold (2.5 degrees) of handle travel. Deflection in the desired direction applies a ground from "switch A" directly to the valve driver relative to that direction and in turn fires the proper thruster(s). Thrusters continue firing as long as the hand controller is displaced beyond the 2.5 degree threshold. This mode of operation is optional at all times.

Pulse (M2)

In this mode, the attitude commands initiated by hand controller displacement fire a "single pulse generator" in the ACE (Figure 8-6). The pulse mode energizes the generator, allowing it to fire for a fixed duration when a pulse command is received. Commands originate every time one of the six normally open "pulse" switch contacts of the hand controller is closed. This triggers the generator and applies a bias voltage pulse for a 20 millisecond "ON" duration to "ground switch A." This ground is then applied to the RCS or OAME attitude valve drivers, through the actuated hand controller "direct" switches as a command for thruster firing. Commands may be initiated in the pitch, yaw or roll axis by moving the control handle in the desired direction beyond a preset threshold (3.5 degrees). Thrusters fire for 20 milliseconds each time the handle is displaced beyond 3.5 degrees. This mode is optional at all times and will normally be used during platform alignment.

Rate Command Mode (M3)

 
In this mode, spacecraft attitude rate about each axis is proportional to the

UNCLASSIFIED

~~CONFIDENTIAL~~
SEDR 300



PROJECT GEMINI



attitude hand controller displacement from the neutral deadband (Figure 8-7). (Pickoff excitation is zero for displacements less than 1 degree of handle travel, providing a non-operational area or deadband.) Command signals, generated by handle displacements, are compared to rate gyro outputs and when the difference exceeds the damping deadband, jet firing occurs. Signals originate from potentiometers in the hand controller and outputs are directly proportional to handle displacement. A maximum command signal to ACE produces an angular rate of 10 degree/second about the pitch and yaw axis and 15 degrees/second about the roll axis.

Automatic, closed loop stabilization of spacecraft rates is provided from the sensing of angular rates by the rate gyro package. With the absence of hand controller command signals, spacecraft rates about each axis are damped to within ± 0.2 degrees/second with OAME attitude control and to within ± 0.5 degree/second with RCS attitude control. Output signals from the rate gyros are used to produce fire commands until the rate signal is within the damping deadband. This mode is optional at all times and will normally be used during translational thrusting or attitude changes.

Horizon Scan Mode (M_4)

In this automatic command mode, horizon sensor outputs (pitch and roll) are processed by the ACE to orient and hold the spacecraft within a desired attitude deadband during orbit (Figure 8-8). Pitch attitude is maintained automatically to within ± 5 degrees of the horizon sensor -5 degree output and roll attitude is maintained automatically to within ± 5 degrees of the horizon sensor "zero degree" null. Control about the yaw axis is accomplished by commands from the attitude


 
UNCLASSIFIED

8-23
~~CONFIDENTIAL~~



PROJECT GEMINI

UNCLASSIFIED
CONFIDENTIAL
SEDR 300

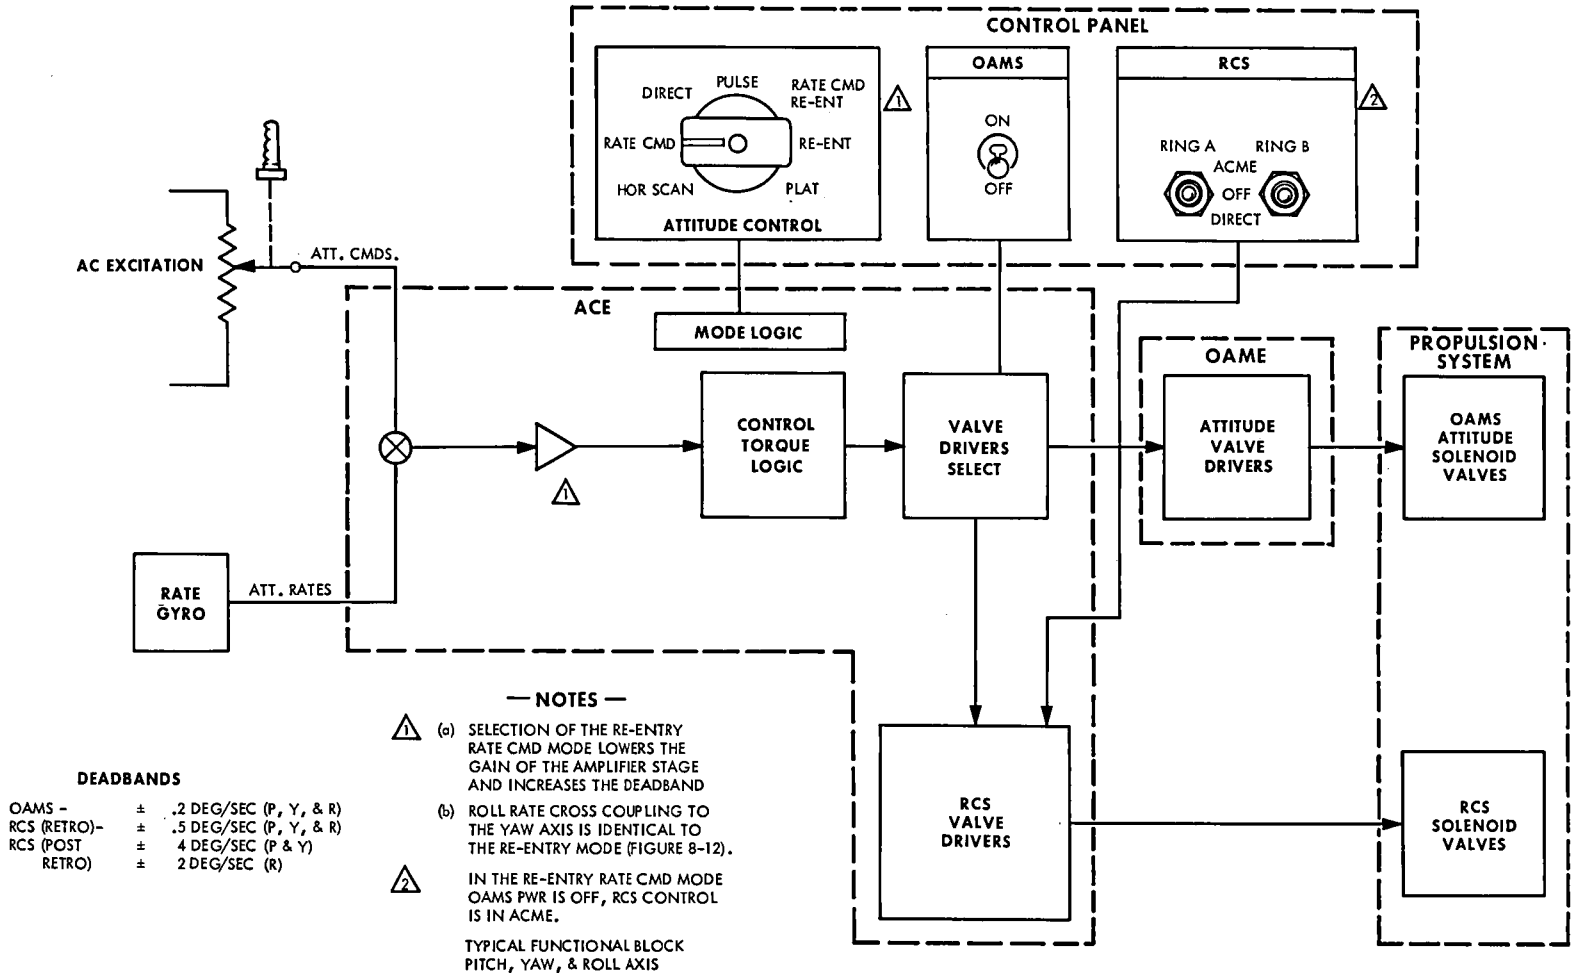

DEADBANDS

OAMS -	±	.2 DEG/SEC (P, Y, & R)
RCS (RETRO)-	±	.5 DEG/SEC (P, Y, & R)
RCS (POST	±	4 DEG/SEC (P & Y)
RETRO)	±	2 DEG/SEC (R)

- NOTES —**
- (a) SELECTION OF THE RE-ENTRY RATE CMD MODE LOWERS THE GAIN OF THE AMPLIFIER STAGE AND INCREASES THE DEADBAND
 - (b) ROLL RATE CROSS COUPLING TO THE YAW AXIS IS IDENTICAL TO THE RE-ENTRY MODE (FIGURE 8-12).
- IN THE RE-ENTRY RATE CMD MODE OAMS PWR IS OFF, RCS CONTROL IS IN ACME.
- TYPICAL FUNCTIONAL BLOCK PITCH, YAW, & ROLL AXIS

Figure 8-7 ACME Simplified Block Diagram (Rate Cmd. and Re-entry Rate Cmd. Modes)

FM2-8-7

UNCLASSIFIED
CONFIDENTIAL



UNCLASSIFIED

CONFIDENTIAL
SEDR 300

PROJECT GEMINI

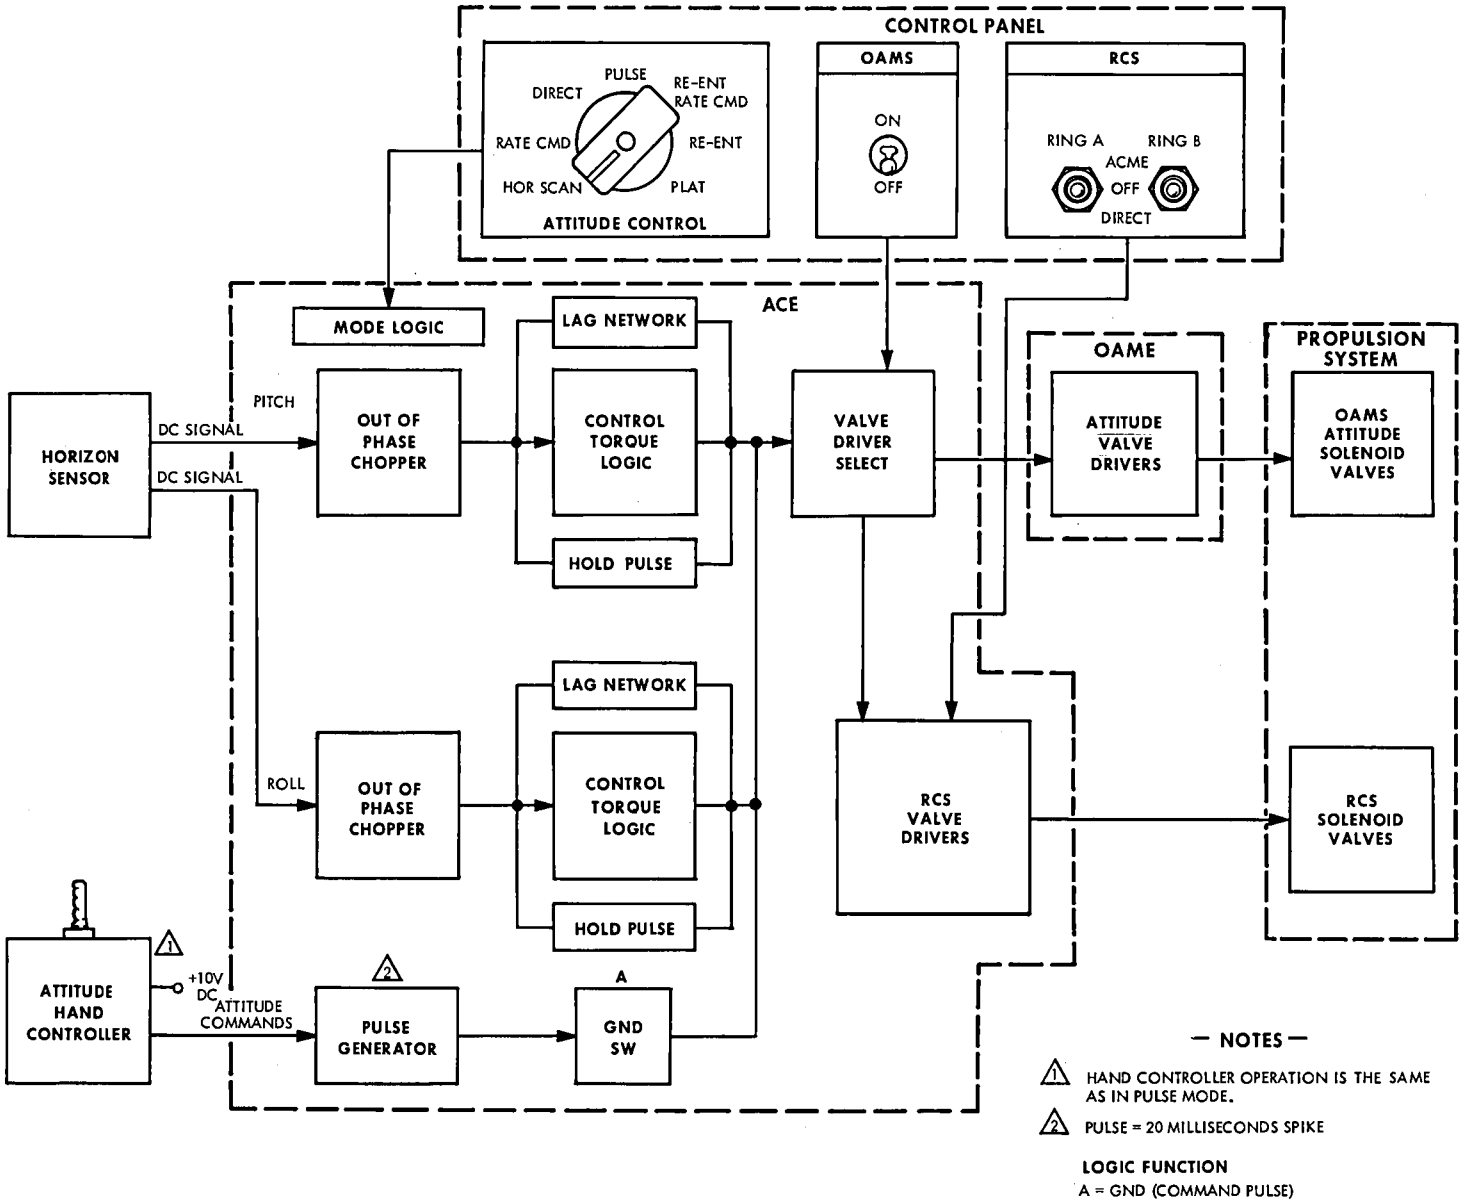
 


Figure 8-8 ACME Simplified Block Diagram (Horizon Scan Mode)

UNCLASSIFIED

8-25

CONFIDENTIAL

UNCLASSIFIED

~~CONFIDENTIAL~~
SEDR 300

CONFIDENTIAL



PROJECT GEMINI



hand controller, in the same manner as in the pulse mode. Pulse control about the pitch and roll axes is also available to supplement to automatic control. A -5 degree bias voltage is summed with the pitch input to the ACE to maintain the 5 degree pitch down orientation. When the attitude error (pitch or roll) exceeds the 5 degree control deadband, the output of the ACE on-off logic is a pulse firing command. The pulse "ON" time is for 18 milliseconds and the pulse repetition frequency is dependent upon how much the attitude error exceeds the 5 degree deadband. A lag network in this mode provides a pseudo "rate" feedback for rate damping, without having to use the power consuming rate gyros.

Re-entry Mode (M5)

In this automatic command mode, spacecraft angular rates about the pitch and yaw axes are damped to within ± 5 degrees/second and to within ± 2 degrees/second about the roll axis (Figure 8-9). Roll attitude is controlled to within ± 2 degrees of the attitude commanded by the digital computer input to ACE. Computer roll input to ACE consists of either a bank angle attitude command or a fixed roll rate command, depending on the relationship between the predicted touchdown point and the desired touchdown point. When a roll rate is commanded, roll to yaw crosscoupling is provided to minimize the spacecraft lift vector.

Re-entry/Rate Command Mode (M5D)

In this manual command mode, spacecraft rates are controlled by rate commands from the attitude hand controller. The method is identical to the rate command mode with the addition of roll-yaw rate crosscoupling. Angular rate damping about the three axes is identical to the re-entry mode. The computer bank angle

UNCLASSIFIED

8-26

~~CONFIDENTIAL~~



UNCLASSIFIED

CONFIDENTIAL
SEDR 300

PROJECT GEMINI

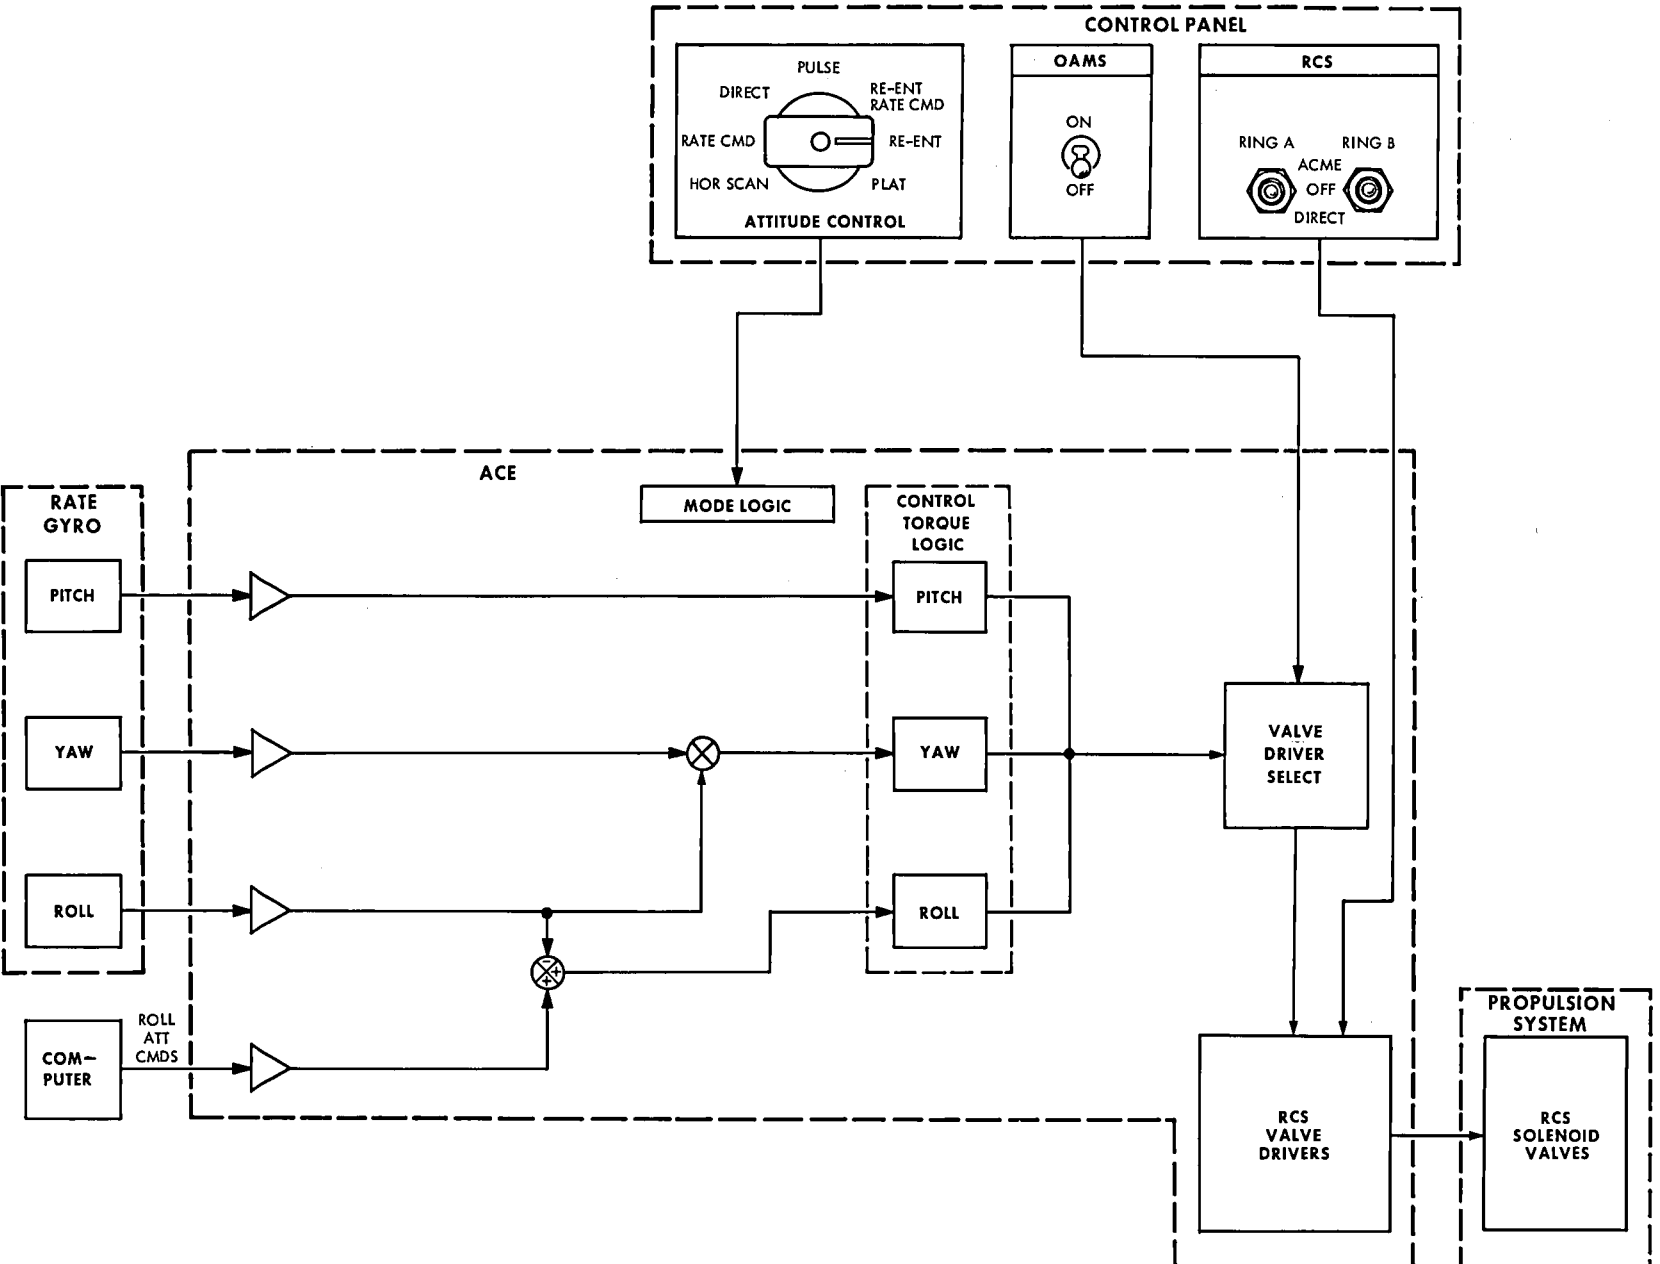
 


Figure 8-9 ACME Simplified Block Diagram (Re-entry Mode)

FM2-8-9

UNCLASSIFIED

CONFIDENTIAL

8-27



PROJECT GEMINI



and roll rate commands do not automatically control the spacecraft but are provided on the control panel displays where they can be used as a reference for initiating manual re-entry roll commands.

Platform (M6)

This attitude control mode is used to maintain spacecraft attitude, in all three axes, with respect to the inertial platform. Spacecraft attitude is held automatically to within 1.1 degrees of the platform attitude. A horizontal attitude, with respect to the earth, can be held if the inertial platform is in the orbit rate or alignment modes of operation. Spacecraft attitude rates are damped to within 0.5 degrees/second. The primary purpose of this mode is to automatically hold an inertial spacecraft attitude. PLAT mode is also useful for maintaining spacecraft attitude during fine alignment of the platform. (See Figure 8-19.)

Aborts - ACME/RCS

Rate command mode of ACME will be utilized for attitude control during all abort modes. Control over the RCS Ring A and Ring B switches, for a mode 2 abort, is automatically switched to ACME by the abort sequential relays.

SYSTEM UNITS

ATTITUDE CONTROL ELECTRONICS (ACE)

The ACE package (Figure 8-4) weighs approximately 17 pounds, has a removable cover and contains ten removable module boards. These boards make up the ACE logic circuitry and consist of the following: a mode logic board, an AC signal processing board, three axis logic boards, three relay boards, a power supply board (+20, +10, -10 VDC) and a lag network board. These replaceable module



UNCLASSIFIED

~~CONFIDENTIAL~~
SEDR 300

PROJECT GEMINI

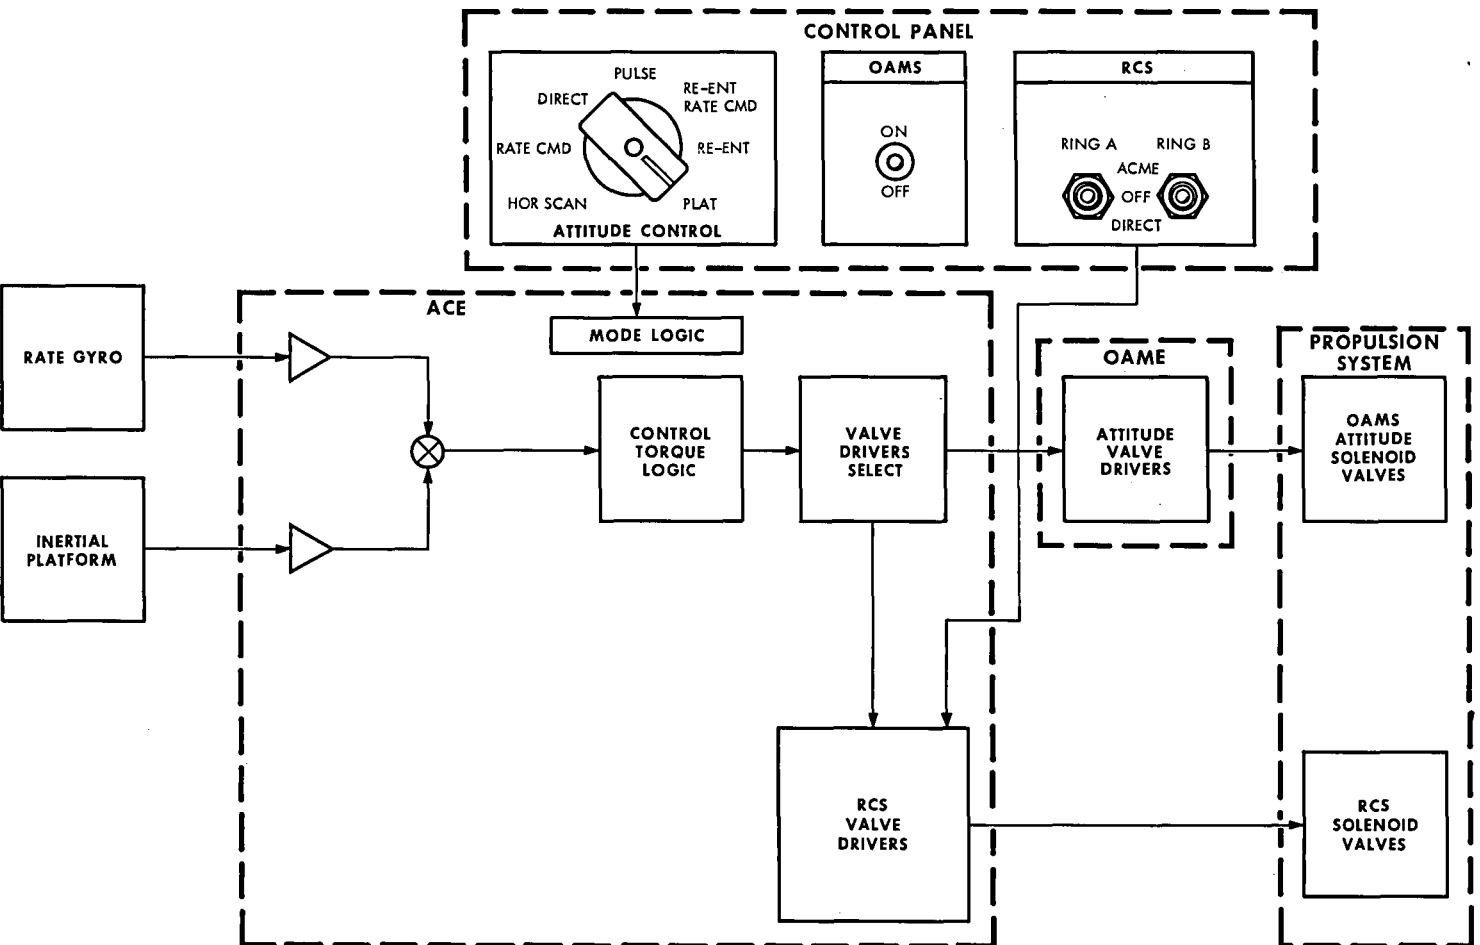
 


Figure 8-10 ACME Simplified Block Diagram (Platform Mode)

FM2-8-10

UNCLASSIFIED

8-29

~~CONFIDENTIAL~~

UNCLASSIFIED

~~CONFIDENTIAL~~
SEDR 300



PROJECT GEMINI



boards perform the signal processing for the three axis control and convert signal inputs into an appropriate jet firing command.

Functional Operation


Input signals to ACE are dependent on attitude requirements of the spacecraft and are used to obtain an attitude or attitude rate correction. A functional schematic of the ACE is shown in Figure 8-11 and is sectioned to show signal processing in each of the three axis channels. "ACE mode logic" circuits are represented by the legend blocks at the left of Figure 8-11. The selection of a mode of attitude control, initiates transistor switching in the logic circuits pertaining to that mode. The required input signal is then switched into the proper ACE channel for processing. Additional information on mode logic switching may be found in the Mode Selection paragraph. "Proportional circuitry consists of the signal amplifier stages (attitude and rate), switch amplifiers and the demodulator/filter stages. Attitude and rate signals to each of the pitch, yaw and roll channels are AC and are amplified to operational levels by the attitude and rate amplifiers. The outputs are summed and fed to the switch amplifiers. The output of the switch amplifier is coupled to the demodulator stage where it is converted to a DC, positive or negative, analog signal. The DC signal then energizes either the positive or negative, low-hysteresis transistor switches in the "control torque logic" section. An 18 millisecond switch "on" time control is provided by the minimum pulse generators. Horizon sensor DC signals are chapped and amplified by the switch amplifiers, then demodulated in the same manner as AC signals. The "valve driver select" circuits control power and signal distribution to OAME and RCS attitude valve drivers. To turn off the OAME

UNCLASSIFIED

8-30

~~CONFIDENTIAL~~

PROJECT GEMINI

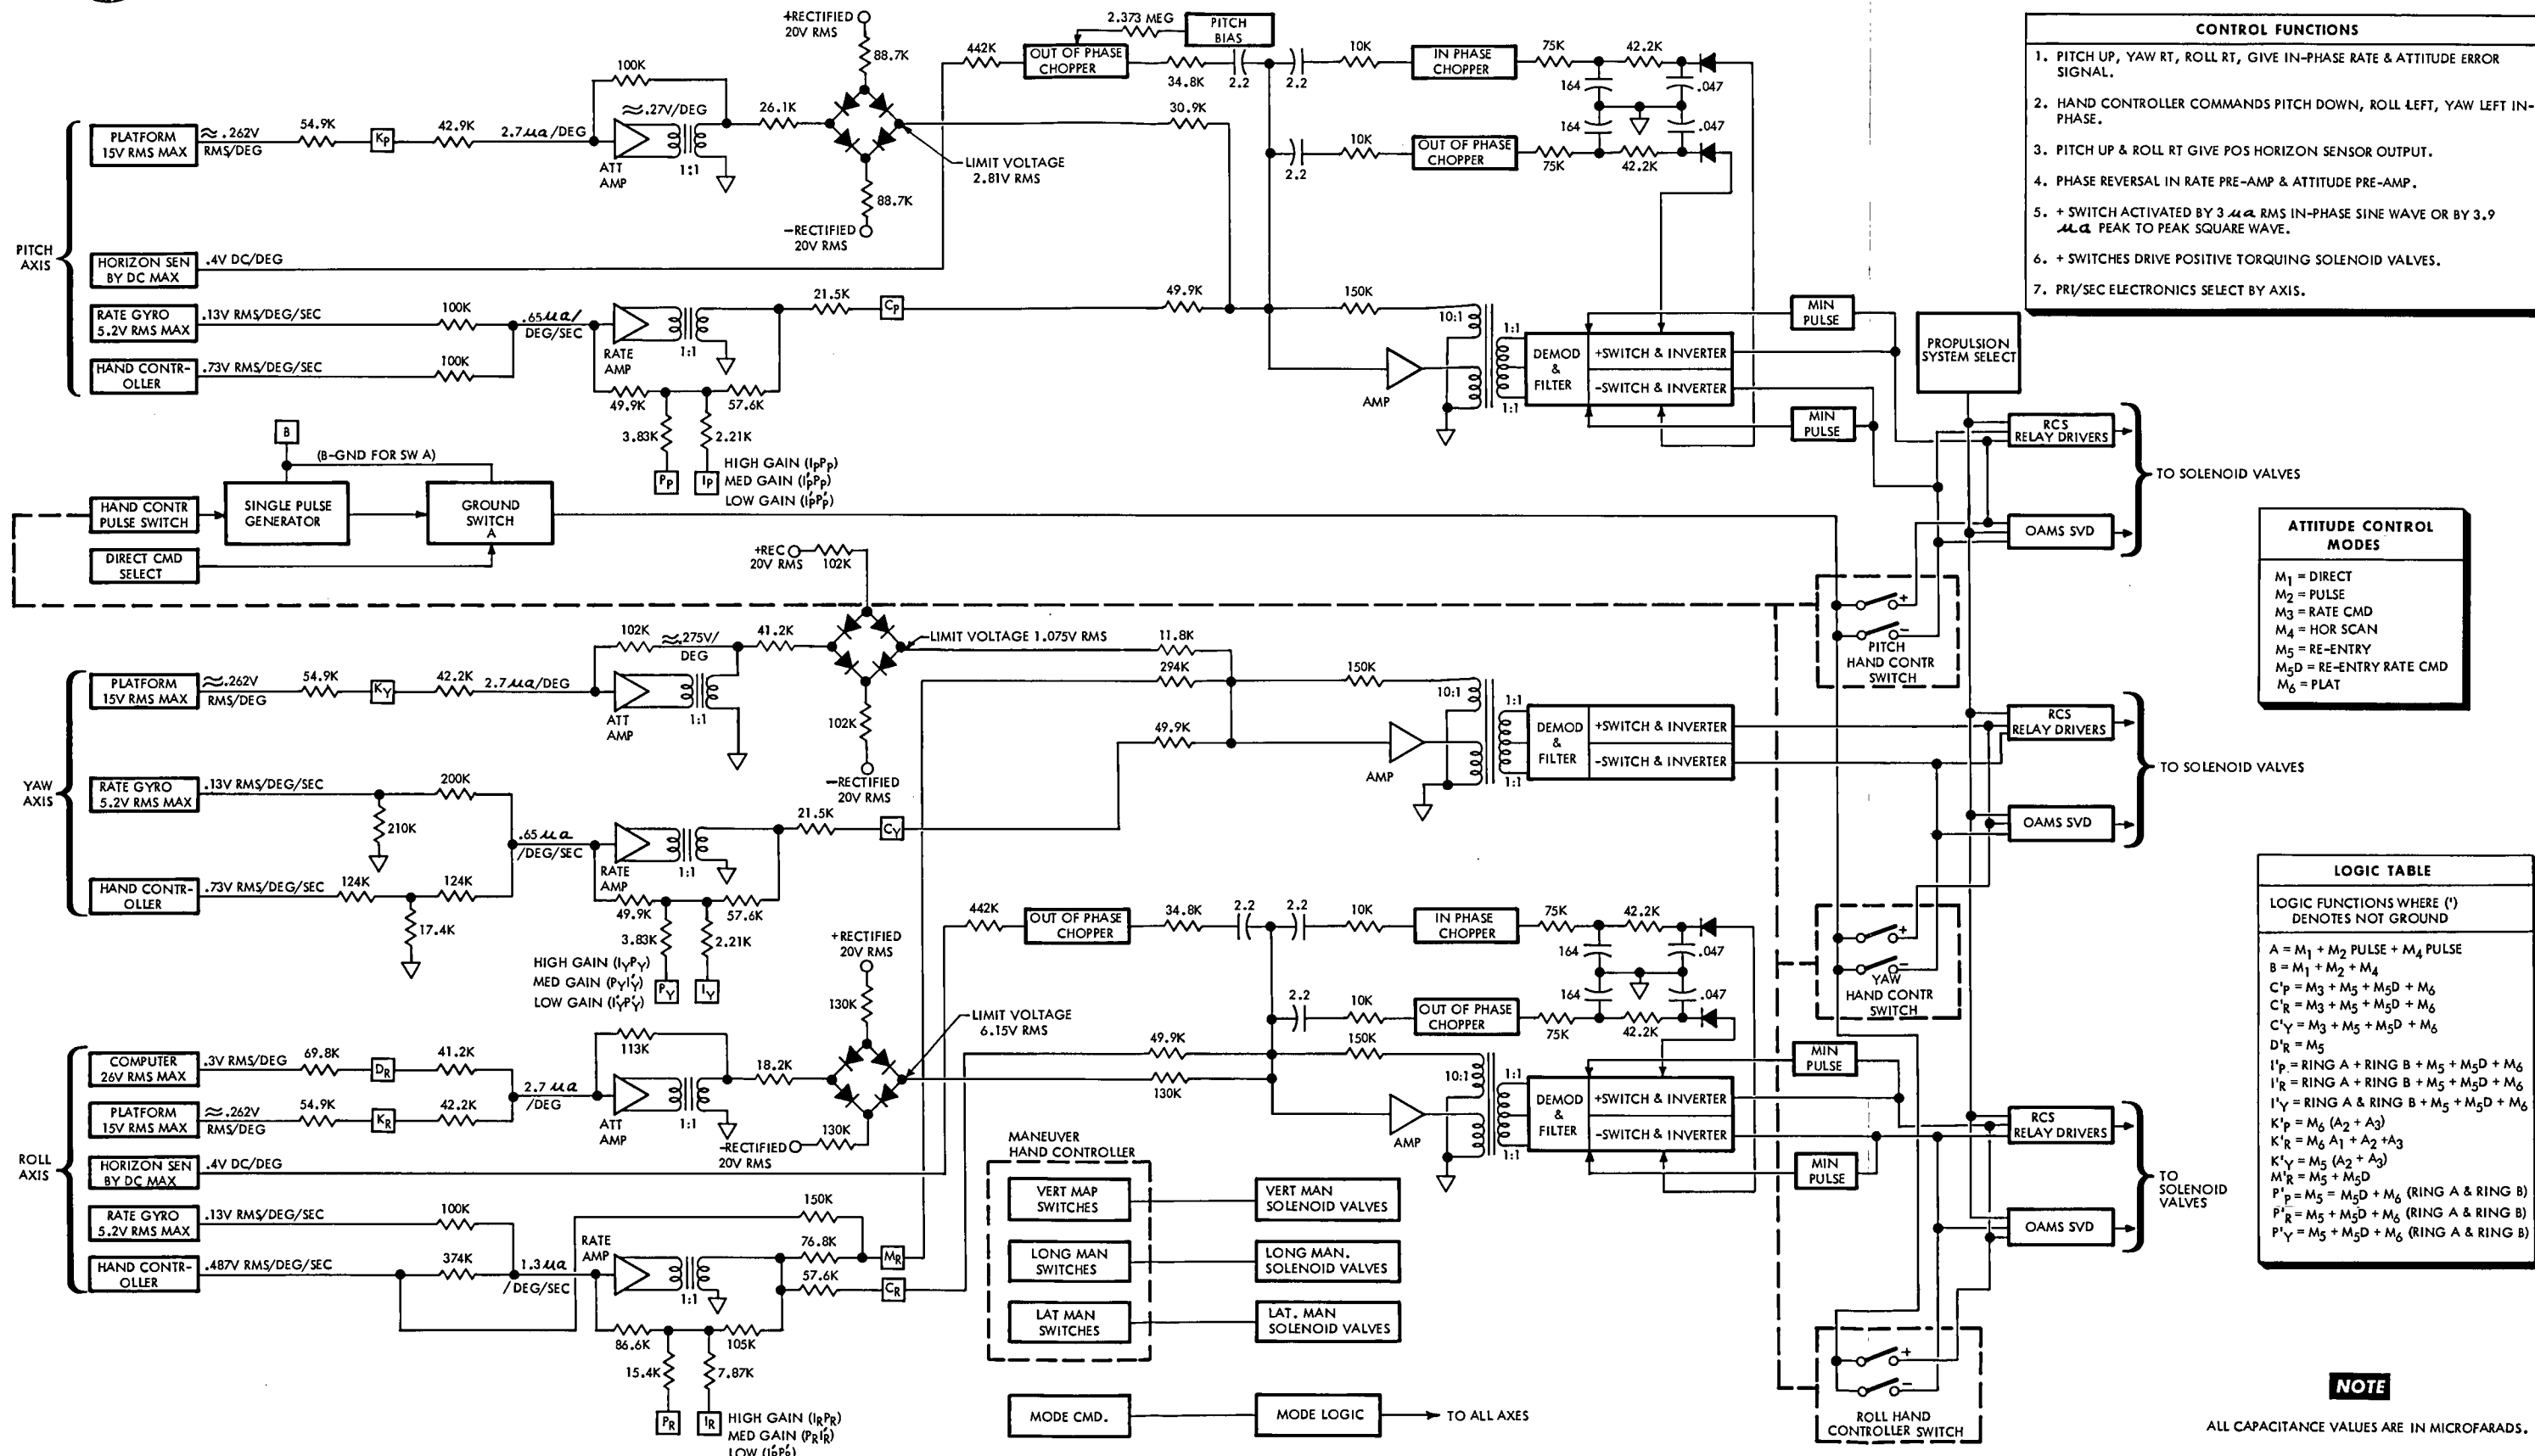

- CONTROL FUNCTIONS**
1. PITCH UP, YAW RT, ROLL RT, GIVE IN-PHASE RATE & ATTITUDE ERROR SIGNAL.
 2. HAND CONTROLLER COMMANDS PITCH DOWN, ROLL LEFT, YAW LEFT IN-PHASE.
 3. PITCH UP & ROLL RT GIVE POS HORIZON SENSOR OUTPUT.
 4. PHASE REVERSAL IN RATE PRE-AMP & ATTITUDE PRE-AMP.
 5. + SWITCH ACTIVATED BY 3.44 RMS IN-PHASE SINE WAVE OR BY 3.9 MA PEAK TO PEAK SQUARE WAVE.
 6. + SWITCHES DRIVE POSITIVE TORQUING SOLENOID VALVES.
 7. PRI/SEC ELECTRONICS SELECT BY AXIS.

- ATTITUDE CONTROL MODES**
- M₁ = DIRECT
 - M₂ = PULSE
 - M₃ = RATE CMD
 - M₄ = HOR SCAN
 - M₅ = RE-ENTRY
 - M_{5D} = RE-ENTRY RATE CMD
 - M₆ = PLAT

LOGIC TABLE

LOGIC FUNCTIONS WHERE (!) DENOTES NOT GROUND

A = M₁ + M₂ PULSE + M₄ PULSE
 B = M₁ + M₂ + M₄
 C_p = M₃ + M₅ + M_{5D} + M₆
 C_r = M₃ + M₅ + M_{5D} + M₆
 C_y = M₃ + M₅ + M_{5D} + M₆
 D_r = M₅
 I_p = RING A + RING B + M₅ + M_{5D} + M₆
 I_r = RING A + RING B + M₅ + M_{5D} + M₆
 I_y = RING A & RING B + M₅ + M_{5D} + M₆
 K_p = M₆ (A₂ + A₃)
 K_r = M₆ (A₁ + A₂ + A₃)
 K_y = M₅ (A₂ + A₃)
 M₁' = M₅ + M_{5D}
 P_p = M₅ + M_{5D} + M₆ (RING A & RING B)
 P_r = M₅ + M_{5D} + M₆ (RING A & RING B)
 P_y = M₅ + M_{5D} + M₆ (RING A & RING B)

NOTE

ALL CAPACITANCE VALUES ARE IN MICROFARADS.

Figure 8-11 ACME-Functional Schematic

UNCLASSIFIED

~~CONFIDENTIAL~~
SEDR 300



PROJECT GEMINI



control system, power is applied to de-energized relays, the normally closed contacts of which complete the power and signal inputs to the OAME. Power may then be applied to the RCS ring A and/or ring B valve drivers for RCS attitude control. The "ring A and ring B RCS valve drivers" consists of relays, energized by transistor relay drivers.

Mode Logic Switching

Transistor switching provides the control for attitude mode signal selections, along with ACE power distribution in the horizon scan mode. These switches are represented by blocks in Figure 8-11. The logic function for each block is explained in the truth table at the right of Figure 8-11 as being ground or not ground. Figure 8-12 shows how mode control of signal selections is accomplished. The transistor switches provide a grounded or not grounded condition to attitude signals, by being in a conducting or not conducting state. Attitude reference and command signals are obtained by selecting the appropriate mode of control switch position. This applies a +20 VDC bias voltage to the base of a PNP transistor, biasing it to cut off. This ungrounded state allows the desired signal to be applied to the ACE amplifiers. The mode 1 (direct), and mode 2 (pulse), and one of the M₄ (hor scan) logic switches are NPN transistors, and conduct with the application of +20 VDC. This provides a ground circuit for hand controller commands. The pulse generator signal provides the bias voltage to turn on switch A when in the pulse or orbit modes.

Signal Processing (See Figure 8-11)

By referring to the logic block in each channel and the mode logic table, the type signal selected for each mode of control can be determined. The P and I

UNCLASSIFIED

8-32
~~CONFIDENTIAL~~



PROJECT GEMINI

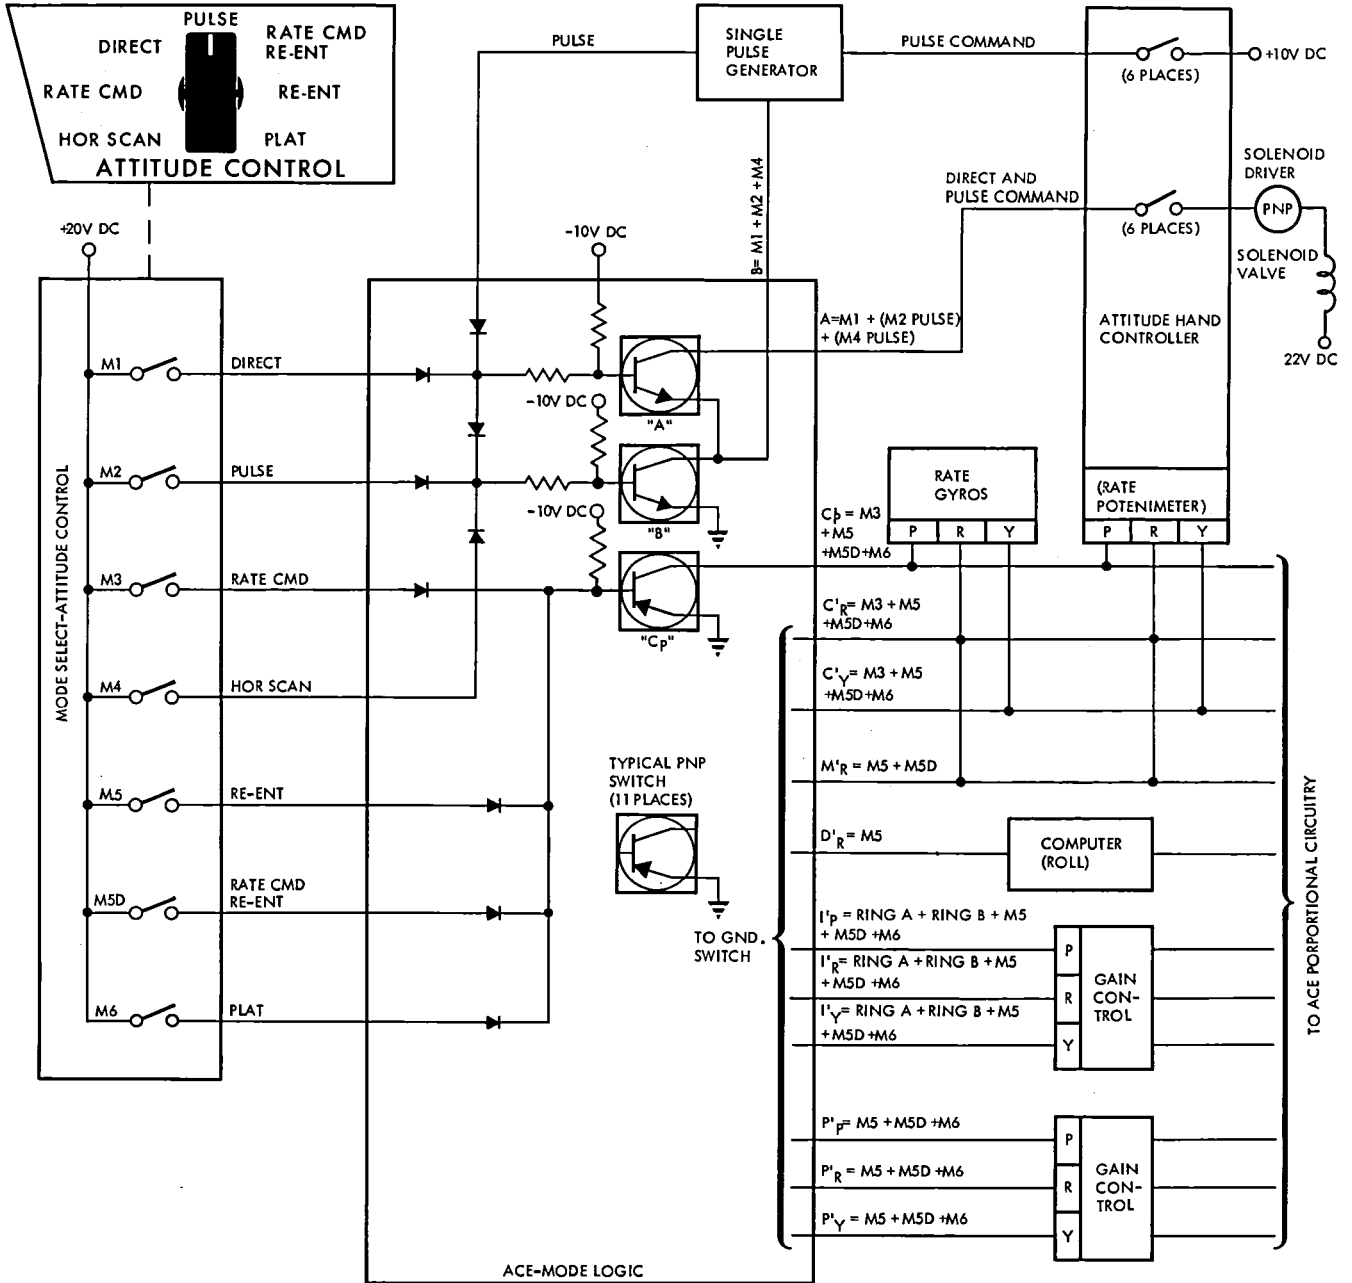
 


Figure 8-12 ACE Mode Logic Switching-Attitude Control

FM2-8-12

UNCLASSIFIED

~~CONFIDENTIAL~~
SEDR 300

UNCLASSIFIED



PROJECT GEMINI



blocks, through mode selections, establish the gain for rate amplifier stages.

Attitude Signals

Inputs to the ACE are either in phase or out of phase AC signals (with the obvious exception of the DC horizon sensor input). A positive attitude displacement generates an in phase error signal, which in turn will command negative thrusting. A negative attitude displacement, generating an out of phase signal will command positive thrusting. By referring to the logic table, it may be seen that the selection of mode 5 provides a computer roll input through the function of logic block D_R and is the only attitude signal selected for an input to ACE. A roll attitude error or command signal is fed into the three stage attitude amplifier. The amplifier output will be used to turn on the appropriate solenoid valve driver. The bridge rectifier is used to limit attitude signal amplitude. The output of the three stage switch amplifier is transformer coupled to either the in phase or the out of phase section of the demodulator stage. The output of the demodulator stage is a full wave rectified DC signal, which is filtered and energizes either the positive or negative low hysteresis switch. Energizing the switch provides the ground for the valve drivers. The minimum pulse generator will not allow the solenoid valves to turn off in less than 18 milliseconds, thus always assuring a prescribed minimum thruster force. Minimum pulse generators are used in the pitch and roll channels only.

Rate Signals (See Figure 8-11)

Angular rate and rate command signals are provided by the logic functions of blocks C_p , C_y and C_r through the selection of modes M_3 , M_5 , M_5D , and M_6 . Signal gains through the rate amplifiers are varied by the functions of logic blocks I_p ,

 
UNCLASSIFIED

8-34

~~CONFIDENTIAL~~



PROJECT GEMINI



Iy, Ir, Pp, Py and Pr, with the selection of the re-entry modes, platform mode or RCS control. Rate signal inputs are used in the same manner as attitude signals to control solenoid valves. Roll rate signals are summed with the computer command signals and the proportional output is fed to the switch amplifiers. The function of the logic block M_R , with selection of the re-entry modes of control, provides crosscoupling of roll rates into the yaw axis for re-entry control. Roll rate signals are proportionally coupled into yaw. This provides an opposite phase signal for cancellation of part of the yaw rate command signal for proper stability.

Horizon Sensor Signals

Sensor pitch and roll signals are positive or negative DC and are fed directly to out of phase choppers in ACE. A -5 degree pitch bias voltage is summed with horizon sensor outputs for pitch down orientation. The output of the out of phase chopper will be of a phase opposite the attitude displacement. This signal is then amplified and processed by the on-off logic, in the same manner as an attitude signal.

The horizon scan mode in addition to circuits utilized by other modes, energizes the resistance - capacitance lag feedback networks and choppers for either the in or out of phase signal. The lag network discharge rate, along with the minimum pulse generator, provides anti-hunting control. (Hunting would result from the slow response of the horizon sensors if no anti-hunt control was used.)

UNCLASSIFIED

~~CONFIDENTIAL~~
SEDR 300



PROJECT GEMINI



RCS Valve Drivers

The RCS solenoid valve drivers (Figure 8-13) are relays with normally open contacts connected between the solenoid valve and the RCS ring switch and provides a circuit ground when the switch is in the "ACME" position. The relays are energized by transistor relay drivers, which conduct upon receiving thruster firing commands from the control torque logic switches or the attitude hand controller direct switches.

ORBIT ATTITUDE AND MANEUVER ELECTRONICS (OAME)

This unit (Figure 8-4) weighs approximately 8 pounds, has a removable cover and contains three removable module boards (2-relay boards and 1-component module board) and fixed mounted components. These replaceable module boards in conjunction with the fixed components function as attitude and maneuver valve drivers.

Functional Operation

Attitude Control

Attitude commands to the OAME are either positive or negative thruster firing commands to the solenoid valve drivers, from the control torque logic section of ACE. (See Figure 8-13). Upon receiving command signals, the valve driver transistors will conduct. This provides the circuit grounds to energize the solenoid valves of the propulsion system. Zener diode spike suppression is provided to limit the voltage generated when thruster power is interrupted.

Maneuver Control

Maneuver commands to the OAME originate from either maneuver hand controller (Figure 8-14). Translational command signals are provided by applying a circuit

UNCLASSIFIED


8-36

~~CONFIDENTIAL~~

UNCLASSIFIED
CONFIDENTIAL 8-37

Figure 8-13 RCS & OAMS Attitude Valve Drivers


FM2-8-13

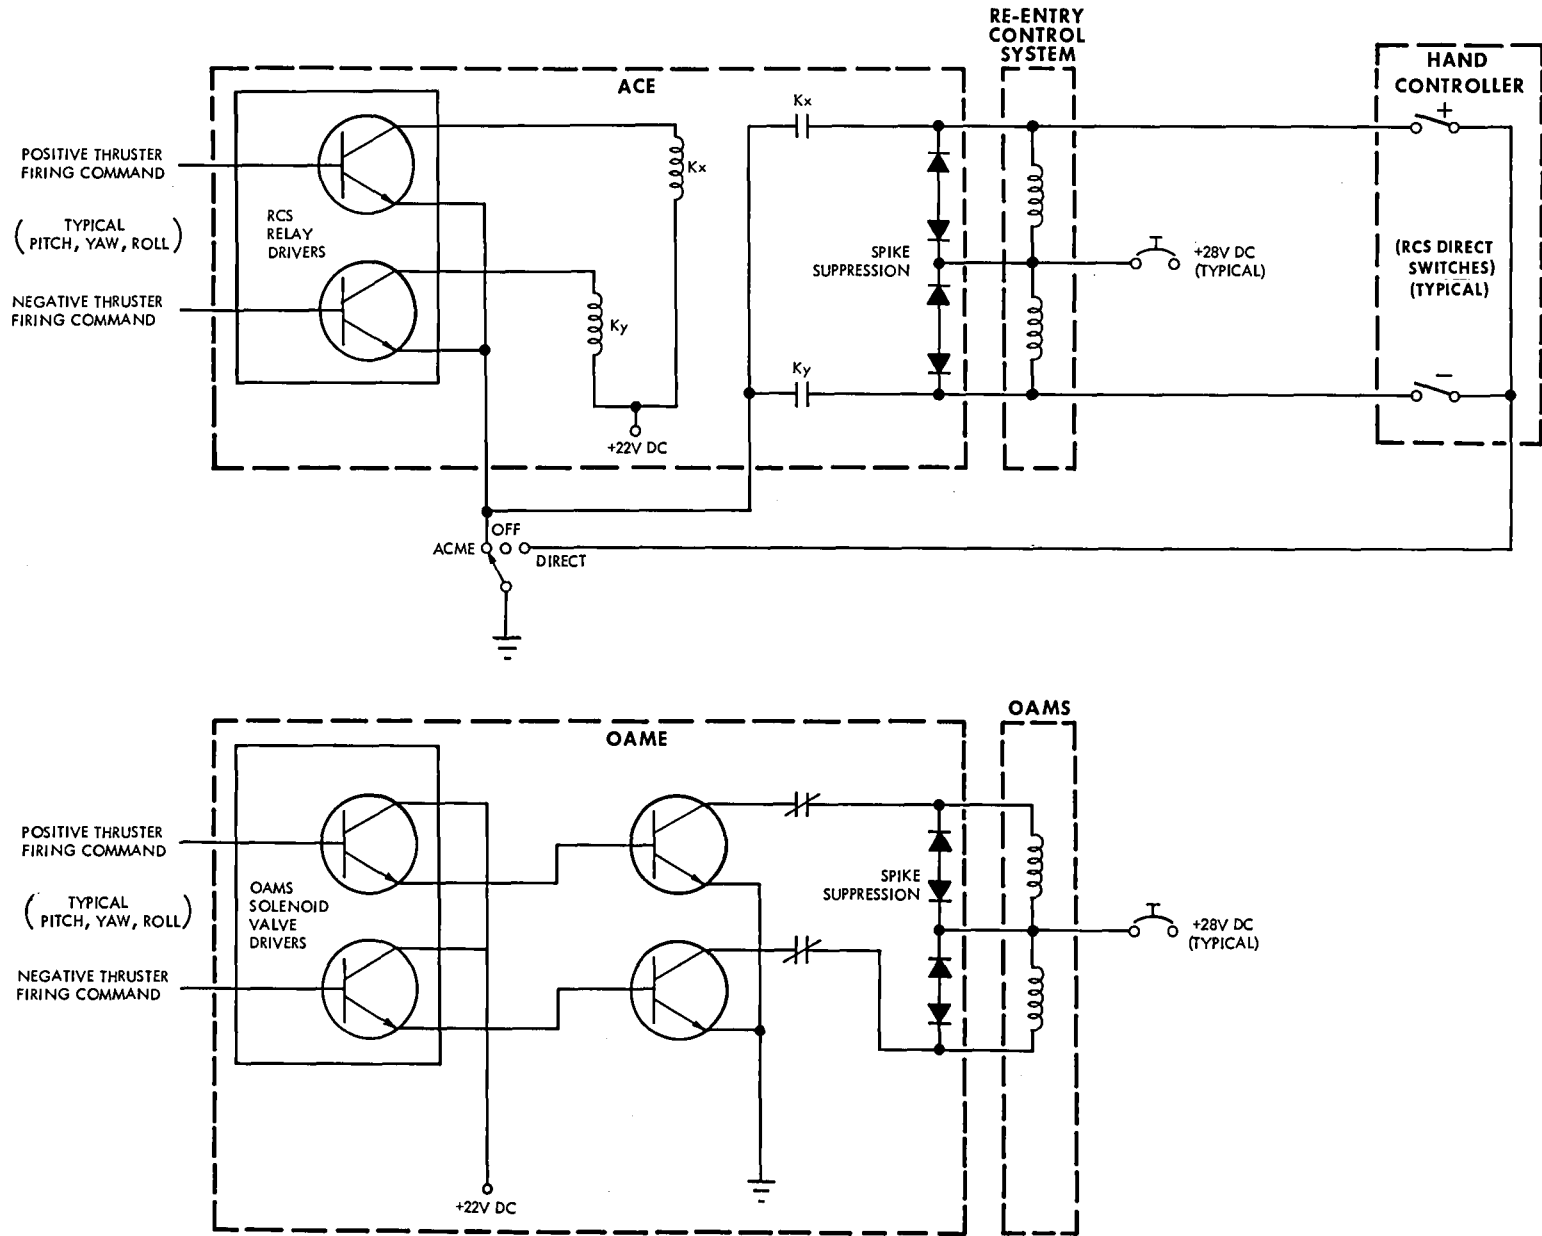

CONFIDENTIAL
PROJECT GEMINI

CONFIDENTIAL
SEDR 300

 UNCLASSIFIED



PROJECT GEMINI

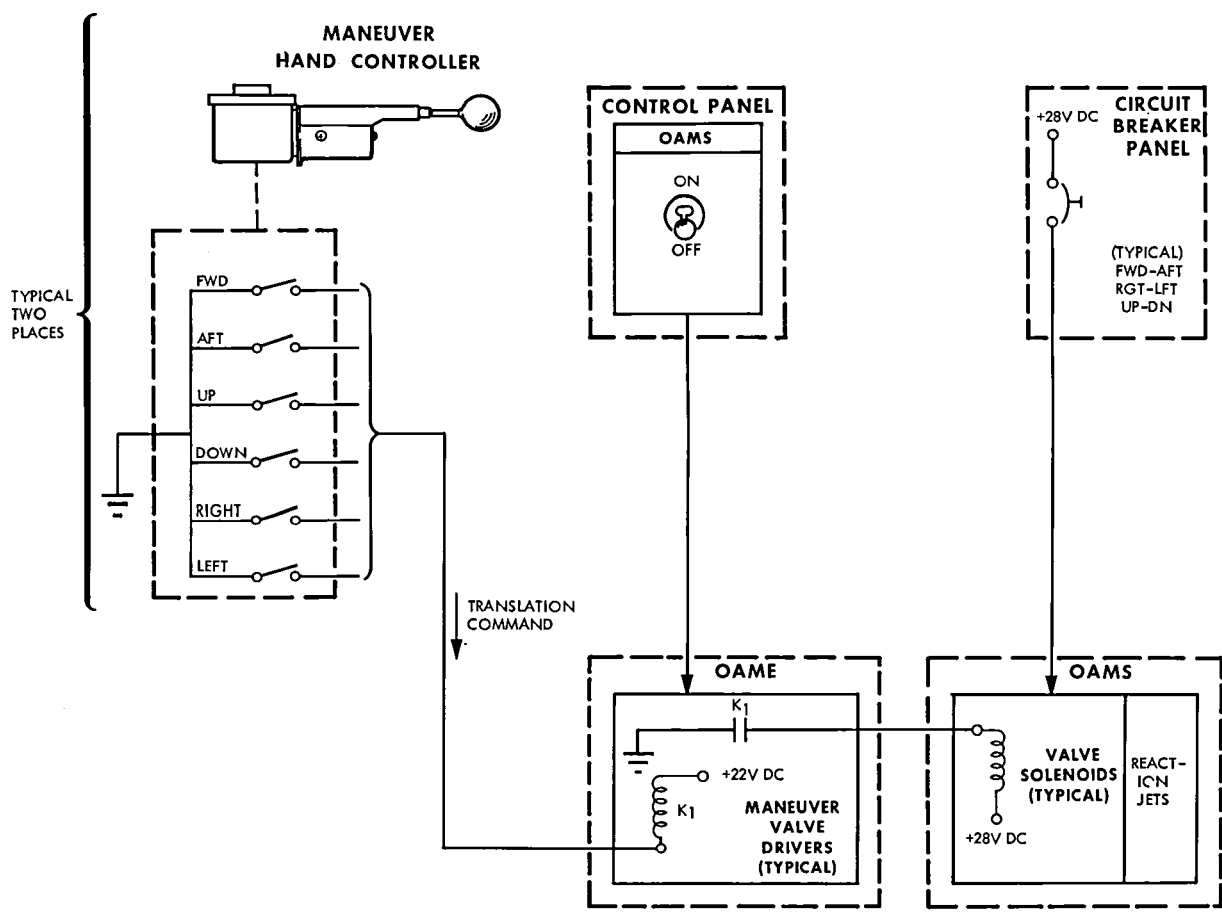
 


Figure 8-14 ACME, Maneuver Control-Simplified Block Diagram

FM2-8-14

**PROJECT GEMINI**

ground through the proper hand controller switch, to the valve driver relays. Upon actuation of the relay, a normally open relay contact is closed. This applies the circuit ground to the OAMS valve solenoids for thruster firing. Conventional diode spike suppression is provided to limit the voltage spike generated when thruster power is interrupted.

RATE GYRO PACKAGE

The rate gyro package (Figure 8-4) contains three rate gyros, each individually mounted and hermetically sealed. The gyros are orthogonally mounted for rate sensing in all three axes. The rate gyro package provides AC analog outputs, proportional to mechanical rate inputs. Application of a gimbal torquer current, and monitoring the spin motor synchronization, provides a check of gyro operation and pickoff output during ground checkout. Each gyro is separately excited so that any individual gyro may be turned off, without affecting operation of the other two. Two gyro packages are provided for redundancy, and have a total weight of approximately 8 pounds.

POWER INVERTER PACKAGE

 
The Power Inverter (Figure 8-4) converts spacecraft DC power into AC power for use by the ACME sub-systems and horizon sensors. The unit weighs approximately 7 pounds and consists of the following: current and voltage regulators, oscillator, power amplifier, output filter, regulator-controller, switching regulator and oscillator starter. The 26 VAC, 400 cps power inverter output is supplied to the following:

- a. ACE Power Supply: reference power for the choppers, demodulators and DC biasing voltages.

~~CONFIDENTIAL~~ UNCLASSIFIED
SEDR 300



PROJECT GEMINI



- b. Rate Gyros: 20 watts starting power and 16 watts running power for motor and pickoff excitation.
- c. Horizon Sensors: 11 watts operational power, as reference for bias voltages and pickoff excitation.
- d. Attitude Hand Controller: 0.5 watts for potentiometer excitation.
- e. Telemetry: 1.0 watts for demodulation reference.
- f. FDI: 8.2 watts
- g. Rendezvous Radar: For angular reference.

UNCLASSIFIED

8-40

~~CONFIDENTIAL~~

INERTIAL GUIDANCE SYSTEM

TABLE OF CONTENTS

TITLE	PAGE
SYSTEM DESCRIPTION	8-43
INERTIAL MEASUREMENT UNIT	8-43
AUXILIARY COMPUTER POWER UNIT	8-43
ON-BOARD COMPUTER	8-44
SYSTEM OPERATION	8-44
PRE-LAUNCH PHASE	8-45
LAUNCH PHASE	8-45
ORBIT PHASE	8-46
RETROGRADE PHASE	8-48
RE-ENTRY PHASE	8-49
CONTROLS AND INDICATORS	8-49
SYSTEM UNITS	8-54
INERTIAL MEASUREMENT UNIT	8-54
AUXILIARY COMPUTER POWER UNIT	8-70
DIGITAL COMPUTER	8-72
SYSTEM DESCRIPTION	8-72
SYSTEM OPERATION	8-76
MANUAL DATA INSERTION UNIT	8-166
SYSTEM DESCRIPTION	8-166
SYSTEM OPERATION	8-169
INCREMENTAL VELOCITY INDICATOR	8-175
SYSTEM DESCRIPTION	8-175
SYSTEM OPERATION	8-177

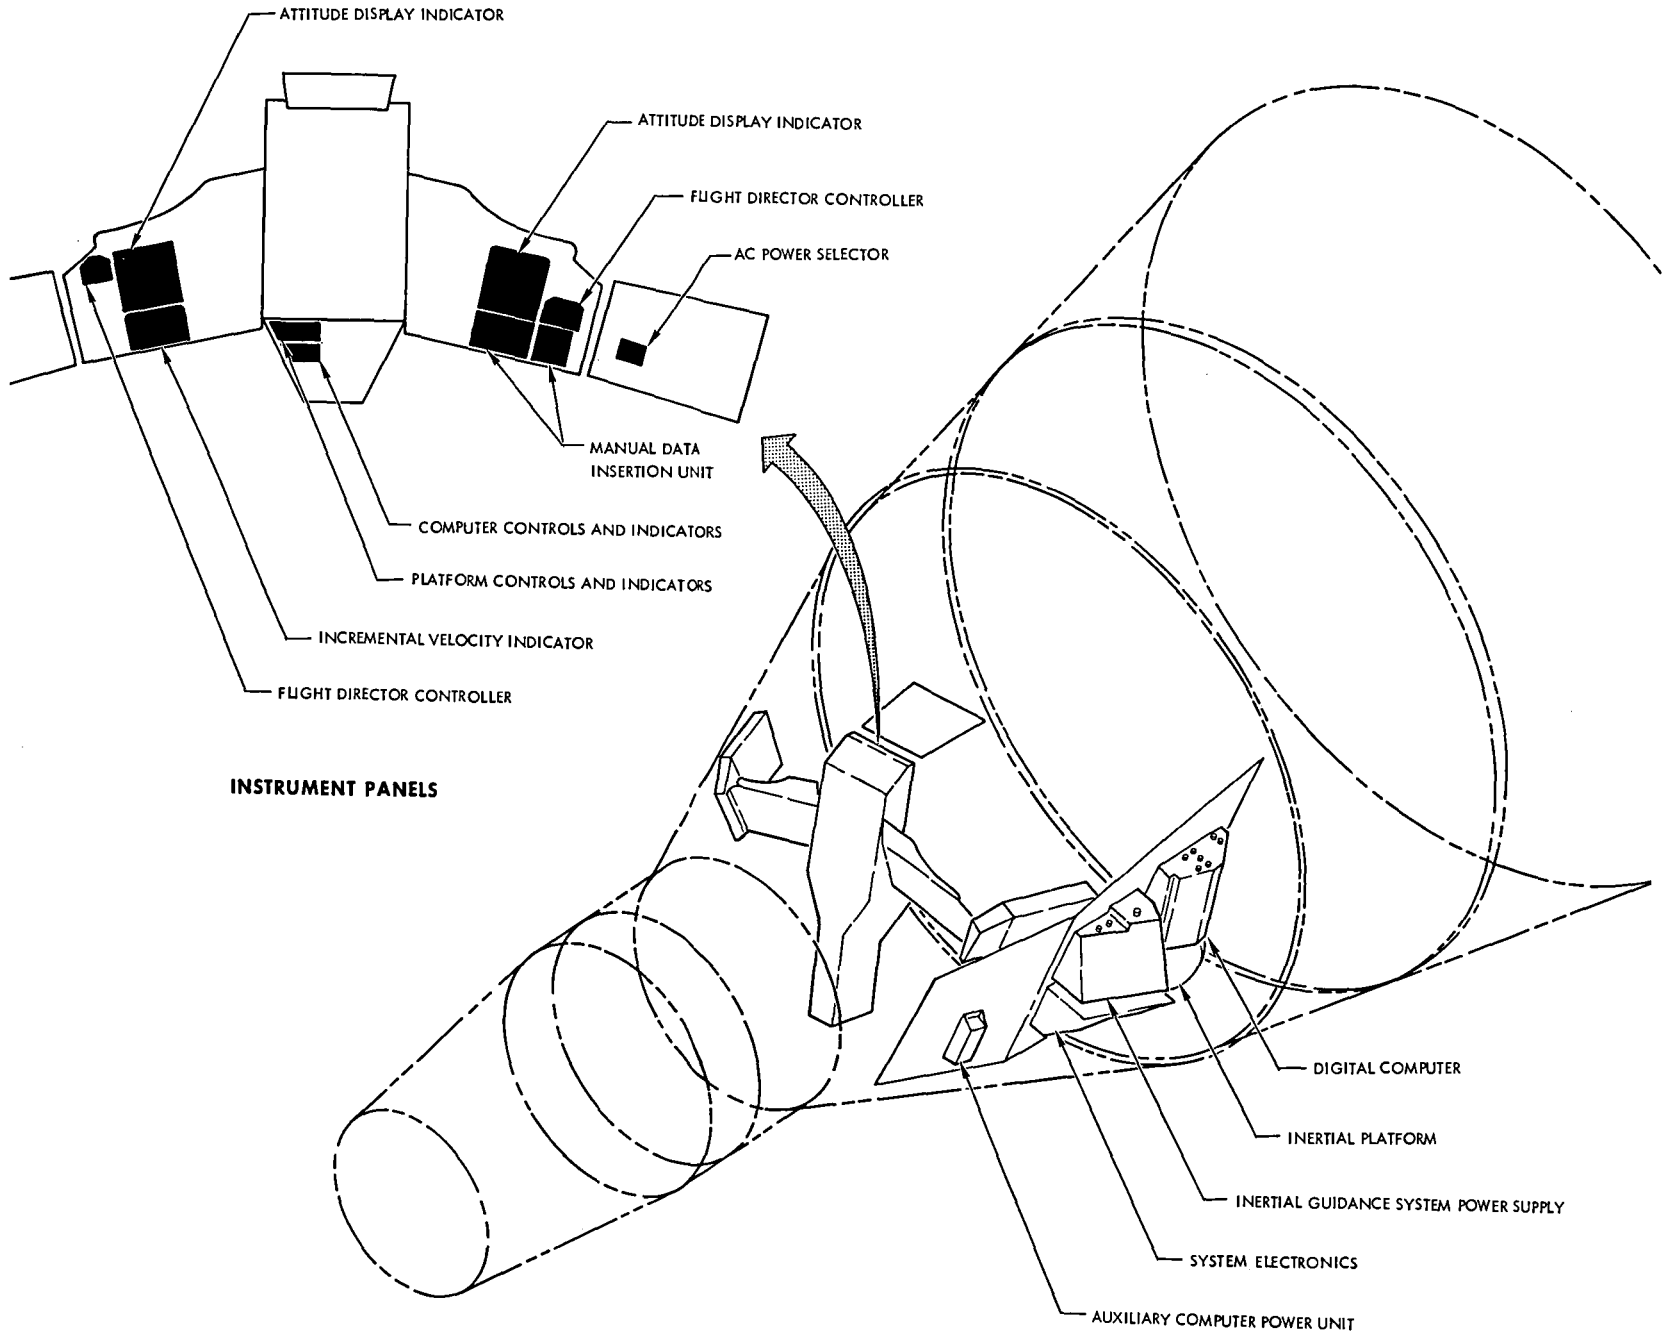
 
 


Figure 8-15 Inertial Guidance System

UNCLASSIFIED
 CONFIDENTIAL

**PROJECT GEMINI**INERTIAL GUIDANCE SYSTEMSYSTEM DESCRIPTION

The Inertial Guidance System (IGS) consists of an inertial measurement unit, an auxiliary computer power unit, an on-board computer, and associated controls and indicators. The location of all IGS components is illustrated in Figure 8-15. Controls and indicators are located inside the pressurized cabin area. The inertial measurement unit, auxiliary computer power unit, and the on-board computer are located in the unpressurized left equipment bay.

INERTIAL MEASUREMENT UNIT

The Inertial Measurement Unit (IMU) consists of three separate packages: the inertial platform, system electronics, and IGS power supply. All three packages function together to provide inertial attitude and acceleration information. Attitude measurements are utilized for automatic control, computations, and visual display. Acceleration measurements are utilized for insertion, rendezvous, and retrograde computations and displays. IMU operation is controlled by a mode selector. Cage, alignment, orbit rate, and inertial modes are available. Platform attitude measurements are available to each pilot on his attitude display group. The IMU is also capable of providing 400 cps power to ACME inverter loads. An AC POWER switch allows the pilot to select the source of 400 cps ACME power.

AUXILIARY COMPUTER POWER UNIT

 
The Auxiliary Computer Power Unit (ACPU) provides protection, for the computer,

UNCLASSIFIED

~~CONFIDENTIAL~~
SEDR 300



PROJECT GEMINI



from spacecraft bus voltage variations. If bus voltage drops momentarily, the ACPU supplies temporary computer power. If bus voltage remains depressed, the computer is automatically turned off. The ACPU is activated by the computer power switch.

ON-BOARD COMPUTER

The On-Board Computer (OBC) provides the necessary parameter storage and computation facilities for guidance and control. Computations are utilized for insertion, rendezvous, and re-entry guidance. A mode selector determines the type of computations to be performed. A START switch allows the astronaut to initiate certain computations at his discretion. The COMP light indicates the start and completion of a computation. A MALF light indicates the operational status of the computer and a RESET switch provides the capability to reset the computer in case of temporary malfunctions. A Manual Data Insertion Unit (MDIU) allows the astronaut to communicate directly with the computer. Specific parameters can be inserted, read out, or cleared from the computer memory. An Incremental Velocity Indicator (IVI) displays velocity changes. Changes can be measured or computed, depending on computer mode.

SYSTEM OPERATION

Operation of the IGS is dependent on mission phase. Components of IGS are utilized from pre-launch through re-entry phases. Landing phase is not controllable and therefore no IGS functions are required. The computer and platform each have mode selectors and can perform independent functions. However, when computations

UNCLASSIFIED

8-44
~~CONFIDENTIAL~~



are to be made concerning attitude or acceleration, the two units must be used together.

PRE-LAUNCH PHASE

Pre-launch phase consists of the last 150 minutes before launch. This phase is utilized to warm-up, check-out, program, and align IGS equipment. After warm-up the computer performs a series of self checks to insure proper operation. Information not previously programmed but essential to the mission is now fed into the computer. AGE equipment utilizes accelerometer outputs to align IMU pitch and yaw gimbals with the local vertical. The roll gimbal is aligned to the desired launch azimuth by AGE equipment.

LAUNCH PHASE

 
Launch phase starts at lift-off and lasts through insertion. During the first and second stage boost portion of launch, the guidance functions are performed by the booster autopilot. If the booster guidance system should fail, a Malfunction Detection System (MDS) provides automatic switchover to back-up (Gemini) guidance. Back-up ascent guidance can also be selected manually at the discretion of the command pilot. The computer has been programmed with launch parameters and the IMU provides continuous inertial reference for back-up ascent guidance. To minimize launch errors the computer is updated by ground stations throughout the launch phase. In the back-up ascent guidance operation, the computer provides steering and booster cut-off commands to the booster autopilot. The computer also supplies attitude error signals to the flight director needles. The IMU provides inertial attitude reference to the attitude ball. At sustainer engine cut-off (SECO), guidance

UNCLASSIFIED

~~CONFIDENTIAL~~
SEDR 300



PROJECT GEMINI



control is switched from booster to Gemini IGS. The computer starts insertion computations at SECO and, at spacecraft separation, displays the incremental velocity change required for orbit insertion. When the required velocity change appears the command pilot will accelerate the spacecraft to insertion velocity. During acceleration the IMU supplies attitude and velocity changes to the computer. The computer continuously subtracts measured acceleration from required acceleration on the display. When insertion has been achieved the incremental velocity indication will be zero.

ORBIT PHASE

Orbit phase consists of that time between insertion and 256 seconds before retrograde. If the IGS is not to be used for long periods of time it can be turned off to conserve power. If the platform has been turned off, it should be warmed up in the CAGE mode approximately one hour before critical alignment. The computer should be turned on in the pre-launch mode and allowed 20 seconds for self checks before changing modes. IGS operation during orbit is divided into three separate operations. The initial part of orbit is used for check out and alignment. The major part of orbit is used for rendezvous exercises and the final portion is used in preparation for retrograde and re-entry.

Check-Out & Alignment

Immediately after orbit confirmation the spacecraft is maneuvered to small end forward and the platform aligned with the horizon sensors. Horizon sensor outputs are used to align pitch and roll gimbals in the platform. The yaw gimbal is

UNCLASSIFIED

~~CONFIDENTIAL~~



PROJECT GEMINI



aligned through gyrocompassing techniques using the roll gyro output. This output is used to align the yaw gyro to the orbit plane. The platform alignment will be maintained by the horizon sensors as long as SEF or BEF modes are used. ORB RATE mode is used when maneuvers are to be performed. ORB RATE is an inertially free mode except for the pitch gyro which is torqued at approximately four degrees per minute (orbit rate). The purpose of torquing the pitch gyro is to maintain a horizontal attitude with respect to the earth. If ORB RATE mode is used for long periods of time drift errors will occur. To eliminate errors due to gyro drift, the mode is switched back to SEF or BEF for automatic alignment.

Rendezvous Exercises

IGS operation during rendezvous exercises consists of performing inertial measurements and maneuver computations. Radar target information is provided to the computer for use in rendezvous computations. Platform alignment is performed in SEF or BEF mode prior to initiating a maneuver. The computer START button is pressed to initiate computation of velocity changes and computed velocity requirements are automatically displayed on the IVI. Flight director needles are referenced to the computer during rendezvous exercises and indicate the attitude in which translational thrust should be applied. When the spacecraft is in the correct attitude for a maneuver, all of the incremental velocity indication will be along the forward-aft translational axis. As thrust is applied the IMU supplies the computer with attitude and acceleration information to continuously update the IVI indications. When the maneuver has been completed the platform is

UNCLASSIFIED

~~CONFIDENTIAL~~
SEDR 300



PROJECT GEMINI



realigned to the horizon sensors.

Preparation for Retrograde & Re-Entry

Preparation for retrograde and re-entry is performed in the last hour before retrograde sequence. If the IMU has been turned off, it must be turned on one hour before retrograde. (The gyros and accelerometers require approximately one half hour to warm up and another half hour is required for stabilization and alignment.) The attitude ball will indicate when platform gimbals are aligned to spacecraft axes. At this time the spacecraft is maneuvered to Blunt End Forward (BEF) and the platform aligned with the horizon sensors. The platform remains in BEF mode to maintain alignment until retrograde sequence. The computer retrograde initial conditions are checked and if necessary updated by either ground tracking stations or the pilot. Preparation for retrograde and re-entry is completed by placing the computer in RNTY mode.

RETROGRADE PHASE

Retrograde phase starts at 256 seconds prior to retrofire and ends approximately twenty-five seconds after retrofire initiation. At the start of retrograde phase a minus sixteen degree bias is placed on the pitch needle of the attitude indicator. At time to retrograde minus 30 seconds (TR-30 seconds) the platform is placed in ORB RATE mode. While the retro-rockets are firing (approximately 22 seconds) the acceleration and attitude are monitored by the IMU and supplied to the computer for use in re-entry computations. The computer starts computations for re-entry at retrofire. Computations are based on the time of retrofire, inertial position and attitude, and retrograde acceleration.

UNCLASSIFIED

8-48
~~CONFIDENTIAL~~

UNCLASSIFIED

~~CONFIDENTIAL~~
SEDR 300

UNCLASSIFIED



PROJECT GEMINI



RE-ENTRY PHASE

Re-entry phase starts immediately after the retro rockets stop firing and lasts until drogue chute deployment. After retrograde a 180° roll maneuver is performed and pitch attitude is adjusted so that the horizon can be used as a visual attitude reference. The spacecraft attitude is controlled by visual observation of the horizon until the computer commands a re-entry attitude at approximately 400,000 feet. The spacecraft is then controlled to null the flight director needles. Flight director needles are referenced to the computer during re-entry. The IMU supplies inertial attitude and acceleration signals to the computer. Bank angle commands are computed and displayed on the roll needle for down range and cross range error correction. The bank angle commands last between 0 and 500 seconds depending on the amount of down range and cross range error. Pitch and yaw needles display down range and cross range errors. Upon completion of the bank angle commands (spacecraft on target) a roll rate of 15 degrees per second is commanded by the computer. At approximately 80,000 feet the computer commands an attitude suitable for drogue chute deployment. Immediately after drogue deployment the IGS equipment is turned off.

CONTROLS AND INDICATORS

Attitude Display Group

The Attitude Display Group (ADG), (Figure 8-16), consists of a Flight Director

UNCLASSIFIED

8-49

~~CONFIDENTIAL~~


 
UNCLASSIFIED

~~CONFIDENTIAL~~
SEDR 300


UNCLASSIFIED



PROJECT GEMINI

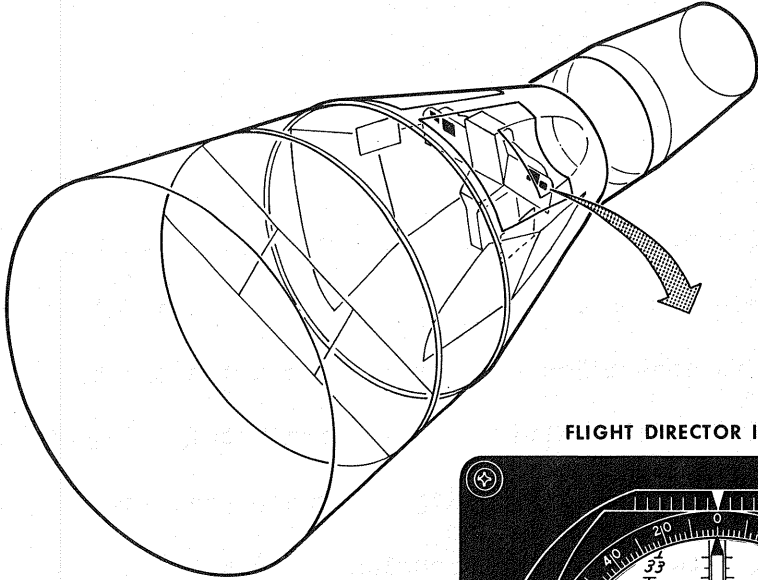

FLIGHT DIRECTOR INDICATOR

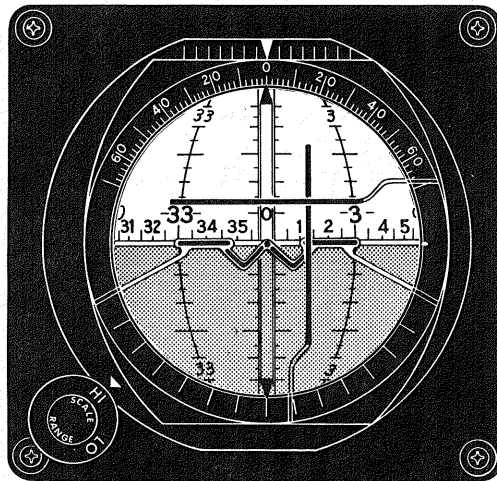

FLIGHT DIRECTOR CONTROLLER

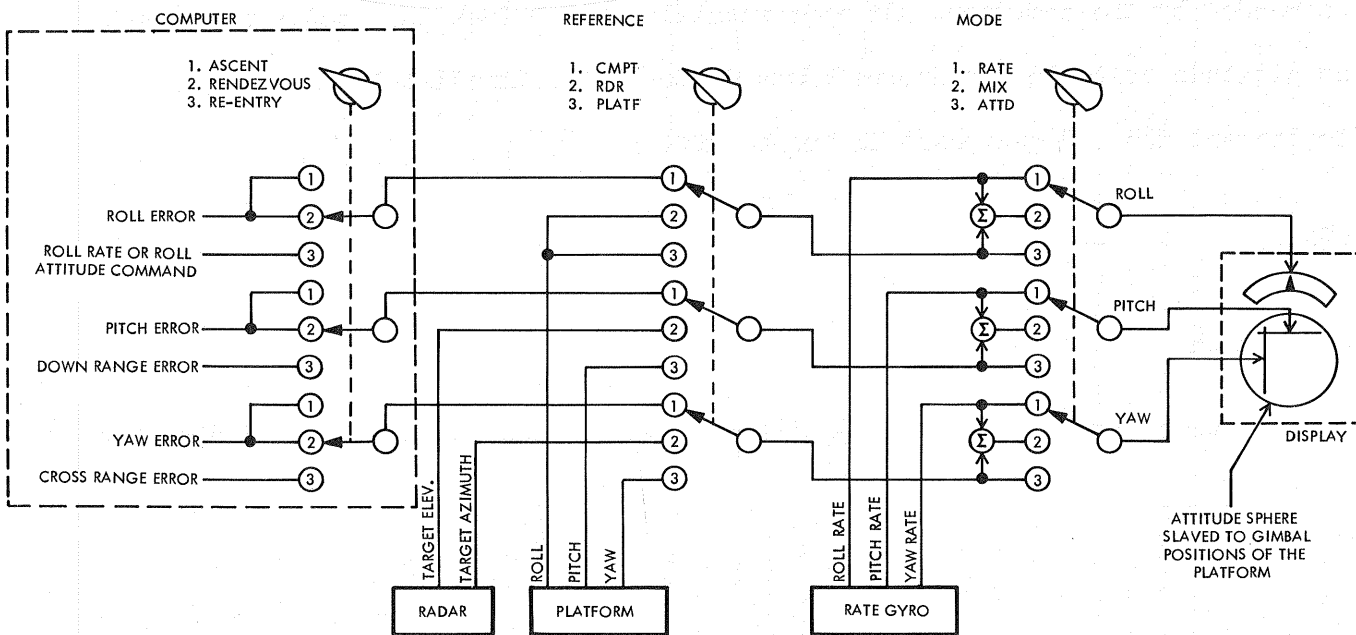
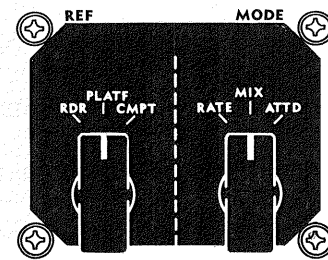


Figure 8-16 Attitude Display Group

FM2-8-16

UNCLASSIFIED

~~CONFIDENTIAL~~

UNCLASSIFIED

 
UNCLASSIFIED

~~CONFIDENTIAL~~
SEDR 300

CONFIDENTIAL



PROJECT GEMINI



Indicator (FDI) a Flight Director Controller (FDC) and their associated amplifiers. Three types of displays (attitude, attitude rate, and ADG power off) are provided by the FDI. A three axis sphere with 360 degrees of freedom in each axis continuously displays attitude information. The sphere is slaved to the inertial platform gimbals and always indicates platform attitude. Three needle type indicators display attitude and/or attitude rate information as selected by the pilot. Information displayed on the needles is provided by the computer, platform, radar, and rate gyros. A scale selector is included in the FDI to allow the selection of HI or LO scale indications on the needles. The FDC is used to select the source and type of display on the needles. Figure 8-16 includes a simplified schematic of the FDC switching and indicates the source and type of signal available. Since the computer is capable of producing different types of signals, the computer mode selector is included in the schematic. The FDC reference selector determines the source of display information. The FDC mode selector determines the type of signal displayed.

Manual Data Insertion Unit

The Manual Data Insertion Unit (MDIU) consists of a ten digit keyboard and a seven digit register. The MDIU allows the pilot to communicate directly with the on-board computer. Provision is made to enter, cancel or read out information. The keyboard is used to address a specific location in the computer and set up coded messages for insertion. The first two keys that are pressed address the computer memory word location and the next five set up a coded message. Keys are pressed in a "most significant bit first" order. Negative

UNCLASSIFIED

8-51

 
~~CONFIDENTIAL~~

UNCLASSIFIED

~~CONFIDENTIAL~~
SEDR 300



PROJECT GEMINI



values are inserted by making the first number of the message a 9. The 9 then represents a minus sign and not a number. The seven digit register is used to monitor addresses and messages entered into or read out of the computer. Push button switches are included on the register panel to READ OUT, CLEAR, and ENTER the messages. Information can also be inserted in the computer by the ground tracking stations which have digital command system capabilities.

Incremental Velocity Indicator

The Incremental Velocity Indicator (IVI) provides a display of computed velocity increments required for, or resulting from a specific maneuver. The IVI is controlled through the on-board computer. Displays are utilized for orbit insertion, orbit correction, rendezvous maneuvers and retrograde. Velocity increments are provided along each of the spacecraft translational axis. Controls are included to manually insert plus or minus velocity increments into the IVI.

Computer Controls

Computer controls consist of: a COMPUTER mode selector, a START switch, a COMP light, a MALF light, a RESET switch, and an ON-OFF switch. The COMPUTER mode selector is a seven position rotary switch which selects the type of computations to be performed. Modes of operation correspond to the mission phase in which they are utilized. A COMP light provides an indication of computer operational status and a START switch allows the pilot to initiate computations. The light indicates when the computer is running through its program and provides a means of checking computer sequencing. The switch is utilized for manual initiation of

UNCLASSIFIED

 
8-52
~~CONFIDENTIAL~~

UNCLASSIFIED

~~CONFIDENTIAL~~
SEDR 300



PROJECT GEMINI



certain computations.

NOTE

The START switch must be operated in conjunction with the computer mode selector and the COMP light.

The MALF light indicates when a malfunction has occurred and the RESET switch resets the computer malfunction indicator. The RESET switch is only capable of resetting the computer for momentary malfunctions. An ON-OFF switch controls power to the computer and the auxiliary computer power unit.

IMU Controls & Indicators

The IMU controls and indicators consist of; a PLATFORM mode selector, an ACC light, an ATT light, a RESET switch, and an AC POWER selector. The PLATFORM mode selector is a seven position rotary switch which, in conjunction with the AC POWER selector, turns the platform on and off as well as control the mode of operation. Two cage modes, two align modes, one free mode, and an orbit rate mode of operation are selectable. The align modes are SEF and BEF. The ACC light indicates when a malfunction has occurred in the accelerometer portion of the IMU. The ATT light indicates when a malfunction has occurred in the attitude portion of the IMU. The RESET switch will turn off the lights, indicating that the IMU has returned to normal operation. The RESET switch works for momentary malfunctions of either type. Inability to reset the lights indicates a permanent malfunction. The AC POWER selector allows the pilot to turn the IGS inverter on without operating the platform or electronics circuits.

UNCLASSIFIED

8-53

~~CONFIDENTIAL~~

UNCLASSIFIED

~~CONFIDENTIAL~~
SEDR 300



PROJECT GEMINI



SYSTEM UNITS

INERTIAL MEASUREMENT UNIT

The Inertial Measurement Unit (IMU) is the inertial attitude and acceleration reference for the Gemini spacecraft. The IMU consists of three separate packages; the inertial platform, platform electronics, and IGS power supply. All three packages conform to spacecraft contours for mounting convenience and have a total weight of 130 pounds. A functional block diagram (Figure 8-17) indicates functions and signal routing throughout all three packages. In addition to attitude and acceleration reference, the IMU provides AC and DC power for use in other units of guidance and control. The platform and electronics packages are mounted on cold plates to prevent overheating.

NOTE

References to x, y, and z attitude and translational axes pertain to inertial guidance only and should not be confused with structural coordinate axes.

Inertial Platform

The inertial platform (Figure 8-18) is a four gimbal assembly containing three miniature integrating gyros and three pendulous accelerometers. Gimbals allow the gyro mounting frame (pitch block) to remain in a fixed attitude while the housing moves freely about them. Major components of the platform are: a housing,

UNCLASSIFIED

8-54

~~CONFIDENTIAL~~

PROJECT GEMINI



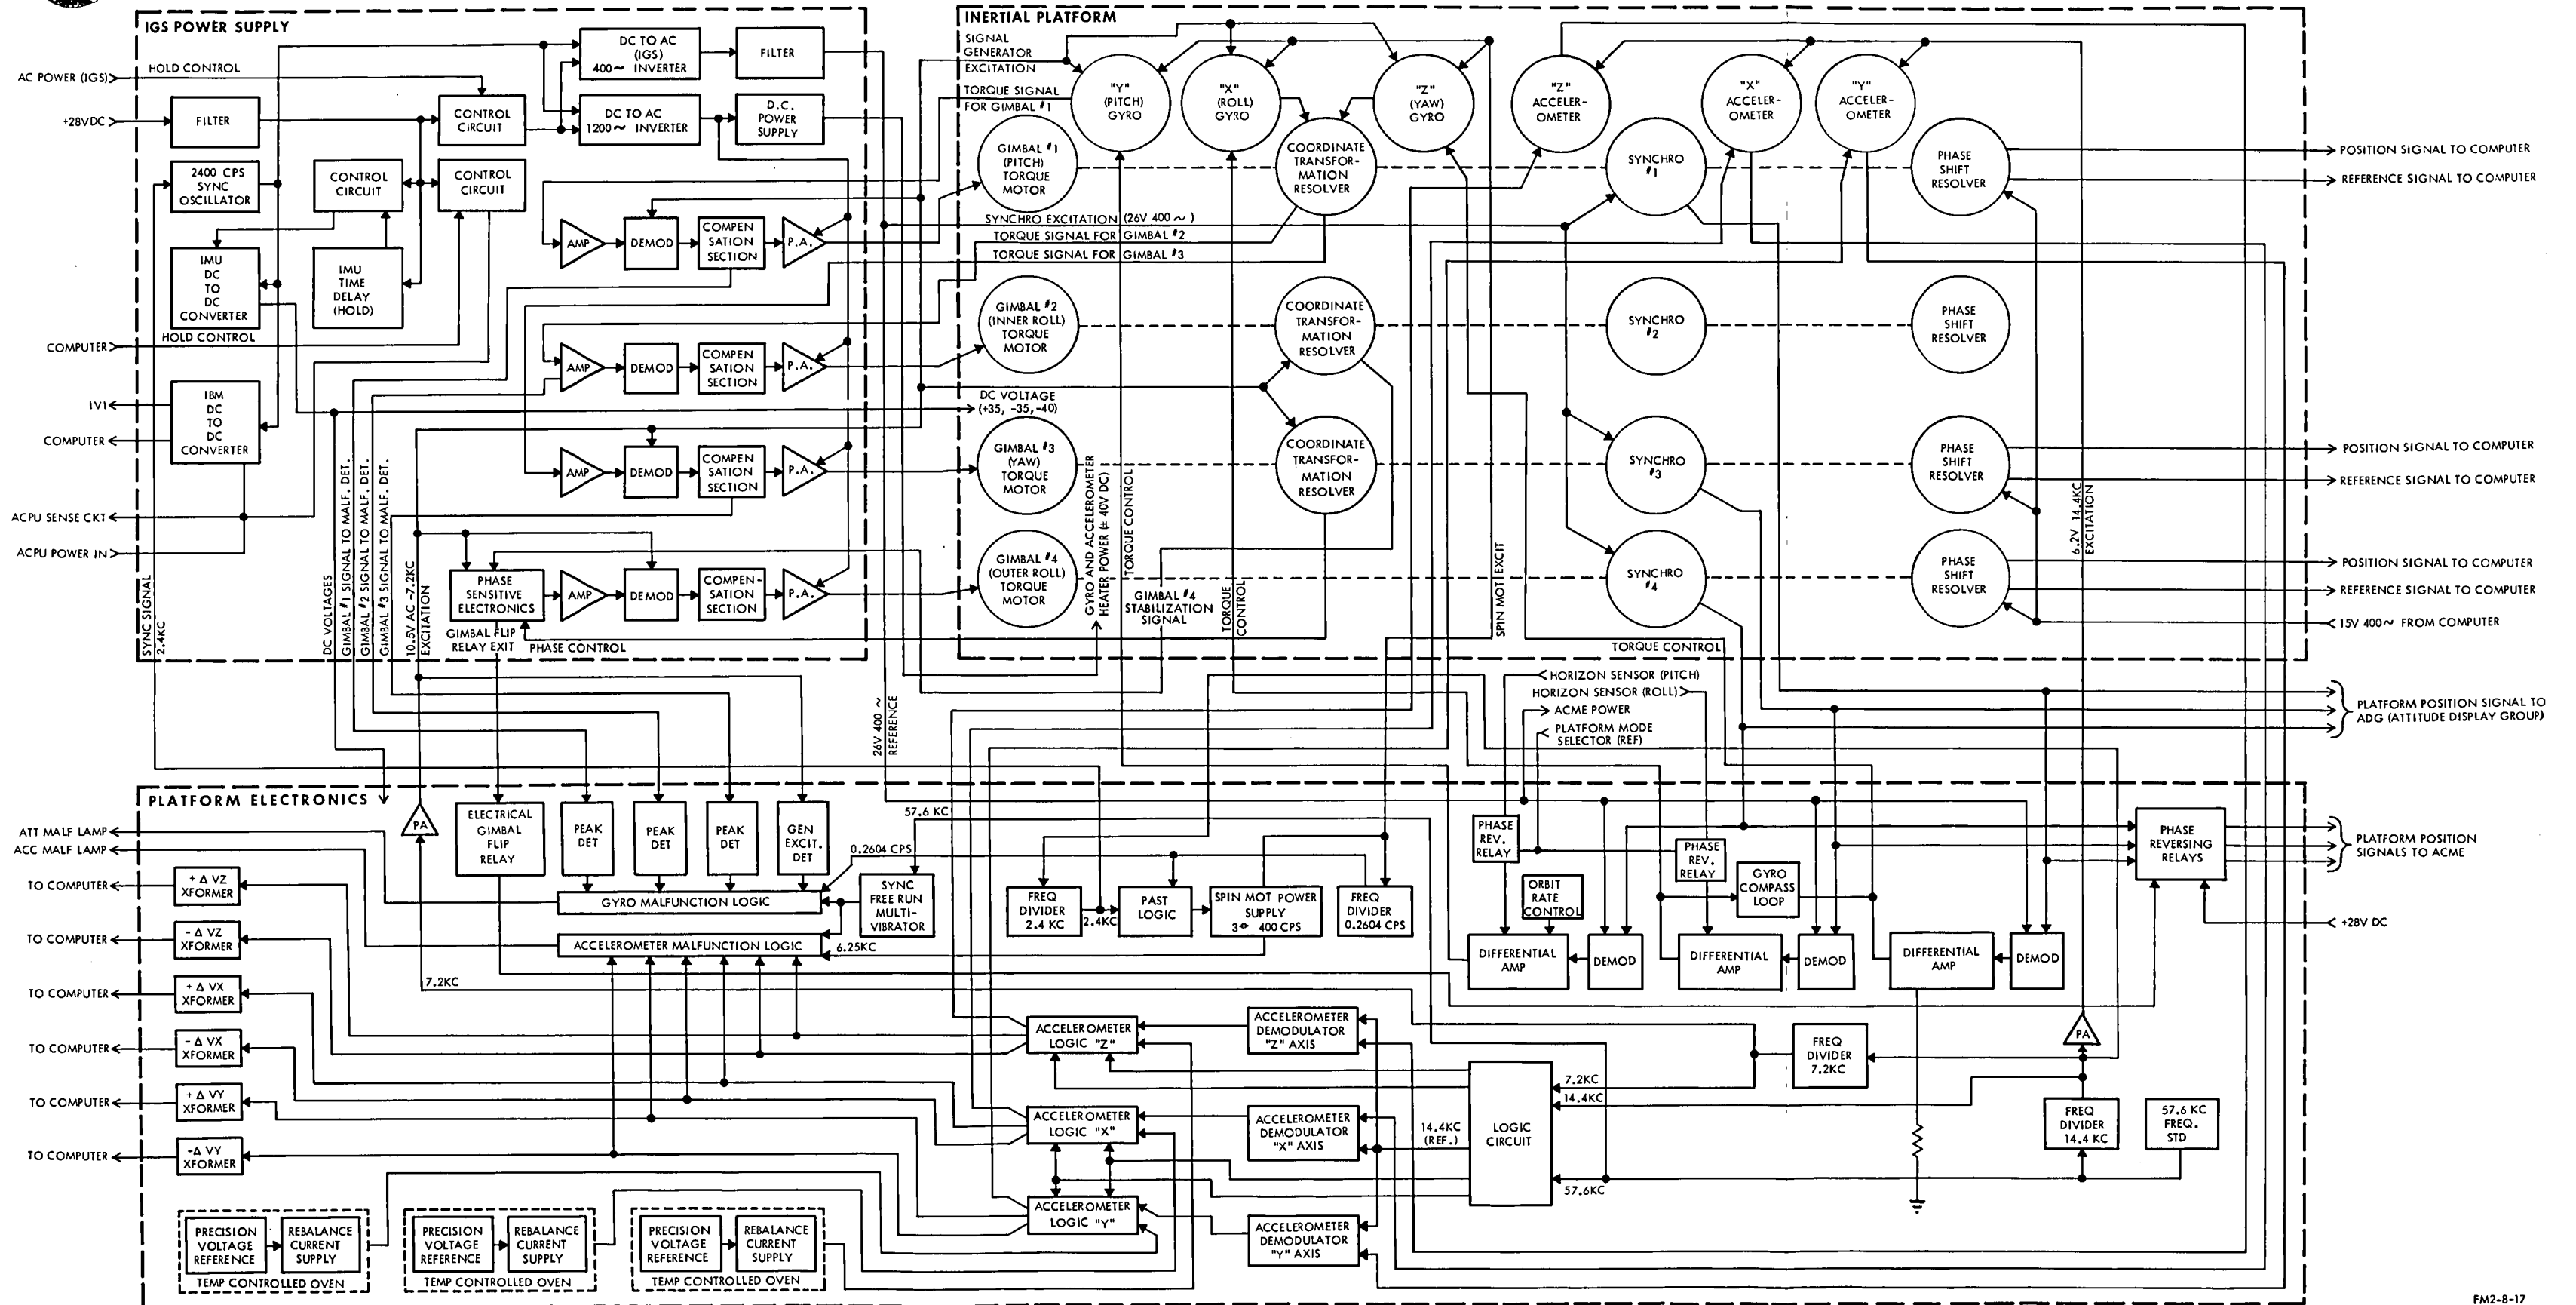


Figure 8-17 IMU Functional Block Diagram

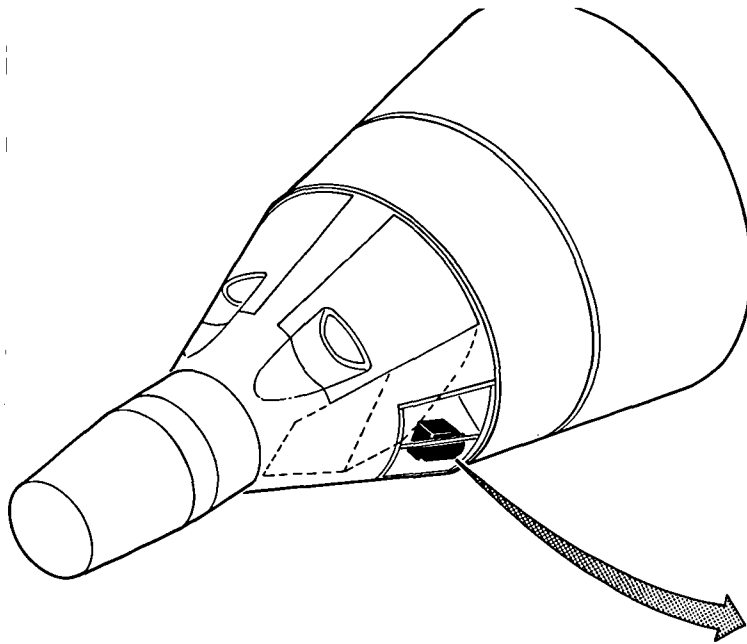


PROJECT GEMINI

 

NOTE

PLATFORM CO-ORDINATES - X_p, Y_p, Z_p .
BODY CO-ORDINATES - X_b, Y_b, Z_b .

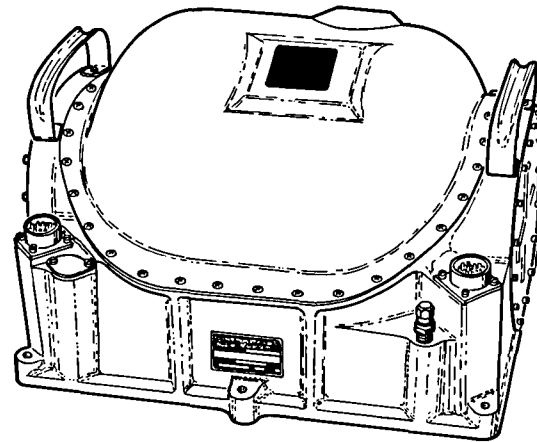

INERTIAL PLATFORM

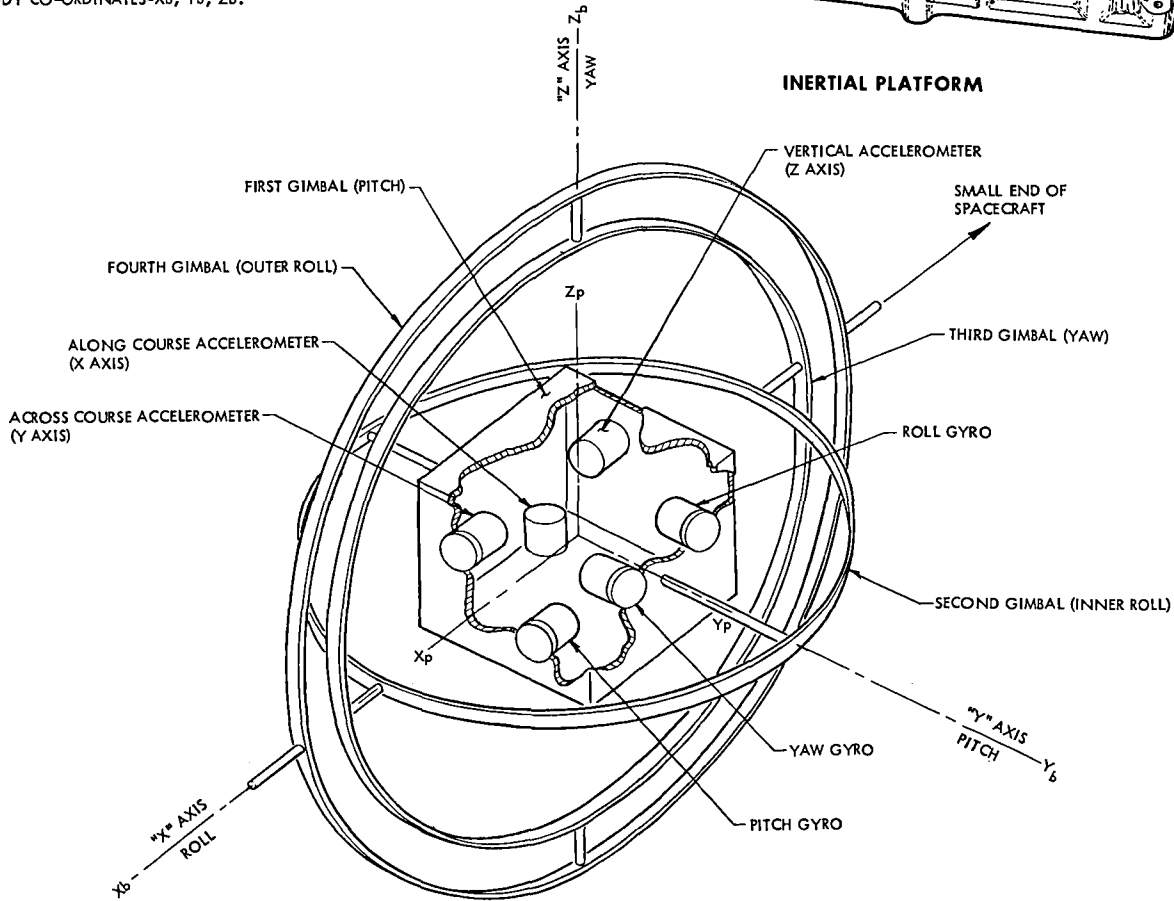


Figure 8-18 Inertial Platform Gimbal Structure

FM2-8-18



gimbal structure, torque motors, gimbal angle synchros, resolvers, gyros and accelerometers. The gimbals from inside to outside are: pitch, inner roll, yaw and outer roll. All gimbals, except inner roll, have 360 degrees of freedom. The inner roll gimbal is limited to plus and minus 15 degrees. Two roll gimbals are used to eliminate the possibility of gimbal lock. Gimbal lock can occur on a three gimbal structure when an attitude of 0 degrees yaw, 0 degrees pitch, and 90 degrees roll exists. At this time the roll and yaw gimbals are in the same plane and the yaw gimbal cannot move about its axis (gimbal lock). In the four gimbal platform an angle of 90 degrees is maintained between the inner roll and yaw gimbals thus preventing gimbal lock. The inertial components are mounted in the innermost gimbal casting (pitch block) for rigidity and shielding from thermal effects. The gyros and associated servo loops maintain the pitch block in a fixed relationship with the reference coordinate system. The accelerometer input axes are aligned with the three mutually perpendicular axes of the pitch block. Two sealed optical quality windows are provided in the housing for alignment and testing. One window provides optical access to a porro prism for alignment with a theodolite on the launch pad. Both windows provide optical access to an alignment cube. The cube and prism are both located in the stable element.

System Electronics

 
The system electronics package contains the circuitry necessary for operation of the IMU. Circuits are provided for gyro torque control, timing logic, spin motor power, accelerometer logic, accelerometer rebalance, and malfunction detection. Relays provide remote mode control of the above circuits.

UNCLASSIFIED

~~CONFIDENTIAL~~
SEDR 300



PROJECT GEMINI



IGS Power Supply

The IGS power supply (Figure 8-19) contains gimbal control electronics and the static power supply unit. Gimbal control electronics drive torque motors in the platform. Separate control circuits are provided for each gimbal. The static power supply provides the electrical power for the IMU, OBC, ACPU, MDIU, IVI, ACME, and horizon sensors. Figure 8-19 indicates the types of power available and the units to which they are supplied.

Attitude Measurement

Attitude measurements are made from inertial platform gimbals and reflect the difference between spacecraft and gimbal attitudes. Platform gimbals are maintained in essentially a fixed inertial attitude by gimbal control electronics. As the spacecraft moves about the attitude axes, friction transfers some of the movement to platform gimbals. Three miniature gyros are used to sense minute gimbal attitude changes. When gyros sense a change in attitude, they produce a signal proportional to the attitude error. Gyro outputs are then used by gimbal control circuits to drive gimbals to their original inertial attitude. Gimbal positions are measured by synchros and resolvers. Synchro outputs are provided for attitude display, automatic attitude control, and gyro alignment. Two types of resolvers, phase shift and coordinate transformation, are used. Phase shift resolvers provide gimbal angle information to the computer. Coordinate transformation resolvers provide attitude signals for gimbal control purposes.

UNCLASSIFIED

8-58

~~CONFIDENTIAL~~

PROJECT GEMINI



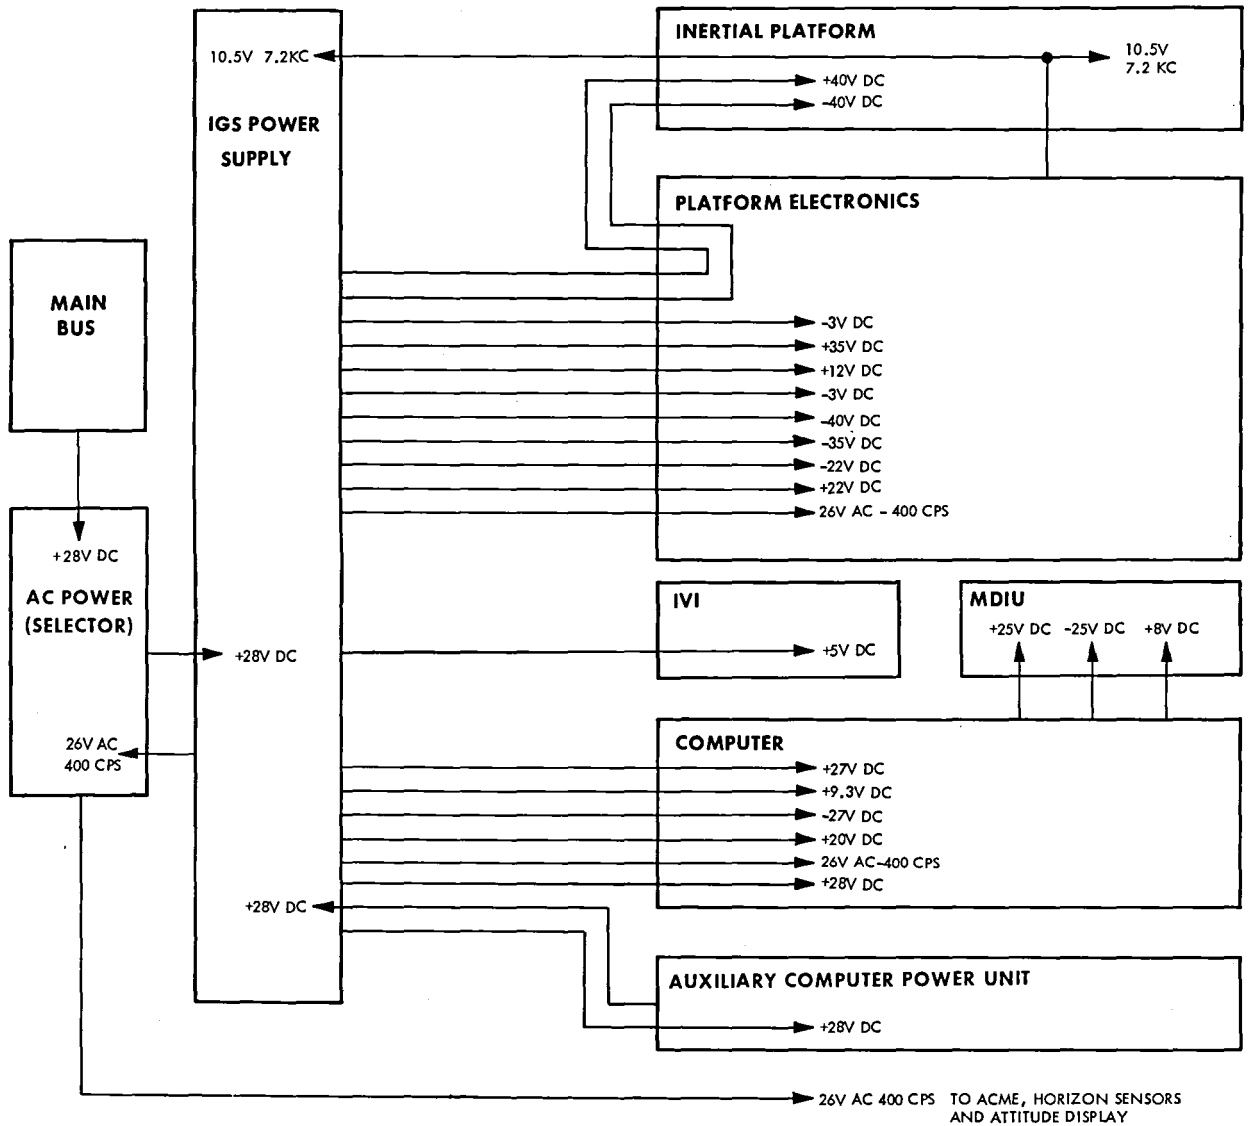


Figure 8-19 IGS Power Supply

FM2-8-19

~~CONFIDENTIAL~~
SEDR 300

 UNCLASSIFIED

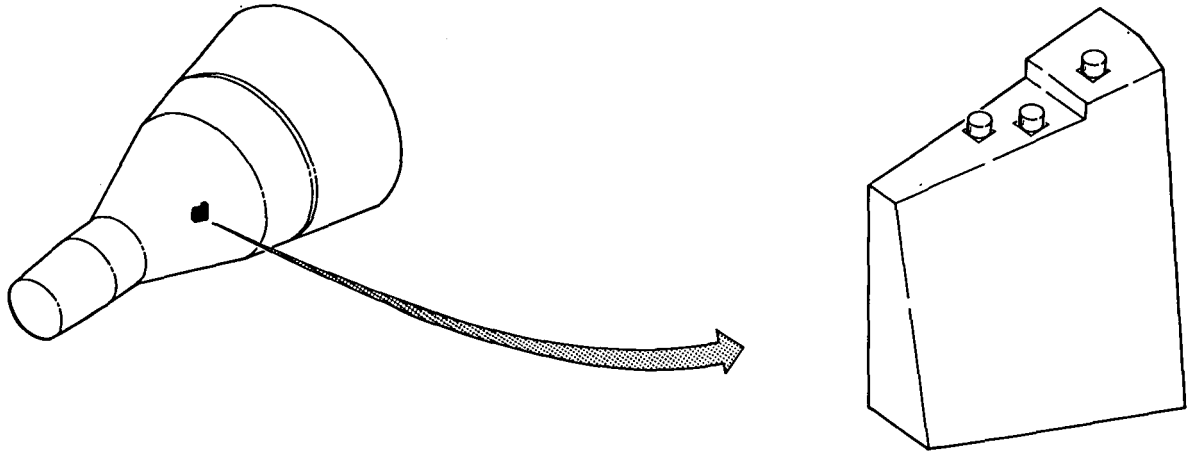

PROJECT GEMINI



Modes of Operation

Seven modes of operation are selectable by the astronaut. The modes, in order of switch position are: OFF, CAGE, SEF, ORB RATE, BEF, CAGE, and FREE. The CAGE position is used for IMU warm-up and to align the platform gimbals with spacecraft axes. Platform gimbals are caged prior to fine alignment with the horizon sensors. In the cage mode, gimbals are torqued by synchro outputs until a null is obtained on the synchro. When synchro outputs reach null, torquing stops and the gimbals are aligned with spacecraft axes. SEF (small end forward) mode is used to align the platform with the horizon sensors when the spacecraft is flying small end forward. Horizon sensor pitch and roll outputs are compared with synchro outputs and the difference used to torque gimbals. When synchro and horizon sensor outputs are balanced the gimbals are aligned to earth local vertical. A gyro compass loop aligns the yaw axis with the orbit plane.

NOTE

If horizon sensors lose track during either SEF or BEF alignment modes, the platform is automatically switched to orbit rate mode.

ORB RATE (orbit rate) mode is used to maintain attitude reference during spacecraft maneuvers. Orbit rate mode is inertially free except for the pitch gyro. The pitch gyro is torqued at approximately four degrees per minute to maintain a horizontal attitude with respect to the earth. If orbit rate mode is used for long periods of time, drift can cause excessive errors in the platform. BEF (blunt end forward) mode is the same as SEF except that relays reverse the

UNCLASSIFIED

8-60

~~CONFIDENTIAL~~

CONFIDENTIAL

UNCLASSIFIED

~~CONFIDENTIAL~~
SEDR 300



phase of horizon sensor inputs. The second CAGE mode allows the platform to be caged in blunt end forward without switching back through other modes. FREE mode is used during launch and re-entry phases. Free mode is completely inertial and the only torquing employed is for drift compensation.

NOTE

Free mode is selected automatically by the time reference system at retrofire.

Gimbal Control Circuits

Four separate servo loops provide gimbals attitude control. Figure 8-17 illustrates the signal flow through all four loops. Gyro signal generator outputs are used either directly or through resolvers as the reference for gimbals control. Both phase and amplitude of signal generator outputs are functions of gimbals attitude. Gimbal number one (pitch) is controlled directly by the pitch gyro output. Error signals produced by the pitch gyro are amplified, demodulated, and compensated, then used to drive the pitch gimbals torque motor. The first amplifier raises the signal to the level suitable for demodulation. After amplification, the signal is demodulated to remove the 7.2 KC carrier. A compensation section keeps the signal within the rate characteristics necessary for loop stability. (Too much gain causes a servo loop to become unstable and too little gain allows the platform to lag gyro output.) When the signal is properly conditioned by the compensation section, it goes to a power amplifier. The power amplifier supplies the current required to drive gimbals torque motors. Torque motors

UNCLASSIFIED

 
8-61
~~CONFIDENTIAL~~

~~CONFIDENTIAL~~
SEDR 300

UNCLASSIFIED



PROJECT GEMINI



then drive gimbals maintaining gyro outputs at or very near null.

Roll and yaw servo loops utilize resolvers to correlate gimbal angles with gyro outputs. Inner roll and yaw gimbals are controlled by a coordinate transformation resolver mounted on the pitch gimbal. When the spacecraft is at any pitch attitude other than 0 or 180 degrees, some roll motion is sensed by the yaw gyro and some yaw motion is sensed by the roll gyro. The amount of roll motion sensed by the yaw gyro is proportional to the pitch gimbal angle. The resolver mounted on the pitch gimbal coordinates roll and yaw gyro output with pitch gimbal angle. Resolver output is then conditioned in the same manner as in the pitch servo loop to drive inner roll and yaw gimbals.

The outer roll gimbal is servo driven from the inner roll gimbal resolver. A coordinate transformation resolver mounted on the inner roll gimbal, monitors the angle between inner roll and yaw gimbals. If the angle is anything other than 90 degrees an error signal is produced by the resolver. The error signal is conditioned in the same manner as in the pitch servo loop to drive the outer roll gimbal. One additional circuit (phase sensitive electronics) is included in the outer roll servo loop. The outer roll gimbal torque motor is mounted on the platform housing and moves about the stable element with the spacecraft. As the spacecraft moves through 90 degrees in yaw, the direction that the outer roll gimbal torque motor must rotate to compensate for spacecraft roll, reverses. Phase sensitive electronics and a resolver provide the phase reversal necessary for control. The resolver is used to measure rotation of the yaw gimbal about the yaw axis. As the gimbal rotates through 90 degrees in yaw, the resolver

UNCLASSIFIED

8-62
~~CONFIDENTIAL~~

UNCLASSIFIED

~~CONFIDENTIAL~~
SEDR 300



PROJECT GEMINI



output changes phase. Resolver output is compared to a reference phase by the phase sensitive electronics. When the resolver output changes phase, the torque motor drive signal is reversed.

Pre-Launch Alignment

The IMU is the inertial reference for back-up ascent guidance and must therefore be aligned for that purpose. The platform is aligned to local vertical and the launch azimuth. Platform X and Y accelerometers are the reference for local vertical alignment. When the platform is aligned to the local vertical, X and Y accelerometers are level and cannot sense any acceleration due to gravity. If any acceleration is sensed, the platform is not properly aligned and must be torqued until no error signal exists. The accelerometer output is used by AGE equipment to generate torque signals for the gyros. When the gyro is torqued it produces an error signal which is used to align the gimbal. The outer roll gimbal synchro output is compared with a signal representing the launch azimuth by AGE equipment. The error signal is conditioned by AGE equipment and applied to the yaw gyro torque generator. The yaw gyro signal generator then produces a signal proportional to the input torque. Gyro output is coordinated by a resolver mounted on the pitch gimbal. Since the spacecraft is in a 90 degree pitch up attitude essentially all of the yaw gyro output is transferred to roll gimbal control electronics. The electronics drive the roll gimbals until no error exists between synchro output and the AGE reference signal. When no error signal exists, the platform is aligned to the launch azimuth.

UNCLASSIFIED

8-63

~~CONFIDENTIAL~~



PROJECT GEMINI



Orbit Alignment

Alignment of the platform in orbit is accomplished by referencing it to the horizon sensors. Placing the platform mode selector in SEF or BEF position will reference it to the horizon sensors. Pitch and roll horizon sensor outputs are compared with platform pitch and outer roll synchro outputs. Differential amplifiers produce torque control signals proportional to the difference between sensor and synchro outputs. Torque control signals are used to drive pitch and roll gyro torque generators. Gyro signal generator outputs are then used by gimbal control electronics to drive platform gimbals. When synchro and horizon sensor outputs balance, the pitch and roll gimbals are aligned to the local vertical. The yaw gyro is aligned to the orbit plane through a gyro compass loop. If yaw errors exist, the roll gyro will sense a component of orbit rate. The orbit rate component in the roll gyro output is used through a gyro compass loop to torque the yaw gyro. Yaw gyro output is then used by gimbal control electronics to drive the yaw gimbal. When the roll gyro no longer senses a component of orbit rate, the yaw gimbal is aligned to the orbit plane. All three gimbals are now aligned and will remain aligned as long as SEF or BEF modes are used. The pitch gyro will be continuously torqued (at the orbit rate) to maintain a horizontal attitude.

NOTE

If horizon sensors lose track while the platform is in SEF or BEF modes, the platform is automatically switched to orbit rate mode.

CONFIDENTIAL

~~CONFIDENTIAL~~
SEDR 300

UNCLASSIFIED



PROJECT GEMINI



Orbit Rate Circuit

The orbit rate circuit is used to maintain alignment to the local vertical during orbit maneuvers. Local vertical cannot be provided by horizon sensors during maneuvers because they will lose track. To maintain a horizontal attitude with no external reference, the pitch gyro is torqued at approximately four degrees per minute. The torque represents the spacecraft orbit rate. Torque is obtained by placing a DC bias on the output of the pitch differential amplifier. The bias drives the pitch gyro torquer at the orbit rate. Orbit rate bias is adjustable and can be set to match orbits of various altitudes.

Phase Angle Shift Technique

Phase Angle Shift Technique (PAST) is a method of improving gyro drift repeatability. One of the factors which affects gyro drift is spin motor rotor unbalance. The effect of unbalance will vary with changes in the point of lock on with the synchronous motor's rotating field. The spin motor can lock on to a different point each time it is started. Drift errors due to rotor unbalance are in the order of 0.5 degrees per hour. PAST provides a means of reducing drift errors by a factor of ten. To cancel drift errors, PAST shifts the phase of spin motor excitation 30 degrees at regular intervals. Shifting the phase causes the rotor to lock on a different point each time the phase is shifted. Drifts now tend to cancel and become predictable. (When drift is predictable it can be compensated for.) All three gyro torque control loops contain drift compensation circuits. The drift compensation circuits apply a DC bias to each gyro torque generator. Drift compensation torques the gyro in the opposite

CONFIDENTIAL

UNCLASSIFIED

8-65

~~CONFIDENTIAL~~

**PROJECT GEMINI**

direction as predictable drift, maintaining a stable attitude.

Attitude Malfunction Detection

An attitude malfunction detection circuit performs self checks of gyro signal generator excitation, gimbal control signals, logic timing signals, and critical voltages. Gyro signal generator excitation is checked for presence and proper amplitude. Gimbal control signals are checked for the length of time signals are present. The logic timing signal (28.8 KC) is checked for presence. Critical voltages (+22V DC, -3V DC, +12V DC) are checked for presence. If a malfunction is detected, an ATF light on the control panel is automatically illuminated. If momentary malfunctions occur, the ATF indicator can be restored to normal operation by pressing the RESET button.

NOTE

If the attitude measurement circuits malfunction, the acceleration indications are not reliable. Accelerometer axes will not be properly aligned and indications are along unknown axes.

Acceleration Measurement

Acceleration is measured along three mutually perpendicular axes of the inertial platform. Sensing devices are three miniature pendulous accelerometers. The

~~CONFIDENTIAL~~
SEDR 300

UNCLASSIFIED



PROJECT GEMINI



accelerometers are mounted in the platform pitch block and measure acceleration along gyro x, y, and z axes. Accelerometer signal generators produce signals whose phase is a function of the direction of acceleration. Signal generator output is used to control torque rebalance pulses. The torque rebalance pulses drive accelerometer pendulums toward their null position. Rebalance pulses are DC current whose polarity is controlled by signal generator output. The polarity of rebalance pulses indicates the direction of acceleration and the algebraic sum of the pulses indicates the amount of acceleration. Rebalance pulses are supplied to the spacecraft digital computer where they are used for computations and incremental velocity displays.

Torque Rebalance Loop

Three electrically identical torque rebalance loops are used to control accelerometer pendulum positions. Normally an analog loop would be used for this purpose; however, if an analog loop were used, the output would have to be converted to digital form for use in the computer. To eliminate the need for an analog to digital converter, a pulse rebalance loop is used. Short duration 184 milliamper DC current pulses drive the accelerometer pendulum in one direction until it passes through null. Pulses are applied at the rate of 3.6KC. When the pendulum passes through null, signal generator output changes phase. The signal generator output is demodulated to determine the direction of the pendulum from null. Demodulator output is used by logic circuits to control the polarity of rebalance pulses. If acceleration is being sensed, there will be more pulses of one polarity than the other. If no acceleration is being sensed, the number of pulses of

UNCLASSIFIED

 
8-67
~~CONFIDENTIAL~~

UNCLASSIFIED

~~CONFIDENTIAL~~
SEDR 300



PROJECT GEMINI



each polarity will be equal. In addition to controlling the polarity of rebalance pulses, logic circuits set up precision timing of the pulses. Precision frequency inputs from the timing circuits are the basis for rebalance pulse timing. Precise timing is essential because the amount of pendulum torque depends on the length of the current pulse. All pulses are precisely the same duration and amplitude, therefore total torque is dependent only on the algebraic sum of the applied pulses. Each time a rebalance pulse is applied to the accelerometer torquer, a pulse is also provided to the computer. Algebraic summation of the rebalance pulses is performed by the computer.

Pulse Rebalance Current Supply

A pulse rebalance current supply provides the required current for torque rebalance. Since acceleration measurements are based on the number of torque pulses it is essential that all pulses be as near identical as possible. To maintain a stable current, a negative feedback circuit is employed. The supply output is passed through a precision resistor and the voltage drop across the resistor compared to a precision voltage reference. Errors detected by the comparison are used in the feedback circuit to correct any deviations in current. To further enhance stability both the current supply and the precision voltage reference are housed in a temperature controlled oven.

Accelerometer Dither

A pendulous accelerometer, unlike a gyro, has an inherent mass unbalance. The mass unbalance is necessary to obtain the pendulum action. Due to the unbalance, perfect flotation of the pendulous gimbal cannot be achieved and consequently

UNCLASSIFIED

8-68

~~CONFIDENTIAL~~

CONFIDENTIAL

~~CONFIDENTIAL~~
SEDR 300

UNCLASSIFIED



pressure is present on the gimbal bearing. To minimize the stiction effect, caused by bearing friction, a low amplitude oscillation is imposed on the gimbal. The oscillation (dither) prevents the gimbal from resting on its bearing long enough to cause stiction. To obtain gimbal oscillation, two signals are required: a 100 CPS dither signal and a DC field current. The DC field current is superimposed on the signal generator excitation and creates a magnetic field around the gimbal. The 100 CPS dither is applied to a separate (modulator) coil. The dither signal beats against the DC field, causing the gimbal to oscillate up and down. The dither motion is not around the output axis and consequently no motion is sensed by the signal generator.

Accelerometer Malfunction Detection

An acceleration malfunction detection circuit performs self checks of incremental velocity pulses and critical voltage. Incremental velocity pulses from each of the three axes are checked for presence. If pulses are absent longer than 0.35 seconds, it indicates that a flip flop did not reset between set pulses. The critical voltage (+12V DC) is checked for presence. If a malfunction is detected, an ACC light on the control panel is automatically illuminated. If momentary malfunctions occur, the accelerometer malfunction circuit can be restored to normal operation by pressing the RESET button.

NOTE

Malfunction of the accelerometer circuits does not affect attitude measurements.

CONFIDENTIAL
UNCLASSIFIED

8-69
~~CONFIDENTIAL~~



PROJECT GEMINI



AUXILIARY COMPUTER POWER UNIT

The Auxiliary Computer Power Unit (ACPU) is used in conjunction with the IGS power supply to maintain the correct DC voltages at the computer. The computer cannot function properly on low voltage either as a transient or a depression. Abnormal voltages can cause permanent changes in the computer memory. Three types of circuits are provided in the ACPU to prevent a low voltage condition at the computer. The first circuit is a transient sense and auxiliary power control circuit. The second circuit is a low voltage sense and power control circuit and the third is auxiliary power. The ACPU is turned on and off with the computer power switch.

Transient Sense Circuit

The transient sense circuit is designed to sense and correct transient low voltage conditions. A series type transistor voltage regulator holds auxiliary power off the line as long as IGS power supply computer voltage regulator voltage is normal. If regulator voltage momentarily drops below 17.5 volts, the transient sense circuit detects the drop and turns on the series regulator. The regulator then places auxiliary power on the line and maintains voltage at the desired level.

Low Voltage Sense Circuit

A low voltage sense circuit prevents the computer from operating on low voltage. When the computer is turned on, the low voltage sense circuit insures that spacecraft bus voltage is above 21 volts before allowing power to be applied to the



PROJECT GEMINI



computer. If the computer is already on when a low voltage condition occurs, the transient sense circuit will maintain normal voltage for 100 milliseconds. If spacecraft bus voltage is not back to normal after 100 milliseconds the low voltage sense circuit initiates a controlled shutdown of the computer. Computer power is controlled through contacts of a relay in the low voltage sense circuit. When the low voltage sense circuit detects a voltage depression it de-energizes the relay. Contacts of the relay turn off the computer in a manner identical with the computer power switch. When the low voltage sense circuit turns off the computer it also breaks power to all ACPU circuits except low voltage sense. If power were not broken to the transient sense circuit it would attempt to maintain normal voltage at the computer. In attempting to maintain normal voltage the auxiliary power capability would be exceeded.

Auxiliary Power

Auxiliary power consists of a battery and a trickle charger. A 0.5 ampere-hour nickle cadmium battery is used to supply computer power during spacecraft bus low voltage transients. The battery will supply up to 9.8 amperes for periods of 100 milliseconds or less. A trickle charger is provided to maintain a full charge on the battery. The charger consists of a transistor oscillator, transformer, and rectifier. The oscillator changes spacecraft bus voltage to AC. The AC voltage is then stepped up with a transformer and changed back to DC by a full wave diode rectifier. Rectifier output is then applied, through a current limiting resistor, to the battery. The resistor limits charging current to 35 milliamperes. Provision is included to charge the battery from an external source if desired.

UNCLASSIFIED

~~CONFIDENTIAL~~
SEDR 300



PROJECT GEMINI



DIGITAL COMPUTER

SYSTEM DESCRIPTION

General

The Digital Computer, hereinafter referred to as the computer, is a binary, fixed-point, stored-program, general-purpose computer, used to perform on-board computations. The computer is 18.90 inches high, 14.50 inches wide, and 12.75 inches deep. It weighs 58.98 pounds. External views of the computer are shown of Figure 8-20.

The major external characteristics are summarized in the accompanying legend.

Using inputs from other spacecraft systems, along with a stored program, the computer performs the computations required during the Pre-Launch, Insertion, Catch-Up, Rendezvous, and Re-Entry phases of the mission. In addition, the computer provides back-up guidance for the launch vehicle during Ascent.

Inputs and Outputs

The computer is interfaced with the Inertial Platform, Platform Electronics, Inertial Guidance System (IGS) Power Supply, Auxiliary Computer Power Unit, Manual Data Insertion Unit, Time Reference System, Digital Command System, Attitude Display, Attitude Control and Maneuver Electronics, Titan Autopilot, Pilots' Control and Display Panel, Incremental Velocity Indicator, Instrumentation System, and Aerospace Ground Equipment. In connection with these interfaces, the computer inputs and outputs include the following:

Inputs

40 discrete

3 incremental velocity

~~CONFIDENTIAL~~
8-72

UNCLASSIFIED

PROJECT GEMINI


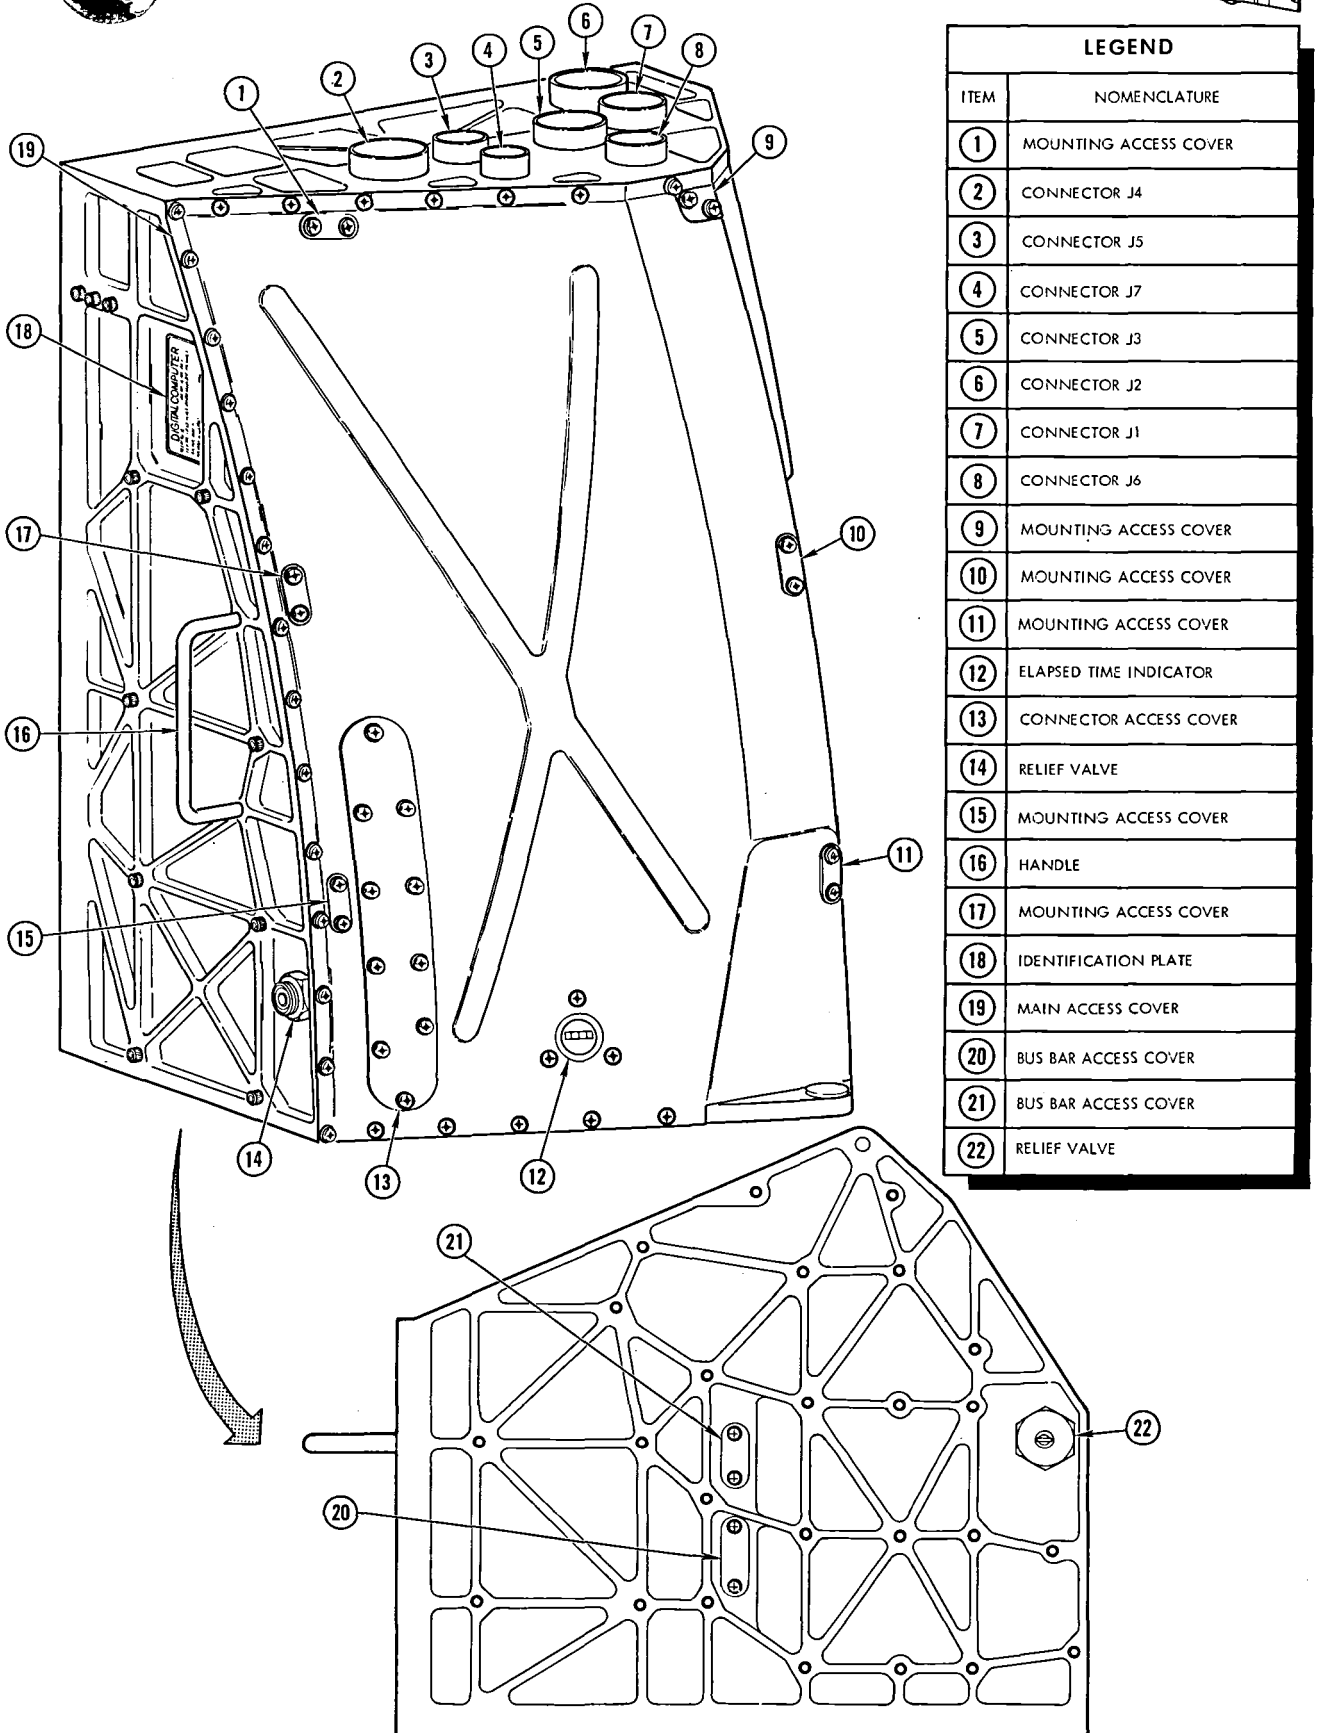


Figure 8-20 Digital Computer

 FM 2-8-20



PROJECT GEMINI



Inputs (cont)

- 3 gimbal angle
- 2 high-speed data (500 kc)
- 1 low-speed data (3.57 kc)
- 1 low-speed data (182 cps)
- 1 input and read-back(99 words)
- 6 DC power (5 regulated, 1 unregulated)
- 1 AC power (regulated)

Outputs

- 30 discrete
- 3 steering command
- 3 incremental velocity
- 1 decimal display (7 digits)
- 1 telemetry (21 digital data words)
- 1 low-speed data (3.57 kc)
- 1 low-speed data (182 cps)
- 3 DC power (regulated)
- 1 AC power (regulated, filtered)

Operational Characteristics

The major operational characteristics of the computer are as follows:

Type

Binary, fixed-point, stored-program, general-purpose



Memory

Random-access, nondestructive-readout

Flexible division between instruction and data storage

4096 addresses, 39 bits per address

13 bits per instruction word

26 bits per data word

Arithmetic Times

Instruction cycle - 140 usec

Divide requires 6 cycles

Multiply requires 3 cycles

All other instructions require 1 cycle each

Other instructions can be programmed concurrently with multiply and divide

Clock Rates

Arithmetic bit rate - 500 kc

Memory cycle rate - 250 kc

Controls and Indicators

 
The computer itself contains no controls and indicators, with the exception of the elapsed time indicator. However, the computer can be controlled by means of four switches located on the Pilots' Control and Display Panel: the two-position Computer On-Off switch, the seven-position Computer Mode switch, the push-button Start Computation switch, and the push-button Malfunction Reset Switch.

UNCLASSIFIED

~~CONFIDENTIAL~~
SEDR 300



PROJECT GEMINI



SYSTEM OPERATION

Power

The computer receives the AC and DC power required for its operation from the Inertial Guidance System (IGS) Power Supply. The regulated DC power supplied to the computer is buffered in the IGS Power Supply in a manner that eliminates any loss in regulation due to transients that occur in the spacecraft prime power source. Actual power interruptions and depressions are buffered by the IGS power Supply and the Auxiliary Computer Power Unit. The power inputs received from the IGS Power Supply are as follows:

- (a) 26 VAC and return
- (b) +28 VDC filtered and return
- (c) +27.2 VDC and return
- (d) -27.2 VDC and return
- (e) +20 VDC and return
- (f) +9.3 VDC and return

The application of all power is controlled by the Power On-Off switch on the Pilots' Control and Display Panel. When the switch is turned on, the computer elapsed time indicator starts operating and a power control signal is supplied to the IGS Power Supply by the computer. This signal causes power to be transferred to the computer. When the switch is turned off, the computer elapsed time indicator stops operating and the power control signal is terminated to remove power from the computer.

UNCLASSIFIED


8-76

~~CONFIDENTIAL~~

REF ID: A66001

~~CONFIDENTIAL~~
SEDR 300

UNCLASSIFIED

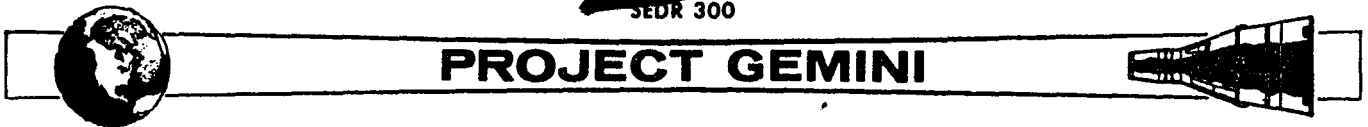

Within the computer, the 26 VAC power is used by magnetic modulators to convert DC analog signals to AC analog signals. This power is also used by a harmonic filter to develop a 16 VAC, 400 cps filtered gimbal angle resolver excitation signal. The +28 VDC power is used by computer power sequencing circuits. The +27.2 VDC, -27.2VDC, +20 VDC, and +9.3 VDC power is used by power regulators to develop +25 VDC, -25 VDC, and +8 VDC regulated power. This regulated power is used by logic circuits throughout the computer, and is supplied to some of the other spacecraft systems.

Basic Timing

The basic computer timing is derived from an 8 mc oscillator. The 8 mc signal is counted down to generate four clock pulses (called W, X, Y, and Z) (Figure 8-21). These clock pulses are the basic timing pulses from which all other timing is generated. The width of each clock pulse is 0.375 usec and the pulse repetition frequency is 500kc. The bit time is 2 usec, and a new bit time is considered as starting each time the W clock pulse starts. Eight gate signals (G1, G3, G5, G7, G9, G11, G13, and G14) are generated, each lasting two bit times. The first and second bit times of a particular gate are discriminated by use of a control signal (called IA) which is on for odd bit times and off for even bit times. Fourteen bit times make up one phase time, resulting in a phase time length of 28 usec (Figure 8-22). Five phases (PA through PE) are required to complete a computer instruction cycle, resulting in an instruction cycle length of 140 usec. Special phase timing, consisting of four phases (PH1 through PH4) (Figure 8-23), is generated for use by the input processor and the output processor. This timing is independent of computer phase timing but is synchronized with computer bit timing.

UNCLASSIFIED



8-77

~~CONFIDENTIAL~~

REF ID: A66001

~~CONFIDENTIAL~~
SEDR 300

 PROJECT GEMINI

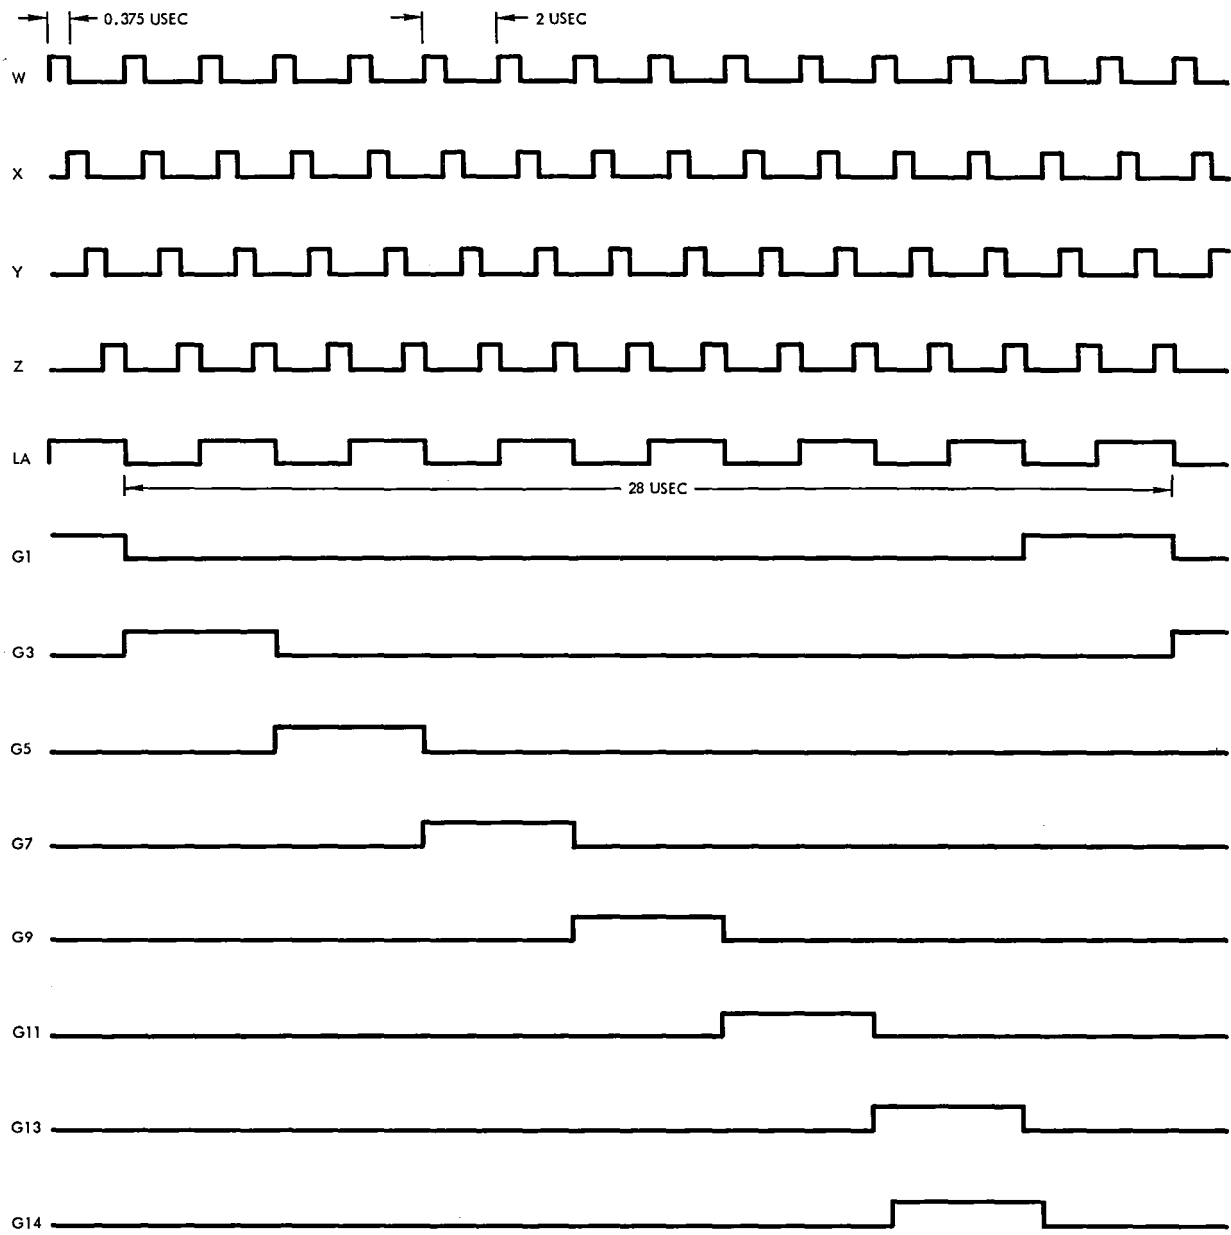

BIT TIMING TABLE

BIT TIME (BT)	LA	GATE	BIT TIME (BT)	LA	GATE	BIT TIME (BT)	LA	GATE
1	"1"	G1	6	"0"	G7	11	"1"	G11
2	"0"	G3	7	"1"	G7	12	"0"	G13
3	"1"	G3	8	"0"	G9	13	"1"	G13
4	"0"	G5	9	"1"	G9	14	"0"	G1
5	"1"	G5	10	"0"	G11			

Figure 8-21 Computer Clock and Bit Timing

FM2-8-21

~~CONFIDENTIAL~~

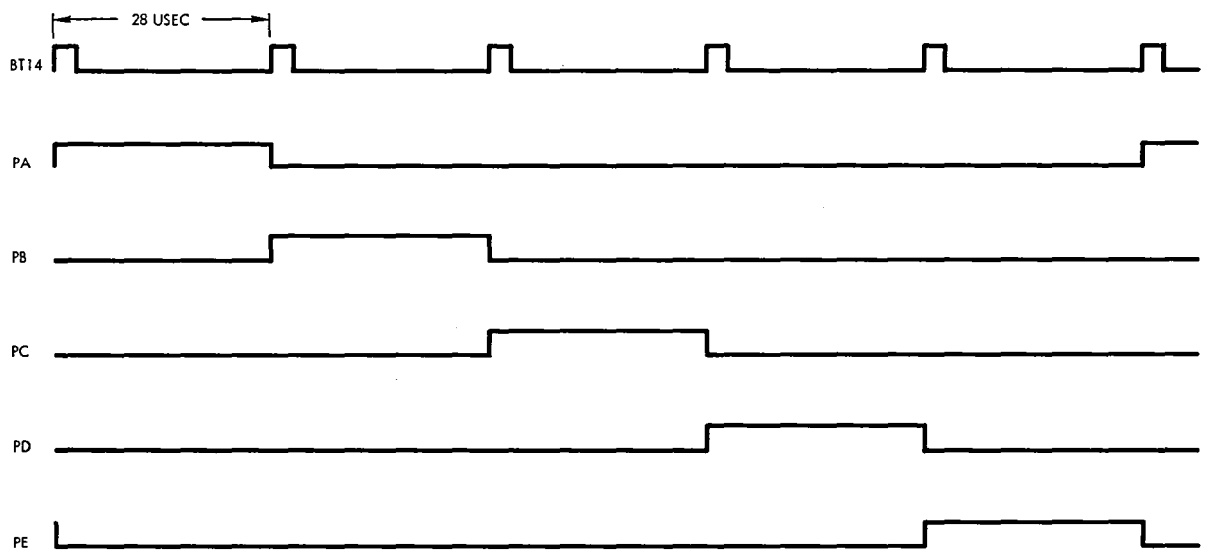


Figure 8-22 Computer Phase Timing

FM2-8-22

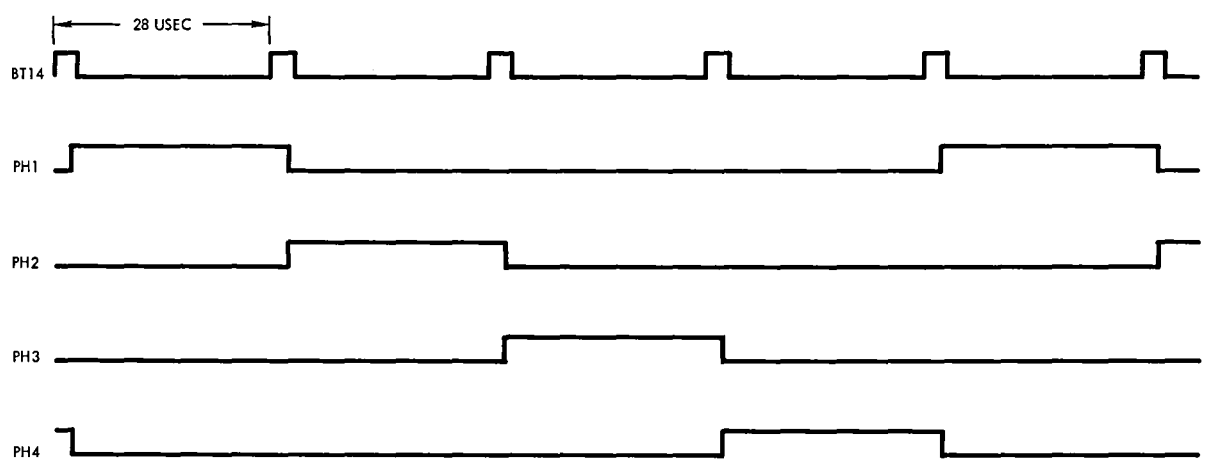


Figure 8-23 Processor Phase Timing

FM2-8-23

UNCLASSIFIED

~~CONFIDENTIAL~~
SEDR 300



PROJECT GEMINI

Memory

The computer memory is a random-access, coincident-current, ferrite array with nondestructive readout. The basic storage element is a two-hole ferrite core. The nondestructive read property makes it possible to read or write serially or in series-parallel, thereby allowing operation with a serial arithmetic unit without a separate buffer register. The memory array can store 4096 words, or 159,744 bits. All memory words of 39 bits are divided into three syllables of 13 bits each. Data words (25 bits and a sign) are normally stored in the first two syllables, and instruction words (13 bits) are intermixed in all three syllables. Once the spacecraft has been removed from the hangar area, it is not possible to modify the third syllable of any memory work. Limited modification of stored data in syllables 0 and 1 can be accomplished at the launch site through interface with the Manual Data Insertion Unit or the Digital Command System.

As shown on Figure 8-24, the memory is a 64 x 64 x 39 bit array of nondestructive readout elements. Physically, it consists of a stack of 39 planes (stacked in the Z dimension), with each plane consisting of a 64 x 64 array of cores. The memory is logically subdivided into smaller parts to increase the program storage efficiency. The Z dimension is divided into three syllables (SYL 0 through SYL 2), with each syllable consisting of 13 bits. The X-Y plane is divided into 16 sectors (SEC 00 through SEC 07, and SEC 10 through SEC 17), with sector 17 being defined as the residual sector.

A memory word is defined as the 39 bits along the Z dimension and is located at one of the 4096 possible X-Y grid positions. An instruction word or command requires 13 bits, and is coded in either syllable 0, 1, or 2 of a memory word. A data word


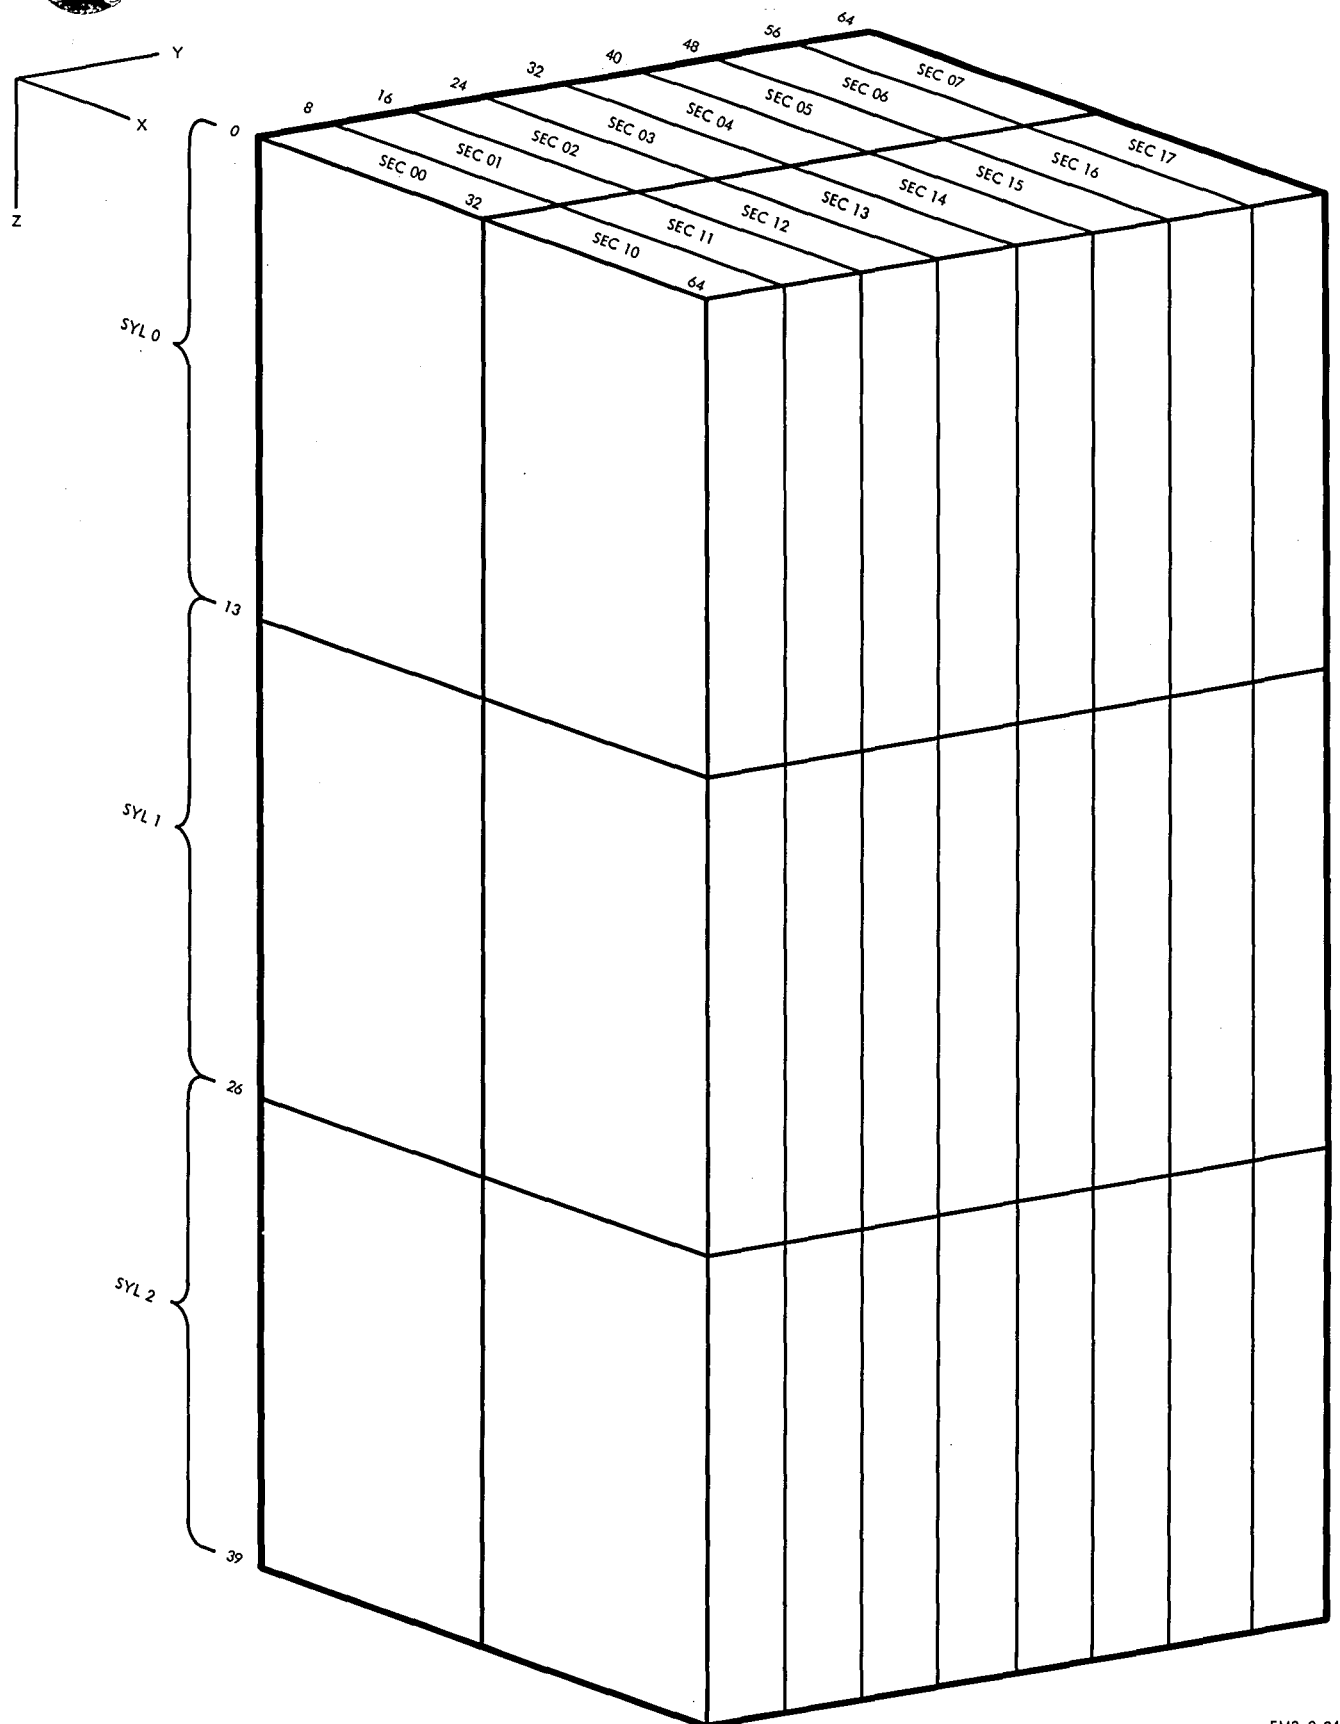


Figure 8-24 Computer Memory Functional Organization

FM2-8-24



PROJECT GEMINI

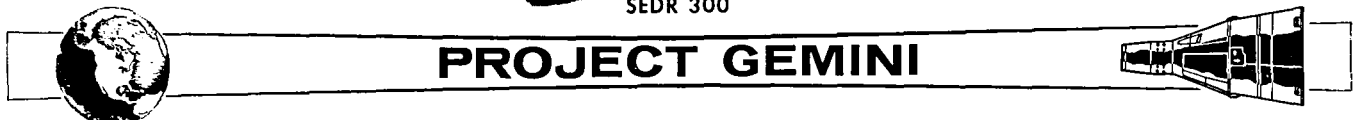

requires 26 bits, and is always coded in syllables 0 and 1 of a memory word. Information stored in syllable 2 can be read as a short data word by using a special mode of operation primarily used to check the contents of the memory.

NOTE

The operation codes mentioned in the subsequent paragraphs are described in the Instruction and Data Words paragraph.

Instruction List

The instructions which can be executed by the computer are as follows:

Operation Code

Instruction

0000

 
HOP. The contents of the memory location specified by the operand address are used to change the next instruction address. Four bits identify the next sector, nine bits are transferred to the instruction address counter, two bits are used to condition the syllable register, and one bit is used to select one of the two data word modes.

0001

DIV (divide). The contents of the memory location specified by the operand address are divided by the contents of the accumulator. The 24-bit quotient is available in the quotient delay line during the fifth word time following the DIV.



PROJECT GEMINI




Operand Address		Signal
X (Bits A1-A3)	Y (Bits A4-A6)	
0	0	Digital command system shift pulse gate
0	1	Data transmission system control gate
0	2	Time reference system data and timing pulses
0	3	Digit magnitude weight 1
0	4	Reset data ready, enter, and readout
0	5	Digit select weight 1
0	6	Memory strobe
1	0	Computer ready
1	1	Drive counters to zero
1	2	Enter
1	3	Digit magnitude weight 2
1	4	Display device drive
1	5	Digit select weight 2
1	6	Autopilot scale factor
2	0	Pitch resolution
2	1	Select X counter
2	2	Aerospace ground equipment data link
2	3	Digit magnitude weight 4
2	5	Digit select weight 4
2	6	Reset start computation

Table 8-1. PRO Instruction Programming (1 of 3)



 PROJECT GEMINI



Operand Address		Signal
X (Bits A1-A3)	Y (Bits A4-A6)	
3	0	Yaw resolution
3	1	Select Y counter
3	2	Aerospace ground equipment data clock
3	3	Digit magnitude weight 8
3	4	Read manual data insertion unit insert data
3	6	Reset radar ready
4	0	Roll resolution
4	1	Elapsed time control and time reference system control reset
4	3	Computer malfunction
4	4	Spare
4	6	Sustainer engine cutoff
5	0	Computer running
5	1	Time to start re-entry calculations control
5	2	Time to reset control
5	3	Write output processor
5	4	Read delta velocity
5	5	Input processor time
5	6	Time to retrofire control
6	3	Read pitch gimbal
6	4	Read roll gimbal

Table 8-1. PRO Instruction Programming (2 of 3)

UNCLASSIFIED

8-84

~~CONFIDENTIAL~~

CONFIDENTIAL

UNCLASSIFIED

~~CONFIDENTIAL~~
SEDR 300-

CONFIDENTIAL



PROJECT GEMINI



Operand Address		Signal
X (Bits A1-A3)	Y (Bits A4-A6)	
6	5	Ready yaw gimbal
7	0	Pitch error command
7	1	Yaw error command
7	2	Roll error command

Table 8-1. PRO Instruction Programming (3 of 3)

UNCLASSIFIED

8-85

~~CONFIDENTIAL~~

CONFIDENTIAL

UNCLASSIFIED

~~CONFIDENTIAL~~
DR 300

CONFIDENTIAL



PROJECT GEMINI



Operation Code (cont)

Instruction (cont)

- | | |
|------|--|
| 0010 | PRO (process input or output). The input or output specified by the operand address is read into, or loaded from, the accumulator. An output command clears the accumulator to zero if address bit A9 is a "1." The accumulator contents are retained if A9 is a "0." (Refer to Table 8-1 for a list of the PRO instructions.) |
| 0011 | RSU (reverse subtract). The contents of the accumulator are subtracted from the contents of the specified memory location. The result is retained in the accumulator. |
| 0100 | ADD. The contents of the memory location specified by the operand address are added to the contents of the accumulator. The result is retained in the accumulator. |
| 0101 | SUB (subtract). The contents of the memory location specified by the operand address are subtracted from the contents of the accumulator. The result is retained in the accumulator. |
| 0110 | CIA (clear and add). The contents of the memory location specified by the operand address are transferred to the accumulator. |

UNCLASSIFIED

8-86

 
~~CONFIDENTIAL~~

UNCLASSIFIED

~~CONFIDENTIAL~~
SEDR 300



PROJECT GEMINI



Operation Code (cont)

Instruction (cont)

0111

AND. The contents of the memory location specified by the operand address are logically ANDed, bit-by-bit, with the contents of the accumulator. The result is retained in the accumulator.

1000

MPY (multiply). The contents of the memory location specified by the operand address are multiplied by the contents of the accumulator. The 24 high-order bits of the multiplier and multiplicand are multiplied together to form a 26-bit product which is available in the product delay line during the second word time following the MPY.

1001

TRA (transfer). The operand address bits (A1 through A9) are transferred to the instruction address counter to form a new instruction address. The syllable and sector remain unchanged.

 
1010

SHF (shift). The contents of the accumulator are shifted left or right, one or two places, as specified by the operand address, according to the following table:

UNCLASSIFIED

8-87

~~CONFIDENTIAL~~

**PROJECT GEMINI**Operation Code (cont)Instruction (cont)

	<u>Command</u>	<u>Operand Address</u>	
		X (Bits A1-A3)	Y (Bits A4-A6)
	Shift left one place	*	3
	Shift left two places	*	4
	Shift right one place	1	2
	Shift right two places	0	2

* Insignificant

 
If an improper address code is given, the accumulator is cleared to zero. While shifting left, "0's" are shifted into the low-order positions; while shifting right, the sign bit condition is shifted into the high-order positions.

1011

TMI (transfer on minus accumulator sign). If the sign is positive ("0"), the next instruction in sequence is chosen (no branch). If the sign is negative ("1"), the nine bits of operand address become the next instruction address (perform branch). The syllable and sector remain unchanged.

1100

STO (store). The contents of the accumulator are stored in the memory location specified by the operand address. The contents of the accumulator are also retained for later use.

**PROJECT GEMINI**Operation Code (cont)Instruction (cont)

1101	SPQ (store product or quotient). The product is available on the second word time following an MPY. The quotient is available on the fifth word time following a DIV. The product or quotient is stored in the memory location specified by the operand address.
1110	CLD (clear and add discrete). The state of the discrete input selected by the operand address is read into all accumulator bit positions. (Refer to Table 8-2 for a list of the CLD instructions.)
1111	TNZ (transfer on non-zero). If the contents of the accumulator are zero, the next instruction in sequence is chosen (no branch); if the contents are non-zero, the nine bits of operand address become the next instruction address (perform branch). The syllable and sector remain unchanged.

 
NOTE

The instructions mentioned in the subsequent paragraphs (e.g., HOP, TRA, TMI, and TNZ) are described more completely in the Instruction Information Flow paragraph.

Instruction Sequencing

The instruction address is derived from an instruction counter and its associated

UNCLASSIFIED

~~CONFIDENTIAL~~
SEDR 300**PROJECT GEMINI**

Operand Address		Signal
X (Bits A1-A3)	Y (Bits A4-A6)	
0	0	Radar ready
0	1	Computer mode 2
0	2	Spare
0	3	Processor timing phase 1
0	4	Spare
1	0	Data ready
1	1	Computer mode 1
1	2	Start computation
1	3	X zero indication
1	4	Spare
2	0	Enter
2	1	Data transmission system sync
2	2	Velocity error count not zero
2	3	Aerospace ground equipment request
2	4	Spare
3	0	Readout
3	1	Computer mode 3
3	2	Spare
3	3	Spare
3	4	Spare
4	0	Clear

Table 8-2. CLD Instruction Programming (1 of 2)

UNCLASSIFIED

8-90

~~CONFIDENTIAL~~

UNCLASSIFIED

~~CONFIDENTIAL~~
SEDR 300

PROJECT GEMINI



Operand Address		Signal
X(BITS A1-A3)	Y (Bits A4-A6)	
4	1	Spare
4	2	Simulation mode command
4	3	Spare
4	4	Spare
5	0	Time to start re-entry calculations
5	1	Spare
5	2	Y zero indication
5	3	Spare
5	4	Spare
6	0	Digital command system ready
6	1	Fade-in discrete
6	2	Z zero indication
6	3	Umbilical disconnect
6	4	Spare
7	0	Data transmission system request
7	1	Abort transfer
7	2	Aerospace ground equipment input data
7	3	Spare
7	4	Spare

Table 8-2. CLD Instruction Programming (2 of 2)

UNCLASSIFIED

8-91

~~CONFIDENTIAL~~

UNCLASSIFIED

~~CONFIDENTIAL~~
SEDR 300



PROJECT GEMINI



address register. To address an instruction, the syllable, sector, and word position within the sector (one of 256 positions) must be defined. The syllable and sector are defined by the contents of the syllable register (two-bit code, three combinations) and sector register (four-bit code, 16 combinations). These registers can be changed only by a HOP instruction. The word position within the sector is defined by the instruction address counter. The instruction address count is stored serially in a delay line; and normally each time it is used to address a new instruction, a one is added to it so that the instruction locations within a sector can be sequentially scanned. The number stored in the counter can be changed by either a TRA, TMI, or TNZ instruction, with the operand address specifying the new number. A HOP instruction can also change the count, with the new instruction location coming from a data word.

Instruction and Data Words

The instruction word consists of 13 bits and can be coded in any syllable of any memory word. The word is coded as follows:

<u>Bit Position</u>	1	2	3	4	5	6	7	8	9	10	11	12	13
<u>Bit Code</u>	A1	A2	A3	A4	A5	A6	A7	A8	A9	OP1	OP2	OP3	OP4

The four operation bits (OP1 through OP4) define one of 16 instructions, the eight operand address bits (A1 through A8) define a memory word within the sector being presently used, and the residual bit (A9) determines whether or not to read the data residual. If the A9 bit is a "1," the data word addressed is always located in the last sector (sector 17). If the A9 bit is a "0," the data word addressed is read from the sector defined by the contents of the sector register. This feature allows data locations to be available to instructions stored anywhere in the

 
UNCLASSIFIED

8-92

~~CONFIDENTIAL~~



PROJECT GEMINI



memory.

The data word consists of 25 magnitude bits and a sign bit. Numbers are represented in two's-complement form, with the low-order bits occurring at the beginning of the word and the sign bit occurring after the highest-order bit. The binary point is placed between bit positions 25 and 26. The bit magnitude number also denotes the binary weight of the position. For example, M16 represents 2^{-16} .

For the HOP instruction, the next instruction address is coded in a data word that is read from the memory location specified by the operand address of the HOP word.

The codings of a numerical data word and a HOP word are as follows:

<u>Bit Position</u>	1	2	3	4	5	6	7	8	9	10	11	12	13
<u>Data Word</u>	M25	M24	M23	M22	M21	M20	M19	M18	M17	M16	M15	M14	M13
<u>HOP Word</u>	A1	A2	A3	A4	A5	A6	A7	A8	A9	S1	S2	S3	S4
<u>Bit Position</u>	14	15	16	17	18	19	20	21	22	23	24	25	26
<u>Data Word</u>	M12	M11	M10	M9	M8	M7	M6	M5	M4	M3	M2	M1	S
<u>HOP Word</u>	-	SYA	SYB	-	S5	-	-	-	-	-	-	-	-

For the HOP word, eight address bits (A1 through A8) select the next instruction (one of 256) within the new sector, the residual bit (A9) determines whether or not the next instruction is located in the residual sector, the sector bits (S1 through S4) select the new sector, and the syllable bits (SYA and SYB) select the new syllable according to the following table:

<u>Syllable</u>	<u>SYB</u>	<u>SYA</u>
0	"0"	"0"
1	"0"	"1"
2	"1"	"0"

UNCLASSIFIED

~~CONFIDENTIAL~~
SEDR 300



PROJECT GEMINI



The special syllable bit (S5) determines the mode in which data words are to be read. If the S5 bit is a "0," normal operation of reading data words from syllables 0 and 1 is followed; however, if the S5 bit is a "1," data words are read from syllable 2 only. These data words contain information from syllable 2 in bit positions 1 through 13, but contain all "0's" in bit positions 14 through 26. This special mode is followed until a new HOP command places the computer back in the normal mode of reading data words. (While in the special mode, any HOP word addressed always has "0's" coded in the SYA, SYB, and S5 positions due to the short data word that is read; therefore, any HOP word coded while in this mode terminates the mode and operation is resumed in syllable 0.) The computer itself does not have the capability to store information in syllable 2; therefore, STO and SPQ commands are not executed while in the special mode. The mode is used only to allow the computer arithmetic circuits to check the entire memory contents to verify the fact that the proper information is in storage.

In a HOP word, the residual bit (A9) overrides the sector bits (S1 through S4). If the A9 bit is a "1," the next instruction is read from the residual sector. If, however, the A9 bit is a "0," the S1 through S4 bits determine the sector from which the next instruction is read.

For convenience, the data and instruction words can be coded in an octal form that is easily converted to the machine binary representation. The order in which the bits are written is reversed to conform to the normal method of placing lower-significance bits to the right. (The computer words are organized with lower-significance bits to the left so that, while performing arithmetic, the low-order bits are accessed first.) The coding structure is as follows:

UNCLASSIFIED

8-94

~~CONFIDENTIAL~~

UNCLASSIFIED

~~CONFIDENTIAL~~
SEDR 300



PROJECT GEMINI



Instruction Word

OP4	OP3	OP2	OP1	A9	A8	A7	A6	A5	A4	A3	A2	A1
										*Y Address	*X Address	

*Addresses for CLD and PRO instructions

Data Word

S	M1	M2	M3	M4	M5	M6.....M20	M21	M22	M23	M24	M25
---	----	----	----	----	----	------------	-----	-----	-----	-----	-----

where each group of three bits is expressed as an octal character (from 0 to 7). An instruction word is thus expressed as a five-character octal number. The operation code can take on values from 00 to 17, and the operand address can take on values from 000 to 777. Any operand address larger than 377 addresses the residual sector (sector 17) because the highest-order address bit (A9) is also the residual identification bit. A data word is expressed as a nine-character octal number, taking on values from 000000000 to 777777776. The low-order character can take on only the values of 0, 2, 4, and 6.

Arithmetic Elements

The computer has two arithmetic elements: an add-subtract element (accumulator), and a multiply-divide element. Each element operates independently of the other; however, both are serviced by the same program control circuits. Computer operation times can be conveniently defined as a number of cycles, where a cycle time represents the time required to perform an addition (140 usec). All operations except MPY and DIV require one cycle; MPY requires three cycles, and DIV requires six cycles. Each cycle, the program control is capable of servicing one of the arithmetic elements with an instruction. An MPY or a DIV instruction essentially starts an operation in the multiply-divide element, and the program control must

UNCLASSIFIED

 
8-95
~~CONFIDENTIAL~~

UNCLASSIFIED

~~CONFIDENTIAL~~
SEDR 300



PROJECT GEMINI



obtain the answer at the proper time since the multiply-divide element has no means of completing an operation by itself. When an MPY is commanded, the product is obtainable from the multiply-divide element two cycle times later by an SPQ instruction. When a DIV is commanded, the quotient is obtainable five cycle times later by an SPQ instruction.

It is possible to have one other instruction run concurrently between the MPY and the SPQ during multiply, and four other instructions run concurrently between the DIV and the SPQ during divide. However, an MPY or a DIV is always followed with an SPQ before a new MPY or DIV is given.

Basic Information Flow

Refer to Figure 8-25 for the following description of information flow during the five computer phase times. The description is limited to those operations requiring only one cycle time, and thus does not pertain to MPY and DIV.

During phase A, the 13-bit instruction word is read from memory and stored in the instruction address register. The address of the instruction is defined by the contents of the memory address register, the sector register, and the syllable register. The four operation code bits (OP1 through OP4) are stored in the operation register. During phase B, the operand address bits (A1 through A8) are serially transferred from the instruction address register to the memory address register. Simultaneously, the instruction address stored in the memory address register is incremented by plus one and stored in the instruction address register. The operation specified by the operation code bits is performed during phases C and D. During phase E, the next instruction address stored in the instruction address register is transferred to the memory address register.

UNCLASSIFIED

8-96
~~CONFIDENTIAL~~

PROJECT GEMINI

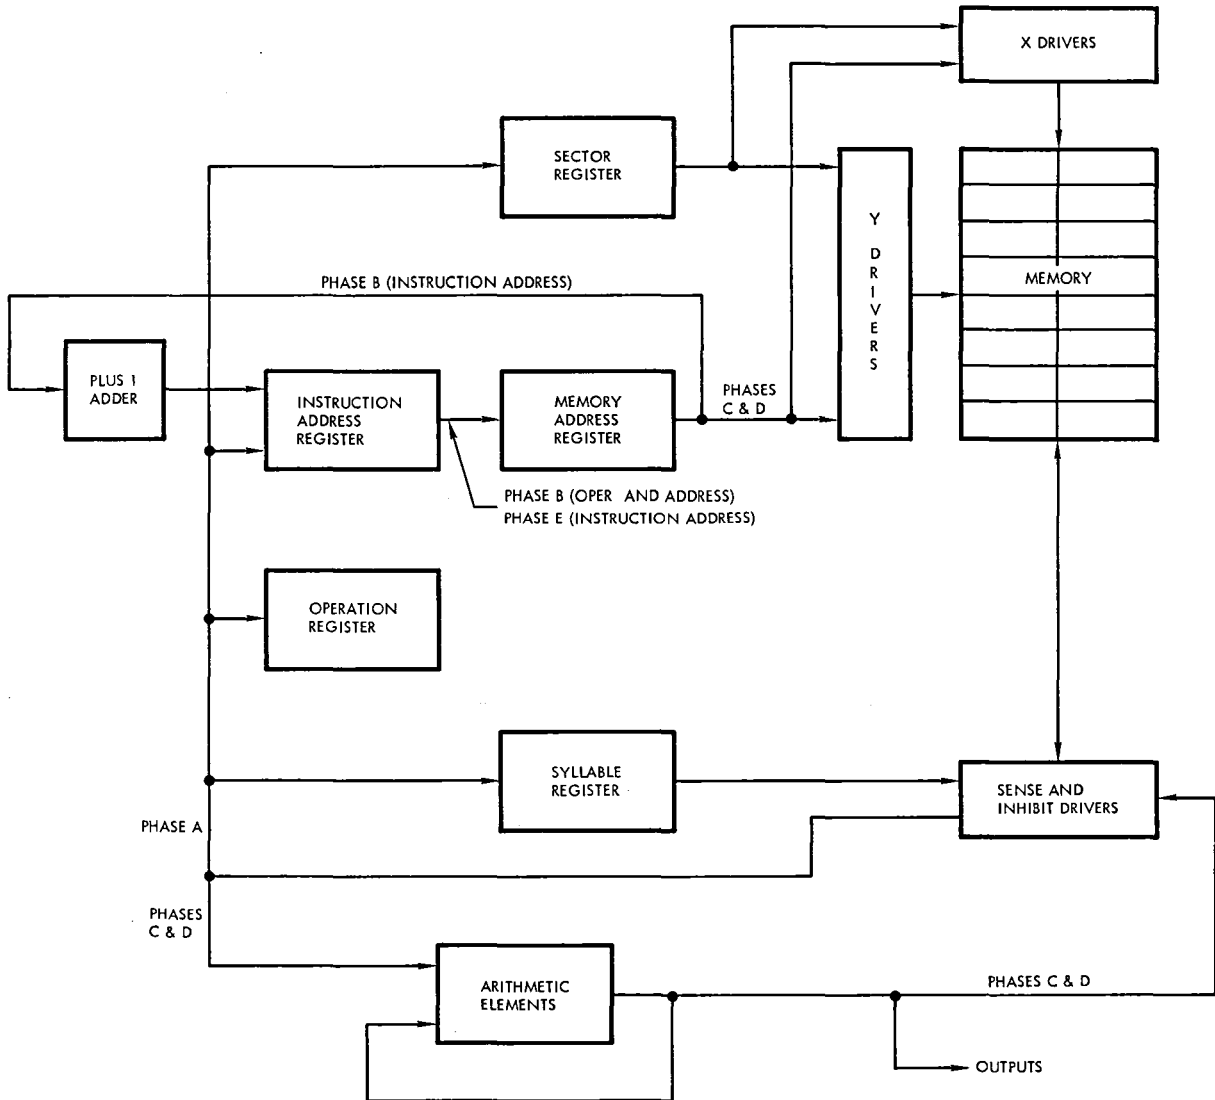


Figure 8-25 Basic Information Flow

FM2-8-25

 
UNCLASSIFIED

~~CONFIDENTIAL~~
SEDR 300

CONFIDENTIAL



PROJECT GEMINI



Four of the one-cycle operations do not strictly adhere to the above information flow. These operations are HOP, TRA, TMI, and TNZ. For the HOP instruction, data read from memory during phases C and D is transferred directly to the instruction address register, the sector register, and the syllable register. For the TRA, TMI, and TNZ operations, the transfer of the next instruction address from the instruction address register during phase E is inhibited to allow the operand address to become the next instruction address.

Instruction Information Flow

Flow Diagram: The instruction information flow diagram (Figure 8-26) should be used along with the following descriptions.

CLA Operation

During phases C and D, the data that was contained in the accumulator during phases A and B is destroyed. Simultaneously, new data from the selected memory location is transferred through the sense amplifiers and into the accumulator. During phases E and A, the new data is recirculated so as to be available in the accumulator during phases A and B.

ADD Operation

During phases C and D, new data from the selected memory location is transferred through the sense amplifiers and into the accumulator. Here, the new data is added to the data that was contained in the accumulator during phases A and B. During phases E and A, the sum data is recirculated so as to be available in the accumulator during phases A and B.

SUB Operation

During phases C and D, new data from the selected memory location is transferred

UNCLASSIFIED

~~CONFIDENTIAL~~

CONFIDENTIAL

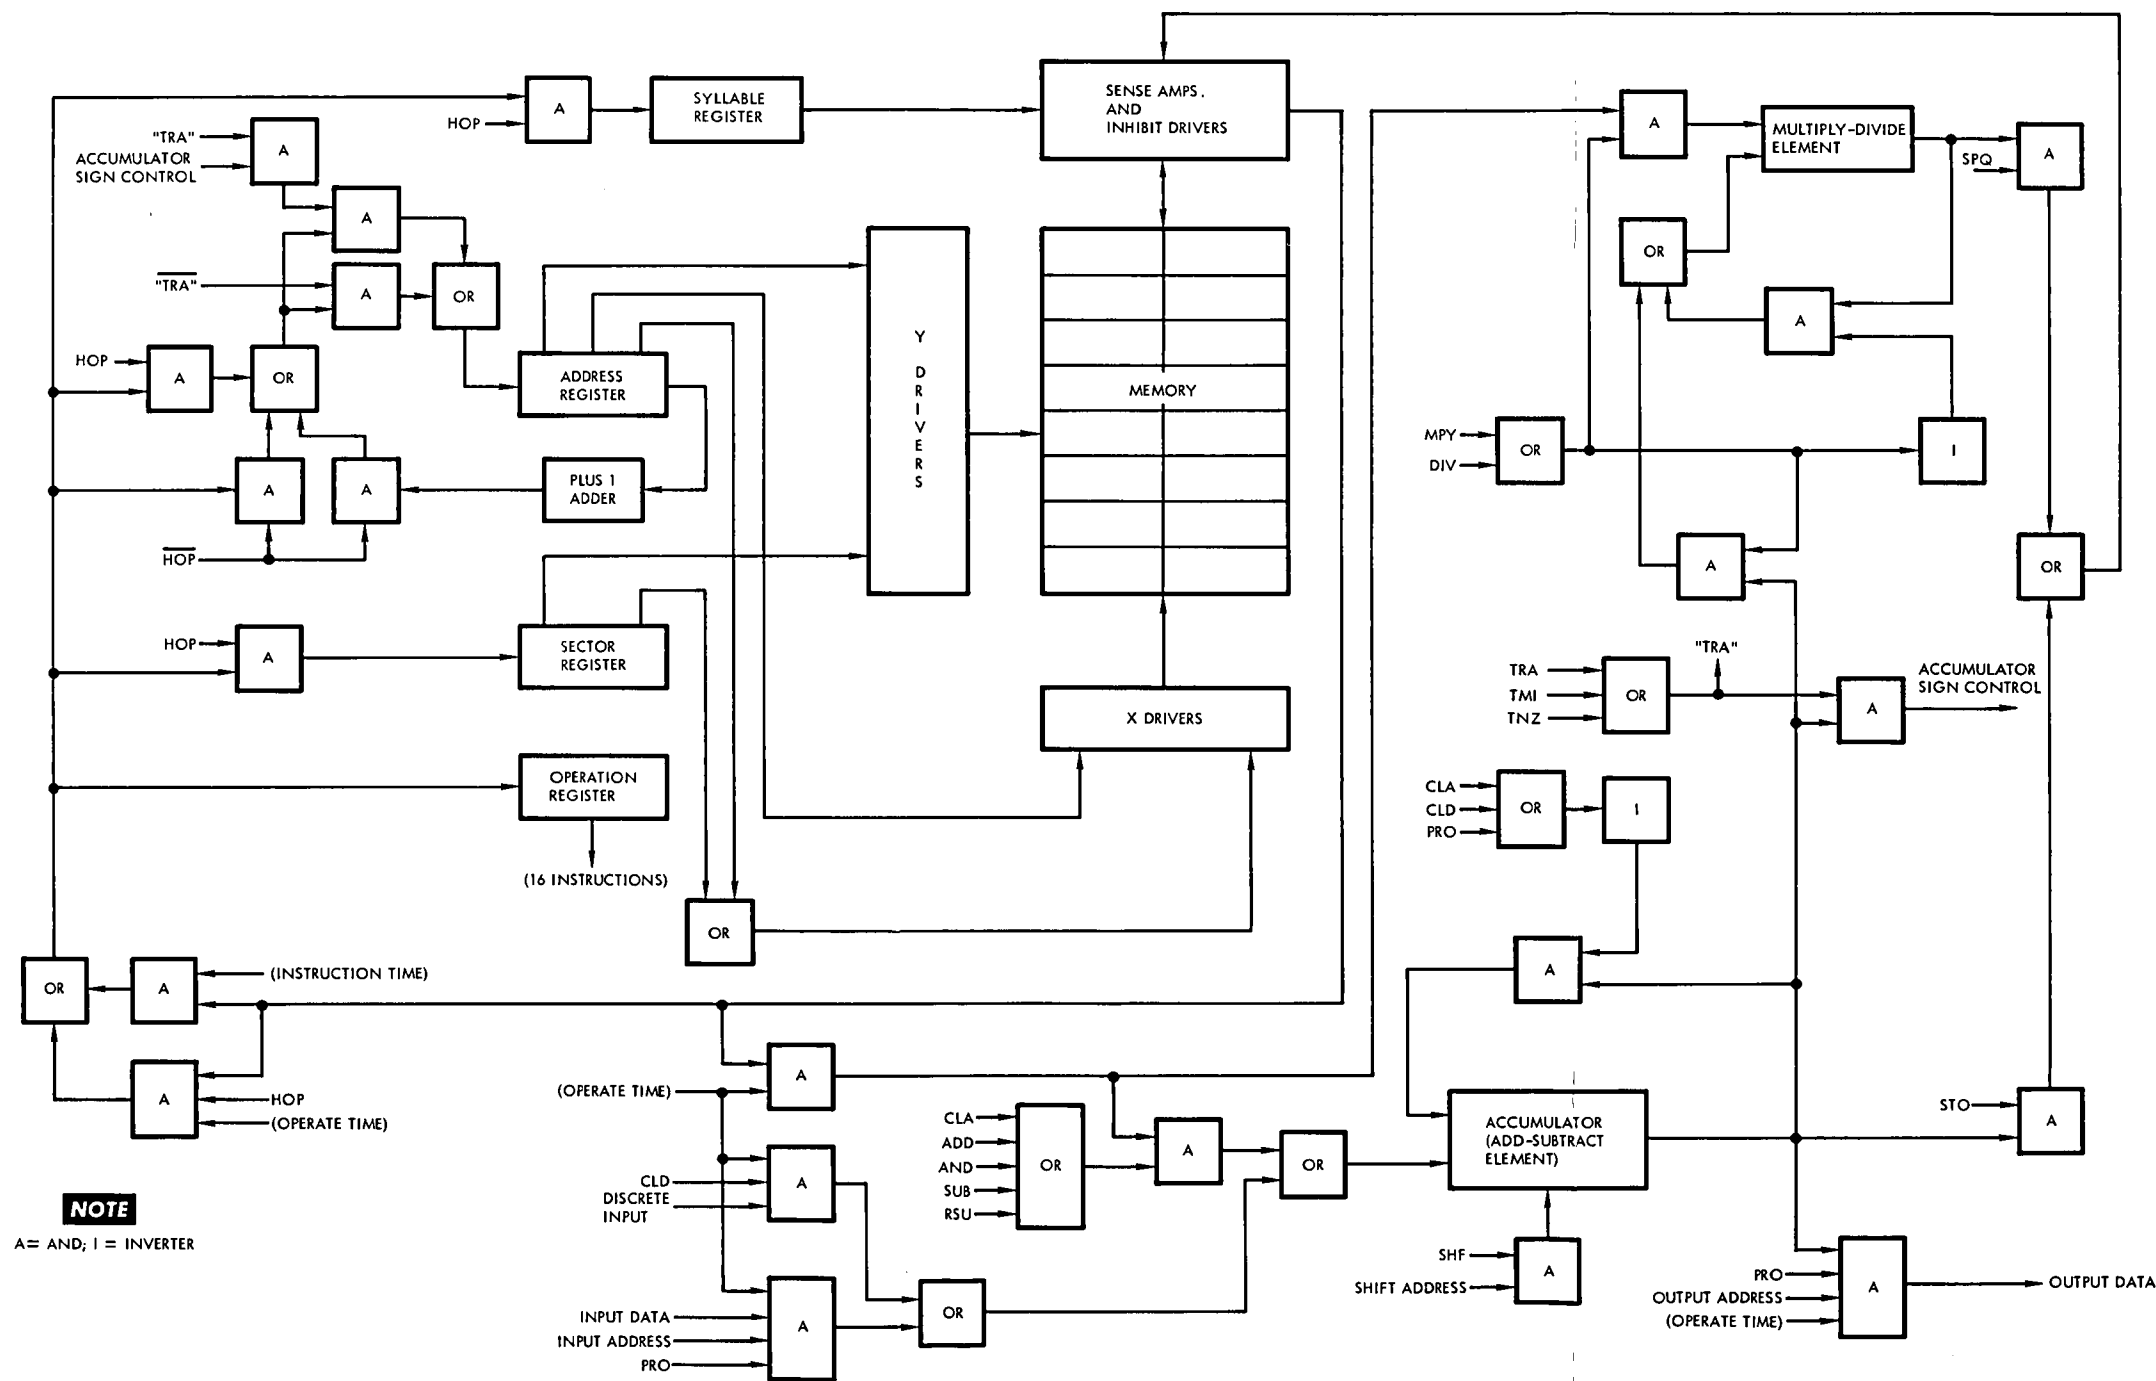
 
 


Figure 8-26 Instruction Information Flow

**PROJECT GEMINI**

through the sense amplifiers and into the accumulator. Here, the new data is subtracted from the data that was contained in the accumulator during phases A and B. During phases E and A, the difference data is recirculated so as to be available in the accumulator during phases A and B.

RSU Operation

During phases C and D, new data from the selected memory location is transferred through the sense amplifiers and into the accumulator. Here, the data that was contained in the accumulator during phases A and B is subtracted from the new data. During phases E and A, the difference data is recirculated so as to be available in the accumulator during phases A and B.

AND Operation

During phases C and D, new data from the selected memory location is transferred through the sense amplifiers and into the accumulator. Here, the new data is ANDed with the data that was contained in the accumulator during phases A and B. During phases E and A, the ANDed data is recirculated so as to be available in the accumulator during phases A and B.

SHF Operation

During phases C and D, the data that was contained in the accumulator during phases A and B is shifted left or right, one or two places, as specified by the operand address. During phases E and A, the shifted data is recirculated so as to be available in the accumulator during phases A and B.

STO Operation

During phases C and D, the data that was contained in the accumulator during phases A and B is transferred through the inhibit drivers and stored in the memory

UNCLASSIFIED

~~CONFIDENTIAL~~
SER 300



PROJECT GEMINI



location selected by the operand address. During phases E and A, the same data is recirculated so as to be available in the accumulator during phases A and B.

HOP Operation

During phases C and D, new data from the selected memory location is transferred through the sense amplifiers and into the address, sector, and syllable registers. Here, the new data is used to select the address, sector, and syllable of the memory location from which the next instruction will be read.

TRA Operation

During phases A and B, the instruction from the selected memory location is transferred through the sense amplifiers and into the address register. Here, the instruction is used to select the address of the memory location from which the next instruction will be read. The sector and syllable remain unchanged.

TMI Operation

During phases A and B, the instruction from the selected memory location is transferred through the sense amplifiers and into the address register. Here, if the accumulator sign is negative, the instruction is used to select the address of the memory location from which the next instruction will be read. However, if the accumulator sign is positive, the next instruction address in sequence is selected in the normal manner. The sector and syllable remain unchanged.

TNZ Operation

During phases A and B, the instruction from the selected memory location is transferred through the sense amplifiers and into the address register. Here, if the contents of the accumulator are not zero, the instruction is used to select the address of the memory location from which the next instruction will be read.

UNCLASSIFIED

8-101
~~CONFIDENTIAL~~

UNCLASSIFIED

~~CONFIDENTIAL~~
SEDR 300



PROJECT GEMINI



However, if the contents of the accumulator are zero, the next instruction address in sequence is selected in the normal manner. The sector and syllable remain unchanged.

CLD Operation

During phases C and D, the data that was contained in the accumulator during phases A and B is destroyed. Simultaneously, the state of the discrete input selected by the operand address is transferred into all accumulator bit positions. During phases E and A, the new data is recirculated so as to be available in the accumulator during phases A and B.

PRO Operation (Inputs; When A9="1")

During phases C and D, the data that was contained in the accumulator during phases A and B is destroyed. Simultaneously, the data on the input channel selected by the operand address is transferred into the accumulator. During phases E and A, the new data is recirculated so as to be available in the accumulator during phases A and B.

PRO Operation (Inputs; When A9="0")

During phases C and D, the data on the input channel selected by the operand is transferred into the accumulator. Here, the new data is ORed with the data that was contained in the accumulator during phases A and B. During phases E and A, the ORed data is recirculated so as to be available in the accumulator during phases A and B.

PRO Operation (Outputs)

During phases C and D, the data that was contained in the accumulator during phases A and B is transferred to the output channel selected by the operand address. If

UNCLASSIFIED

~~CONFIDENTIAL~~

UNCLASSIFIED

~~CONFIDENTIAL~~
SEDR 300



the A9 bit of the operand address is a "1", the data that was contained in the accumulator during phases A and B is then destroyed. However, if the A9 bit is a "0", the data is recirculated so as to be available in the accumulator during phases A and B.

MPY Operation

During phases A and B of the first instruction cycle, the data that is contained in the accumulator is transferred into the multiply-divide element as the multiplier. During phases C and D of the same cycle, new data from the selected memory location is transferred through the sense amplifiers and into the multiply-divide element as the multiplicand. During the remainder of the first instruction cycle and the next two instruction cycles, the multiplicand is multiplied by the multiplier. The product is available in the multiply-divide element during phases C and D of the third instruction cycle.

DIV Operation

During phases A and B of the first instruction cycle, the data that is contained in the accumulator is transferred into the multiply-divide element as the divisor. During phases C and D of the same cycle, new data from the selected memory address is transferred through the sense amplifiers and into the multiply-divide element as the dividend. During the remainder of the first instruction cycle and the next five instruction cycles, the dividend is divided by the divisor. The quotient is available in the multiply-divide element during phases C and D of the sixth instruction cycle.

UNCLASSIFIED

8-103
~~CONFIDENTIAL~~

UNCLASSIFIED

~~CONFIDENTIAL~~
SEDR 300



PROJECT GEMINI



SPQ Operation

During phases C and D, the product or quotient that is contained in the multiply-divide element is transferred through the inhibit drivers and stored in the memory location selected by the operand address.

NOTE

In the subsequent program and interface descriptions, the signals that are programmed by CLD and PRO instructions are sometimes referred to as DI (discrete input) or DO (discrete output) signals. The two digits following the DI or DO are the Y and X addresses, respectively, of the instruction.

Operational Program

General Information

The operational program consists of six basic routines, called Executor, Pre-Launch, Ascent, Catch-Up, Rendezvous, and Re-Entry. Each routine is made up of several subroutines. Some of the subroutines are common to all routines while some are unique to a particular routine. Each subroutine consists of a series of program instructions which, when executed, cause specific computer circuits to operate. The initiation of a particular routine is controlled by the COMPUTER mode switch on the Pilots' Control and Display Panel. Once a routine is initiated, the subroutines within the routine are executed automatically.

UNCLASSIFIED

8-104

~~CONFIDENTIAL~~

UNCLASSIFIED

~~CONFIDENTIAL~~
SEDR 300



PROJECT GEMINI



Executor Routine

The Executor routine selects, and handles the functions common to, all other routines. The program flow for this routine is shown on Figure 8-27. The individual blocks shown on the figure are explained as follows:

- (a) Block 1. When the computer is turned on, the first memory location addressed is address 000, sector 00, syllable 0. This memory location is the first memory address utilized by the Executor routine.
- (b) Block 2. The operational program utilizes special predetermined memory locations which are designed as logical choice (LC) addresses. At certain times, the sign bits at these LC addresses are set minus ("1") or plus ("0"). The sign bits of specific LC addresses are then checked during the execution of the routines and, depending on whether they are plus or minus, special series of program instructions are executed.
- (c) Block 3. The following discrete outputs are set plus: start computation, computer running, sustainer engine cutoff, autopilot scale factor, AGE data clock, and time reference system gate.
- (d) Block 4. The processor real time count is read for utilization by the individual routines.
- (e) Block 5. The accelerometer subroutine is executed to verify that the X, Y and Z velocity signals from the accelerometers equal zero.
- (f) Block 6. A special go, no-go diagnostic program is executed to determine if the basic computer arithmetic circuits are functioning properly.

UNCLASSIFIED


8-105
~~CONFIDENTIAL~~

UNCLASSIFIED

8-106

~~CONFIDENTIAL~~


Figure 8-27 Executor Routine Program Flow

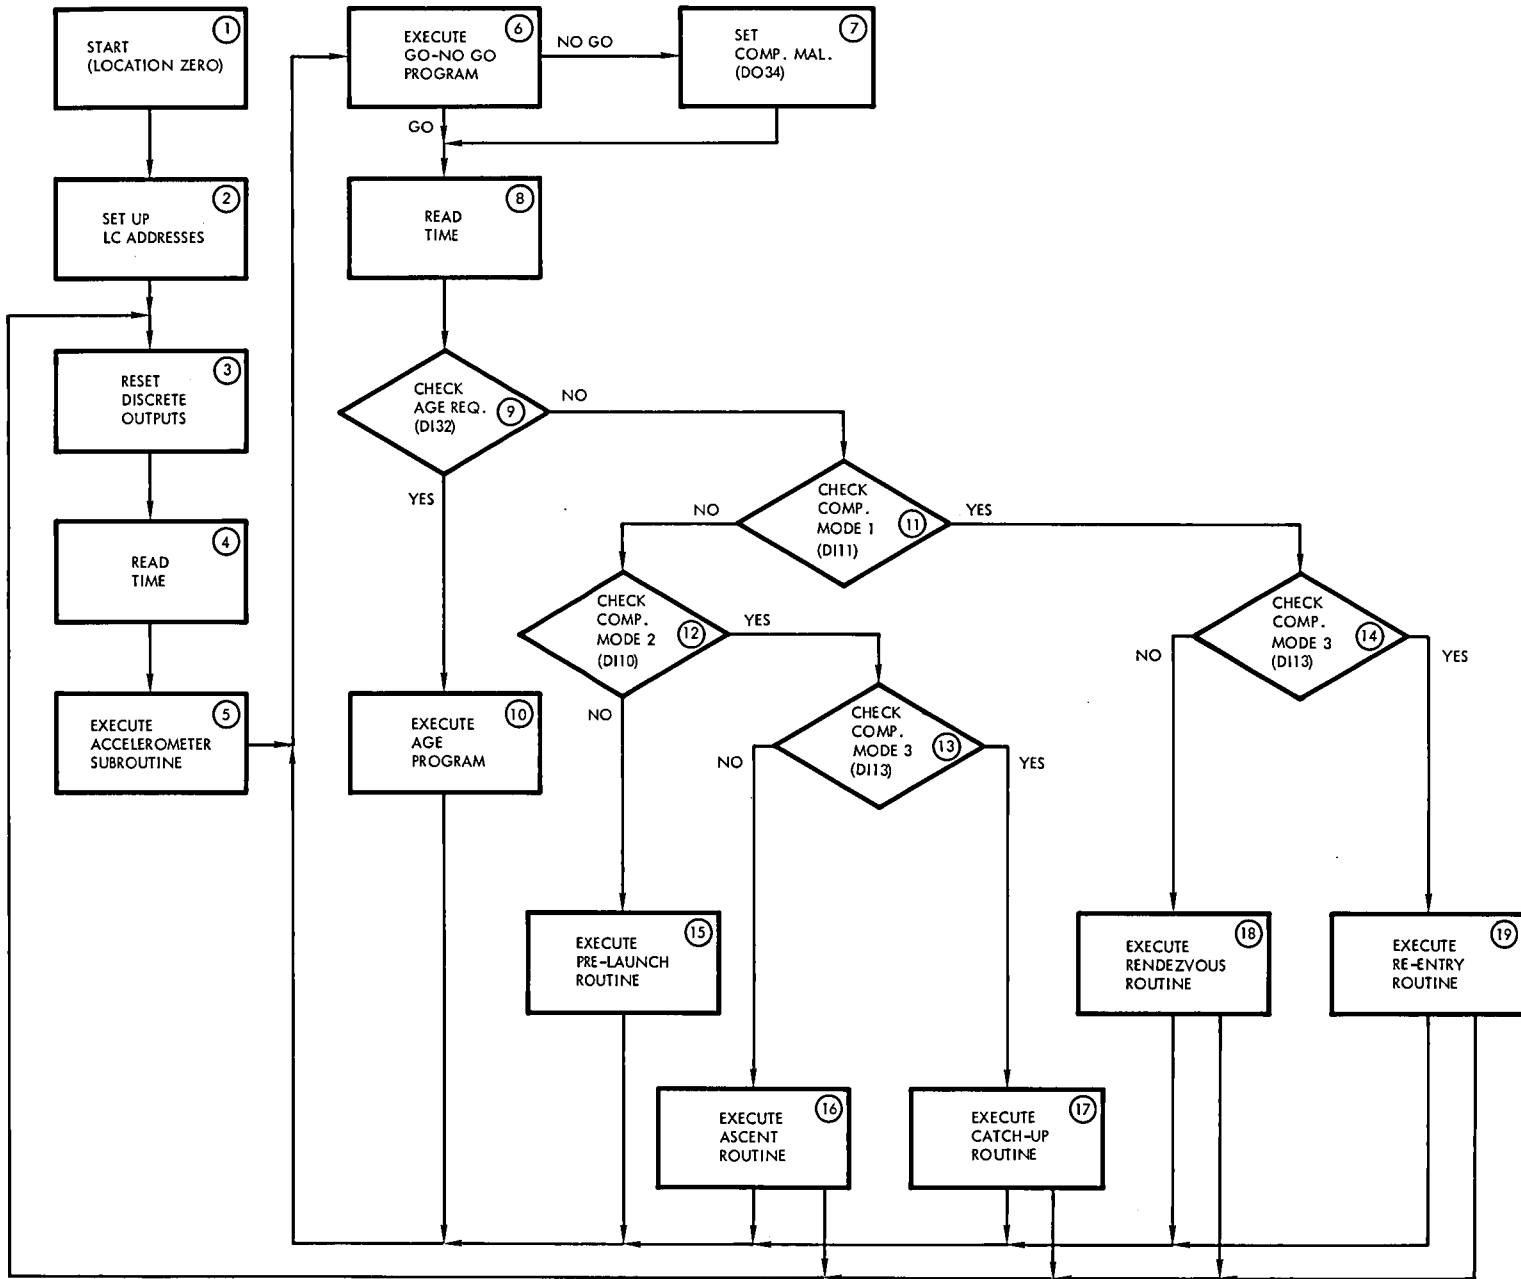

UNCLASSIFIED

~~CONFIDENTIAL~~
SEDR 300

 PROJECT GEMINI



UNCLASSIFIED

~~CONFIDENTIAL~~
SEDR 300



PROJECT GEMINI



If these circuits fail, the NO GO path is followed; if there is no failure, the GO path is followed.

- (g) Block 7. Program instruction PRO34 is executed. The execution of this instruction causes the computer malfunction circuit to be conditioned.
- (h) Block 8. The processor real time count is read and updated for utilization by the individual routines.
- (i) Block 9. Program instruction CLD32 is executed to determine the condition of the AGE request discrete input. If the input is a "1", the YES path is followed; if the input is a "0", the NO path is followed.
- (j) Block 10. Special check-out tests are executed by the AGE. Both the Gemini Launch Vehicle and the computer can be checked out.
- (k) Blocks 11 through 14. Program instructions CLD10, CLD11, and CLD13 determine the condition of the discrete inputs from the COMPUTER mode switch. This switch is manually controlled by the Pilot and depending upon which mode is selected, causes a particular routine to be executed until the switch setting is changed or until the computer is turned off. The combinations of COMPUTER mode switch discrete inputs required to select a particular routine are as follows:

UNCLASSIFIED

8-107
~~CONFIDENTIAL~~

UNCLASSIFIED

~~CONFIDENTIAL~~
SEDR 300



PROJECT GEMINI



<u>Routine</u>	<u>Discrete Inputs</u>		
	<u>D110</u>	<u>D111</u>	<u>D113</u>
Pre-Launch	"0"	"0"	"0"
Ascent	"1"	"0"	"0"
Catch-Up	"1"	"0"	"1"
Rendezvous	"0"	"1"	"0"
Re-Entry	"0"	"1"	"1"

- (1) Blocks 15 through 19. Depending on the setting of the COMPUTER mode switch, one of these operational routines is selected. The individual routines are discussed in subsequent paragraphs.

Pre-Launch Routine

The Pre-Launch routine provides the instructions required to check out the computer prior to launch and to read in special data for future use. This routine performs sum-checks on all sectors within the computer memory. These checks are performed by adding the contents of all memory addresses within a sector and comparing the sum with a pre-stored constant. If the constant and the sum are not equal, the computer malfunction latch is set by program instruction PR034. If the sum check is successful, special data is stored in predetermined memory addresses by the common subroutines. These subroutines are discussed in later paragraphs.

Ascent Routine

The Ascent routine provides the computations required for back-up ascent guidance. After the computer has been placed in the Ascent mode, special data is transferred to the computer via the Digital Command System. This data is then continually updated and used to keep track of the orbit plane and the platform attitude with respect to Earth. Thirty seconds after the special data is first transferred to

UNCLASSIFIED

~~CONFIDENTIAL~~

**PROJECT GEMINI**

the computer, the Inertial Guidance System is placed in the inertial mode. The computer continually monitors and stores the platform gimbal angle values during this time. After lift off, the computer performs a back-up guidance function. If necessary, however, the computer can be used to perform primary guidance during Ascent.

Catch-Up Routine

The Catch-Up routine provides the computations required to properly position the spacecraft for rendezvousing. During the Catch-Up mode, gimbal angle values and incremental velocity values are computed. Calculated data is then supplied to the Attitude Display so that the spacecraft can be properly positioned for rendezvousing.

Rendezvous Routine

The Rendezvous routine provides the computations required for achieving a rendezvous. The routine performs essentially the same function as the Catch-Up routine, with the addition of radar data computations. The radar data is transferred to the computer from the rendezvous radar and utilized in computations. These computations are used to achieve a rendezvous between the spacecraft and the target.

Re-Entry Routine

The Re-Entry routine provides the computations required for re-entry guidance. During the Re-Entry mode, the retro velocity is monitored and retro velocity errors are calculated. The distance and heading of the spacecraft with respect to the desired landing site are calculated, and the down range travel to touchdown is predicted. The routine also provides signals to command the spacecraft roll maneuvers during re-entry and provides a display of attitude errors.

UNCLASSIFIED

~~CONFIDENTIAL~~
SEDR 300



PROJECT GEMINI



NOTE

The following subroutines are common to the previously described routines: Gimbal Angle, Accelerometer, Digital Command System, Instrumentation System, and Manual Data. Therefore, a description of each of these subroutines follows.

Gimbal Angle Subroutine

The Gimbal Angle subroutine reads and processes the gimbal angles for the pitch, yaw, and roll axes of the Inertial Platform. During a computer word time, the gimbal angle processor reads in one gimbal angle value and transfers a previously read gimbal angle value to the accumulator. This method enables a faster processing operation than if the angle for each axis were processed, individually. Approximately 5 ms elapses between the processing of one gimbal angle value and the processing of the next gimbal angle value. (The gimbal angle value is the binary equivalent of the actual gimbal angle.)

Accelerometer Subroutine

The Accelerometer subroutine processes velocity signal inputs from the Inertial Measuring Unit. These signals, which represent velocity for the X, Y, and Z axes of the spacecraft, are generated by accelerometers. Due to the construction and adjustment of the accelerometers, the signals contain inherent bias and alignment errors. The subroutine corrects these errors and stores the corrected velocity

UNCLASSIFIED

8-110

~~CONFIDENTIAL~~

UNCLASSIFIED

~~CONFIDENTIAL~~
SEDR 300



PROJECT GEMINI



values in predetermined computer memory locations. The computer input processor reads the X, Y, and Z velocity signals, and transfers them to the processor delay line. The delay line is then read by the subroutine at periodic intervals which depend on the selected mode or routine.

Digital Command System Subroutine

The Digital Command System subroutine reads and processes data furnished by the Digital Command System (DCS). The DCS furnishes the computer with special 24-bit words consisting of 6 address bits and 18 data bits. The address bits indicate where the data bits are to be stored in the computer memory. The subroutine first determines if data is available from the DCS. If data is available, the subroutine then reads the data into the accumulator. Next, the address and data bits are separated. The data bits are then stored in the computer memory address specified by the address bits. After this data is stored, it is used as constants by other subroutines.

The DCS subroutine also contains instructions which provide extended DCS addresses. (Address 100-117). The recognition of addresses 20 and 21 exercises the proper operational program loops to store the data in the computer. For each DCS extended address insert, it is necessary to make two transmissions and this must be accomplished in the proper order (i.e., DCS address 20 first, 21 next). On the first cycle through the DCS subroutine, address 20 is recognized and the associated data is stored as high order data. On the second cycle, address 21 is recognized and the associated data yields low order data plus the DCS extended address word. With the DCS extended address, it is possible to insert 26-bit words into the computer.

UNCLASSIFIED

8-111

~~CONFIDENTIAL~~

CONFIDENTIAL

UNCLASSIFIED

~~CONFIDENTIAL~~
SEDR 300



PROJECT GEMINI



Instrumentation System Subroutine

The Instrumentation System subroutine assembles special data and transfers it to the Instrumentation System (IS). Every 2.4 seconds, 21 data words are transferred to the IS by the subroutine. The transferred data words are the stored results of other subroutines. The types of data words transferred include velocity changes for the X, Y, and Z axes, gimbale angle values for the pitch, roll, and yaw axes, and radar range. Once every 2.4 seconds, the IS sync discrete input occurs. When the input occurs, the data words to be transferred are assembled in a special IS memory buffer. The buffer consists of 21 predetermined memory addresses. A special memory address is used as a word selection counter to determine which data words in the IS memory buffer are to be transferred to the IS.

Manual Data Subroutine

The Manual Data subroutine determines when data is transferred from the Manual Data Keyboard (MDK) to the computer and from the computer to the Manual Data Readout (MDR). The subroutine consists of approximately 1000 instructions which are used to govern the generation of signals that control circuit operation in the MDK and MDR.

Interfaces

Figure 8-28 show the equipment which interfaces with the computer. The diagram also contains references to the individual equipment interface diagrams.

Inertial Platform (Figure 8-29)

The computer supplies 400 cps excitation to the rotors of three resolvers located on the pitch, roll, and yaw gimbale axes of the Inertial Platform. Movement of the rotors of any of these resolvers away from their zero (platform-caged) reference

8-112

~~CONFIDENTIAL~~

UNCLASSIFIED



PROJECT GEMINI


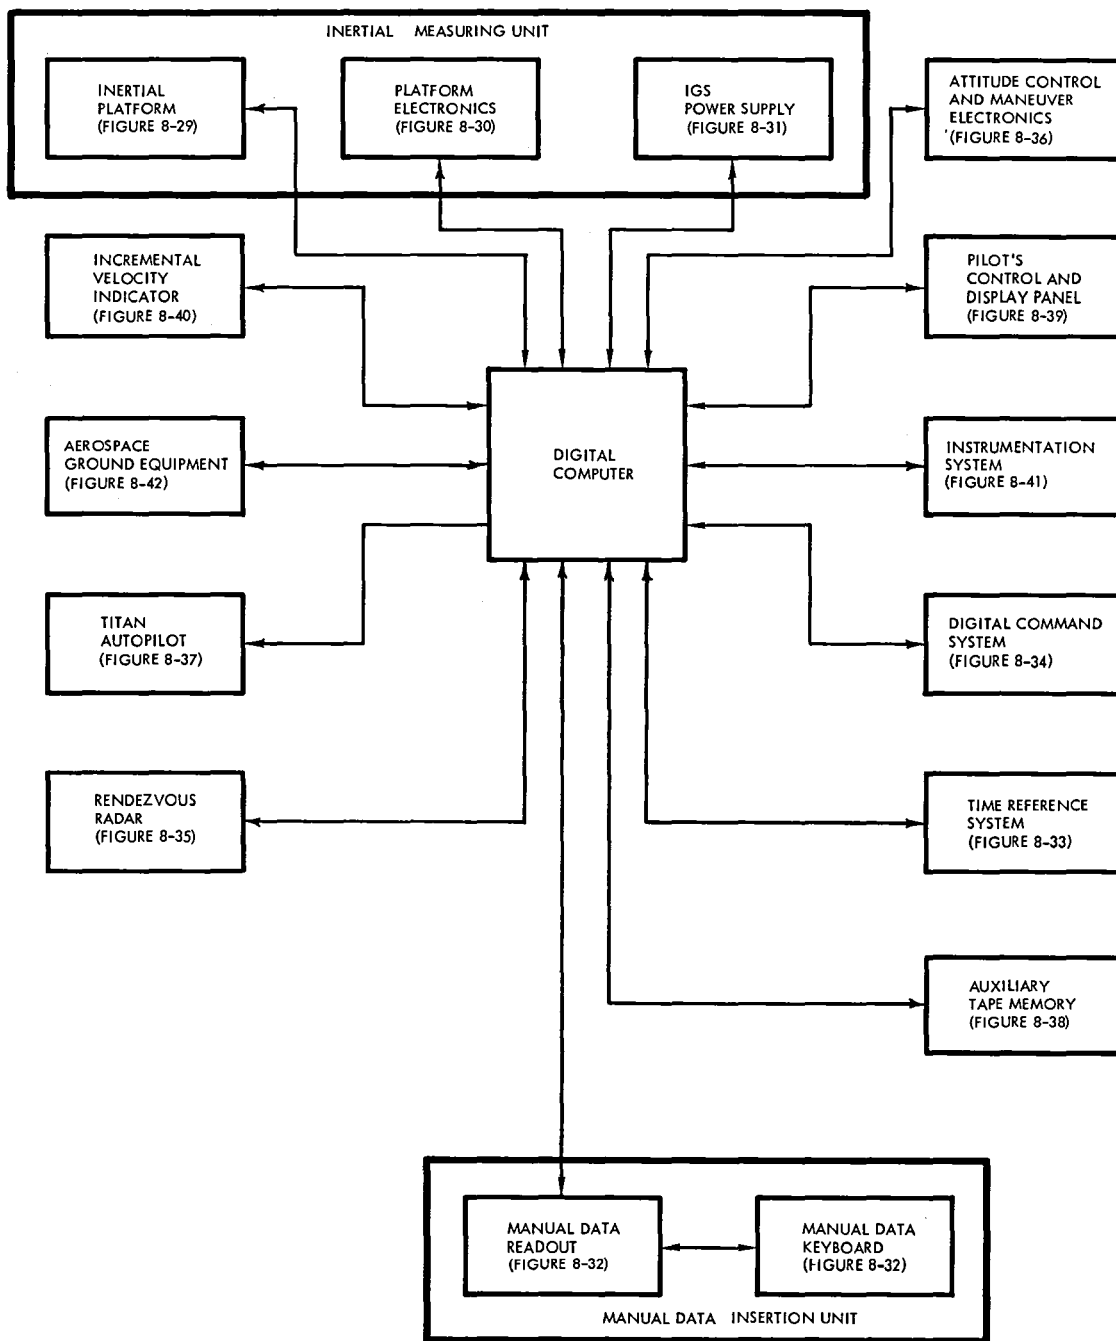


Figure 8-28 Computer Interfaces

 

UNCLASSIFIED

~~CONFIDENTIAL~~
SEDR 300

PROJECT GEMINI

CONFIDENTIAL

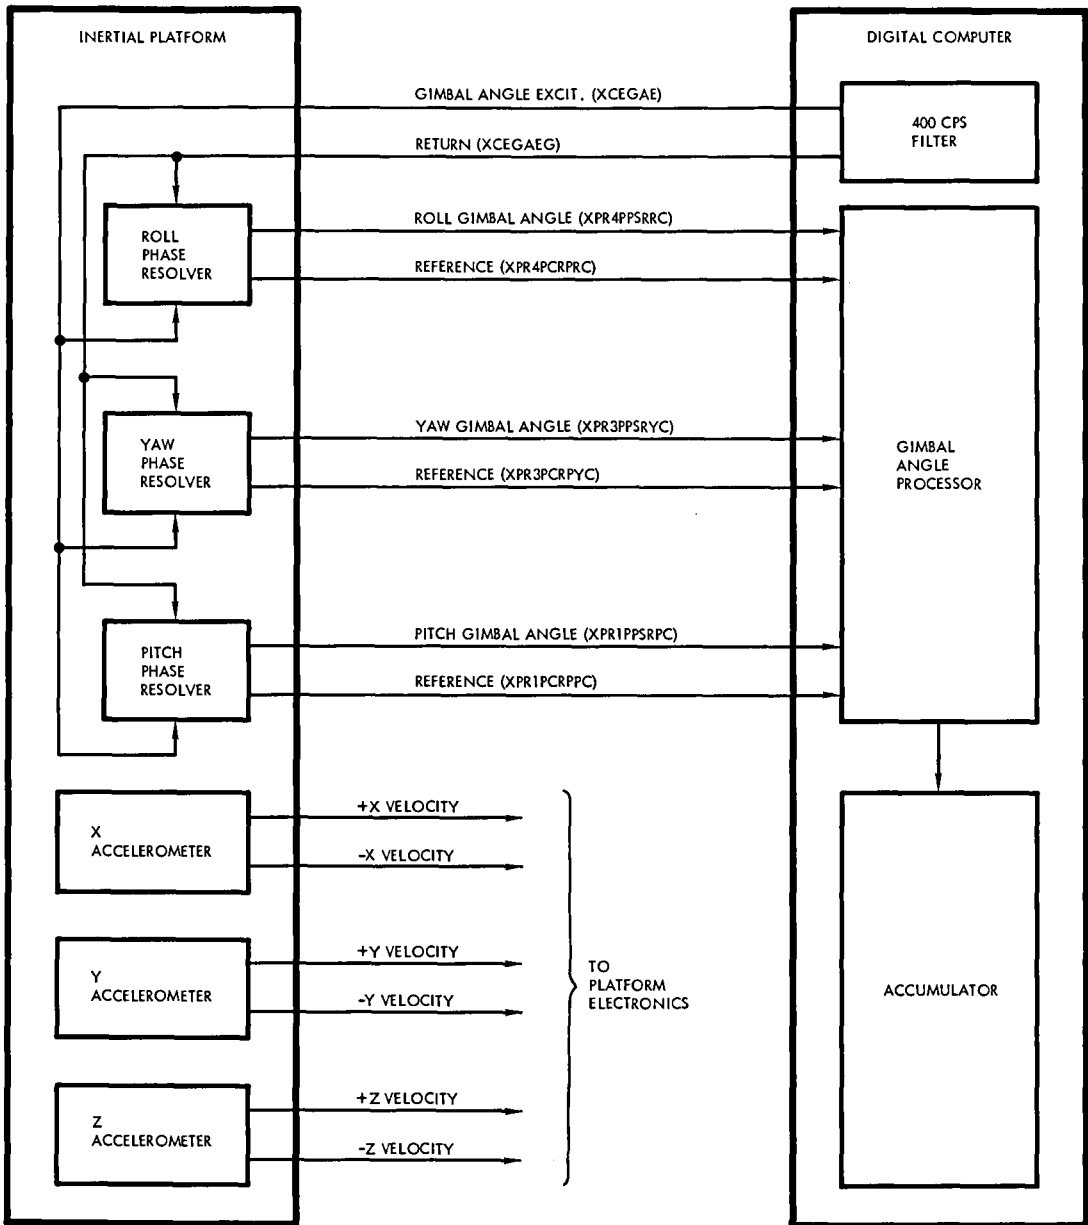
 



Figure 8-29 Computer-Platform Interface

FM2-8-29

8-114

UNCLASSIFIED

 ~~CONFIDENTIAL~~

**PROJECT GEMINI**

causes the output voltage of the stator winding to be phase-shifted relative to the reference 400 cps voltage inputs to the computer: a reference voltage from the compensator winding (pitch, yaw, and roll references), and a phase-shifted voltage from the stator winding (pitch, yaw, and roll gimbal angles).

The following PRO instruction programming is associated with the Inertial Platform interface:

<u>Signal</u>	<u>Address</u>	
	<u>X</u>	<u>Y</u>
Read pitch gimbal	6	3
Read roll gimbal	6	4
Read yaw gimbal	6	5

The gimbal angles are read no sooner than 5 ms from each other, and the total reading time for all three angles is no greater than 30 ms. The angles are read once per computation in the Catch-Up, Rendezvous, and Re-Entry modes, and once every 50 ms in the Ascent mode. These angles are gated, as true magnitude, into the accumulator S, and 1 through 14 bit positions with the 15 through 25 bit positions being zero. The accumulator value from the first PRO instruction is discarded. Each of the next three PRO instructions results in an accumulator value of the gimbal angle read by the previous PRO instruction, as follows:

- (a) PRO36 (read pitch; process previously read angle)
- (b) Discard previously read angle
- (c) Wait 5 ms
- (d) PRO46 (read roll; process pitch)
- (e) STO pitch

UNCLASSIFIED

~~CONFIDENTIAL~~
SEDR 300



PROJECT GEMINI



- (f) Wait 5 ms
- (g) PRO56 (read yaw; process roll)
- (h) STO roll
- (i) Wait 5 ms
- (j) PRO36 (read pitch; process yaw)
- (k) STO yaw

The computer inputs from the Inertial Platform are summarized as follows:

- (a) Roll gimbal angle (XPR4PPSRRC) and reference (XPR4PCRPRC)
- (b) Yaw gimbal angle (XPR3PPSRYC) and reference (XPR3PCRPHYC)
- (c) Pitch gimbal angle (XPR1PPSRPC) and reference (XPR1PCRPPC)

The computer output to the Inertial Platform is summarized as follows:

Gimbal angle excitation (XCEGAE) and return (XCEGAEG)

Platform Electronics (Figure 8-30)

Outputs derived from each of the three platform accelerometers are supplied to the computer as incremental velocity pulses (+X and -X delta velocity, +Y and -Y delta velocity, and +Z and -Z delta velocity). An up level on one line denotes a positive increment of velocity while an up level on the other line denotes a negative increment of velocity.

The following PRO instruction programming is associated with the Platform Electronics interface:

UNCLASSIFIED

8-116

~~CONFIDENTIAL~~

PROJECT GEMINI


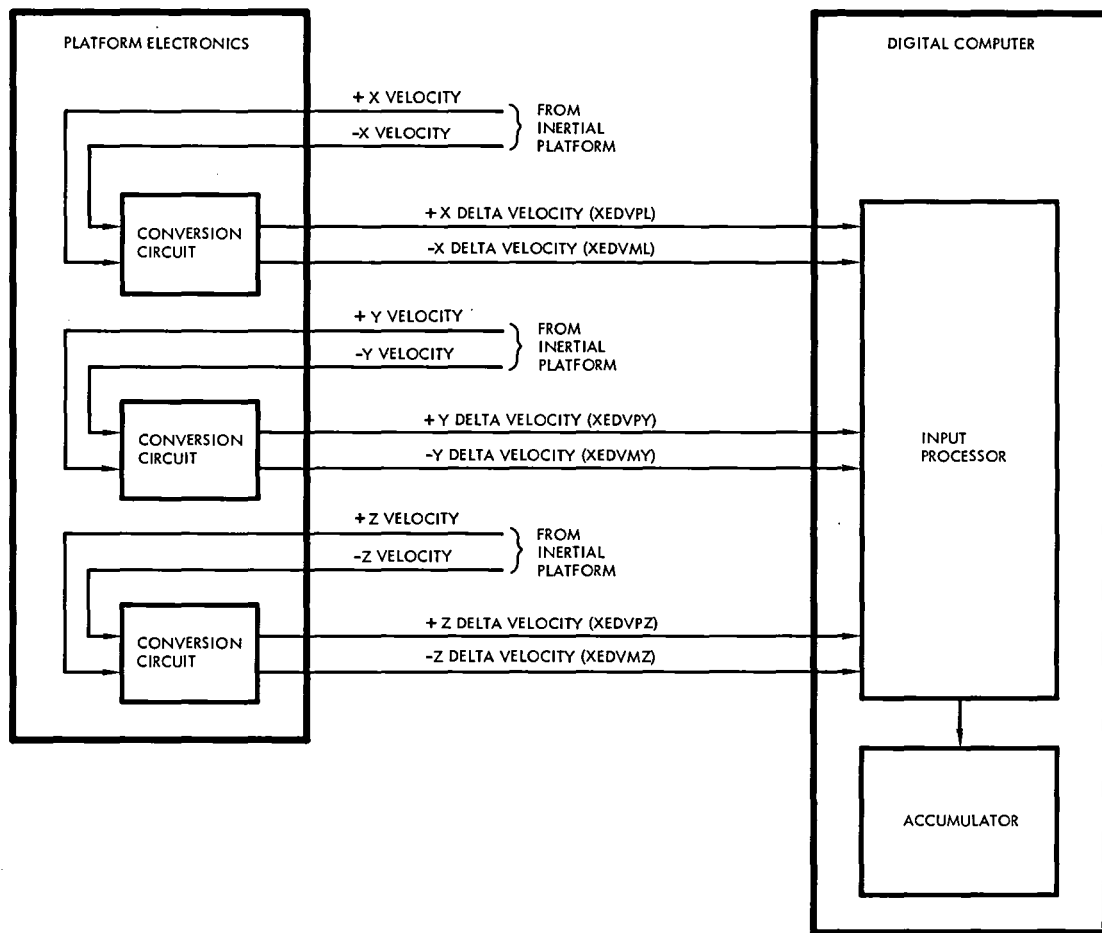


Figure 8-30 Computer-Platform Electronics Interface

UNCLASSIFIED

 ~~CONFIDENTIAL~~
SEDR 300



PROJECT GEMINI



<u>Signal</u>	<u>Address</u>		<u>Processor</u>
	<u>X</u>	<u>Y</u>	<u>PHASE TIME</u>
Read X delta velocity	5	4	2
Read Y delta velocity	5	4	3
Read Z delta velocity	5	4	4

The input processor accumulates the incremental velocity pulses on the processor delay line in two's-complement form. The velocity pulses have a maximum frequency of 3.6 kc per channel with a minimum separation of 135 usec between any plus and minus pulse for a given axis. Three input circuits are used to buffer the plus and minus pulses, one circuit for each axis. The buffered velocity pulse inputs are sampled during successive processor phases and read into a control circuit. This control circuit synchronizes the inputs with the processor timing and establishes an add, subtract, or zero control for the processor carry-borrow circuit. The accumulated velocity quantities are read into the accumulator S, and 1 through 12 bit positions in two's-complement form via a single PRO45 instruction, as follows:

 
- (a) Processor phase 2 - read accumulated X velocity
- (b) Processor phase 3 - read accumulated Y velocity
- (c) Processor phase 4 - read accumulated Z velocity

As the accelerometer values are read into the accumulator, the delay line is automatically zeroed so that each reading represents the change in velocity from the previous reading.

The computer inputs from the System Electronics are summarized as follows:

8-118

~~CONFIDENTIAL~~ UNCLASSIFIED

**PROJECT GEMINI**

- (a) +X delta velocity (XEDVPL)
- (b) -X delta velocity (XEDVML)
- (c) +Y delta velocity (XEDVPY)
- (d) -Y delta velocity (XEDVMY)
- (e) +Z delta velocity (XEDVPZ)
- (f) -Z delta velocity (XEDVMZ)

IGS Power Supply (Figure 8-31)

The computer supplies a filtered 28 VDC signal to the IGS Power Supply to control the DC power supplied to the computer. The IGS Power Supply supplies power to the computer within 0.3 second after receiving the 28 VDC power control signal. When the computer power control signal drops to 2 VDC, the IGS Power Supply removes DC power from the computer within 0.3 second. The 26 VAC, 400 cps power furnished to the computer by the IGS Power Supply is not controlled by the computer power control signal, and is therefore present at the computer whenever the IGS Power Supply is operating.

The computer inputs from the IGS Power Supply are summarized as follows:

- (a) +27.2 VDC (XSP27VDC) and return (XSP27VDCRT)
- (b) -27.2 VDC (XSM27VDC) and return (XSM27VDCRT)
- (c) -20 VDC (XSP20VDC) and return (XSP20VDCRT)
- (d) +9.3 VDC (XSP9VDC) and return (XSP2VDCRT)
- (e) 26 VAC (XS26VAC) and return (XS26VACRT)
- (f) +28 VDC filtered (XSP28VDC) and return (XSP28VDCRT)

The computer output to the IGS Power Supply is summarized as follows:

Power control (XCEP)

PROJECT GEMINI

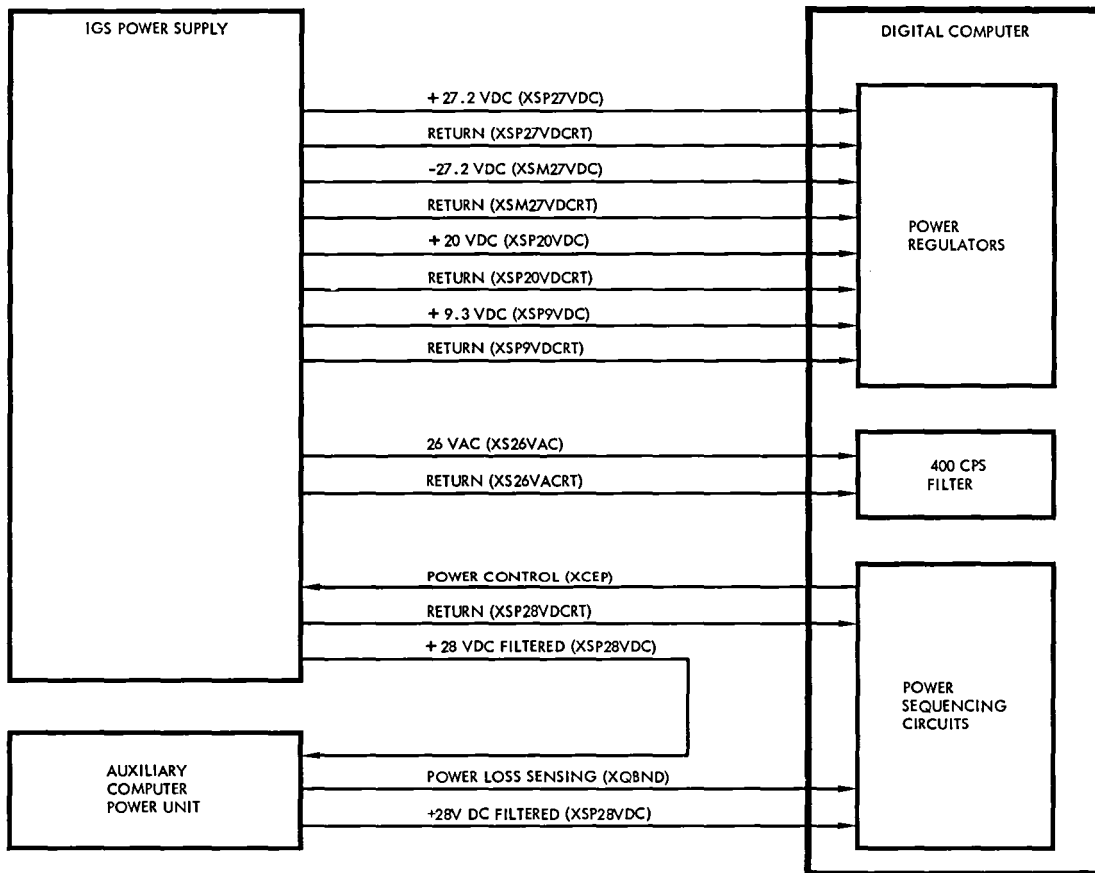


Figure 8-31 Computer-Power Supply Interface


FM2-8-31

UNCLASSIFIED

~~CONFIDENTIAL~~
SEDR 300



 PROJECT GEMINI



Auxiliary Computer Power Unit (ACPU) (Figure 8-31)

The ACPU functions in conjunction with the IGS Power Supply to buffer power interruptions and depressions. When the ACPU senses a power interruption or depression, it supplies the power loss sensing signal to the power sequencing circuits in the computer. These circuits then maintain the computer power constant until the power interruption or depression ends (up to a maximum of 100 msec).

The computer output to the ACPU is summarized as follows:

Power Control (XCEP)

The computer input from the ACPU is summarized as follows:

Power loss sensing (XQEND)

+28 VDC filtered (XSP28VDC)

Manual Data Insertion Unit (MDIU) (Figure 8-32)

The MDIU can insert into, and/or read out of, the computer up to 99 data words. It provides the crew with a means of updating certain data stored in the computer by inserting new data into the appropriate memory location. It also provides a capability to verify the data stored in a number of additional memory locations. Two of the quantities which may be inserted (T_R and T_X) are transferred to the Time Reference System by the computer, following insertion.

The MDIU consists of two units: The Manual Data Keyboard (MDK) and the Manual Data Readout (MDR). The MDK has a keyboard containing 10 push-button switches used during data insertion and readout. To insert data, the pilot always depresses seven Data Insert push-button switches; the first two set up the address of the computer memory location in which data is to be stored, and the last five

UNCLASSIFIED

8-121
~~CONFIDENTIAL~~

PROJECT GEMINI


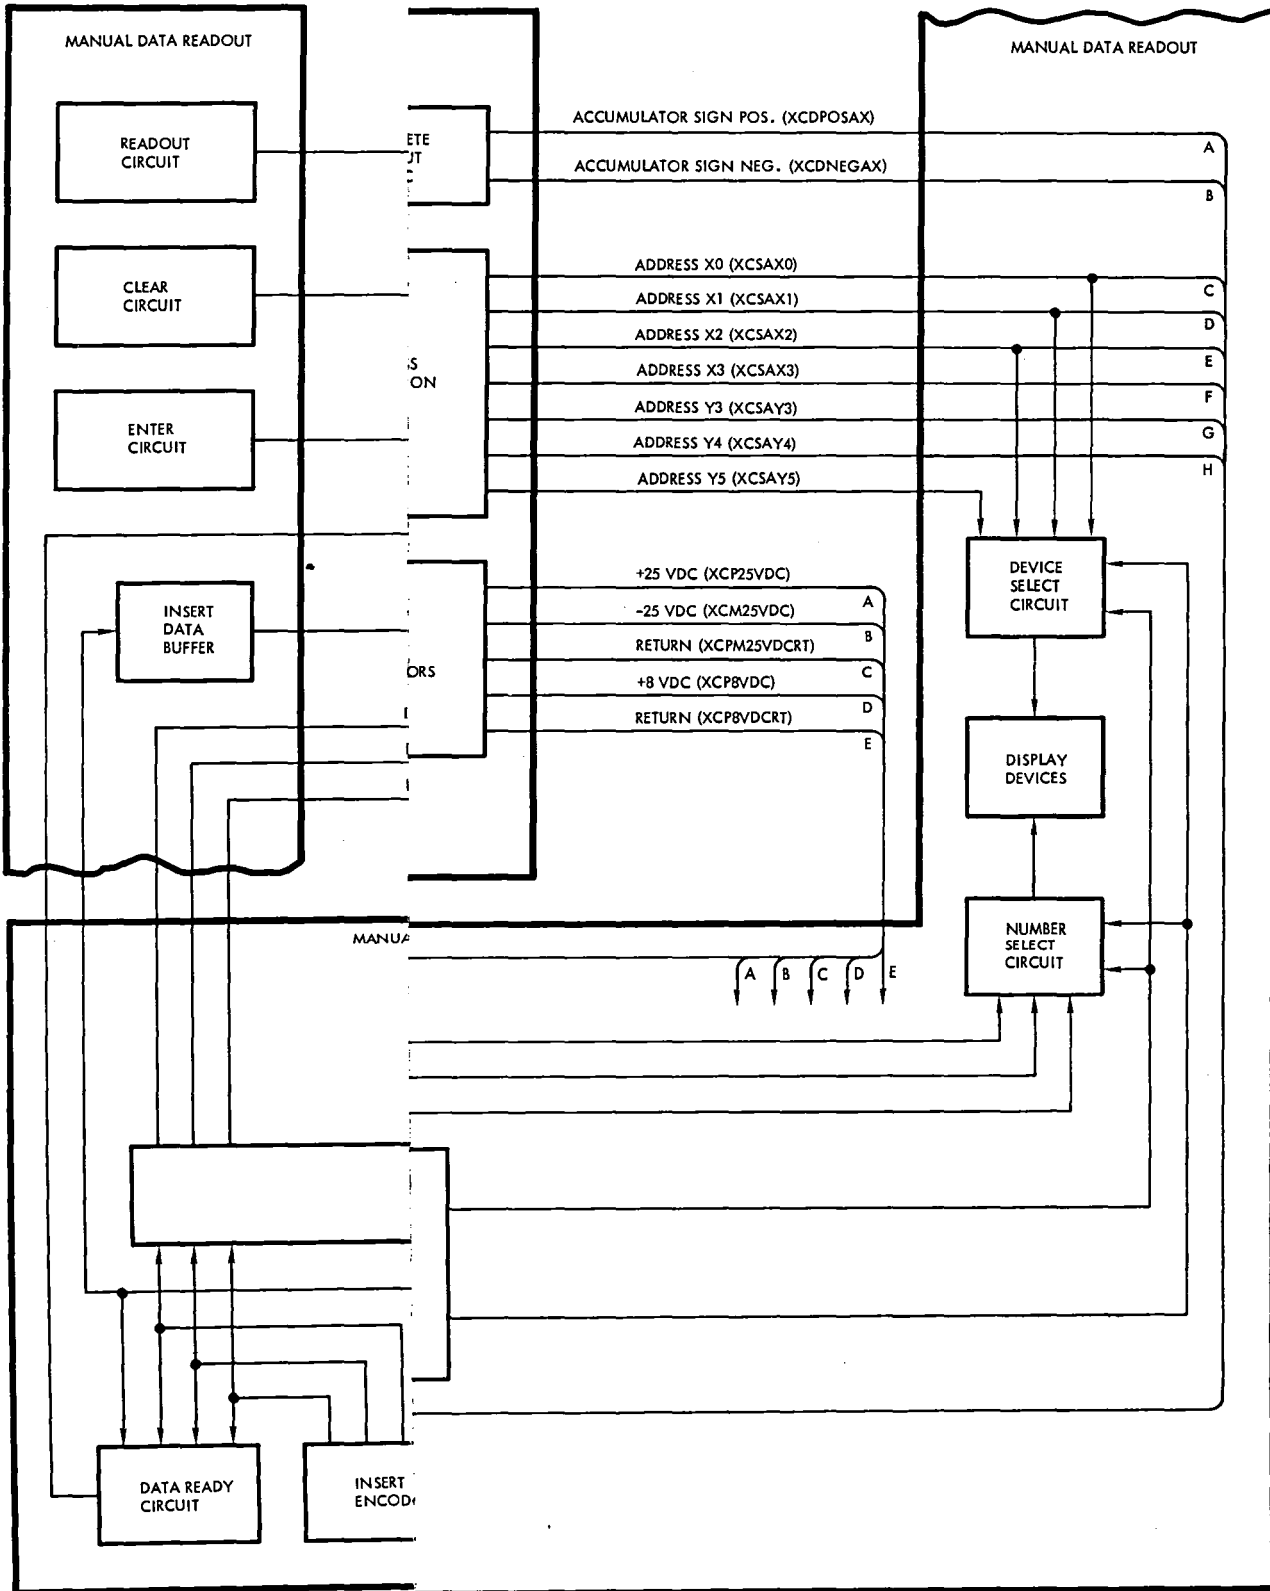


Figure 8-32 Computer-MDIU Interface

UNCLASSIFIED

 ~~CONFIDENTIAL~~
SEDR 300



PROJECT GEMINI



set up the actual data. Each digit inserted is also displayed for verification. Following the insertion and verification of the seventh digit, the ENTER push-button switch is pressed to store the data in the selected memory location. If verification of any digit cannot be made, the CLEAR push-button switch is pressed and the address and data must be set up again. The MDR sequentially displays for verification the digits inserted by the pilot. This unit can also be used to re-check quantities stored in the computer memory. This operation is accomplished by inserting and verifying only the first two (address) digits and then depressing the READ OUT push-button switch. The selected data is then displayed for verification. If the pilot attempts to insert data in an invalid address, attempts to read data out of an invalid address, inserts more than seven digits, or fails to insert a two-digit address prior to depressing the ENTER or READ OUT push-button switch, the seven digits displayed are all zero indicating a pilot error.

The following CLD instruction programming is associated with the MDIU interface:

<u>Signal</u>	<u>Address</u>	
	<u>X</u>	<u>Y</u>
Data ready	1	0
Enter	2	0
Readout	3	0
Clear	4	0

The following PRO instruction programming is associated with the MDIU interface:

<u>Signal</u>	<u>Address</u>	
	<u>X</u>	<u>Y</u>
Digit magnitude weight 1	0	3

UNCLASSIFIED

 
8-123
~~CONFIDENTIAL~~

UNCLASSIFIED

~~CONFIDENTIAL~~
SEDR 300



PROJECT GEMINI



Signal (cont.)

Address (cont.)

	<u>X</u>	<u>Y</u>
Digit magnitude weight 2	1	3
Digit magnitude weight 4	2	3
Digit magnitude weight 8	3	3
Reset DI01, DI02, and DI03	0	4
Display device drive	1	4
Digit select weight 1	0	5
Digit select weight 2	1	5
Digit select weight 4	2	5
Read MDIU insert data	3	4

The pilot must depress the CLEAR push-button switch for the first quantity to be inserted or displayed. Upon the recognition of DI04 on, the program sets D040 off. This results in resetting DI01, DI02, and DI03, and clearing the MDIU buffer. The program then sets D041 off to reset the display drivers.

When a digit push-button switch is depressed, the binary coded decimal (BCD) code is entered into the buffer and DI01 is turned on. The program reads the buffer into accumulator bit positions 1 through 4 and sets D040 off. Following this, the program sends out a code by means of D050, D051, and D052 to select the digit to be displayed. The program then sets D041 on to turn on the display drivers, and sends a BCD digit to the buffer by means of D030, D031, D032, and D033. The program waits 0.5 second and sets D040 and D041 off. The astronaut must wait until the digit is displayed before entering the next digit. After all seven digits have been entered and displayed, the pilot depresses the ENTER push-button switch. This results in DI02 being set on. The program then sets D040 off, and converts

UNCLASSIFIED

8-124

~~CONFIDENTIAL~~

UNCLASSIFIED

~~CONFIDENTIAL~~
REFR 300



PROJECT GEMINI



the five data digits to binary. This data is scaled and stored in memory according to the two-digit address.

To read data out of the computer, the pilot enters the two-digit address of the quantity to be displayed and then depresses the READ OUT push-button switch. This results in DI03 being set on. The computer then sets DO40 off, converts the requested quantity to BCD, and sends the BCD data to the display buffer one digit at a time in 0.5-second intervals.

The computer inputs from the MDIU are summarized as follows:

- (a) Readout (MZRC) - The up level of this signal denotes that the two previously inserted digits are to be used as the address of a quantity to be displayed.
- (b) Clear (XNZCC) - The up level of this signal denotes that the previously inserted digits are incorrect and the insert sequence must be repeated.
- (c) Enter (XNZIC) - The up level of this signal denotes that the previously inserted digits have been verified and should be stored in the computer memory.
- (d) Data ready (XMZDA) - The up level of this signal denotes that a digit has been inserted. The computer samples this line at least 20 times per second to allow continuous insertion of data.
- (e) Insert data 1, 2, 4, and 8 (XNZB1, XNZB2, XNZB4, and XNZB8) - These four signals, denoting one BCD character, are supplied to the com-

UNCLASSIFIED

8-125

 
~~CONFIDENTIAL~~

UNCLASSIFIED

~~CONFIDENTIAL~~ UNCLASSIFIED
SEDR 300



PROJECT GEMINI



puter for each decimal digit inserted.

The computer outputs to the MDIU are summarized as follows:

- (a) Accumulator sign positive (XCDPOSAX) - The up level of this signal on a set input causes the addressed latch to be set.
- (b) Accumulator sign negative (XCDNEGAX) - The up level of this signal on a reset input causes the addressed latch to be reset.
- (c) Addressing - Seven lines provide the capability of addressing all latches in the MDIU. The following X and Y address lines are provided:

- (1) MDIU address X0 (XCSAX0)
- (2) MDIU address X1 (XCSAX1)
- (3) MDIU address X2 (XCSAX2)
- (4) MDIU address X3 (XCSAX3)
- (5) MDIU address Y3 (XCSAY3)
- (6) MDIU address Y4 (XCSAY4)
- (7) MDIU address Y5 (XCSAY5)

By selecting one X and one Y address line at a time, a total of 12 addresses can be formed.

- (d) DC power - Regulated DC power is supplied to the MDIU as follows:

- (1) +25 VDC (XCP25VDC)
 - (2) -25 VDC (XCM25VDC)
 - (3) +8 VDC (XCP8VDC) and return (XCP8VDCRT)
- } and return (XCPM25VDCRT)

8-126

~~CONFIDENTIAL~~

UNCLASSIFIED



PROJECT GEMINI



Time Reference System (TRS) (Figure 8-33)

The TRS counts elapsed time (ET) from lift-off through impact, counts down time to retrograde (T_R) on command, and counts down time to equipment reset (T_X) on command, all in 1/8-second increments. The computer receives T_R and T_X data words from the MDIU and automatically transfers them to the TRS. When the computer receives a display request from the MDIU for T_R , or when the computer program requires ET, the TRS transfers them to the computer.

The following CLD instruction programming is associated with the TRS interface.

<u>Signal</u>	<u>Address</u>	
	<u>X</u>	<u>Y</u>
T_R discrete	5	0

The following PRO instruction programming is associated with the TRS interface:


<u>Signal</u>	<u>Address</u>	
	<u>X</u>	<u>Y</u>
ET control	4	1
T_X control	5	2
T_R control	5	6
Enter	1	2
TRS data and timing pulses	0	2
TRS control reset	4	1

In the readout mode, the computer transfers T_R or T_X data words to the TRS. The mode is initiated by setting D021 on. The 24 bits of data to be sent to the TRS

UNCLASSIFIED

~~CONFIDENTIAL~~
SEDR 300

PROJECT GEMINI

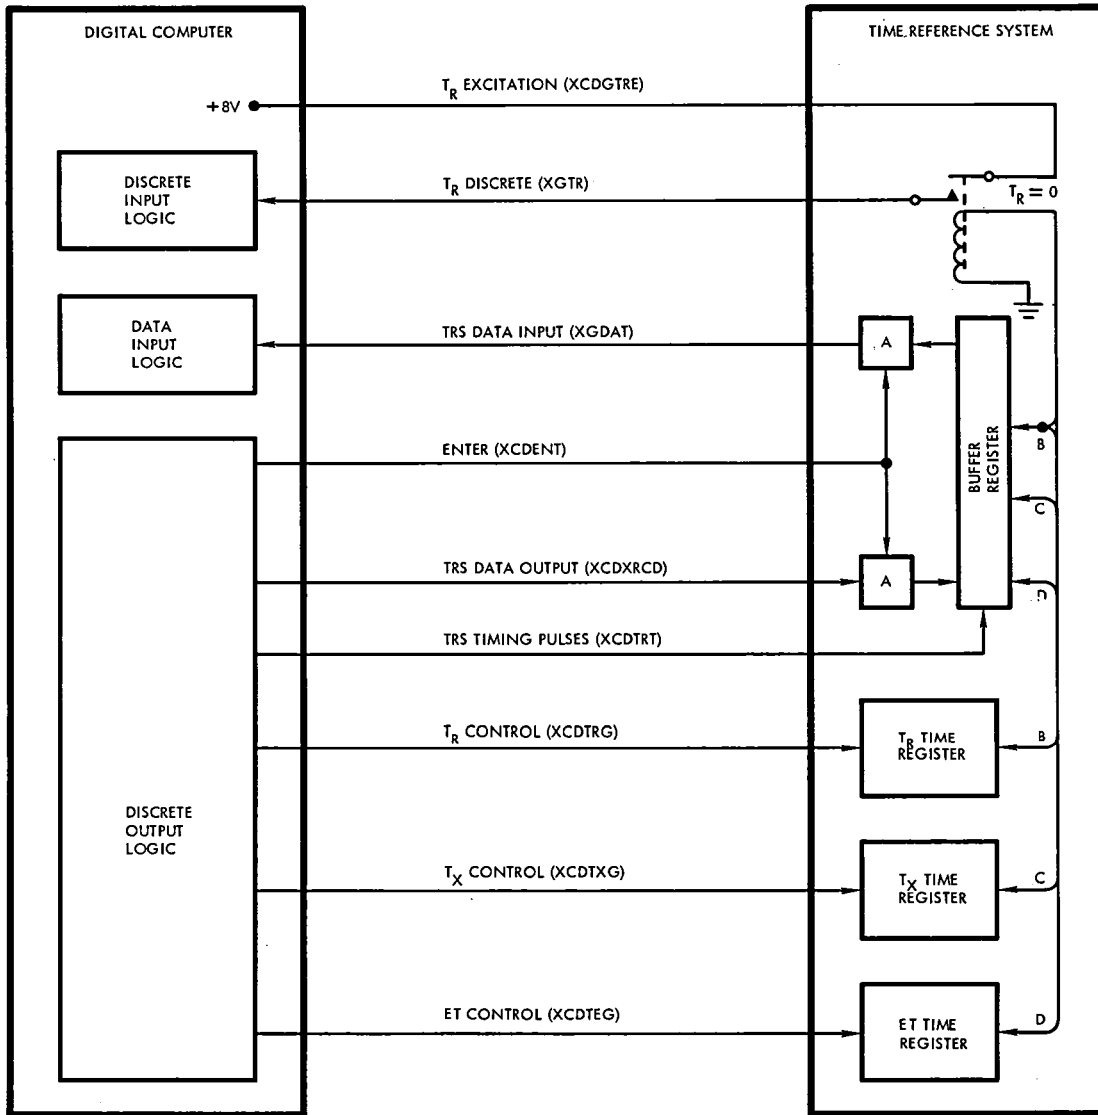

UNCLASSIFIED

Figure 8-33 Computer-TRS Interface

8-128

~~CONFIDENTIAL~~

FM2-8-33

UNCLASSIFIED

~~CONFIDENTIAL~~
300



PROJECT GEMINI



are then placed in the accumulator by 24 consecutive sets of PRO20 and SHR1 (shift right one place) instructions. With each PRO instruction, a timing pulse is automatically initiated 70 usec after the beginning of the data pulse. The timing pulse is terminated so that its up level is 139 usec. After bit 24 has been sent to the TRS, the program generates one of two control gates (T_R or T_X). Between 9 and 15 ms later, the computer terminates the TRS control gate.

The enter mode is initiated by setting DO21 off. One of two control gates (T_R or T_X) is generated by the program and terminated between 9 and 15 ms later. After termination of the control gate, the program enters a subroutine consisting of 25 consecutive sets of PRO10 and SHR1 instructions. Every time a PRO operation is called for, a timing pulse is generated by the same logic as in the readout mode. The timing pulse is sent to the TRS to cause the addressed data to be supplied to the computer. The first bit received is discarded with the final SHR1 instruction. The second bit received is the least significant bit and is shifted into accumulator bit position 25 at the completion of the twenty-fifth set of PRO20 and SHR1 instructions. When T_R equals zero, a relay in the TRS shorts the T_R excitation line to the T_R discrete line. The T_R discrete signal then causes the computer to start re-entry calculations.

The computer inputs from the TRS are summarized as follows:

- (a) T_R discrete (XGTR) - The up level of this signal signifies that the computer should begin re-entry calculations.
- (b) TRS data input (XGDAT) - All data transfers from the TRS to the computer occur on this line. The data word on the line is determined by which control gate the computer actuates prior to the

UNCLASSIFIED

8-129

~~CONFIDENTIAL~~

 
UNCLASSIFIED

~~CONFIDENTIAL~~
300

UNCLASSIFIED



PROJECT GEMINI



actual data transfer. The up level is a binary "1".

The computer outputs to the TRS are summarized as follows:

- (a) T_R excitation (SCDGTRE) - The computer supplies +8 VDC through a resistor to the TRS as the T_R excitation input. When T_R equals zero, the T_R relay causes the T_R excitation input to be transferred to the computer as the T_R discrete signal.
- (b) Enter (XCDEMT) - The up level of this signal signifies that data is to be transferred from the TRS to the computer when the transfer clocks occur. The down level signifies that data is to be transferred from the computer to the TRS.
- (c) TRS data output (XCDXRCD) - All data transfers from the computer to the TRS occur on this line. The data word on the line is determined by which control gate (T_R , or T_X) the computer has actuated. The up level is a binary "1".
- (d) TRS timing pulses (XCDEMT) - These 3.57 kc timing pulses cause the computer data to be shifted into or out of the TRS buffer register for transfer to or from the computer.
- (e) T_R control (XCDETRG) - The up level of this signal causes the transfer of data between the TRS buffer register and the TRS T_R register. The direction of transfer is determined by the level of the enter signal.
- (f) T_X control (XCDETXG) - The up level of this signal causes the trans-

UNCLASSIFIED

UNCLASSIFIED

CONFIDENTIAL

~~CONFIDENTIAL~~
SEDR 300



PROJECT GEMINI



fer of data between the TRS buffer register and the TRS T_X register. The direction of transfer is determined by the level of the enter signal.

- (g) ET control (XCDTEG) - The up level of this signal causes the transfer of data between the TRS buffer register and the TRS ET register. The direction of transfer is determined by the level of the enter signal.

Digital Command System (DCS) (Figure 8-34)

The DCS accepts BCD messages from the ground stations at a 1 kc rate, decodes the messages, and routes the data to either the TRS or the computer. In addition, the DCS can generate up to 64 discrete commands.

<u>Signal</u>	<u>Address</u>	
	<u>X</u>	<u>Y</u>
DCS ready	6	0

The following PRO instruction programming is associated with the DCS interface:

<u>Signal</u>	<u>Address</u>	
	<u>X</u>	<u>Y</u>
Computer ready	1	0
DCS shift pulse gate	0	0

When data is to be sent to the computer, the DCS supplies the computer with a DCS ready discrete input (DI06). This input is sampled every 50 ms or less in all computer modes except during the 1/8-second interval in the Ascent mode when reading ET at lift-off. To receive DCS data, the computer supplies a series of 24 DCS

UNCLASSIFIED

8-131

~~CONFIDENTIAL~~



PROJECT GEMINI


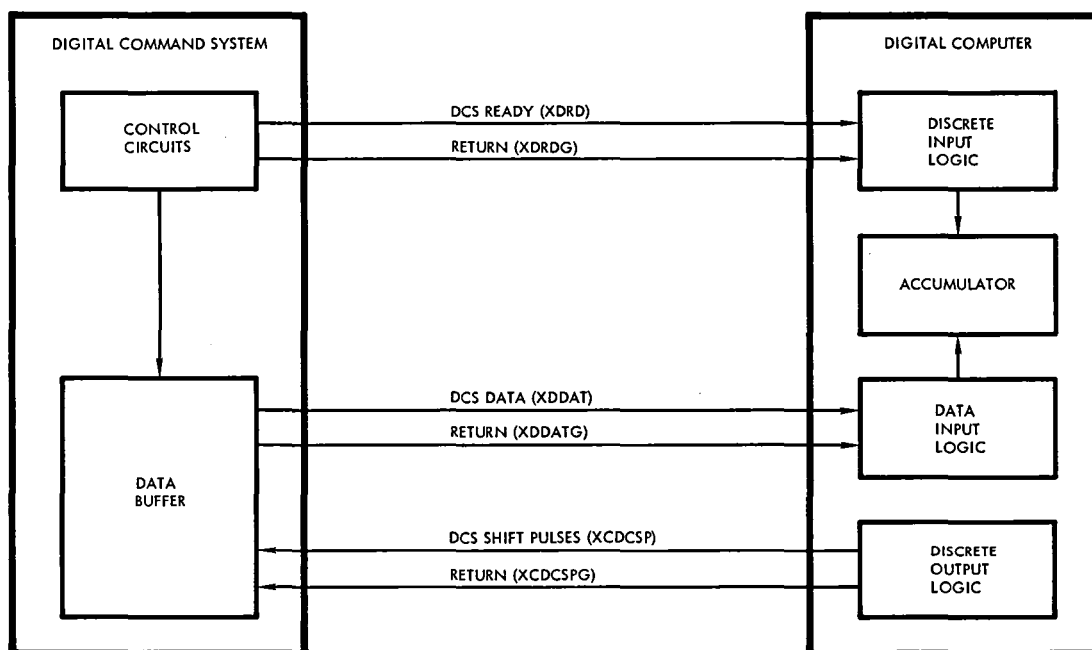


Figure 8-34 Computer-DCS Interface

FM2-8-34

UNCLASSIFIED

 ~~CONFIDENTIAL~~
SEDR 300



PROJECT GEMINI



shift pulses at a 500 kc repetition rate by setting D001 off and programming a PROO instruction. These shift pulses cause the data contained in the DCS buffer register to be shifted out on the DCS data line and read into accumulator bit positions 1 through 24, with position 19 through 24 containing the assigned address of the associated quantity and position 1 through 18 containing the quantity. Bit position 19 (address portion) and bit position 1 (data portion) are the most significant bits.

The computer inputs from the DCS are summarized as follows:

- (a) DCS ready (XDRD) and return (XDRDG) - The down level of this signal signifies that the DCS is ready to transfer data to the computer.
- (b) DCS data (XDDAT) and return (XDDATG) - This serial data from the DCS consists of 24 bits, with 6 being address bits and 18 being data bits.

The computer output to the DCS is summarized as follows:

DCS shift pulses (XCDCSP) and return (XCDCSPG) - The computer supplies these 24 shift pulses to the DCS to transfer data contained in the DCS buffer register out on the DCS data line.

Rendezvous Radar (Figure 8-35)

The Rendezvous Radar supplies the computer with three data inputs: line of sight range to target, sine of azimuth, and sine of elevation. In the Rendezvous mode, the computer uses radar data to compute and display velocity to be gained (in body coordinates).

UNCLASSIFIED

8-133

~~CONFIDENTIAL~~



PROJECT GEMINI


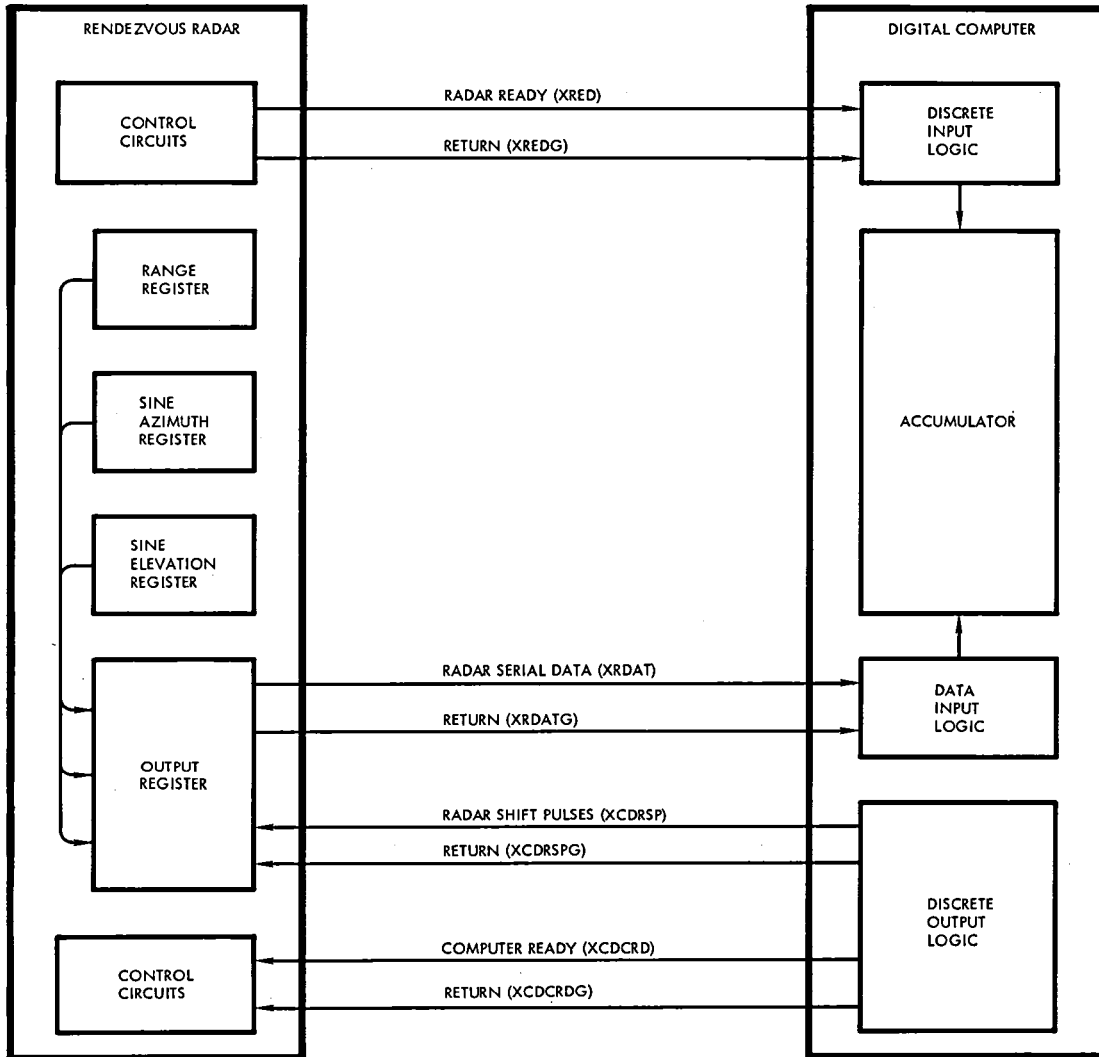


Figure 8-35 Computer-Radar Interface

FM2-8-35

UNCLASSIFIED

 ~~CONFIDENTIAL~~
SEDR 300



PROJECT GEMINI



The following CLD instruction programming is associated with the Rendezvous Radar interface:

<u>Signal</u>	<u>Address</u>	
	<u>X</u>	<u>Y</u>
Radar ready	<u>0</u>	<u>0</u>

The following PRO instruction programming is associated with the Rendezvous Radar interface:

<u>Signal</u>	<u>Address</u>	
	<u>X</u>	<u>Y</u>
Computer ready	1	0
Reset radar ready	3	6
DCS shift pulse gate	0	0

When the computer requires radar data, the computer ready discrete output (DO01) is supplied to the Rendezvous Radar. Prior to this, the program has reset the radar ready discrete input buffer with the PRO63 instruction. The computer ready signal causes the radar to stop updating its internal data and to enter a hold mode following completion of a data acquisition cycle. The program waits 20 ms and tests the radar ready discrete input (DIO0). If the test is negative, three consecutive sets of PRO00 and STO instructions are given. Each PRO instruction causes a burst of fifth-two 500 kc pulses to be sent to the radar to shift out the contents of the radar data output register. The data appears in the output register in the following sequence:

UNCLASSIFIED

8-135

 
~~CONFIDENTIAL~~

~~CONFIDENTIAL~~
SEDR 300

UNCLASSIFIED



PROJECT GEMINI



- (a) Range - 15 bits
- (b) Sine azimuth - 10 bits
- (c) Sine elevation - 10 bits

A delay of 280 usec occurs before the leading pulse of each 500 kc burst to enable the computer to store the data it has received and to allow the next data word to be inserted into the radar data output register in preparation for transmission to the computer.

Radar range data is read in true magnitude form into accumulator bit positions 8 through 24. If bit positions 8 through 11 (four most significant bits) are "1," the radar range data is considered unreliable and is ignored. Sine azimuth and sine elevation data are read into accumulator bit positions 15 through 24.

The computer inputs from the Rendezvous Radar are summarized as follows:

 
- (a) Radar ready (XRED) and return (XREDG) - The up level of this signal signifies that the radar has recognized the computer ready signal and is ready to transfer data. The radar ready pulse occurs between 0 and 4000 usec after the computer ready pulse, if radar lock-on has occurred.
- (b) Radar serial data (XRDAT) and return (XRDATG) - This data consists of three words which occur in a fixed format as determined by the radar shift pulses. The first word is range to target (15 bits), the second word is sine of azimuth angle (10 bits), and the third word is sine of elevation angle (10 bits).

UNCLASSIFIED

~~CONFIDENTIAL~~
SEDR 300



PROJECT GEMINI



The computer outputs to the Rendezvous Radar are summarized as follows:

- (a) Radar shift pulses (XCDRSP) and return (XCDRSPG) - These 500 kc pulses are issued between 280 usec and 5 millisec. after the computer receives the radar ready signal. They are sent out as three groups of 52 pulses each, with a 280 usec delay before the leading edge of each group.
- (b) Computer ready (XCDCRD) and return (XCDCRDG) - The up level of this signal signifies that the computer requires radar data inputs.

Attitude Display/Attitude Control and Maneuver Electronics (ACME) (Figure 8-36)

During the Ascent mode, the computer generates pitch, roll, and yaw attitude error signals and supplies them to the Attitude Display. The pilot utilizes the Attitude Display to monitor the performance of the ascent guidance equipment.

During the Catch-Up and Rendezvous modes, the computer generates pitch and yaw attitude error signals and is capable of supplying them to the Attitude Display and the ACME.

During the Re-Entry mode, the computer generates a roll attitude error or bank rate signal and supplies it to the Attitude Display and the ACME. If range to touchdown with zero lift is equal to, or greater than, the computed range to the desired touchdown point, a bank rate command equivalent to a 20 degree per second roll rate is provided on the roll attitude error output line. Also, during the Re-Entry mode, the computer generates cross range and down range error signals and supplies

UNCLASSIFIED

8-137

~~CONFIDENTIAL~~



PROJECT GEMINI



them to the Attitude Display for the pilots' use in manually controlling the re-entry flight path of the spacecraft.

The following PRO instruction programming is associated with the Attitude Display and ACME interfaces:

<u>Signal</u>	<u>Address</u>	
	<u>X</u>	<u>Y</u>
Pitch error command	7	0
Yaw error command	7	1
Roll error command	7	2
Pitch resolution	2	0
Yaw resolution	3	0
Roll resolution	4	0

The pitch, yaw, and roll error commands are written into a seven-bit register from accumulator bit positions 5, and 8 through 13, with a PRO instruction having an X address of 7. The outputs of the register are connected to ladder decoding networks which generate a DC voltage equivalent to the buffered digital error. This analog voltage is then sampled by one of three sample and hold circuits; while one circuit is sampling the ladder output, the other two circuits are holding their previously sampled value. The minimum sample time is 2 ms, and the maximum hold time is 48 ms. The Y address of the previously mentioned PRO instruction selects the one sample and hold circuit that is to sample the ladder output. The output of each sample and hold circuit is fed into an individual ladder amplifier where

UNCLASSIFIED

~~CONFIDENTIAL~~
SEDR 300



PROJECT GEMINI



the DC analog voltage for each channel is made available for interfacing with the Titan Autopilot.

The DC analog outputs are also fed through individual range switches and magnetic modulators where the DC voltages are converted to 400-cycle analog voltages. The range switches, which are controlled by means of discrete outputs, can attenuate the DC voltages being fed into the magnetic modulators by a factor of 6-to-1. The addressing of the discrete outputs for controlling the range switches is as follows:

- | | | |
|--|---|--|
| (a) Pitch or down range error (D002) - | } | plus for low range;
minus for high range. |
| (b) Yaw or cross range error (D003) - | | |
| (c) Roll error (D004) - | | |

The error commands are written every 50 ms or less. The updating period, however, is dependent upon the computer mode of operation. For the Catch-Up, Rendezvous, and Re-Entry modes (and the orbital insertion phase of ascent guidance), the error commands are updated once per computation cycle or every 0.5 second or less. For first and second stage ascent guidance, the error commands are updated every 50 ms or less.

The computer outputs to the Attitude Display and ACME are summarized as follows:

- (a) Pitch attitude error (SCLPDRM) and return (XCLPDRMG) -
Two identical sets of outputs (A and B) are time-shared between pitch attitude error (during Ascent, Catch-Up and Rendezvous)

UNCLASSIFIED

8-139
~~CONFIDENTIAL~~

~~CONFIDENTIAL~~
SEDR 300

UNCLASSIFIED



PROJECT GEMINI



and down range error (during Re-Entry).

- (1) Pitch attitude error (Ascent) to Attitude Display
- (2) Pitch attitude error (Catch-Up and Rendezvous) to Attitude Display
- (3) Down Range error (Re-Entry) to Attitude Display

(b) Roll attitude error/bank rate command (XCLROLM) and return (XCLROLMG) - Two identical sets of outputs (A and B) are time-shared between roll attitude error and bank rate command. During Ascent, it represents only roll attitude error. During Re-Entry, however, it represents roll attitude error when the computed range is less than the desired range, and a 20 degree per second bank rate command when the computed range equals or exceeds the desired range.

- (1) Roll attitude error (Ascent) to Attitude Display
- (2) Roll attitude error (Re-Entry) to Attitude Display and ACME
- (3) Bank rate command (Re-Entry) to Attitude Display and ACME

(c) Yaw attitude error (XCLYCRM) and return (XCLYCRMG) - Two identical sets of outputs (A and B) are time-shared between yaw attitude error (during Ascent, Catch-Up, and Rendezvous) and cross range error (during Re-Entry).

~~CONFIDENTIAL~~

UNCLASSIFIED

**PROJECT GEMINI**

- (1) Yaw attitude error (Ascent) to Attitude Display
- (2) Yaw attitude error (Catch-Up and Rendezvous) to Attitude Display
- (3) Cross range error (Re-Entry) to Attitude Display

Titan Autopilot (Figure 8-37)


 
During Ascent, the computer performs guidance computations in parallel with the Titan guidance and control system. If a malfunction occurs in the Titan system, the pilot can switch control to the Inertial Guidance System. For a description of the program requirements and operation associated with the Titan Autopilot interface, refer to the Attitude Display and ACME interface description.

The computer outputs to the Titan Autopilot are summarized as follows:

- | | | |
|---|---|--|
| <ul style="list-style-type: none"> (a) Pitch error (XCLPDC) - (b) Roll error (XCLRDC) - (c) Yaw error (XCLYDC) - (d) Common return (XCLDCG) - | } | <p>These signals are provided during backup ascent guidance.</p> |
| <ul style="list-style-type: none"> (e) Autopilot scale factor (XCDAPSF) - This signal changes the autopilot dynamics after the point of maximum dynamic pressure is reached. (f) Sustainer engine cutoff (XCDSSCF) - This signal is generated when velocity to be gained equals zero. | | |




PROJECT GEMINI

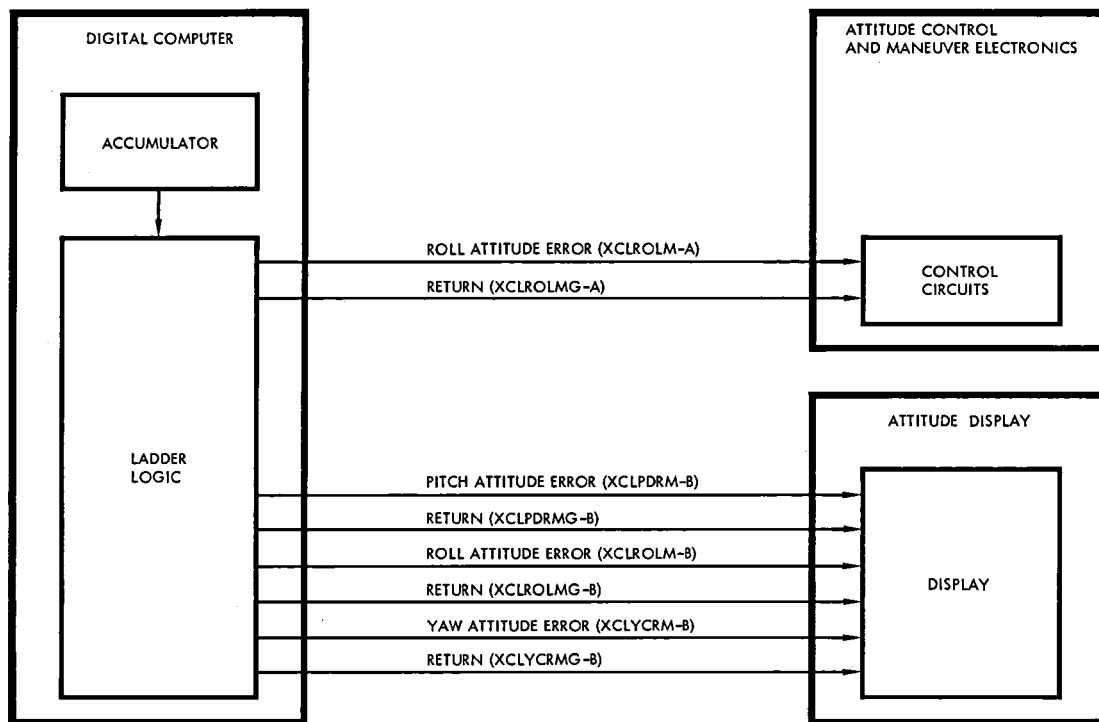

FM2-8-36

Figure 8-36 Computer-Attitude Display/ACME Interface

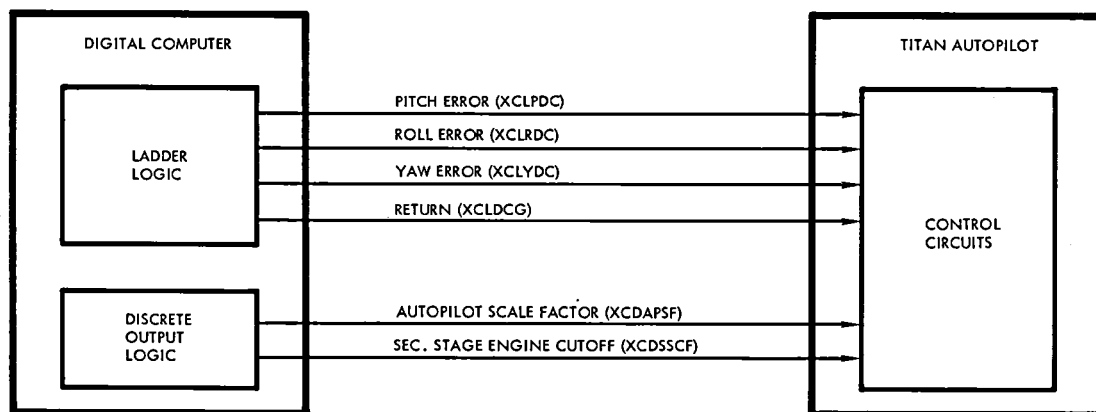

FM2-8-37

Figure 8-37 Computer-Autopilot Interface



Auxiliary Tape Memory (ATM) (Figure 8-38)

The ATM, utilized in spacecraft eight and nine, is a self-contained magnetic tape recording system. It is designed to work in conjunction with the spacecraft digital computer. The ATM provides the capability for in-flight loading of operational program modes into the digital computer. Usage of the ATM increases the effective memory of the computer, thereby making available a greater variety of operational program modes. The tape which is used by the ATM has an effective capacity of more than 85,000 (13-bit) computer words. This is approximately seven times the capacity of the computer core memory.

The operation of the ATM is controlled by the pilot, using the MDIU and a stored computer program. The program permits replacement of the majority of the data in syllables "zero" and "one" of the computer memory (approx. 8,000 thirteen-bit words) in approximately six minutes.

Pilots' Control and Display Panel (PCDP) (Figure 8-39)

The following CLD instruction programming is associated with the PCDP interface:

<u>Signal</u>	<u>Address</u>	
	<u>X</u>	<u>Y</u>
Computer mode 1	1	1
Computer mode 2	0	1
Computer mode 3	3	1
Start computation	1	2
Abort transfer	7	1
Fade-in discrete	6	1



PROJECT GEMINI


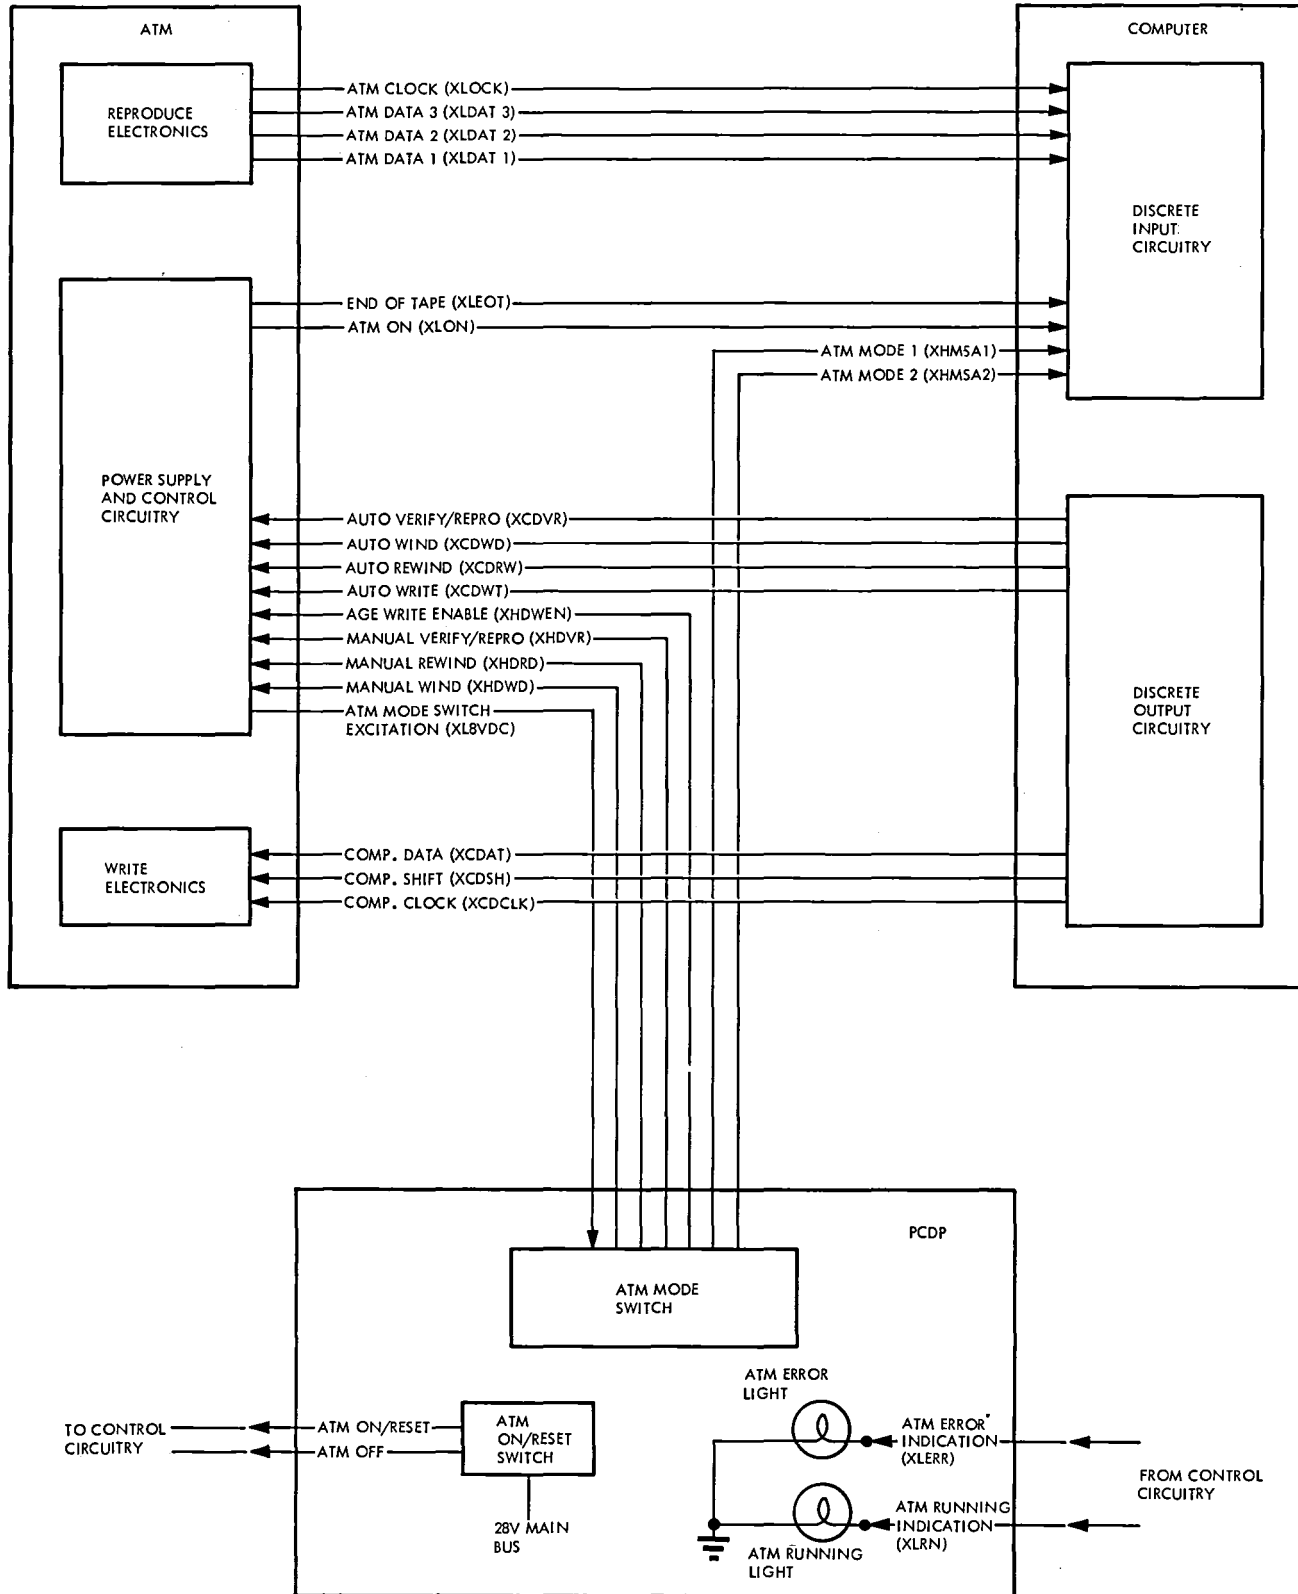


Figure 8-38 Computer-ATM-CDP Interface

 

PROJECT GEMINI


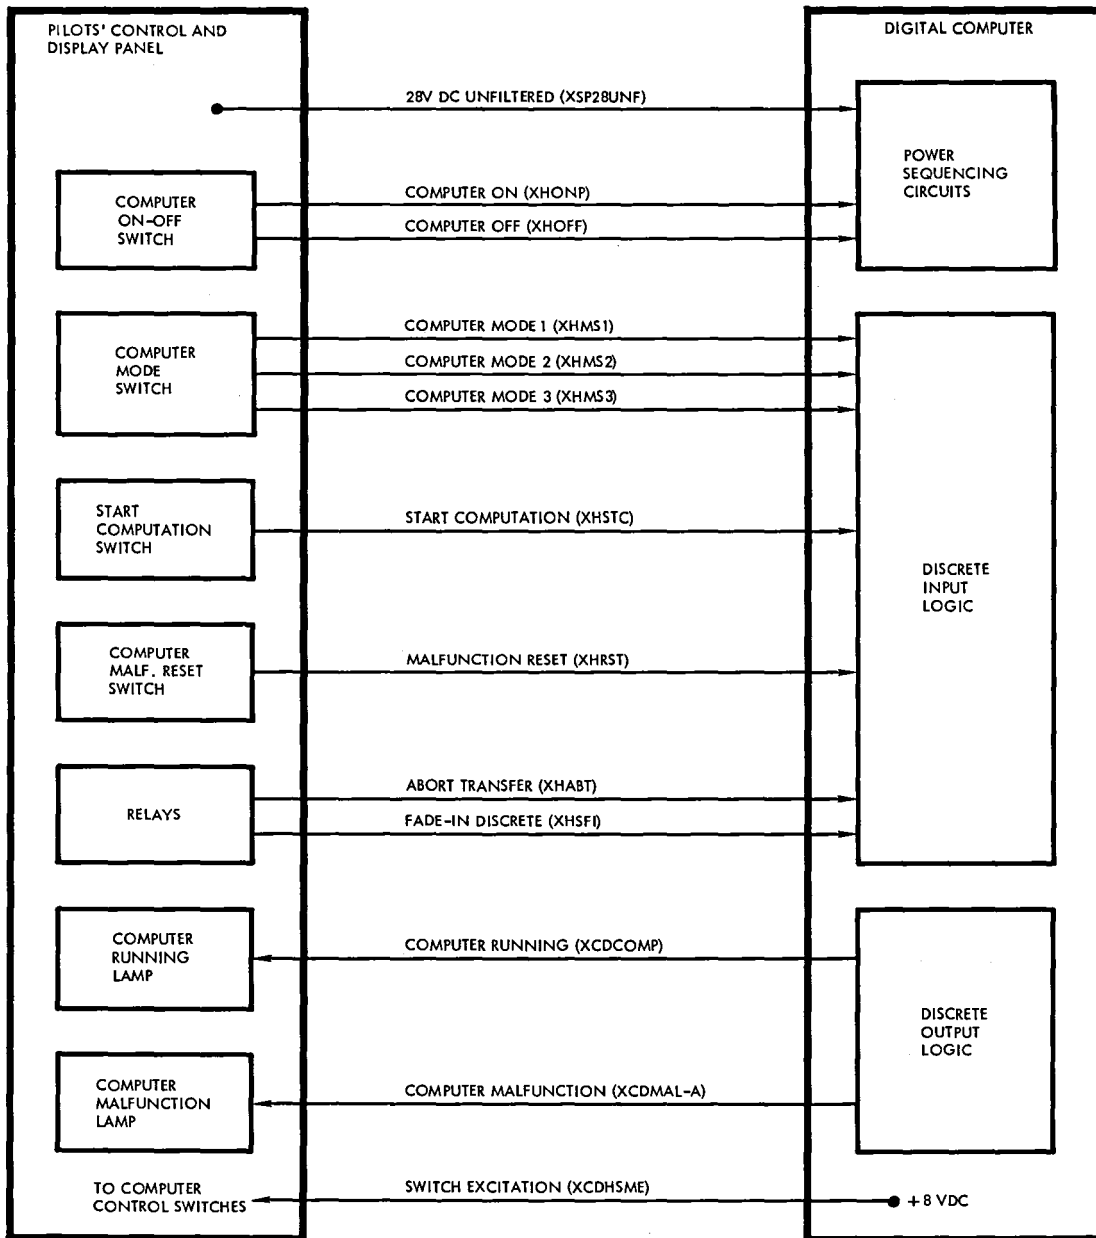


Figure 8-39 Computer-PCDP Interface

 FM2-8-39



PROJECT GEMINI



The following PRO instruction programming is associated with the PCDP interface:

<u>Signal</u>	<u>Address</u>	
	<u>X</u>	<u>Y</u>
Computer malfunction	4	3
Computer running	5	0
Reset start computation	2	6

The computer inputs from the PCDP are summarized as follows:

- (a) Computer on (XHONP) and computer off (XHOFF) - These signals from the COMPUTER ON-OFF switch control computer power.
- (b) Computer mode - The computer receives three binary coded discrete signals from the COMPUTER mode switch, to define the following operational modes:

<u>Mode</u>	<u>Computer Mode 1 (XHMS1)</u>	<u>Computer Mode 2 (XHMS2)</u>	<u>Computer Mode 3 (XHMS3)</u>
Pre-Launch	"0"	"0"	"1"
Ascent	"0"	"1"	"0"
Catch-Up	"0"	"1"	"1"
Rendezvous	"1"	"0"	"0"
Re-Entry	"1"	"0"	"1"

 
- (c) Start computation (XHSTC) - This signal from the START push-button switch starts the closed loop rendezvous operation and initiates re-entry calculations.

UNCLASSIFIED

~~CONFIDENTIAL~~
SEDR 300



PROJECT GEMINI



- (d) Malfunction reset (XHRST) - This signal from the computer malfunction RESET switch resets the computer malfunction latch. The pilot uses the switch to test for a transient failure.
- (e) Abort transfer (XHABT) - The signal automatically switches the computer from the Ascent mode to the Re-Entry mode.
- (f) Fade-in discrete (XHSFI) - This signal from a relay is supplied to the accumulator via the discrete input logic.
- (g) 28 VDC Unfiltered (XSP28UNF)

The computer outputs to the PCDP are summarized as follows:

- (a) Computer running (XCDCOMP) - This program-controlled signal lights the Computer Running lamp which is used as follows:
 - (1) Pre-Launch: The COMP (computer running) lamp remains off during this mode, except during mission simulation when its operation is governed by the mode being simulated.
 - (2) Ascent: The COMP lamp turns on following Inertial Platform release. The lamp remains on for the duration of the mode, and then turns off.
 - (3) Catch-Up: The COMP lamp lights after the START push-button switch is depressed. The lamp remains on for the duration of the mode, and then turns off.

UNCLASSIFIED

8-147

~~CONFIDENTIAL~~



PROJECT GEMINI



- (4) Rendezvous: The COMP lamp lights after the START push-button switch is depressed. For the remainder of the mode, operation of the lamp is dictated by the radar readings that occur in this mode. The lamp turns off when the mode is terminated.

- (5) Re-Entry: The COMP lamp lights when the START push-button switch is depressed or when time to start re-entry calculations is equal to zero. The lamp remains on for the duration of the mode, and then turns off.

- (b) Computer malfunction (XCDMAL-A) - This signal turns on the computer MALF lamp. Either the computer diagnostic program, a built-in timing check, or an AGE command actuates the signal.

- (c) Switch excitation (SXDHSME) - This DC excitation is supplied to the COMPUTER mode switch, the START computation switch and the malfunction RESET switch.

Incremental Velocity Indicator (IVI) (Figure 8-40)

The IVI contains three incremental velocity counters that display velocity increments along the spacecraft (body) axes.

Power is applied to the IVI whenever the computer is turned on. During the first 30-second period (or less) following the application of power, the IVI automatically references its counters to zero. After this period, the IVI is capable of recognizing computer signals.

PROJECT GEMINI

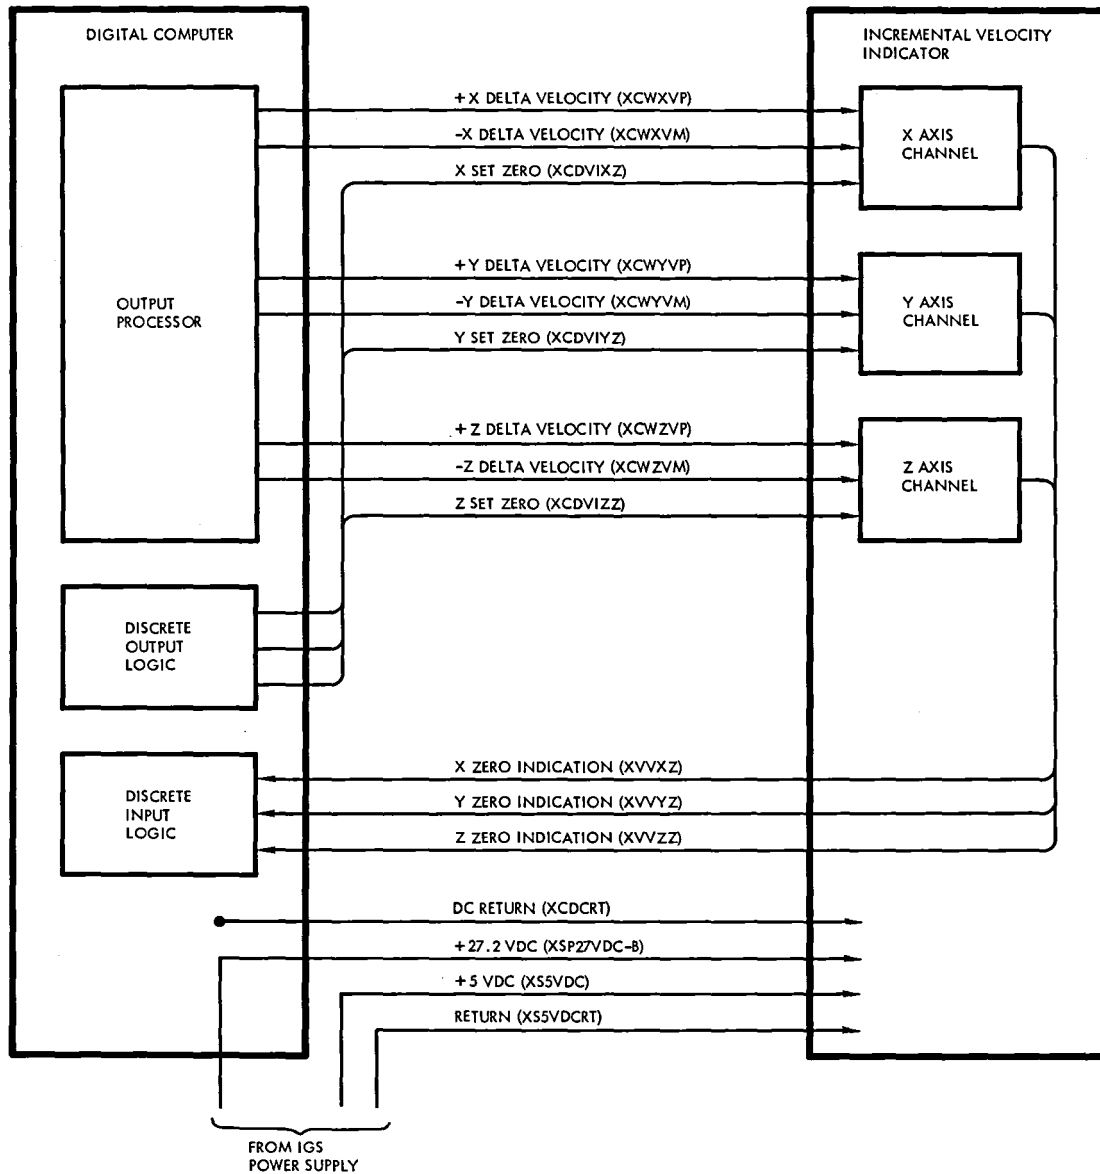


Figure 8-40 Computer-IVI Interface

FM2-8-40



PROJECT GEMINI



The IVI counters can be set manually by means of control knobs on the front of the unit, or they can be set automatically by the computer. After the counters are initially set, they are driven by incremental velocity pulses from the computer. These pulses are used to update the indications displayed by the counter. The computer can set the individual counters to zero by providing a 20 usec pulse on each of three set zero lines. A feed-back signal, denoting zero counter position, permits the computer to test for the proper counter reference prior to the insertion and display of a computed velocity increment.

The following CLD instruction programming is associated with the IVI interface:

<u>Signal</u>	<u>Address</u>	
	<u>X</u>	<u>Y</u>
X zero indication	1	3
Y zero indication	5	2
Z zero indication	6	2
Velocity error count not zero	2	2

The following PRO instruction programming is associated with the IVI interface:

<u>Signal</u>	<u>Address</u>	
	<u>X</u>	<u>Y</u>
Select X counter	2	1
Select Y counter	3	1
Drive counters to zero	1	1
Write output processor	5	3



PROJECT GEMINI



The computer supplies three signals to the IVI, one for each counter, that are used to position the counters to zero. To generate these signals, the program sets D011 minus and sets D012 and D013 as follows:

<u>Signal</u>	<u>D012</u>	<u>D013</u>
X set zero	Minus	Plus
Y set zero	Plus	Minus
Z set zero	Minus	Minus

The IVI provides three feed-back signals to the computer (D131, D125, and D126) to indicate that the counters are zeroed. The program tests the individual counters for zero position before attempting to drive them to zero.

The output processor provides a timed output to the IVI that represents velocity increments along the spacecraft axes. One output channel (phase 2) on the delay line is time-shared among the X, Y, and Z counters. Incremental velocities (in two's-complement form) are written on the delay line during phase 2 from accumulator bit positions S, and 1 through 12. Discrete outputs D012 and D013, which are set no more than 1 ms before the PR035 operation, select the proper velocity signal as follows:

<u>Signal</u>	<u>D012</u>	<u>D013</u>
X velocity	Minus	Plus
Y velocity	Plus	Minus
Z velocity	Minus	Minus

Once data is written on the delay line, the output of the delay line is sensed for data during bit times BT1 through BT12. Any bit sensed during this time in-

~~CONFIDENTIAL~~
SEDR 300

UNCLASSIFIED



PROJECT GEMINI



dicates the presence of data which is then gated into a buffer along with the sign bit (BT13) during phase 2. This buffer is sampled approximately every 21.5 ms and a pulse is generated if the buffer is set either plus or minus. During this same time, an update cycle is initiated and a count of one is either added to or subtracted from the delay line data to decrease the magnitude by a count of one. If the buffer is set to zero during the update cycle, the data on the delay line is recirculated without affecting its magnitude. The zero output of the buffer is addressed as D122. When this discrete input is off, velocity data has been counted down to zero and the next velocity can be processed.

The computer inputs from the IVI are summarized as follows:

- (a) X zero indication (XVVKZ) - The down level signifies that the X channel of the IVI is at the zero position.
- (b) Y zero indication (XVYZ) - The down level signifies that the Y channel of the IVI is at the zero position.
- (c) Z zero indication (XVZZ) - The down level signifies that the Z channel of the IVI is at the zero position.

The computer outputs to the IVI are summarized as follows:

- (a) +X delta velocity (XCWXVP) - The up level denotes that the X channel should change by one foot per second in the fore direction.
- (b) -X delta velocity (XCWXVM) - The up level denotes that the X channel should change by one foot per second in the aft direction.

8-152

~~CONFIDENTIAL~~

UNCLASSIFIED



PROJECT GEMINI



- (c) X set zero (XCDVIXZ) - The up level drives the X channel to the zero position.
- (d) +Y delta velocity (XCWYVP) - The up level denotes that the Y channel should change by one foot per second in the right direction.
- (e) -Y delta velocity (XCWYVM) - The up level denotes that the Y channel should change by one foot per second in the left direction.
- (f) Y set zero (XCDVIYZ) - The up level drives the Y channel to the zero position.
- (g) -Z delta velocity (XCWZVP) - The up level denotes that the Z channel should change by one foot per second in the down direction.
- (h) -Z delta velocity (XCWZVM) - The up level denotes that the Z channel should change by one foot per second in the up direction.
- (i) Z set zero (XCDVIZZ) - The up level drives the Z channel to the zero position.

Instrumentation System (IS) (Figure 8-41): The computer is interfaced with the Multiplexer Encoder Unit (MEU) and the Signal Conditioning Equipment (SCE) of the IS. Continuous analog data is provided to the SCE and stored digital quantities are sent upon request to the MEU.

Certain computer data, as described below, is continually made available to the SCE. The SCE conditions this data for multiplexing and analog-to-digital conversion by the MEU.

PROJECT GEMINI

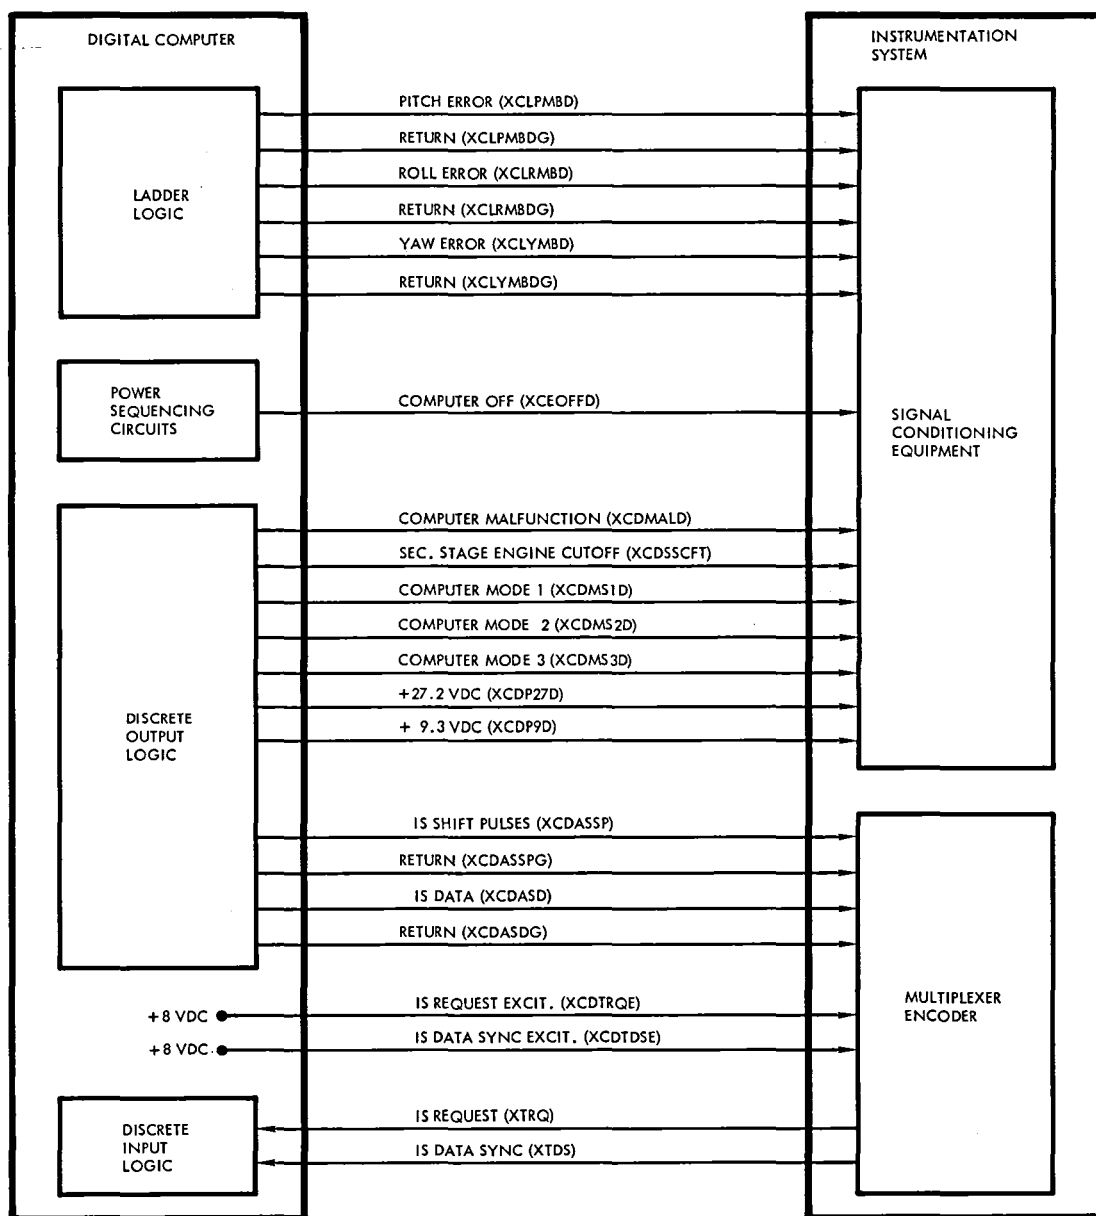


Figure 8-41 Computer-IS Interface

CONFIDENTIAL

~~CONFIDENTIAL~~
SEDR 300

UNCLASSIFIED



PROJECT GEMINI



- (a) Computer modes - The mode signals transmitted to the computer are monitored to determine that the computer was in the correct mode for a particular operational mission phase.
- (b) Computer input power - The 27.2 VDC and 9.3 VDC inputs supplied to the computer by the IGS Power Supply are monitored via the computer.
- (c) Computer Running - The computer running discrete output is monitored and recorded.
- (d) Computer malfunction - The computer malfunction discrete output is monitored and recorded.
- (e) Attitude errors: The pitch, yaw, and roll AC analog attitude errors are monitored and recorded.

Twenty-one data word locations in the computer memory are allocated for the storage of IS data. Data stored in these locations is dependent upon the computer mode of operation.

The following CLD instruction programming is associated with the IS interface:

<u>Signal</u>	<u>Address</u>	
	<u>X</u>	<u>Y</u>
IS request	7	0
IS sync	2	1

The following PRO instruction programming is associated with the IS interface:

CONFIDENTIAL UNCLASSIFIED

8-155
~~CONFIDENTIAL~~

**PROJECT GEMINI**

<u>Signal</u>	<u>Address</u>	
	<u>X</u>	<u>Y</u>
IS control gate	0	1

Every 50 ms or less, the computer program tests the IS request discrete input (DIO7). If the discrete input is tested minus, the IS sync discrete input (DII2) is tested as follows:

- (a) DII2 minus - The program stores current specified values, according to the computer mode, in an IS memory buffer of 21 locations. The contents of the first buffer location are placed in the accumulator so that the sign position of the data word corresponds to the sign position of the accumulator. Then a PRO10 instruction is given. This instruction causes the information contained in accumulator bit positions S, and 1 through 23 to be supplied to the IS. Twenty-four shift pulses are also supplied to the IS.
- (b) DII2 plus - An IS program counter is incremented by one and the contents of the next sequential buffer location are placed in the accumulator and sent to the IS via PRO10 instructions. Subsequent IS requests advance the program counter until all 21 IS quantities are transmitted.

The computer inputs from the IS are summarized as follows:

- (a) IS request (XTRQ) - An up level on this line signifies that the IS requires a computer data word. The word is transferred from the computer within 75 ms of the request. Requests can occur at rates



up to 10 times per second.

- (b) IS data sync (XTDS) - An up level on this line signifies the beginning of the IS data transfer operation.

The computer outputs to the IS are summarized as follows:

- (a) IS shift pulses (XCDASSP) and return (SCDASSPG) - This series of 24 pulses causes IS data to be transferred to the IS buffer.
- (b) IS data (SCDASD) and return (XCDASDG) - These 24 bits of data are transferred in synchronism with the IS shift pulses.
- (c) IS request excitation (SCDTRQE) - This +8 VDC signal is the excitation for the IS request signal.
- (d) IS data sync excitation (SCDTSSE) - This +8 VDC signal is the excitation for the IS data sync signal.
- (e) Monitored signals - The following signals are supplied to the IS for monitoring purposes:
 - (1) Pitch error (XCLPMBD) and return (XCLPMBDG)
 - (2) Roll error (SCLRMED) and return (XCLRMEDG)
 - (3) Yaw error (XCLYMBD) and return (XCLYMBDG)
 - (4) Computer off (XCEOFFD)
 - (5) Computer malfunction (XCDMALD)
 - (6) Sustainer engine cutoff (XCDSSCFT)
 - (7) Computer mode 1 (XCDMSID)



CONFIDENTIAL

CONFIDENTIAL
SEDR 300

PROJECT GEMINI

UNCLASSIFIED


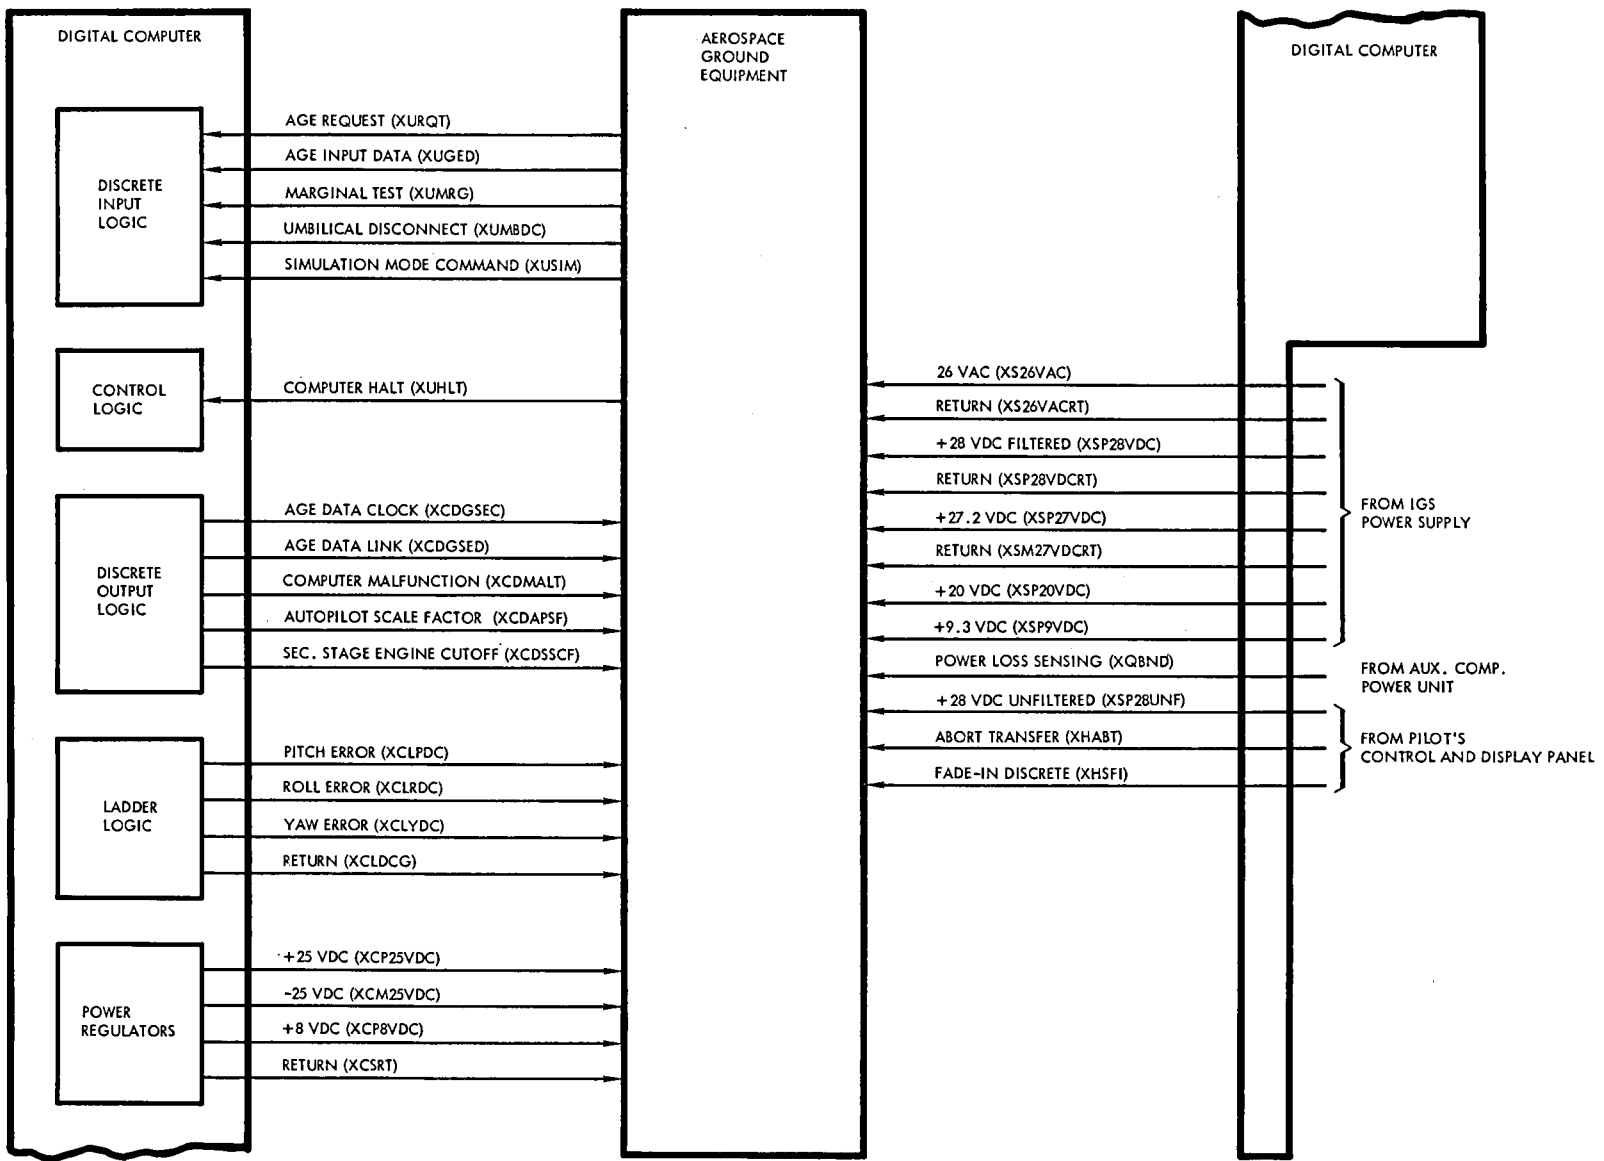


Figure 8-42 Computer-AGE Interface

8-158

CONFIDENTIAL

UNCLASSIFIED

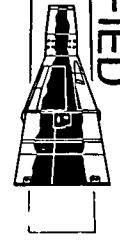

PROJECT GEMINI



- (8) Computer mode 2 (XCDMS2D)
- (9) Computer mode 3 (XCDMS3D)
- (10) +27.2 VDC (XCDP27D)
- (11) +9.3 VDC (XCDP9D)

Aerospace Ground Equipment (AGE) (Figure 8-42)

The AGE determines spacecraft installed computer status by being able to read and display the contents of any memory location, initiate and terminate marginal tests of the memory timing, and command the computer to condition the computer malfunction circuit. These tests are accomplished by a hard-wired computer/AGE data link.

In conjunction with a voice link to the spacecraft, the AGE can control the various computer modes of operation to determine the status of the computer and its interfaces. To aid in localizing failures, the AGE monitors the following computer signals:

- (a) All input and output voltages
 - (b) Sustainer engine cutoff
 - (c) Autopilot scale factor
 - (d) Roll error command
 - (e) Yaw error command
 - (f) Pitch error command
 - (g) Computer malfunction
- (to Titan Autopilot)

In addition, the AGE provides two hard-wired inputs to the computer to reset the malfunction circuit and halt the computer and to force a marginal check of the memory timing. Early and late strobing of the memory is effected using the com-

**PROJECT GEMINI**

puter/AGE data link.

The following CLD instruction programming is associated with the AGE interfaces:

<u>Signal</u>	<u>Address</u>	
	<u>X</u>	<u>Y</u>
AGE request	2	3
AGE input data	7	2
Simulation mode command	4	2
Umbilical disconnect	6	3

The following PRO instruction programming is associated with the AGE interface:

<u>Signal</u>	<u>Address</u>	
	<u>X</u>	<u>Y</u>
AGE data link	2	2
AGE data clock	3	2
Computer malfunction	4	3
Memory strobe	0	6
Autopilot scale factor	1	6
Sustainer engine cutoff	4	6

The AGE program commences when the AGE request (CI32) is tested minus. To receive the 18 bit AGE data word, the program repeats the following sequence of operations 18 times:

- (a) Turn on AGE data clock (D023)
- (b) Wait 2.5 ms

- (c) Reset AGE data clock (D023)
- (d) Wait 1.5 ms
- (e) Read AGE input data (DI27)
- (f) Wait 1.5 ms

The above sequence causes the 18-bit AGE word to be shifted out of the AGE register and into the computer. The first 4 bits of the AGE word are mode bits, and the remaining 14 bits are data. The coding of the 4 mode bits is as follows:

<u>Mode Bits</u>				<u>Mode</u>
<u>4</u>	<u>3</u>	<u>2</u>	<u>1</u>	
0	0	0	0	None
0	0	0	1	Read any word
0	0	1	0	Set marginal early
0	0	1	1	Set computer malfunction on
0	1	0	0	Set marginal late
0	1	0	1	Set pitch ladder output
0	1	1	0	Set yaw ladder output
0	1	1	1	Set roll ladder output
1	0	0	0	Set all ladder outputs

In the read any word mode, the 14 data bits of the AGE word are as follows:

18	17	16	15	14	13	12	11	10	9	8	7	6	5
S5	S4	S3	S2	S1	A9	A8	A7	A6	A5	A4	A3	A2	A1

where A1 through A8 define the address of the requested data, A9 sets up AGE internal clock pulse timing, S1 through S4 define the sector of the requested

**PROJECT GEMINI**

data, and S5 defines the syllable(s) of the requested data. The computer determines the requested data and sends it to the AGE. If the requested data is located in syllables 0 and 1, it is sent to the AGE starting with the high-order bit of syllable 1 and finishing with the low-order bit of syllable 0. If the requested data is located in syllable 2, the first 13 bits sent to AGE are "0's," and the last 13 bits are data from syllable 2 (high-order bit first). Requested data is sent to the AGE by executing the following sequence of operations 26 times. There is a delay of 4.5 ms between resetting clock 18 and setting clock 19.

- (a) Set AGE data link (D022) from accumulator sign position
- (b) Turn on AGE data clock (D023)
- (c) Wait 2.5 ms
- (d) Reset AGE data clock (D023)
- (e) Wait 2 ms
- (f) Reset AGE data link (D022)
- (g) Wait 1 ms

In the set marginal early mode, the computer sets D060 on. This signal, in conjunction with the marginal test signal provided by the AGE, causes early strobing of the computer memory.

In the set computer malfunction on mode, the computer sets D034 on to check the malfunction indication.

In the set marginal late mode, the computer sets D060 off. This signal, in conjunction with the marginal test signal, causes late strobing of the computer memory.

**PROJECT GEMINI**

In the set ladder outputs modes, the 14 data bits of the AGE word are as follows:

18	17	16	15	14	13	12	11	10	9	8	7	6	5
S	D6	D5	D4	D3	D2	D1	0	0	0	0	0	0	0

where D1 through D6 are data bits and S is the sign bit. The data and sign bits are used to control the ladder output indicated by the 4 associated mode bits.

The number is in two's-complement form where D1 is the low-order data bit.

The computer inputs from the AGE are summarized as follows:

- (a) AGE request (XURQT) - An up level signifies that the AGE is ready to transfer a message to the computer.
- (b) AGE input data (XUGED) - An up level denotes a binary "1" being transferred from the AGE to the computer.
- (c) Marginal test (XUMRG) - An up level, in conjunction with the proper AGE message, causes the computer memory timing to be marginally tested.
- (d) Umbilical disconnect (XUMBDC) - An open circuit on this line signifies that the Inertial Platform has been released (or that the torquing signals have been removed). The Inertial Platform then enters the inertial mode of operation and the computer begins to perform the navigation guidance portion of its Ascent routine.
- (e) Simulation mode command (XUSIM) - This command causes the computer to operate in a simulated mode as determined by the COMPUTER mode switch.



PROJECT GEMINI



- (f) Computer halt (XUHLT) - An up level resets the computer malfunction circuit and sets the computer halt circuit.

The computer outputs to the AGE are summarized as follows:

- (a) AGE data clock (XCDGSEC) - This line reads out the AGE register and synchronizes the AGE with the AGE data link.
- (b) AGE data link (XCDGSED) - An up level denotes a binary "1" being transferred from the computer to the AGE.
- (c) Computer malfunction (XCDMALT) - An up level indicates that the computer malfunction latch is set. The latch can be set by the computer diagnostic program, a timing error, program looping, or an AGE command.
- (d) Monitored signals - The following signals and voltages are supplied to the AGE for monitoring or recording purposes:

- (1) Autopilot scale factor (XCDAPSF)
 - (2) Sustainer engine cutoff (SCDSSCF)
 - (3) Pitch error (XCLPDC)
 - (4) Yaw error (XCLYDC)
 - (5) Roll error (XCLRDC)
 - (6) +25 VDC (XCP25VDC)
 - (7) -25 VDC (XCM25VDC)
 - (8) +8 VDC (XCP8VDC)
- } and common return (XCLDCG)
- } and common return (XCSRT)



PROJECT GEMINI



- (9) 26 VAC (XS26VAC) and return (XS26VACRT)
- (10) +28 VDC filtered (XSP28VDC) and return (XSP28VDCRT)
- (11) +28 VDC unfiltered (XSP28UNF)
- (12) +27.2 VDC (XSP27VDC)
- (13) -27.2 VDC return (XSM27VDCRT)
- (14) +20 VDC (XSP20VDC)
- (15) +9.3 VDC (XSP9VDC)
- (16) Power loss sensing (XQBND)
- (17) Abort transfer (XHABT)
- (18) Fade-in discrete (XHSFI)

**PROJECT GEMINI**MANUAL DATA INSERTION UNIT

SYSTEM DESCRIPTION

Purpose

The Manual Data Insertion Unit, hereinafter referred to as the MDIU, physically consists of the Manual Data Keyboard (Figure 8-43) and the Manual Data Readout (Figure 8-44), hereinafter referred to as the MDK and the MDR, respectively.

The MDIU enables the pilot to insert data into, and read data from, the computer memory.



Performance

Data Insertion


Before data is set up for insertion into the computer, all existing data is cleared from the MDIU by pressing the CLEAR push-button switch on the MDR. Then the Data Insert push-button switches on the MDK are used to set up a 7-digit decimal number. The first two digits from the left specify the address of the computer memory location in which the data is to be stored, and the last five digits specify the data itself. As the data is set up, it is automatically supplied to the computer accumulator. A digit-by-digit verification of the address and data is made by means of the ADDRESS and MESSAGE display devices on the MDR. After verification, the ENTER push-button switch on the MDR is pressed to store the data in the selected memory location.

Data Readout

Before data is read from the computer, all existing data is cleared from the MDIU by pressing the CLEAR push-button switch. Then the Data Insert push-

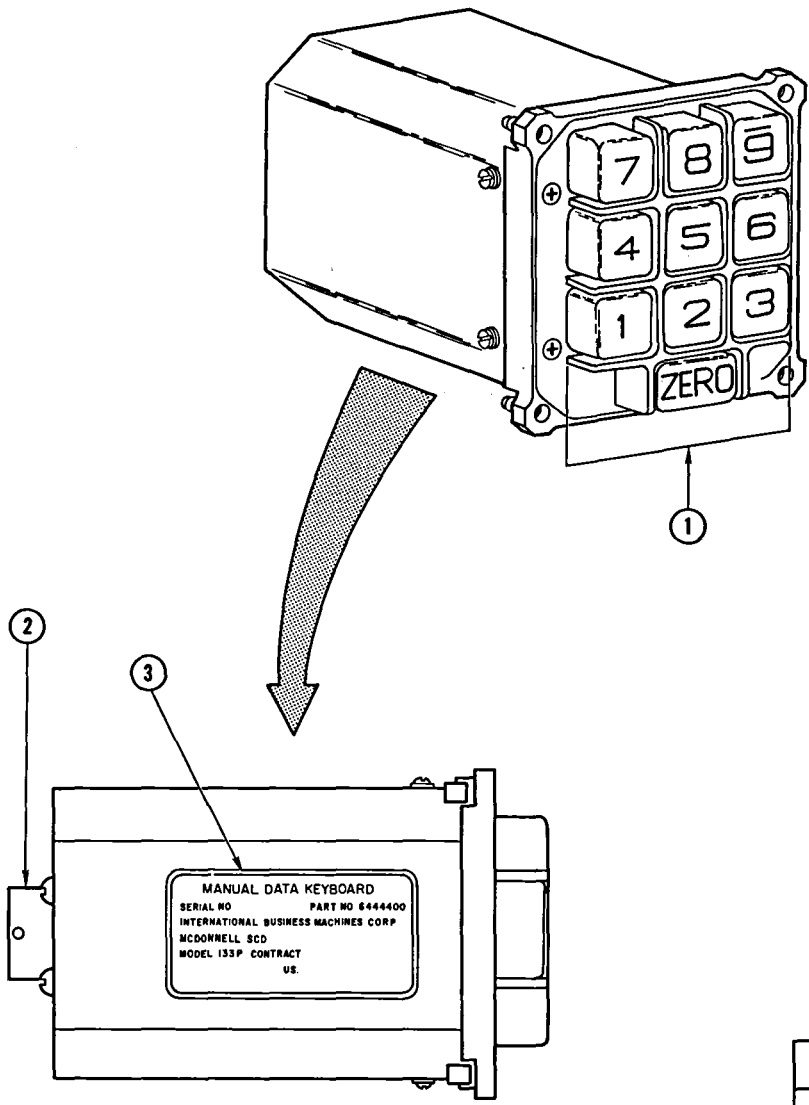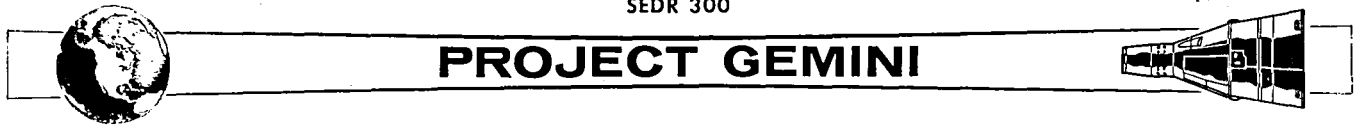

LEGEND	
ITEM	NOMENCLATURE
①	DATA INSERT PUSH-BUTTON SWITCHES
②	CONNECTOR J1
③	IDENTIFICATION PLATE

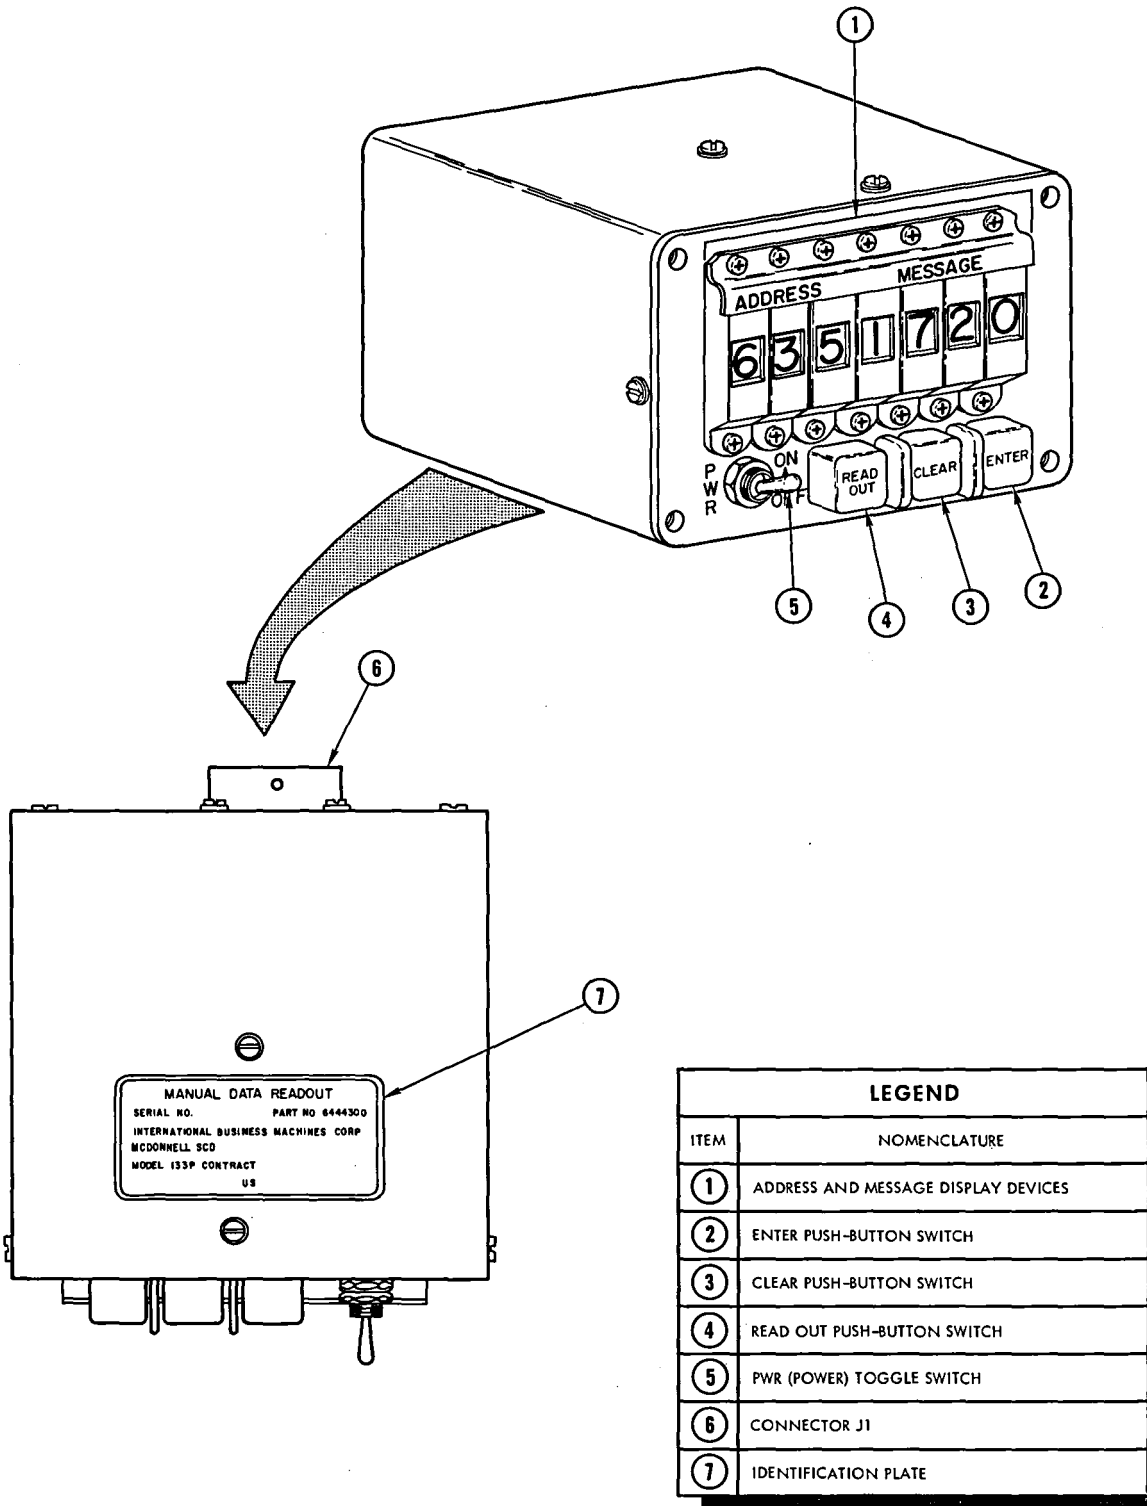

LEGEND	
ITEM	NOMENCLATURE
①	ADDRESS AND MESSAGE DISPLAY DEVICES
②	ENTER PUSH-BUTTON SWITCH
③	CLEAR PUSH-BUTTON SWITCH
④	READ OUT PUSH-BUTTON SWITCH
⑤	PWR (POWER) TOGGLE SWITCH
⑥	CONNECTOR J1
⑦	IDENTIFICATION PLATE

Figure 8-44 Manual Data Readout


FM2-8-44

UNCLASSIFIED

~~CONFIDENTIAL~~
SEDR 300



 PROJECT GEMINI



button switches are used to set up a 2-digit decimal number. The two digits specify the address of the computer memory location from which data is to be read. A digit-by-digit verification of the address is made by means of the ADDRESS display devices. After verification, the READ OUT push-button switch on the MDR is pressed and the data is read from the selected memory location and displayed by the MESSAGE display devices.

MDK Physical Description

The MDK is 3.38 inches wide, and 5.51 inches deep. It weighs 1.36 pounds. External views of the MDK are shown on Figure 8-43. The major external characteristics are summarized in the accompanying legend.

MDR Physical Description

The MDR is 3.26 inches high, 5.01 inches wide, and 6.41 inches deep. It weighs 3.15 pounds. External views of the MDR are shown on Figure 8-44. The major external characteristics are summarized in the accompanying legend.

Controls and Indicators

The controls and indicators located on the MDK and MDR are illustrated on Figure 8-45. The accompanying legend identifies the controls and indicators, and describes their purposes.

SYSTEM OPERATION

Power


The MDIU receives all of the power required for its operation from the computer. This power consists of the following regulated DC voltages:

UNCLASSIFIED

8-169

~~CONFIDENTIAL~~

PROJECT GEMINI

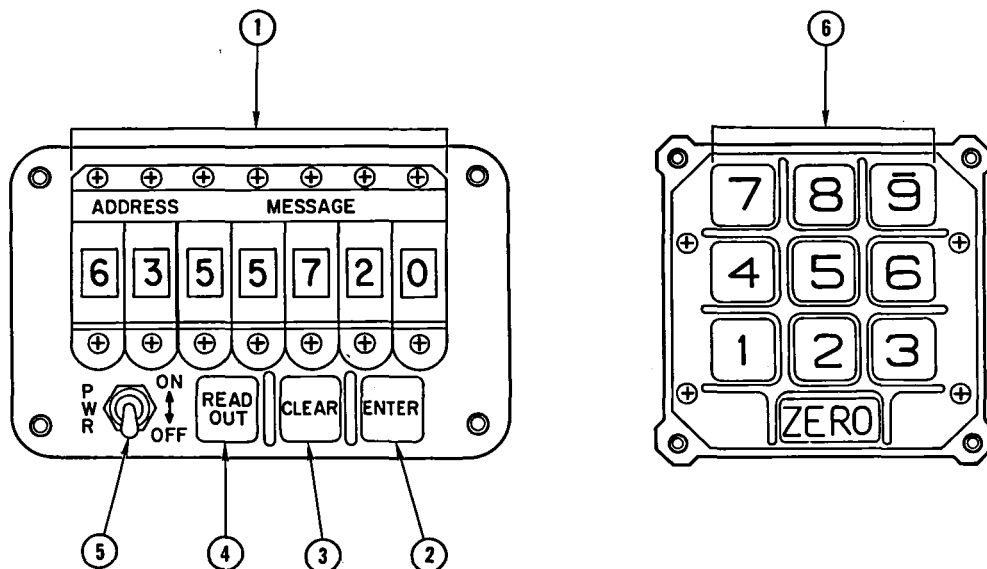


LEGEND		
ITEM	NOMENCLATURE	PURPOSE
①	ADDRESS AND MESSAGE DISPLAY DEVICES	DISPLAY ADDRESS AND MESSAGE SENT TO COMPUTER DURING ENTER OPERATION; DISPLAY ADDRESS SENT TO, AND MESSAGE RECEIVED FROM, COMPUTER DURING READOUT OPERATION.
②	ENTER PUSH-BUTTON SWITCH	PROVIDES MEANS FOR CAUSING MESSAGE SENT TO COMPUTER DURING ENTER OPERATION TO BE STORED IN MEMORY.
③	CLEAR PUSH-BUTTON SWITCH	PROVIDES MEANS FOR CAUSING ADDRESS AND MESSAGE SET UP BY MDK TO BE CLEARED OR CANCELED.
④	READ OUT PUSH-BUTTON SWITCH	PROVIDES MEANS FOR CAUSING MESSAGE TO BE READ OUT OF COMPUTER AND DISPLAYED BY MESSAGE DISPLAY DEVICES.
⑤	PWR (POWER) TOGGLE SWITCH	PROVIDES MEANS FOR CONTROLLING APPLICATION OF POWER TO MDK AND MDR.
⑥	DATA INSERT PUSH-BUTTON SWITCHES	PROVIDE MEANS FOR CAUSING ADDRESS AND MESSAGE TO BE SENT TO COMPUTER AND TO BE DISPLAYED BY ADDRESS AND MESSAGE DISPLAY DEVICES.

Figure 8-45 Manual Data Insertion Unit Front Panels

FM2-8-45



 PROJECT GEMINI



- (a) +25 VDC
 - (b) -25 VDC
 - (c) +8 VDC and return
- } and common return

This power is available at the MDIU whenever the computer is turned on. However, it is not actually applied to the MDIU circuits until the POWER switch on the MDR is turned on. When power is turned on at the MDR, the regulated DC voltages are filtered by a capacitor network and supplied to the MDK and MDR circuits.

MDK Data Flow (Figure 8-46)

The MDK has ten Data Insert push-button switches. These switches are used to select the address of a computer memory location in which data is to be stored or from which data is to be read. For storing data, the push-button switches are numbered decimally, the insert button encoder is used to convert their outputs to binary coded decimal values that can be used by the computer. These values, called the insert data signals, are supplied to the insert serializer in the computer. The insert button encoder also develops the data available signal which is supplied to the discrete input logic of the computer.

MDR Data Flow (Figure 8-47)

The MDR has seven digital display devices and three command push-button switches. The display devices are used to display the address set up by the Data Insert push-button switches on the MDK, and to display either the data set up by the Data Insert push-button switches or the data read from a computer memory location. The command push-button switches, called ENTER, READ OUT, and CLEAR, are used to determine whether data is entered into or read out of the computer, or whether the data that has been set up is to be cleared (or canceled). These push-button switches all supply inputs to the discrete input logic of the computer. Since

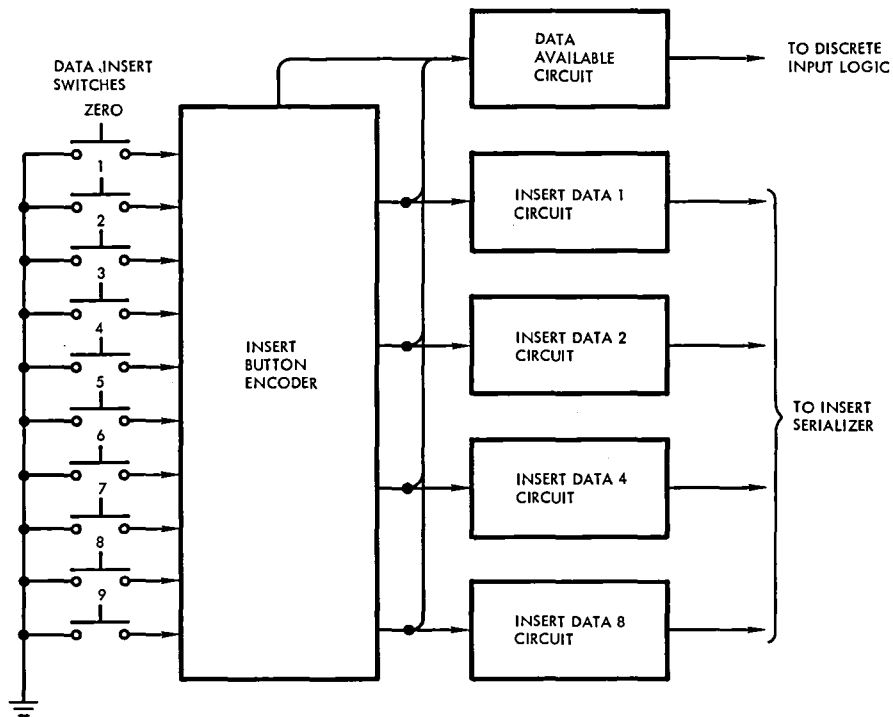


Figure 8-46 Manual Data Keyboard Data Flow

FM2-8-46

PROJECT GEMINI


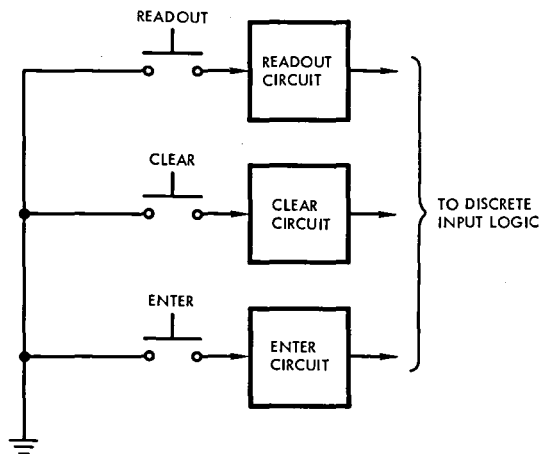


Figure 8-47 Manual Data Readout Data Flow

FM2-8-47

UNCLASSIFIED

~~CONFIDENTIAL~~
SEDR 300

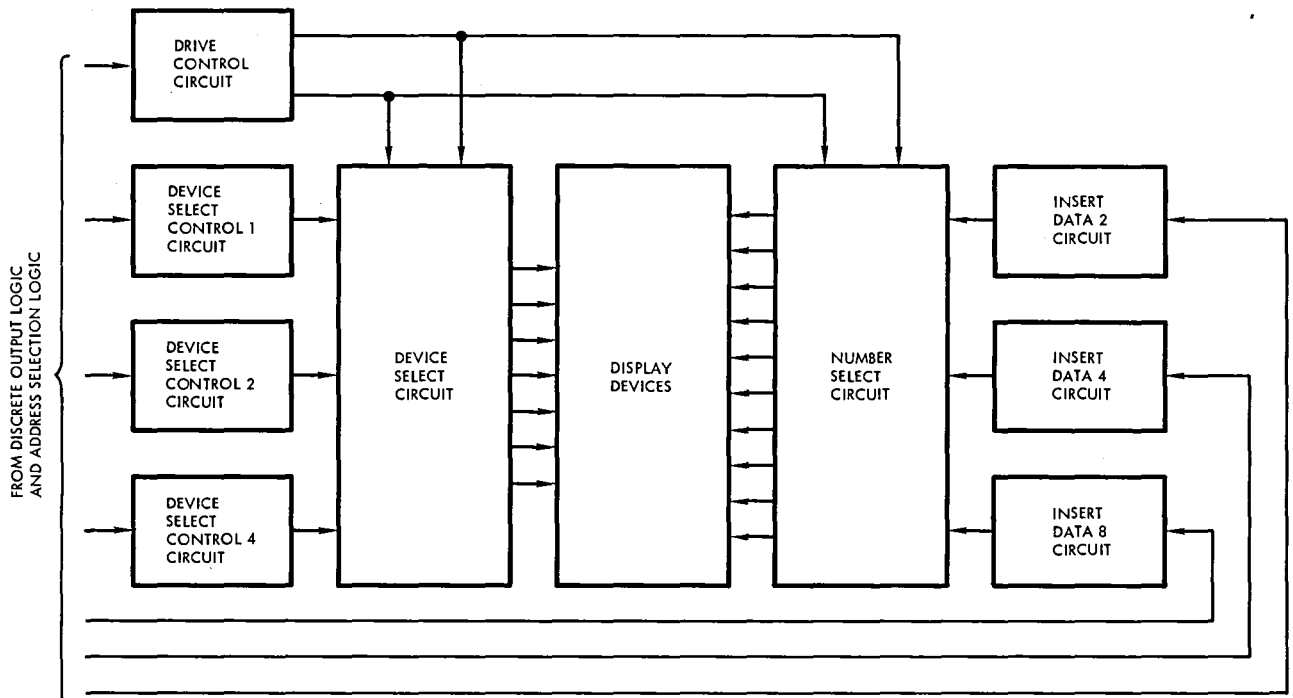

PROJECT GEMINI



the display devices provide a decimal display, the binary coded decimal values received from the computer must be decoded before they can be displayed. These values from the computer are supplied to three device select control circuits and three insert data circuits. Another signal from the computer is supplied to the display device drive control circuit. A combination of outputs from the device select control circuits is used in conjunction with the outputs of the display device drive control circuit to select a particular display device. This selection is accomplished by means of the device selector. A combination of outputs from the insert data circuits is used in conjunction with the outputs of the display device drive control circuit to select a particular number on the selected display device. This selection is accomplished by means of the number selector. Thus, through the combined operations of the device selector and the number selector, the binary coded decimal values received from the computer are decoded and an equivalent decimal display is presented on the display devices.

Manual Data Subroutine

The Manual Data subroutine, which determines when data is transferred between the MDIU and the computer, is described under the Operational Program heading in the DIGITAL COMPUTER SYSTEM OPERATION part of this section.

Interfaces

The MDIU interfaces, all of which are made with the computer, are described under the Interfaces heading in the DIGITAL COMPUTER SYSTEM OPERATION part of this section.

UNCLASSIFIED

8-174

~~CONFIDENTIAL~~

UNCLASSIFIED

~~CONFIDENTIAL~~
SEDR 300



PROJECT GEMINI



INCREMENTAL VELOCITY INDICATOR

SYSTEM DESCRIPTION

Purpose

The Incremental Velocity Indicator (Figure 8-48), hereinafter referred to as the IVI, provides visual indications of incremental velocity for the longitudinal (forward-aft), lateral (left-right), and vertical (up-down) axes of the spacecraft. These indicated incremental velocities represent the amount and direction of additional velocity or thrust necessary to achieve correct orbit, and thus are added to the existing spacecraft velocities by means of the maneuver thrusters.

Performance

A three-digit decimal display device and two direction indication lamps are used to display incremental velocity for each of the three spacecraft axes. Both the lamps and the display devices can be set up either manually by rotary switches on the IVI or automatically by inputs from the computer. Then, as the maneuver thrusters correct the spacecraft velocities, pulses are received from the computer which drive the display devices toward zero. If a display device is driven beyond zero, indicating an overcorrection of the spacecraft velocity for the respective axis, the opposite direction indication lamp lights and the display device indication increases in magnitude to show a velocity error in the opposite direction.

Physical Description

The IVI is 3.25 inches high, 5.05 inches wide, and 5.89 inches deep. It weighs 3.25 pounds. The major external characteristics are summarized in the accompanying legend.

UNCLASSIFIED

8-175

~~CONFIDENTIAL~~

PROJECT GEMINI

LEGEND	
ITEM	NOMENCLATURE
①	FWD (FORWARD) DIRECTION INDICATION LAMP
②	FORWARD-AFT DISPLAY DEVICE
③	L (LEFT) DIRECTION INDICATION LAMP
④	LEFT-RIGHT DISPLAY DEVICE
⑤	R (RIGHT) DIRECTION INDICATION LAMP
⑥	UP-DOWN DISPLAY DEVICE
⑦	UP DIRECTION INDICATION LAMP
⑧	DN (DOWN) DIRECTION INDICATION LAMP
⑨	DN-UP ROTARY SWITCH
⑩	L-R ROTARY SWITCH
⑪	AFT-FWD ROTARY SWITCH
⑫	AFT DIRECTION INDICATION LAMP
⑬	IDENTIFICATION PLATE
⑭	CONNECTOR J1


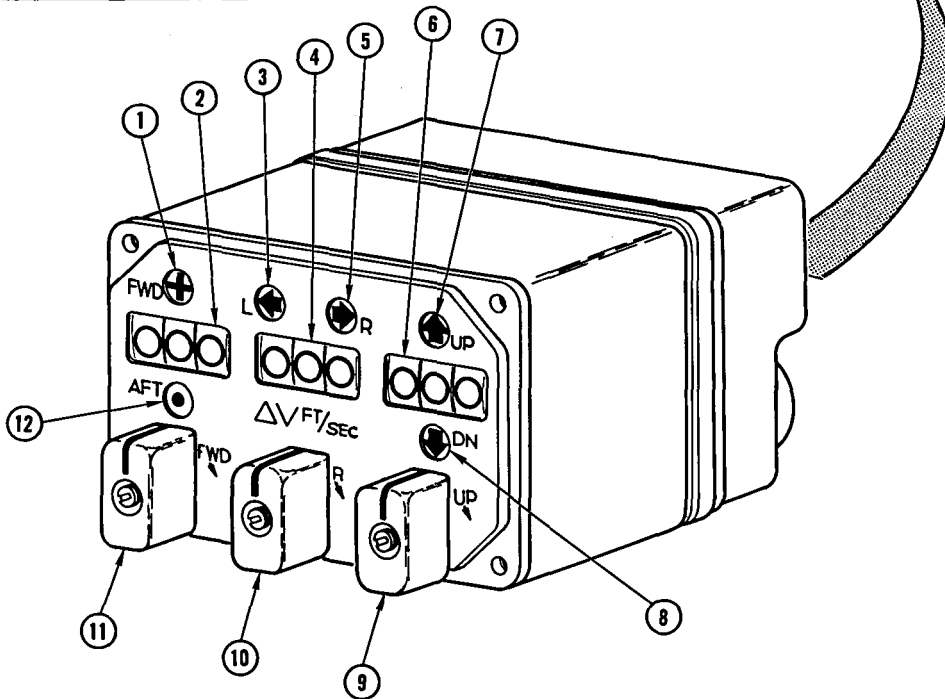


Figure 8-48 Incremental Velocity Indicator

FM2-8-48

UNCLASSIFIED

~~CONFIDENTIAL~~
SEDR 300

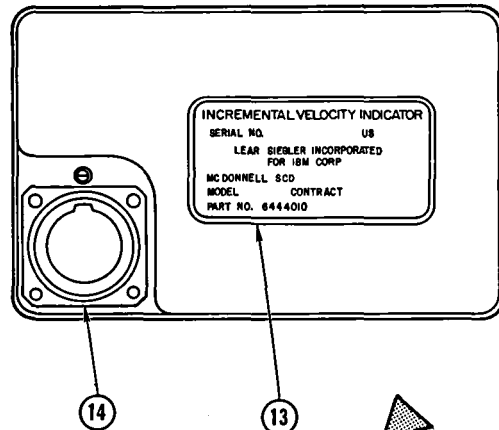

PROJECT GEMINI



Controls and Indicators

The controls and indicators located on the IVI are illustrated on Figure 8-49. The accompanying legend identifies the controls and indicators, and describes their purposes.

SYSTEM OPERATION

Power

The Power required for operation of the IVI is supplied by the IGS Power Supply whenever the computer is turned on. The power inputs are as follows:

- (a) +27.2 VDC and return
- (b) +5 VDC and return

During the first 30 seconds (or less) following the application of power, the incremental velocity counters on the IVI are automatically driven to zero. Thereafter, the IVI is capable of normal operation.

Basic Operation


The IVI includes three identical channels, each of which accepts velocity error pulses for one of the spacecraft axes and processes them for use by a decimal display device and its two associated direction indication lamps. The velocity error pulses are either received from the computer or generated within the IVI, as determined by the position of the rotary switch associated with each channel. With the spring-loaded switches in their neutral center positions, the IVI processes only the pulses received from the computer. However, rotation of the switches in either direction removes the pulses received from the computer and replaces them with pulses generated by an internal variable oscillator. These pulses are generated at a rate of one pulse per second for every 13.5 degrees

UNCLASSIFIED

8-177

~~CONFIDENTIAL~~

PROJECT GEMINI

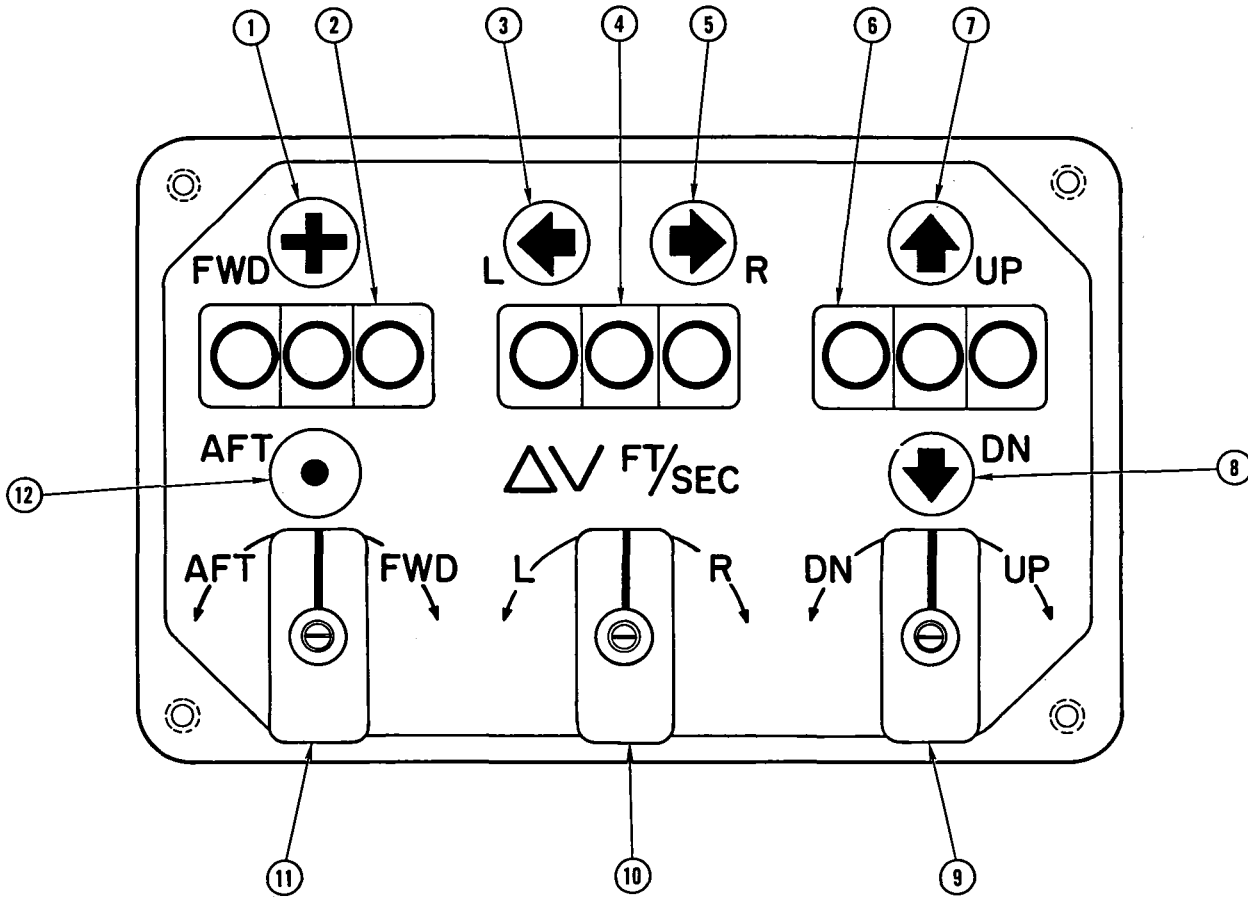

LEGEND		
ITEM	NOMENCLATURE	PURPOSE
①	FWD (FORWARD) DIRECTION INDICATION LAMP	INDICATES THAT PLUS X AXIS VELOCITY IS INSUFFICIENT.
②	FORWARD-AFT DISPLAY DEVICE	INDICATES AMOUNT OF INSUFFICIENT VELOCITY FOR PLUS OR MINUS X AXIS.
③	L (LEFT) DIRECTION INDICATION LAMP	INDICATES THAT MINUS Y AXIS VELOCITY IS INSUFFICIENT.
④	LEFT-RIGHT DISPLAY DEVICE	INDICATES AMOUNT OF INSUFFICIENT VELOCITY FOR PLUS OR MINUS Y AXIS.
⑤	R (RIGHT) DIRECTION INDICATION LAMP	INDICATES THAT PLUS Y AXIS VELOCITY IS INSUFFICIENT.
⑥	UP-DOWN DISPLAY DEVICE	INDICATES AMOUNT OF INSUFFICIENT VELOCITY FOR PLUS OR MINUS Z AXIS.
⑦	UP DIRECTION INDICATION LAMP	INDICATES THAT MINUS Z AXIS VELOCITY IS INSUFFICIENT.
⑧	DN (DOWN) DIRECTION INDICATION LAMP	INDICATES THAT PLUS Z AXIS VELOCITY IS INSUFFICIENT.
⑨	DN-UP ROTARY SWITCH	PROVIDES MEANS FOR MANUALLY SETTING UP Z AXIS VELOCITY ERROR ON UP-DOWN DISPLAY DEVICE.
⑩	L-R ROTARY SWITCH	PROVIDES MEANS FOR MANUALLY SETTING UP Y AXIS VELOCITY ERROR ON LEFT-RIGHT DISPLAY DEVICE.
⑪	AFT-FWD ROTARY SWITCH	PROVIDES MEANS FOR MANUALLY SETTING UP X AXIS VELOCITY ERROR ON FORWARD-AFT DISPLAY DEVICE.
⑫	AFT DIRECTION INDICATION LAMP	INDICATES THAT MINUS X AXIS VELOCITY IS INSUFFICIENT.

Figure 8-49 Incremental Velocity Indicator Front Panel

FM2-8-49

UNCLASSIFIED

~~CONFIDENTIAL~~
SEDR 300



PROJECT GEMINI


 


of rotation until the rate reaches 10 pulses per second. Rotation of the switches beyond the 10 pulse per second position removes the pulses generated by the variable oscillator and replaces them with pulses generated by an internal fixed oscillator. These pulses are generated at a rate of 50 pulses per second. Rotation of the switches beyond the 50 pulse per second position is limited by mechanical stops.

The first pulse received on any channel, from either the computer or one of the oscillators, causes the appropriate display device to display a count of one. Simultaneously, this same pulse causes one of the two associated direction indication lamps to light. If the pulse was received on a positive input line, a forward, right, or down direction is indicated, depending on which channel (X, Y, or Z) received the pulse; and if the pulse was received on a negative input line, an aft, left, or up direction is indicated, depending on which channel received the pulse. Each additional pulse either increases or decreases the count depending on the relationship between the sign of the existing value on the counters and the sign of the added pulse as determined by the line on which it is received. A pulse having the same sign as the existing error increases the count; conversely, a pulse having the opposite sign of the existing error decreases the count. A series of pulses having the opposite sign indicates a corrective thrusting and eventually reduces the indicated error to zero. An overcorrection, causing still more pulses, causes the count to increase again but with the opposite direction indication lamp lit.

UNCLASSIFIED

8-179
~~CONFIDENTIAL~~

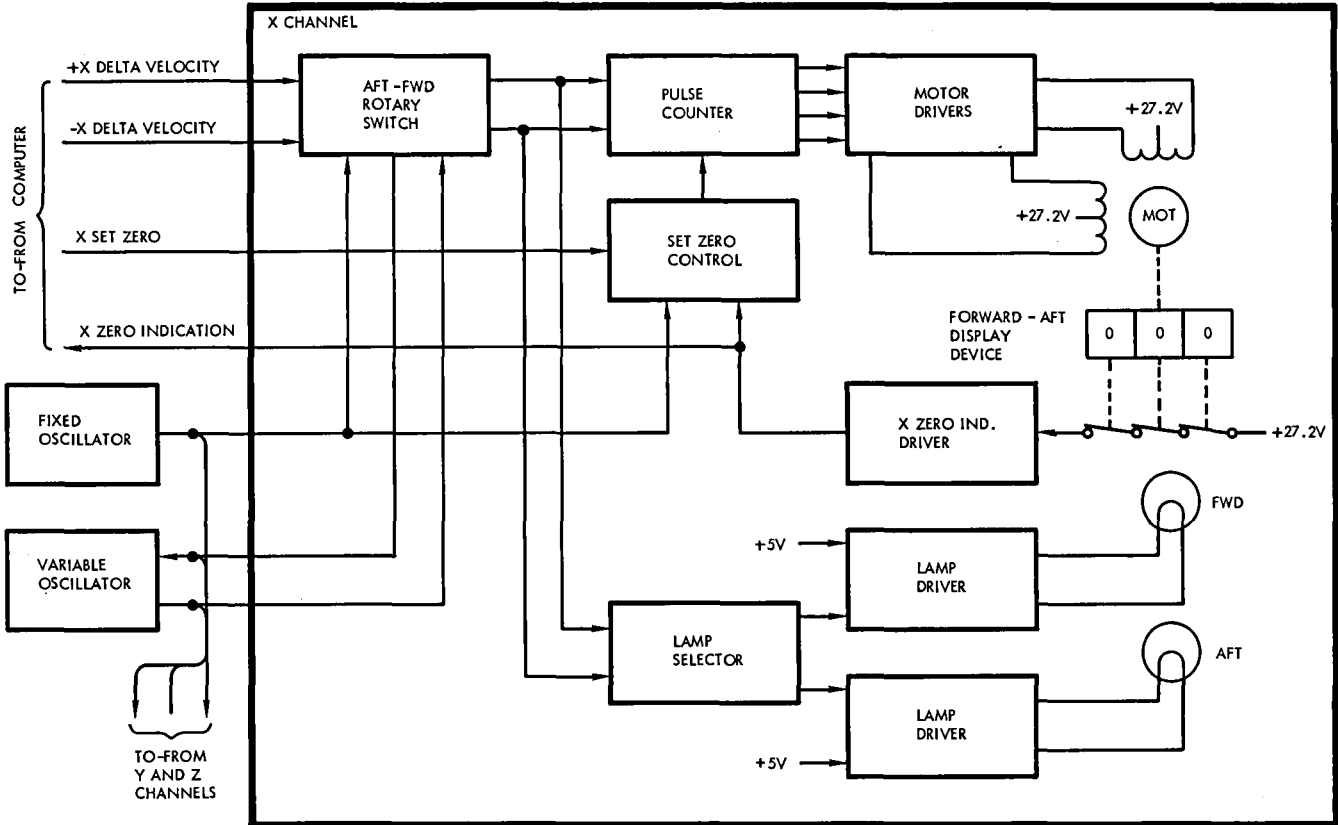

NOTE

Y AND Z CHANNELS ARE SAME AS X CHANNEL, EXCEPT Y CHANNEL CONTROLS AND INDICATORS ARE LEFT-RIGHT AND Z CHANNEL CONTROLS AND INDICATORS ARE UP-DOWN.

Figure 8-50 Incremental Velocity Indicator Data Flow

UNCLASSIFIED

~~CONFIDENTIAL~~
SEDR 300



PROJECT GEMINI



Zero Indication

As shown on Figure 8-50, three series-connected switches are operated by the Forward-Aft display device. (The same thing is true for the Y and Z channels; however, since the three channels are identical, only the X channel is shown.) When the display device indicates 000, all three switches are closed. A +27.2 VDC signal is then applied to the X zero indication driver which develops the X zero indication signal that is supplied to the computer. This signal indicates that the respective counter is at zero.

Pulse Count

Velocity error pulses are applied to the lamp selector and the pulse counter via the AFT-FWD rotary switch. If the switch is in the center position, these pulses are received from the computer on the +X delta velocity line and the -X delta velocity line. If the switch is not in the center position, the pulses are received from either the fixed oscillator or the variable oscillator. As previously explained, the oscillator that is used depends on the exact position of the switch. Regardless of the source of the pulses, the lamp selector and the pulse counter operate the same. The lamp selector determines, by means of the sign of the error, which lamp should be lit. Power is then supplied to the selected lamp via the associated lamp driver. Meanwhile, the same pulses are being processed by the pulse counter and supplied to the motor drivers. The pulse counter and the motor drivers operate in a manner that causes the motor to be driven 90 degrees for each pulse that is counted. The direction in which the motor is driven is determined by the relationship between the sign of the existing velocity error count and the sign of the added velocity error pulse. The motor drives the display device so that it changes by a count of one

UNCLASSIFIED

8-181
~~CONFIDENTIAL~~

UNCLASSIFIED

~~CONFIDENTIAL~~
SEDR 300

CONFIDENTIAL



PROJECT GEMINI



for each 90 degrees of motor rotation. Thus the display device maintains an up-to-date count of the size of the velocity error for the associated axis (in this case, the X axis), and the direction indication lamps maintain an up-to-date indication of the direction of the error.

Zero Command

The IVI counters can be individually driven to zero by means of set zero signals (X set zero, on Figure 8-50) supplied by the discrete output logic of the computer. The set zero signal is supplied to the set zero control circuit which gates the 50 pps output from the fixed oscillator into the pulse counter, provided the display device counter is not already at zero. The pulses from the fixed oscillator then drive the motor in the normal manner until the counter is zeroed. The pulses are applied in such a manner that the count always decreases, regardless of the initial value.

Interfaces

The IVI interfaces, which are made with the computer and the IGS Power Supply, are described under the Interfaces heading in the DIGITAL COMPUTER SYSTEM OPERATION part of this section.

UNCLASSIFIED

8-182
~~CONFIDENTIAL~~

CONFIDENTIAL

HORIZON SENSOR SYSTEM

TABLE OF CONTENTS



TITLE	PAGE
SYSTEM DESCRIPTION	8-185
SENSOR HEAD	8-185
ELECTRONICS PACKAGE	8-186
SYSTEM OPERATION	8-189
GENERAL	8-189
TRACK LOOP	8-190
SIGNAL PROCESSING LOOP	8-195
AZIMUTH DRIVE LOOP	8-195
SEARCH MODE	8-196
TRACK MODE	8-199
AZIMUTH DRIVE	8-206
AZIMUTH CONTROL	8-207
HORIZON SENSOR POWER	8-208
SYSTEM UNITS	8-209
POSITOR	8-209
BOLOMETER	8-209

UNCLASSIFIED


~~CONFIDENTIAL~~
SEDR 300



 
PROJECT GEMINI

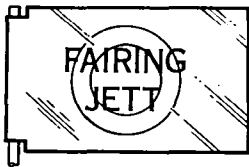

DETAIL A

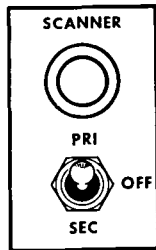

DETAIL B

 

DETAIL C

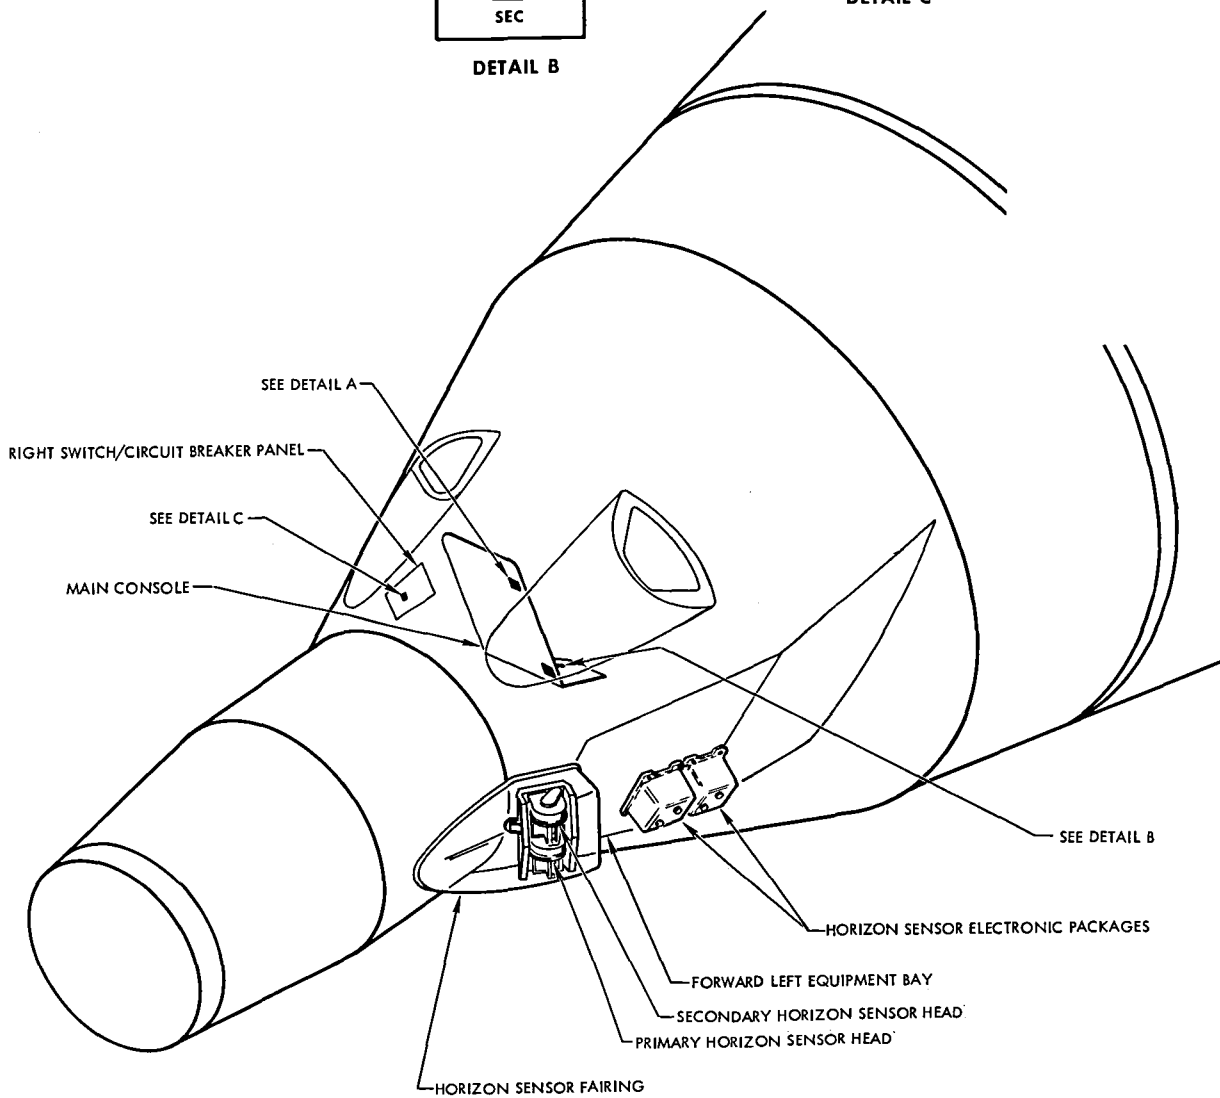


Figure 8-51 Horizon Sensor System

8-184

FM2-8-50

UNCLASSIFIED

~~CONFIDENTIAL~~

CONFIDENTIAL

UNCLASSIFIED

~~CONFIDENTIAL~~
SEDR 300



PROJECT GEMINI



HORIZON SENSOR SYSTEM

SYSTEM DESCRIPTION

The Horizon Sensor System (Figure 8-51) provides electrical outputs as a function of spacecraft pitch and roll attitude with respect to the earth local vertical. Resulting electrical outputs can be used by the Attitude Control and Maneuvering Electronics (ACME) for long term orbit stabilization or can be used to align the Inertial Measuring Unit (IMU).

Two Horizon Sensor Systems are installed on the spacecraft. One system is in non-operating reserve while the other is in use. A system consists of a sensor head and an electronics package. Each system has a volume of approximately 235 cubic inches and weighs approximately 11.0 pounds. The system has a null accuracy of 0.1 degree and is capable of operating at altitudes of 50 to 900 nautical miles. When the system is operated at an altitude between 50 and 550 nautical miles, the measurable pitch and roll attitude error is ± 14 degrees. When attitude errors are 14 to 20 degrees, the horizon sensor output becomes non-linear and rises with increasing spacecraft attitude deviation.

26V, 400 CPS input power for the sensor system is provided by either the ACME or IGS inverter (depending on the position of the AC POWER selector). The average current drain on the power inverter is approximately 0.5 ampere.

SENSOR HEAD

The sensor heads are mounted on the left side of the spacecraft (Figure 8-51). The shape of the spacecraft requires that the heads be canted 14 degrees forward of the spacecraft pitch axis. The sensor heads are constructed from magnesium

UNCLASSIFIED

8-185

~~CONFIDENTIAL~~

UNCLASSIFIED

~~CONFIDENTIAL~~
SEDR 300

CONFIDENTIAL



PROJECT GEMINI



castings. A dust proof thermal fairing is installed over the sensor heads to prevent accidental ground damage and thermal damage during launch.

The sensor head (Figure 8-52) contains a positor, a fixed mirror, a telescope filter assembly, a bolometer, a bolometer power filter, a signal preamplifier and a position detector. Positor is the manufacturer's name for a mirror positioning assembly which is forced to oscillate about its own pitch axis. This type of motion is called dithering.

The sensor head contains the electro-mechanical components which allow the sensor system to position the positor mirror about the earth's horizon and rotate the sensor line-of-sight ± 80 degrees in azimuth. (The azimuth rotation is about the center-line of the positor mirror.) The head converts optical information into an electrical signal and couples this signal to the electronics package.

ELECTRONICS PACKAGE

The Electronics Package (Figure 8-53) is mounted in the left equipment bay of the spacecraft (Figure 8-51). The package contains transistorized analog amplifiers, phase detectors, multivibrators and associated circuitry used to position the positor and azimuth yoke. It also contains power supplies and voltage regulators. The package maintains positor tracking about the earth horizon and converts modulated error signals into individual pitch and roll DC error signals. Circuits are made in modular form and potted in epoxy for thermal conductivity and protection.

UNCLASSIFIED

8-186

~~CONFIDENTIAL~~

CONFIDENTIAL

UNCLASSIFIED

~~CONFIDENTIAL~~
SEDR 300

PROJECT GEMINI

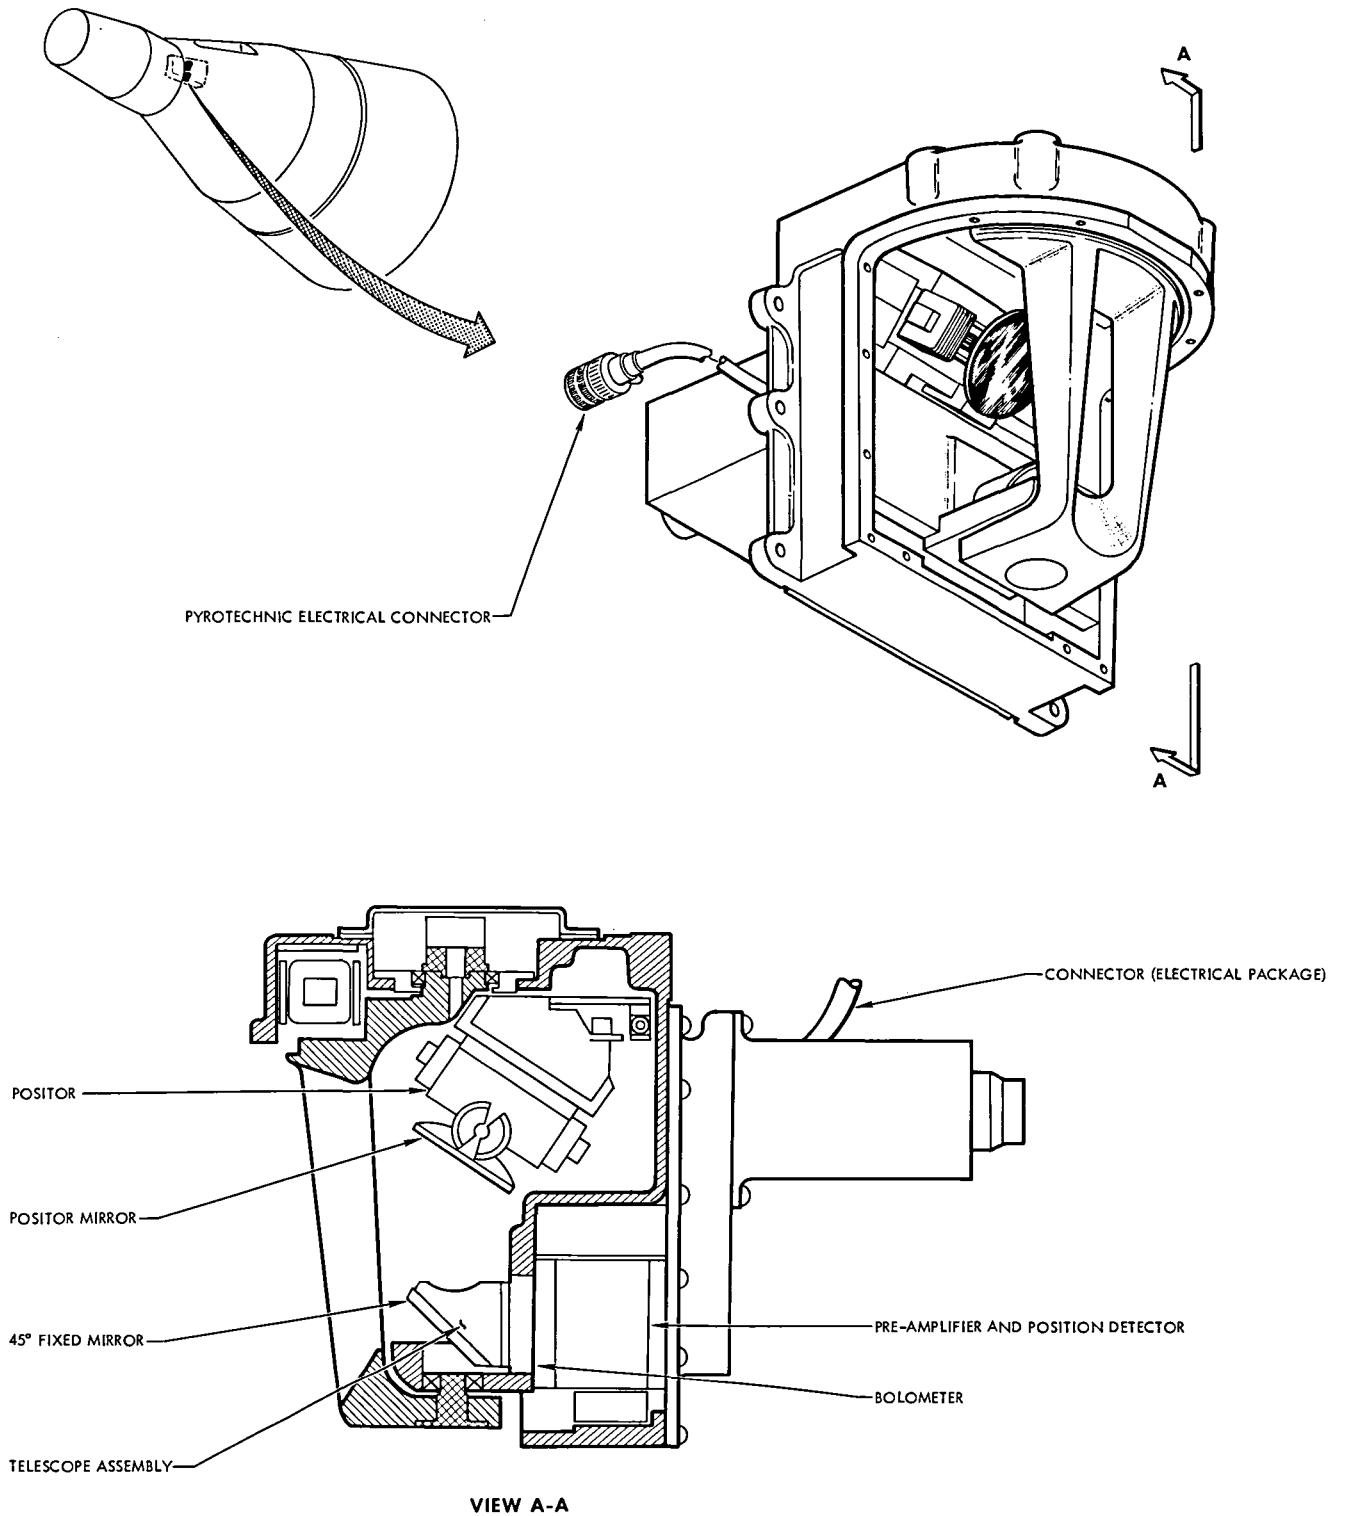
 


Figure 8-52 Horizon Sensor Scanner Head

8-187

UNCLASSIFIED

~~CONFIDENTIAL~~

UNCLASSIFIED

~~CONFIDENTIAL~~
SEDR 300

PROJECT GEMINI

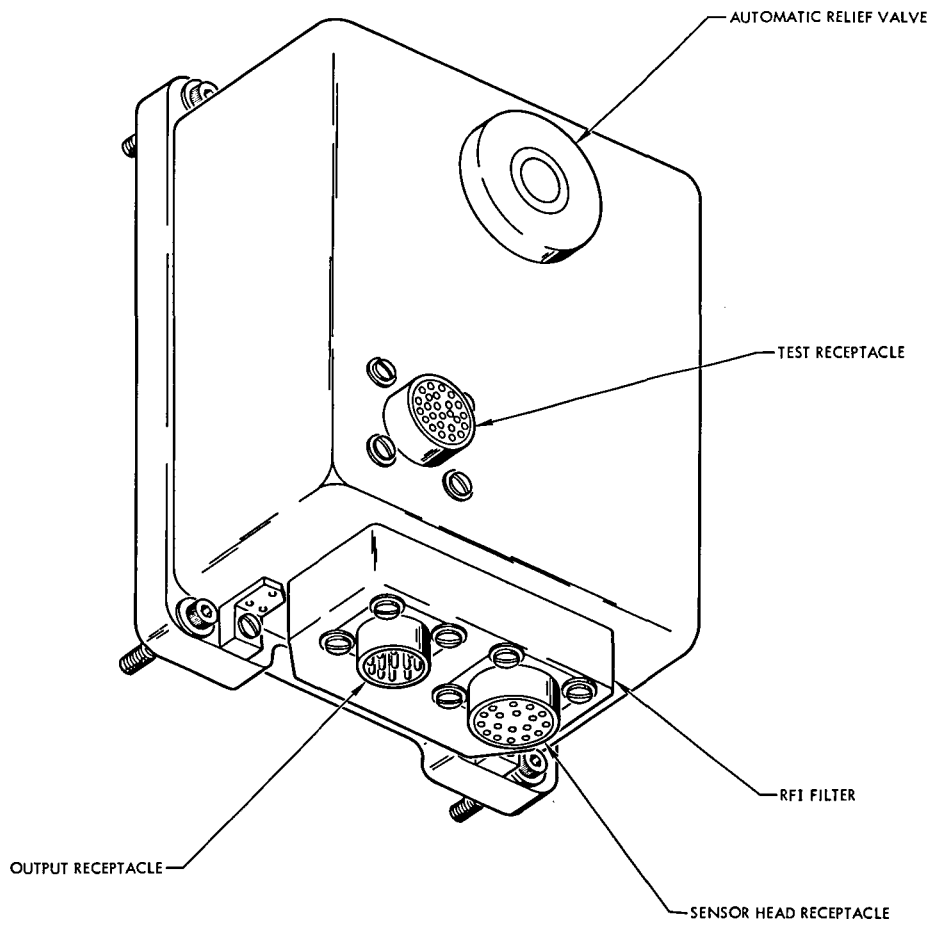
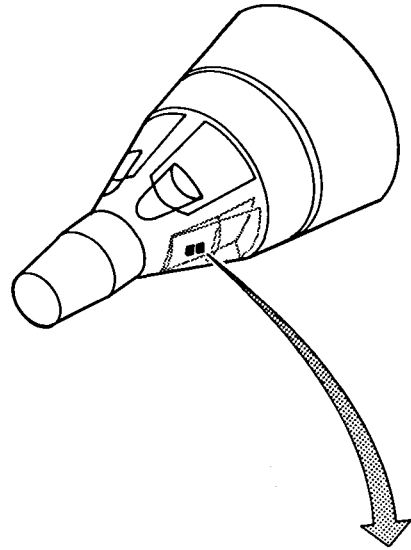
 


Figure 8-53 Horizon Sensor Electronic Package

FMG-64A

UNCLASSIFIED

8-188

 
~~CONFIDENTIAL~~

UNCLASSIFIED

~~CONFIDENTIAL~~
SEDR 300



PROJECT GEMINI



SYSTEM OPERATION

GENERAL

The Primary Horizon Sensor System is energized during the prelaunch phase of the mission by pilot initiation of the SCAN HTR switch and PRI-OFF-SEC switch.

Although the SCAN HTR switch must be on for the system to function, the sensor heater is thermostatically controlled and will not operate until the temperature drops to approximately 10°F.

Immediately after staging, the pilot depresses the FAIRING JETT switch, to jettison the sensor fairing from the spacecraft. During the orbital phase of the mission, the pilot can select the horizon sensor for automatic pitch and roll attitude control by rotating the ATTITUDE CONTROL switch to the HOR SCAN position. Initial acquisition time (the period required for the sensor to acquire the horizon once power is on) is approximately 120 seconds; reacquisition time is approximately 2 seconds.

While in the automatic attitude control mode (HOR SCAN) of ACME, the horizon sensor system will provide an attitude error signal to the ACME. The ACME will use the error signals to align the spacecraft. Each time spacecraft reaches an attitude limit ($\pm 5^\circ$ in roll or 0° and -10° in pitch) the ACME will initiate a correction thrust. In between limits, the spacecraft is allowed to drift. The signals can also be used by the IMU to align the platform gimbals. With the PLATFORM switch in either the SEF or BEF position and the horizon sensor "locked on", the sensor output will be used by the platform for alignment.

Loss of track, will result in illumination of the SCANNER light (Figure 8-51). If the spacecraft attitude error in pitch and roll is less than ± 20 degrees and the

UNCLASSIFIED

8-189

~~CONFIDENTIAL~~

UNCLASSIFIED

~~CONFIDENTIAL~~
SEDR 300



PROJECT GEMINI



SCANNER light remains on for more than 3 minutes, the secondary sensor system should be selected.

The sensor heads are automatically jettisoned 80 milliseconds after retro section separation, rendering the system inoperable.

The Horizon Sensor System consists of three major loops of operation, which are the track loop, signal processing loop and the azimuth drive loop.

TRACK LOOP

The Track Loop is a closed nonlinear servo system. The system is dependent on mechanical motion of the positor and the detected infrared signal.

Infrared Detection

Operation of the horizon sensor depends upon infrared radiation received from the earth as compared to the essentially zero radiation from space. These differences in radiation levels provide a sharp radiation discontinuity at the horizon. The sensor system uses this discontinuity for both day and night sensing.

Radiation from the earth is reflected from the positor mounted mirror to a fixed mirror then to a telescope-filter assembly. These components are situated, along with the positor, in the sensor head.

The telescope field of view is approximately 1.5 degrees, but the angular motion of the azimuth yoke permits this field to be deflected through 160 degrees azimuth and the elevation motion of the positor allows it to swing through 70 degrees about the horizon sensor pitch axis. At the focal point of the telescope is a thermistor bolometer detector (Figure 8-54). The bolometer converts the varying radiation intensities into proportional electrical signals. As the line of sight

UNCLASSIFIED

8-190

~~CONFIDENTIAL~~

PROJECT GEMINI

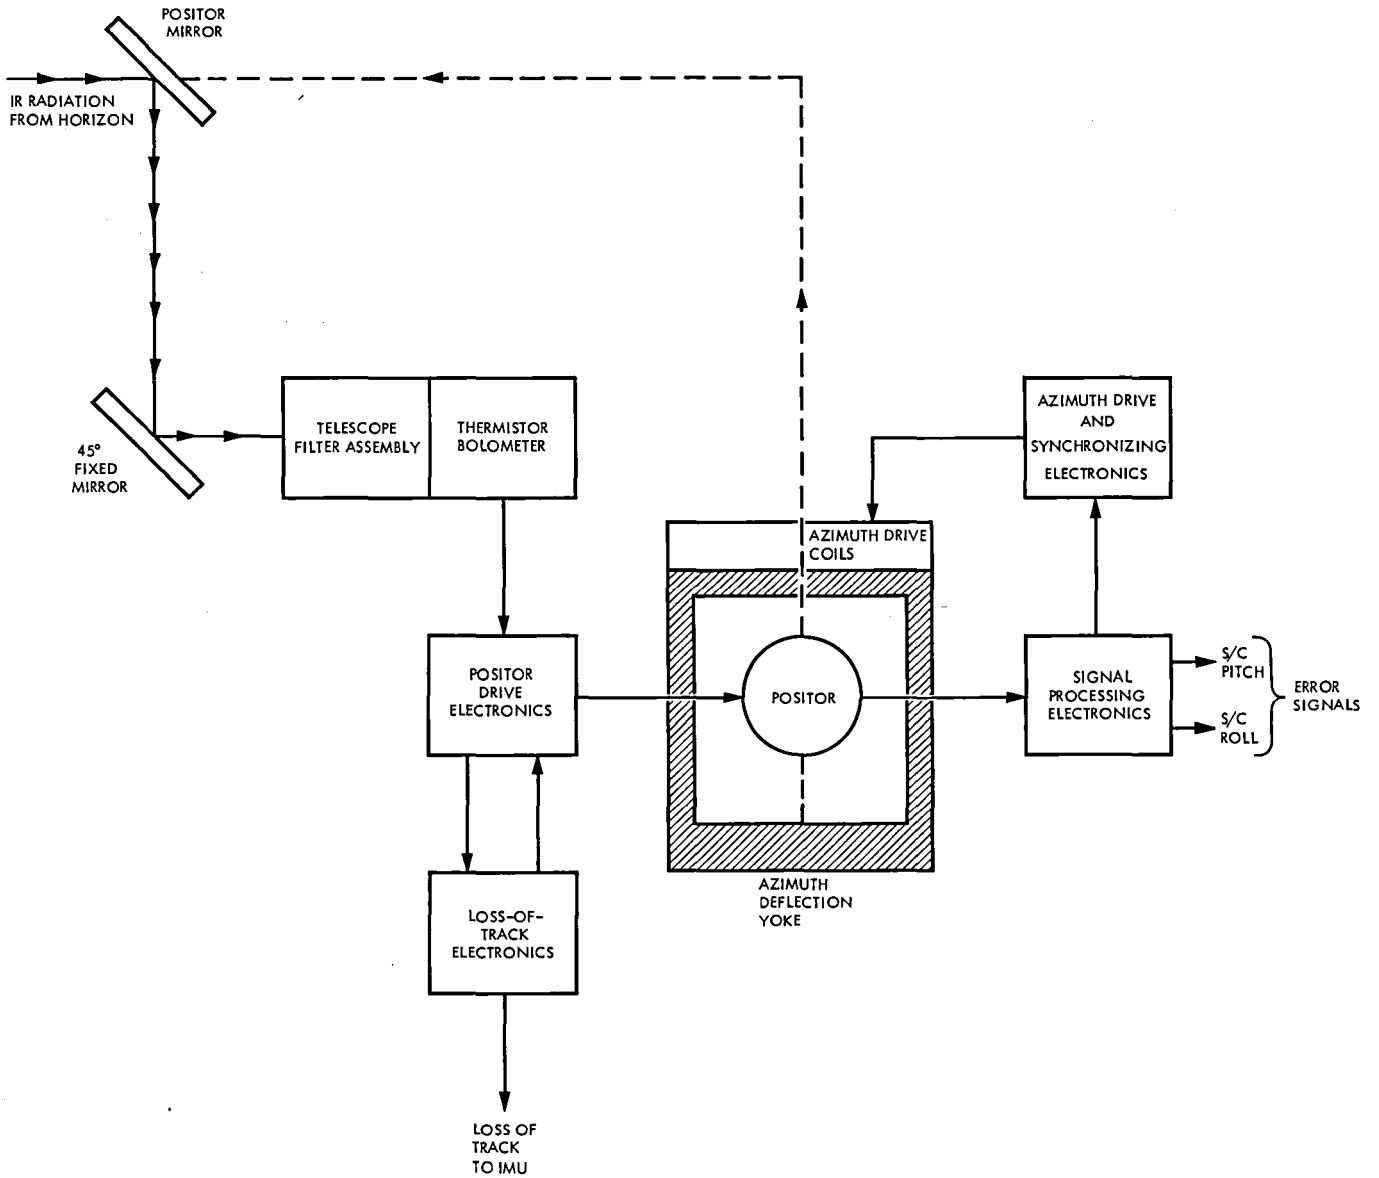


Figure 8-54 Horizon Sensor Functional Block Diagram


FM2-8-53

UNCLASSIFIED

~~CONFIDENTIAL~~
SEDR 300



 PROJECT GEMINI



of the positor mirror crosses the horizon from space to earth, a distinct increase in infrared radiation is sensed by the thermistor bolometer. (The bolometer is one leg of a bridge circuit.) The bridge output signal, a 30 cps square wave which is a result of 30 cycle dither, is coupled to the signal preamplifier then to the electronics package for further processing.

Positor Drive Electronics

The Positor Drive Electronics is used to drive the positor about the earth horizon and to initiate pitch and roll attitude error signals. (Figure 8-54)

Loss of Track Electronics

If the horizon sensor system loses track of the earth infrared horizon, the Loss of Track Electronics switches the system to the search mode, disconnects the position detector electronics from the signal processing electronics and connects a 28 VDC loss of track signal from the spacecraft DC bus to the IMU and ACME.

Positor

The positor functions to: (1) position the field of view of the position mirror about the horizon and (2) initiate a pitch and/or roll modulated electrical output signal by electro-mechanical operation.

In the tracking mode of operation, with the earth horizon in the field of view of the positor, the positor will dither above and below the horizon with a total amplitude of 4 degrees at a 30 cps rate.

In the search mode of operation, with an absence of earth horizon in the field of view, the positor will pass through a vertical angle of approximately 12 degrees above to 58 degrees below the spacecraft azimuth plane at a rate of approximately 0.5 cps.

UNCLASSIFIED

8-192

~~CONFIDENTIAL~~

UNCLASSIFIED

~~CONFIDENTIAL~~
SEDR 300



PROJECT GEMINI



In both modes of operation the positor drives through an azimuth angle of 160 degrees at a 1 cps rate.

Edge Track Technique

The Edge-Tracking technique incorporated in the horizon sensor system is based on the polar coordinate system. The instantaneous azimuth angle is represented in Figure 8-55 by angle ϕ . The instantaneous elevation angle is represented by angle θ . When the spacecraft is level (yaw axis extension corresponding to the local vertical) the elevation angle θ will remain constant throughout the 160 degree azimuth scan. When the spacecraft rotates about its pitch or roll axis, angle θ will change as the azimuth scan angle ϕ changes.

If the spacecraft rotates in a positive (pitch up) direction, angle θ will decrease as angle ϕ approaches 80 degrees forward. Angle θ will increase when the azimuth angle ϕ moves from 80 degrees forward to 80 degrees aft. A 1 cps pitch error signal is obtained by taking an average of the instantaneous horizon sensor elevation angles (θ), as the azimuth angle (ϕ) oscillates at 1 cps.

The average of an infinite number of instantaneous horizon sensor elevation angles is the horizon angle. If the spacecraft rotates in a negative (pitch down) direction about the pitch axis, a 1 cps pitch error signal, phase shifted 180 degrees from the positive pitch signal, will result.

If the spacecraft is rolled in a positive (roll right) direction, angle θ will decrease as the azimuth scan angle ϕ approaches either scan limit. Angle θ will increase as the azimuth scan angle ϕ approaches zero from either limit. A 2 cps roll error signal is obtained by taking an average of the instantaneous

UNCLASSIFIED

8-193
~~CONFIDENTIAL~~

UNCLASSIFIED

~~CONFIDENTIAL~~
SEDR 300



PROJECT GEMINI

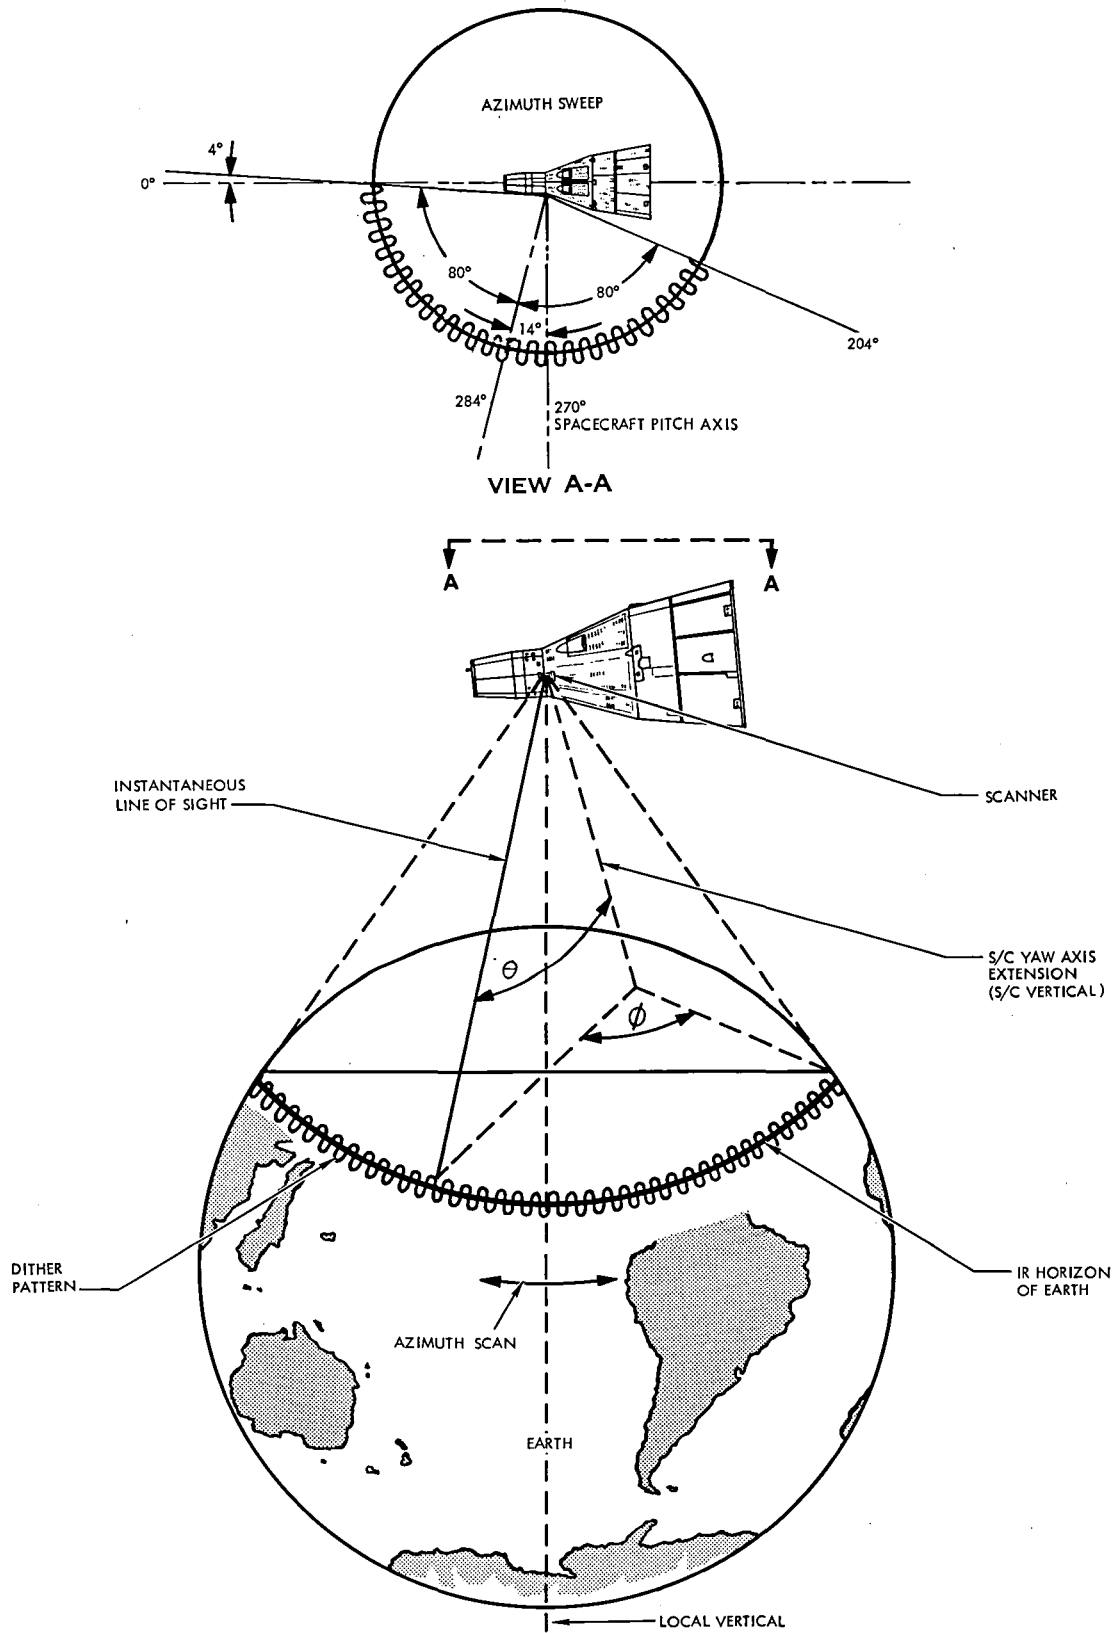
 


Figure 8-55 Horizon Sensor Tracking Geometry

8-194

FM 2-10-53

UNCLASSIFIED

 
~~CONFIDENTIAL~~

UNCLASSIFIED

~~CONFIDENTIAL~~
SEDR 300



PROJECT GEMINI



elevation angles θ , as the azimuth scan angle changes.

If the spacecraft is rotated in a roll left direction, a 2 cps signal phase shifted 180 degrees from the roll right signal will result.

If the spacecraft is rotated about the horizon sensor pitch and roll axes simultaneously, a composite 1 and 2 cps error signal will result.

The position of the positor mirror as it tracks the horizon, from a horizontal spacecraft altitude is as follows: At 900 nautical miles the mirror angle is $52^{\circ} 27'$ down from the spacecraft azimuth plane. At 150 nautical miles, the mirror angle is $16^{\circ} 37'$ down from the spacecraft azimuth plane. At 50 nautical miles the mirror angle is $9^{\circ} 32'$ down from the spacecraft azimuth plane.

SIGNAL PROCESSING LOOP

Signal Processing Electronics

The positor position signal yields one cycle pitch and two cycle roll error outputs which are processed by the signal processing electronics. The signal processing electronics contains signal phase detectors synchronized to 3 angles on the azimuth sweep. The pitch and roll outputs of the phase detectors are cross-coupled to compensate for the 14 degree azimuth alignment offset in mounting the sensor heads on the spacecraft.

AZIMUTH DRIVE LOOP

Azimuth Drive and Synchronizing Electronics

UNCLASSIFIED

8-195

 
~~CONFIDENTIAL~~

UNCLASSIFIED

~~CONFIDENTIAL~~
SEDR 300



PROJECT GEMINI



The azimuth drive and synchronizing electronics generates the azimuth yoke drive voltage, senses the yoke azimuth limits, and provides switching to reverse the drive. The yoke mass is adjusted to give it a natural frequency of 1 cps.

SEARCH MODE (Refer to Figure 8-56.)

When the horizon is absent from the field of view, as when the system is first energized, the system will automatically revert to the search mode of operation.

Since the amount of infrared radiation focused on the thermistor is virtually zero, the bolometer detector output signal will be zero. As a result, no input signal will be provided to the track check and interlock circuitry (Figure 8-56). With no 30 cps signal to bring the track check relay actuator stage into conduction, the track check relay will remain de-energized. As a result, any spurious attitude error signals which might exist in the track circuitry will not be coupled to the pitch and roll error amplifiers.

The last stage of the interlock circuit will conduct, close a relay, and result in illumination of the instrument panel SCANNER lamp.


During the search mode of operation, the low amplitude position detector output signal is coupled to the interlock circuit first stage, which is electrically at cutoff. This signal is sufficient to drive the first and second stages of the interlock circuit into conduction, thus generating the "search voltage."

The leading edge of the search signal, interlock output (B), is applied to the

UNCLASSIFIED

8-196

~~CONFIDENTIAL~~

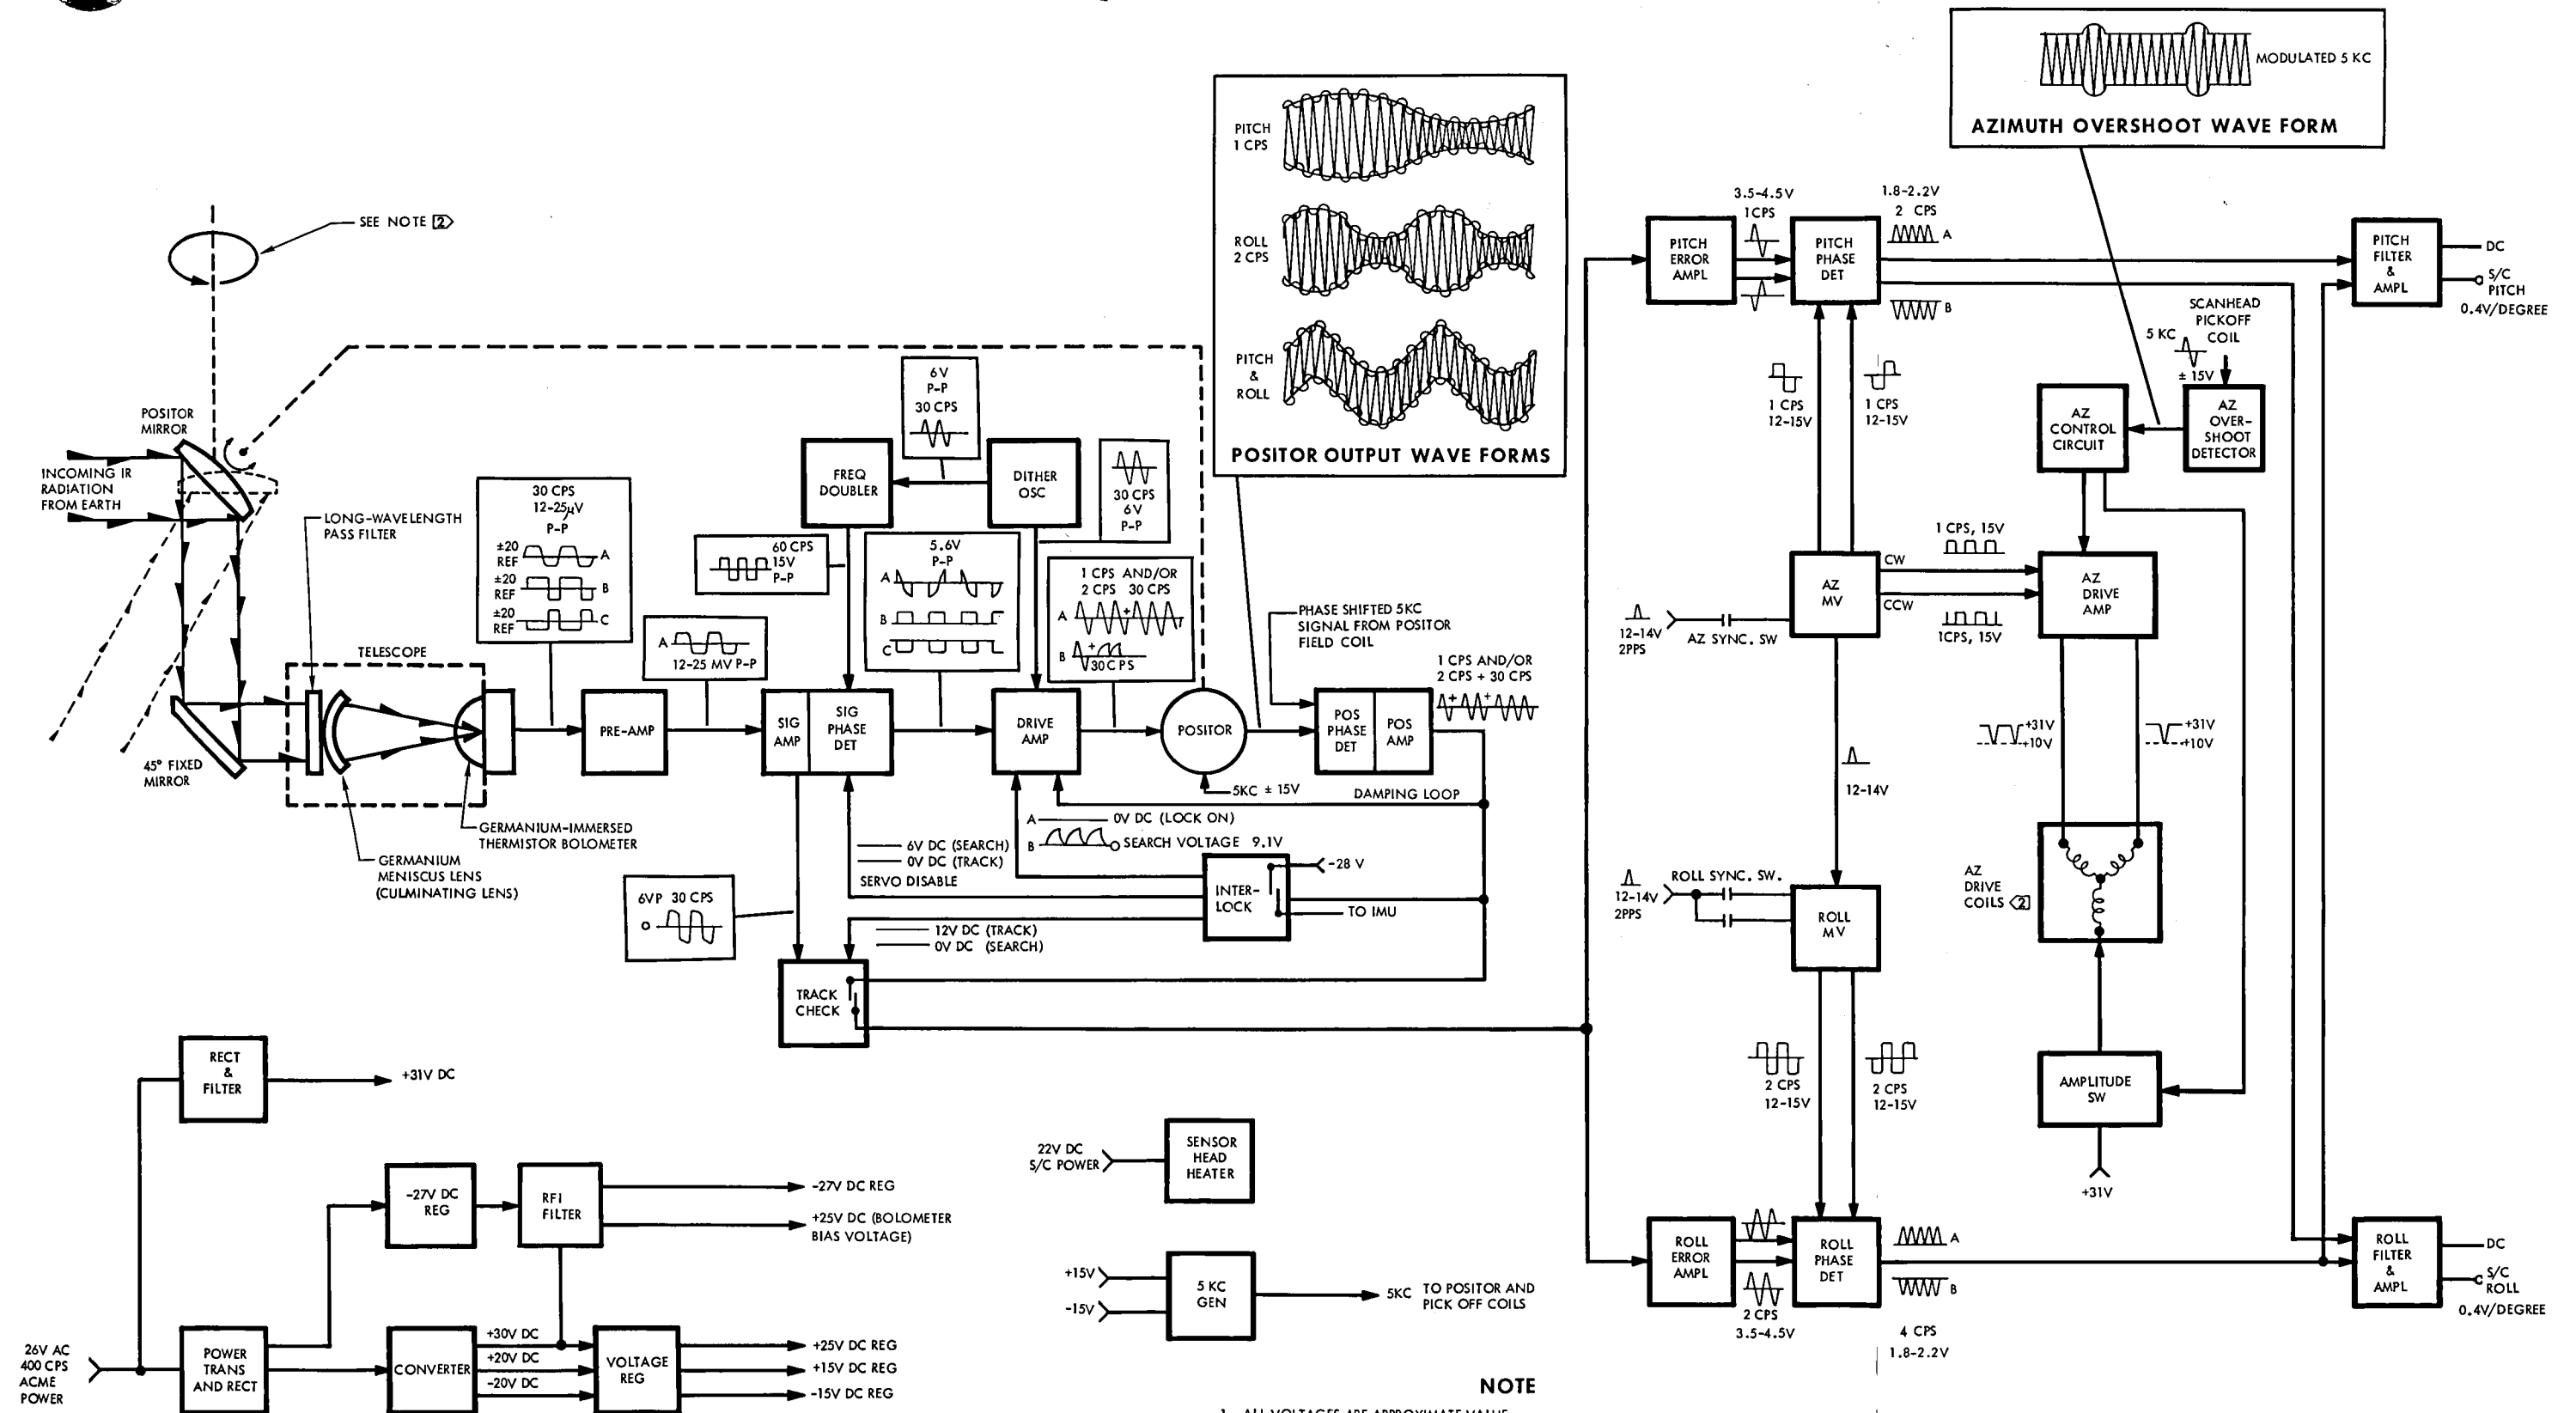

NOTE
 1. ALL VOLTAGES ARE APPROXIMATE VALUE.
 2. THE POSITOR IS MOUNTED IN A YOKE ASSEMBLY WHICH ROTATES ABOUT THE CENTER LINE OF THE POSITOR MIRROR. THE YOKE ASSEMBLY IS ROTATED BY THE AZIMUTH DRIVE COILS.

Figure 8-56 Horizon Sensor Signal Flow Block Diagram

UNCLASSIFIED

~~CONFIDENTIAL~~
SEDR 300



PROJECT GEMINI



drive amplifier which has integrating amplifier characteristics. The drive amplifier output signal (B) will drive the positor line-of-sight from earth to space with a vertical scan angle of 12 degrees above the spacecraft azimuth plane.

When the interlock output signal increases to approximately 9 volts, an interlock zener diode conducts, decreasing the interlock output signal. A decrease in the position detector feedback signal will result which will bias the first interlock stage into cutoff. Consequently the interlock output signal decreases causing an exponential decrease in the drive amplifier output signal. This portion of the drive amplifier signal will drive the positor line-of-sight from space to earth with a vertical scan angle of 58 degrees below the spacecraft azimuth plane and a 0.5 cps search rate.

When the positor is scanning from earth to space from below the spacecraft's azimuth plane, the second stage of the Interlock circuit gates out the signal phase detector. This prevents the detector from coupling any false infrared gradients signals to the drive amplifier.

When the positor field of view crosses the earth's horizon, scanning from space to earth, the signal voltage from the bolometer detector is coupled via the amplifiers to the track check circuitry. The track check relay is energized and the interlock circuit is biased into cutoff, resulting in a zero output signal. As a result of positor dithering (30 cps signal), bolometer detection and the development of a drive signal, the sensor system acquires and "locks on" the earth horizon.

UNCLASSIFIED

8-198

~~CONFIDENTIAL~~

UNCLASSIFIED

~~CONFIDENTIAL~~
SEDR 300

CONFIDENTIAL



PROJECT GEMINI



TRACK MODE (Refer to Figure 8-56.)

Servo System

The infrared radiation from the earth horizon is reflected from the positor mirror to the fixed mirror to a telescope filter assembly. The fixed mirror is inclined at a 45 degree angle to receive radiation while the positor is scanning.

The radiated energy is filtered and then culminated from a width of 3 degrees to the field of view of the telescope, which is 1.5 degrees. Culmination is a result of passing the radiated energy through a mylar coated germanium objective lens.

To reduce cold cloud noise and to receive maximum bolometer detector sensitivity a narrow infrared pass band is used. The mylar coating on the objective lens forms a filter with infrared frequency limits of 8 to 18 microns peaked at 13.

At the focal point of the telescope is a bolometer detector consisting of two thermistors. One thermistor is exposed and one is shielded from the infrared radiation. The reflected radiation intensity varies in synchronization with the positor dither rate of 30 cps. The reaction of the exposed thermistor to infrared radiation unbalances the bridge network and converts the alternating radiation intensity into a usable electrical AC signal which is coupled to the preamplifier.

The dither oscillator generates the 30 cps signal which is used by the drive amplifier to drive the positor about the earth horizon with an amplitude of 4 degrees and a rate of 30 cps. When the dither angle includes the earth infrared gradient, the bolometer detector output signal will be that shown in Figure 8-56A.

UNCLASSIFIED

8-199

~~CONFIDENTIAL~~

UNCLASSIFIED

~~CONFIDENTIAL~~
SEDR 300



PROJECT GEMINI



When an error signal results from spacecraft motion about the pitch and/or roll axis, the bolometer detector output signal will be represented by waveform B for positive spacecraft attitude and by waveform C for negative spacecraft attitude. The amplitude of the bolometer detected output signal will be 0 for a temperature gradient of 0 degrees Kelvin (space), 15 to 16 microvolts for a temperature gradient of 160 degrees Kelvin (space), coldest cloud; and approximately 25 microvolts for a temperature gradient of 200 degrees Kelvin (earth).

The signal preamplifier and the signal amplifier increase the level of the 30 cps bridge output signal. The signal amplifier is stabilized by an internal feedback circuit. The output of the signal amplifier, a 30 cps square wave, is coupled to the signal phase detector and the track check circuit.

The input signal to the track check circuit is rectified and used to bring the first amplifier stage, a relay actuator driver, out of cutoff. This provides 10 to 12 volts cutoff bias to the interlock circuit. When the relay driver conducts, a relay is energized allowing the attitude error signal from the position detector to be coupled to the pitch and roll error amplifiers and the interlock circuit. The attitude error signal amplitude is approximately 14 VDC, the interlock circuit is biased to cutoff and the output is zero. (Figure 8-56, interlock output A.) While in the track mode, the interlock circuit permits the drive amplifier to operate as a DC amplifier and the signal phase detector to operate through its entire positive and negative cycle.

The dither signal, a 30 cps sinusoid, is used to dither the position mirror. The

UNCLASSIFIED

8-200

~~CONFIDENTIAL~~



PROJECT GEMINI



dither oscillator incorporates regenerative feedback and the 30 cps output frequency is regulated to within ± 3.4 cps by a control circuit. The output signal of the dither oscillator (Figure 8-56) is coupled to the drive amplifier and the frequency doubler.

The signal phase detector is a half-wave detector referenced to the second harmonic of the 30 cps track signal. The signal phase detector uses the second harmonic (60 cps) reference signal to detect each alternation of the track signal for pulse width variations and supply the proper drive signal to the drive amplifier. The detector consists of a zener diode and a transistor biased into and out of conduction by the 60 cps detector signal.

If the 30 cps track signal is symmetrical, bolometer output signal A, the second harmonic error signal will be zero and the detector output will be represented by waveform A. If the track signal is not symmetrical, bolometer output B or C, the output of the phase detector will be a positive (B) or negative (C) signal (depending on spacecraft attitude) varying at a 1 and/or 2 cps rate.

The output signals from the dither oscillator, position amplifier, and signal phase detector are coupled to the drive amplifier.

 
The track signal from the signal phase detector is coupled through a compensation network and stabilized by negative feedback from the position detector. The dither signal and the track signal A, B or C are then summed, amplified, and coupled to the positor.

UNCLASSIFIED

~~CONFIDENTIAL~~
SEDR 300



PROJECT GEMINI



The electromagnetic drive circuit of the positor utilizes a permanent magnet, rotor coil, and two position pickoff coils wound series opposing. The dither, search and spacecraft pitch and/or roll error signals are coupled from the positor drive amplifier to the rotor coil of the positor. A field current generator provides the rotor coil with a 5 KC excitation signal and an isolation network prevents reverse coupling of this signal to the drive amplifier. When the spacecraft is properly aligned about its pitch and roll axis the angle of magnetic coupling between the rotor and the permanent magnet will be constant.

When the spacecraft rotates about the pitch and roll axis, the bolometer detector output signal will be waveform B or C. As a result of phase detection a second harmonic error signal, B or C varying at a 1 and/or 2 cycle rate, will drive the positor back toward the earth's horizon. When this occurs, the bolometer output signal becomes nearly symmetrical (A) and the second harmonic error signal will decrease. The bolometer output signal pulse width, however, will vary at a 1 and/or 2 cycle rate until the spacecraft pitch and/or roll attitude error is reduced to zero.

The attitude error signals are coupled from the drive amplifier to the rotor coil on the positor yoke assembly. Mechanical motion of the positor as it tracks the horizon, changes the magnetic coupling between the rotor coil and the permanent magnet. As a result, the attitude error signal, a 5 KC excitation signal and the 30 cps dither signal are induced into a position pickoff coil. Which position pickoff coil is used and the direction of rotor rotation depends on spacecraft attitude. The output signal of the positor which is coupled to

UNCLASSIFIED

8-202
~~CONFIDENTIAL~~

UNCLASSIFIED

~~CONFIDENTIAL~~
SEDR 300



PROJECT GEMINI



the position phase detector, is a composite signal consisting of a 5 KC signal, a 1 and/or 2 cps signal and a 30 cps signal. (Figure 8-56)

Signal Processing System

The position phase detector compares the phase of the position pickoff coil signal to the 5 KC excitation signal and produces an output proportional to the phase difference. The detector output is a composite 1 and/or 2 cycle error signal and 30 cps dither signal, the phase of which is dependent on the direction of positor rotation. The amplitude of the detected error signal will be directly proportional to the amount of positor rotation.

These signals are then amplified to a level suitable for application to the pitch and roll error amplifiers by the position amplifier. The attitude error output signals from the position amplifier consist primarily of pitch and/or roll signals. In order to obtain individual pitch and roll outputs, error signal separation must be accomplished. This is the function of the pitch and roll error amplifiers, which are tuned to 1 and 2 cps respectively.

Due to the different resonant frequencies of the tuned circuits in the amplifiers, the pitch error amplifier will only accept 1 cps signal while the roll amplifier will only accept 2 cps signals. From the tuned circuits the pitch and roll error signals are rectified, amplified and phase inverted.

The pitch error amplifier output signal is either zero, in the case of zero pitch error or two 1 cps out-of-phase sinusoidal signals in the case of spacecraft attitude deviation about the horizon sensor pitch axis.

UNCLASSIFIED

8-203

~~CONFIDENTIAL~~

 
UNCLASSIFIED

~~CONFIDENTIAL~~
SEDR 300

CONFIDENTIAL



PROJECT GEMINI



The roll error amplifier output signal is either zero, in the case of zero roll error, or two 2 cps out-of-phase sinusoidal signals in the case of spacecraft attitude deviation about the horizon sensor roll axis. The pitch and/or roll error signals are then phase detected by phase detectors.

The pitch and roll phase detectors are full wave demodulators. The detectors consist of two reed relays which are energized alternately by the azimuth and roll multivibrators at a 1 and 2 cps rate respectively.

When a horizon sensor pitch error exists, the detector input signal will consist of two out-of-phase 1 cps sinusoidal signals. The detector will demodulate the input signal and supply a positive (A) and negative (B) full wave rectified 2 cps output signal proportional to spacecraft motion about the horizon sensor pitch axis.

When a roll error exists, the output signal from the roll detector will be a positive (A) and negative (B) full wave rectified 4 cps signal.

Since the azimuth multivibrator switches states at 1 cps to maintain the 160 degree scan pattern, the reed relays will be alternately energized whether or not a pitch error signal is present at the input. This also applies to the roll detector, except that the switching frequency is 2 cps.

The roll phase detector is controlled by the roll multivibrator. The roll multivibrator is triggered into conduction by a 12-14V position sync pulse originating from the roll sync switch. The roll sync switch initiates an output pulse at the rate of 2 pulses per second, which is a direct result of the yoke assembly passing

UNCLASSIFIED

8-204

~~CONFIDENTIAL~~

CONFIDENTIAL

UNCLASSIFIED

~~CONFIDENTIAL~~
SEDR 300

CONFIDENTIAL



PROJECT GEMINI



through the ± 57 degree azimuth scan angles. The mechanical azimuth points of ± 57 degrees corresponds to the 0, 180 degree points on the sinusoidal output signals of the roll error amplifier. The roll multivibrator has a free-running frequency of 1.8 cps but will lock-on to the two cps sync switch signals.

To ensure that the roll multivibrator is initiated in the same portion of the 160 degree azimuth sweep as the azimuth multivibrator, a positive 12 to 14V differentiated square wave phase lock signal is used. If a phase lock signal was not initiated, the horizon sensor system might indicate that a negative roll motion had occurred for a positive spacecraft motion about the roll axis.

The output signals from the phase detectors are cross-coupled and fed to the output stages of the sensor system. The identical pitch and roll operational amplifiers are the output stages for the horizon sensor system.

Angles θ and ϕ , as determined by the sensor head, (Figure 8-55) are not equal in magnitude to angles Θ and Φ with respect to the spacecraft axis. This is a result of the 14 degree yaw mounting of the horizon sensor axis with respect to the spacecraft axis. The pitch and roll outputs signals from the phase detectors are cross-coupled in the compensation network. The compensation network electrically approximates the cross-coupling equations which result from yawing the sensor heads 14 degrees with respect to spacecraft axis. Cross-coupling between the pitch and roll axis does not exceed 0.1 degree in any one axis when that axis is at null and the other axis is less than 2° .

The amplifier filter network removes most of the 2 and 4 cycle ripple, which is present in the pitch and roll detector outputs. The amplifier has a high gain

UNCLASSIFIED

CONFIDENTIAL
8-205
~~CONFIDENTIAL~~

UNCLASSIFIED

~~CONFIDENTIAL~~
SEDR 300

PROJECT GEMINI

and a low frequency response capability. The highly stable 0.4V/degree DC output signal is coupled to the ACME and the IMU.

AZIMUTH DRIVE

The azimuth drive (Figure 8-56) is a closed loop containing the synchronization and control for the azimuth drive coils and the azimuth yoke assembly. The azimuth drive system consists of an azimuth overshoot detector, azimuth control circuit, azimuth multivibrator, azimuth drive amplifier and two azimuth drive coils.

Azimuth Overshoot Detector

The azimuth overshoot detector, located in the sensor head, consists of three coils, two iron slugs and a magnetic pickup. The azimuth overshoot detector detects the amount of azimuth overshoot occurring at each end of one 160 degree scan cycle.

Mounted on the yoke assembly are two iron slugs, representing the ± 80 degree azimuth scan limits. Mounted in the casting near the yoke is a magnetic pickup which is excited by a 5 KC field current generator. As the yoke moves through the azimuth scan limit, one of the iron slugs passes very near the magnetic pickup, changing the inductance and modulating the excitation current. At the other scan limit the same thing occurs with the other iron slug. With a one cycle scan rate and modulation at each scan limit, the 5 KC excitation current is amplitude modulated at a two pulse per second rate. The overshoot detector output is coupled, via a pickoff coil, to the azimuth control circuit. The azimuth overshoot detector output waveform is illustrated in Figure 8-56.

UNCLASSIFIED
8-206

~~CONFIDENTIAL~~

UNCLASSIFIED

~~CONFIDENTIAL~~
SEDR 300



PROJECT GEMINI



AZIMUTH CONTROL

The azimuth control circuit converts the amplitude modulated 5 KC signal into a proportional DC signal. The circuit consists of a demodulation network, an amplifier network and an amplitude relay acquisition network.

The amplitude modulated 5 KC sine wave is rectified, summed with a 5 KC reference signal and demodulated. The amplifier network amplifies the DC output signal from the demodulator and couples this signal to the azimuth drive amplifier. The DC output signal is directly proportional to the amount of azimuth overshoot.

The relay acquisition network allows the output of the 31V DC azimuth power supply to be coupled to the center tap of the azimuth drive coils. When overshoot occurs, a zener diode allows the third stage of the azimuth control circuit to conduct, opening a set of relay contacts. The action of the relay decreases the center tap voltage, reducing the total power applied to the azimuth drive coils. Therefore, the relay acquisition network (amplitude switch) is a coarse adjustment controlling azimuth drive amplitude.

Azimuth Multivibrator

The Azimuth Multivibrator controls the direction of the 160 degree azimuth sweep and the output of the pitch phase detector. The multivibrator is triggered into conduction by a 12 to 14V positive sync pulse originated by the azimuth sync switch. The sync switch produces two pulses per second as a direct result of the positor assembly passing through the zero azimuth reference. The input circuit of the multivibrator also differentiates the incoming sync pulse and couples it as a phase lock signal to the roll multivibrator.

UNCLASSIFIED

8-207

~~CONFIDENTIAL~~

UNCLASSIFIED

~~CONFIDENTIAL~~
SEDR 300



PROJECT GEMINI



The azimuth multivibrator switches states at a 1 cps rate (the natural frequency of the azimuth yoke). As a result, the output signal to the azimuth drive amplifier is a 15V, 1 cps, positive phase (clockwise) or negative phase (counterclockwise) square wave.

Azimuth Drive Amplifier

The Azimuth Drive Amplifier directly controls the signal applied to the azimuth drive coils. The amplifier differentiates, clips, and amplifies the output signals from the azimuth control and multivibrator circuits. Clipping action is a result of summing the outputs from the azimuth control and multivibrator circuits. Since clipping action is directly proportional to the amount of azimuth overshoot, clipping action would cease if overshoot were reduced to zero.

The negative output signal of the drive amplifier is alternately coupled to the clockwise and counterclockwise azimuth drive coils. The azimuth drive coils convert current from the drive amplifier to a magnetic force, which drives the yoke through an azimuth angle of 160 degrees.

HORIZON SENSOR POWER

The power system (Figure 8-56) converts the 26 V, 400 cps, ACME power to the AC-DC operating voltages of the horizon sensor.

The power system consists of a power transformer, power supply, radio frequency interference (RFI) filter, voltage regulators, filter networks and a field current generator. The field current generator supplies 5 KC to the azimuth control circuit and to the positor coils.

UNCLASSIFIED

8-208

~~CONFIDENTIAL~~


 
SYSTEM UNITS

POSITOR

The Positor (Figure 8-57) incorporates an electromagnetic drive and a ball bearing mounted mirror assembly which provides 30 cps dithering motion. The positor is mounted on a movable yoke assembly which is spring loaded to afford spring mass oscillation in the spacecraft azimuth plane. Bearings facilitate the movement of the mirror assembly portion of the positor through large angles.

BOLOMETER

A bridge circuit consisting of a germanium immersed meniscus lens, two resistors and two thermistors is used to detect infrared radiation. The thermistors are mounted on the flat portion of the lens and are held in place with mylar glue. The variable thermistor is centered on the side of the lens where it is exposed to infrared radiation. The fixed value thermistor is mounted below, and shielded from, the infrared radiation. The two thermistors, one reference and one sensing, make up the bolometer.

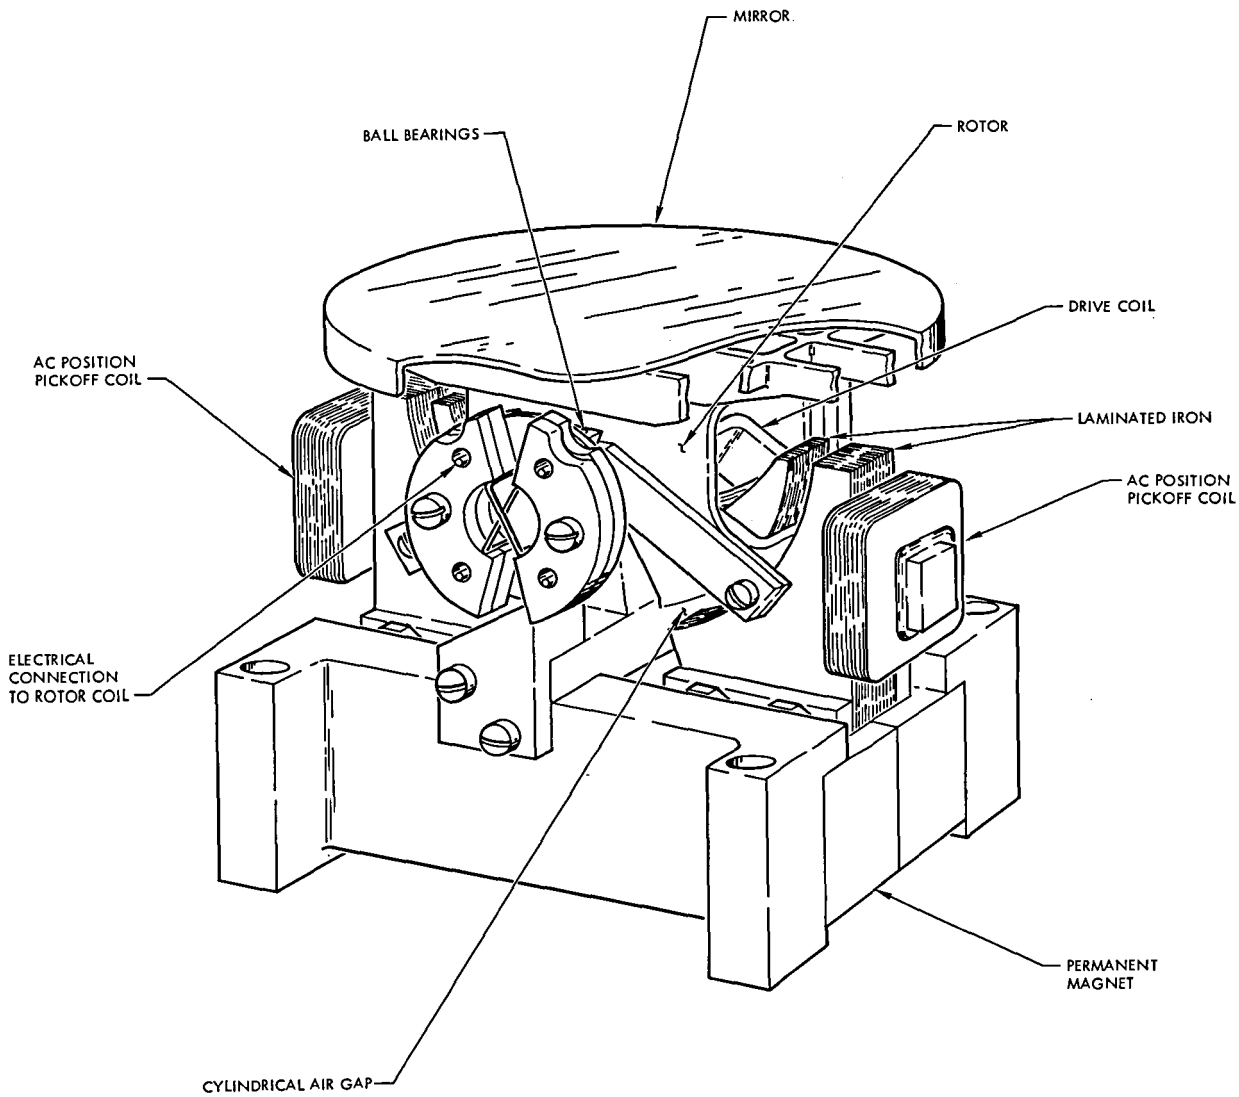

SINGLE-AXIS POSITOR

Figure 8-57. Horizon Sensor Single-Axis Positor

FMG-68A

RENDEZVOUS RADAR SYSTEM

TABLE OF CONTENTS

TITLE	PAGE
SYSTEM DESCRIPTION	8-213
SYSTEM OPERATION	8-216
RADAR	8-216
TRANSPONDER	8-216
INTEGRATED OPERATION	8-217
COMMAND LINK OPERATION	8-218
SYSTEM COMPONENTS	8-220
RADAR MODULATOR AND TRANSMITTER	8-220
TRANSPONDER ANTENNA	8-220
SUFFICIENT AMPLITUDE DETECTOR	8-222
TRANSPONDER CIRCULATOR	8-224
RECEIVER	8-224
TRANSPONDER MODULATOR AND TRANSMITTER	8-229
RADAR RECEIVING ANTENNA SYSTEM	8-231
GATE GENERATOR	8-233
ELEVATION TWO-MICROSECOND MULTI FUNCTIONS	8-237
DITHER BISTABLE MULTI FUNCTIONS	8-237
SPIRAL ANTENNA IN ANGULAR MEASUREMENT	8-238
DITHER SWITCHES	8-240
RANGE AND RANGE RATE (R/R METER)	8-242
RANGE SWEEP CIRCUIT	8-242
DIGITAL RANGE COUNTER	8-244
RADAR POWER SUPPLY	8-244
TRANSPONDER POWER SUPPLY	8-247

PROJECT GEMINI

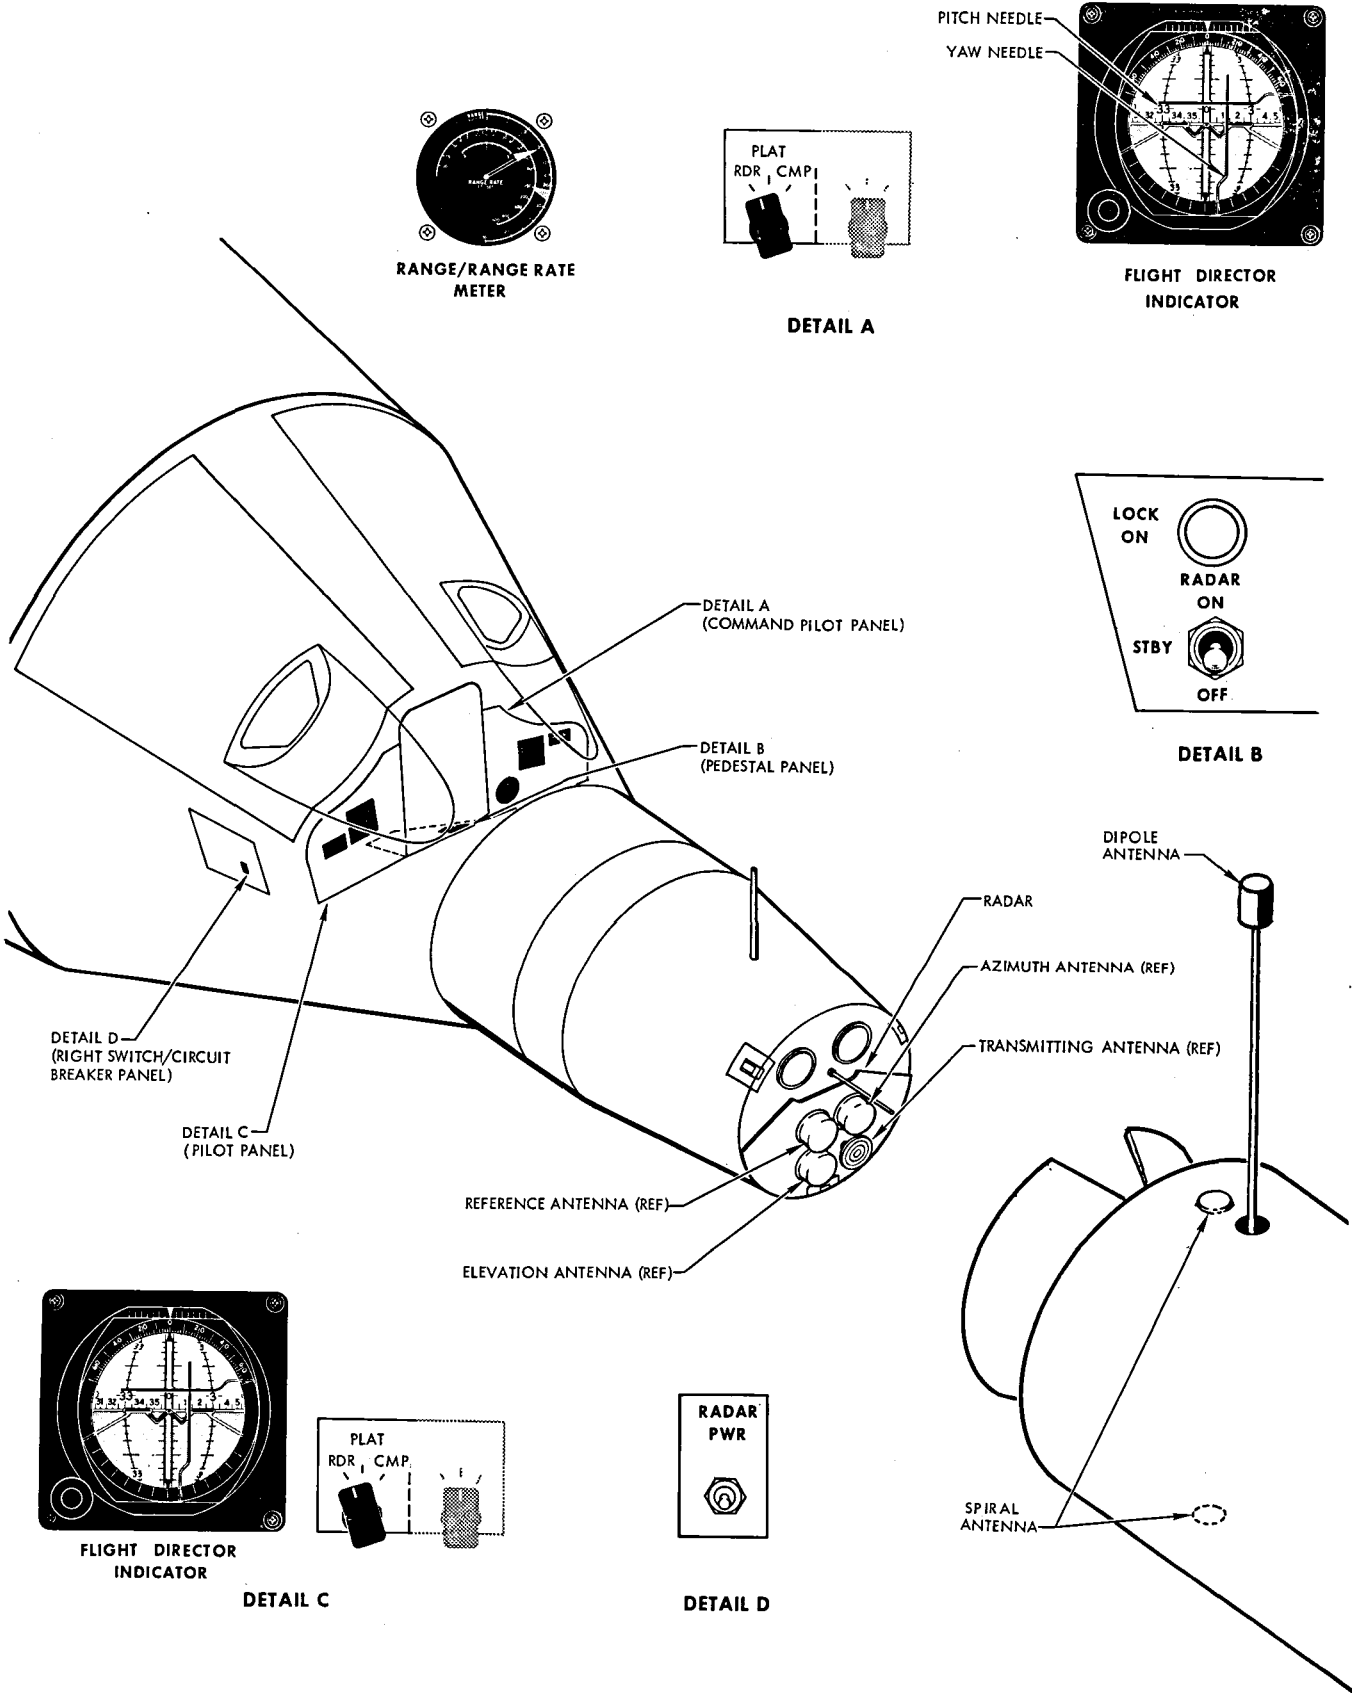


Figure 8-58 Rendezvous Radar System

FMG2-92

UNCLASSIFIED

~~CONFIDENTIAL~~
SEDR 300



PROJECT GEMINI



RENDEZVOUS RADAR SYSTEM

SYSTEM DESCRIPTION

The Rendezvous Radar System (Figure 8-58) is incorporated in the Gemini Project to facilitate a docking maneuver of the Gemini spacecraft with the Agena Target Vehicle. The system is comprised primarily of two units, a radar located in the Rendezvous and Recovery section of the Gemini and a transponder located in the Target Docking Adapter of the Agena. The co-operative operation of the two units enables the detection of the Agena by the Gemini and the determination of the range, relative velocity, and angular relationship of the two craft. The radar transmission is also used as a carrier for the command link intelligence; refer to the Command Link portion of Section VIII for a description of this system.

The radar system is capable of acquiring lock-on when the Agena is within 180 nautical miles of the Gemini and is within 8.5 degrees of the Gemini boresight axis. The angular acquisition capability increases to 25 degrees relative to the Gemini boresight when the range decreases to within 130 nautical miles. The radar provides bi-level, analog, and digital outputs for use during the catch-up and rendezvous portion of the Gemini flight. The Gemini crew is provided with visual indications of radar lock-on and command link message acceptance. Analog indications of the Agena range and differential velocity are presented on the range and range rate indicator. Analog indications of the elevation and azimuth position of the Agena with respect to the Gemini are presented on the flight director indicators. Digital indications of range, elevation, and azimuth are available to the computer for calculating the corrective thrusts required for the rendezvous maneuver.

UNCLASSIFIED

8-212
~~CONFIDENTIAL~~

UNCLASSIFIED

~~CONFIDENTIAL~~
SEDR 300

CONFIDENTIAL



PROJECT GEMINI



The Rendezvous Radar System, as described herein is applicable to the rendezvous mission planned for spacecrafts six, eight, and nine. Spacecraft five will utilize a Rendezvous Evaluation Pod to simulate the rendezvous mission, thereby providing an operational verification of the system and the maneuvering techniques. The differences between the rendezvous mission and the rendezvous evaluation mission will be discussed in the Rendezvous Evaluation Pod portion of Section VIII.

The radar is contained within a pressurized module. The module dimensions are approximately 17 by 29 by 9 inches, the module area is 1.8 cubic feet, and the weight is 72 pounds. The radar is installed in the small end of the Gemini spacecraft on the forward face of the rendezvous and recovery section.

The radar antenna system, consisting of one uncovered transmit antenna and three covered receive antennas, is mounted on the radar face plate. When installed in the spacecraft, the radar is covered with the nose fairing for thermal protection during the launch phase of the mission.

The transponder is contained within an unpressurized module. The module dimensions are approximately 9 x 10 x 2¹/₄ inches, the module area is 1.25 cubic feet, and the weight is 3¹/₄ pounds. The transponder is installed in the target docking adapter of the Agena Target Vehicle.


The transponder antenna system is removed from the transponder module and is electronically connected by coaxial cables. The dipole antenna is mounted on an extendable boom which is recessed until the extend command is given by the Command Link via UHF. The spiral antennas are mounted flush with the skin of the target docking adapter and are mounted 180° apart from each other.

CONFIDENTIAL

UNCLASSIFIED

8-214
~~CONFIDENTIAL~~

PROJECT GEMINI

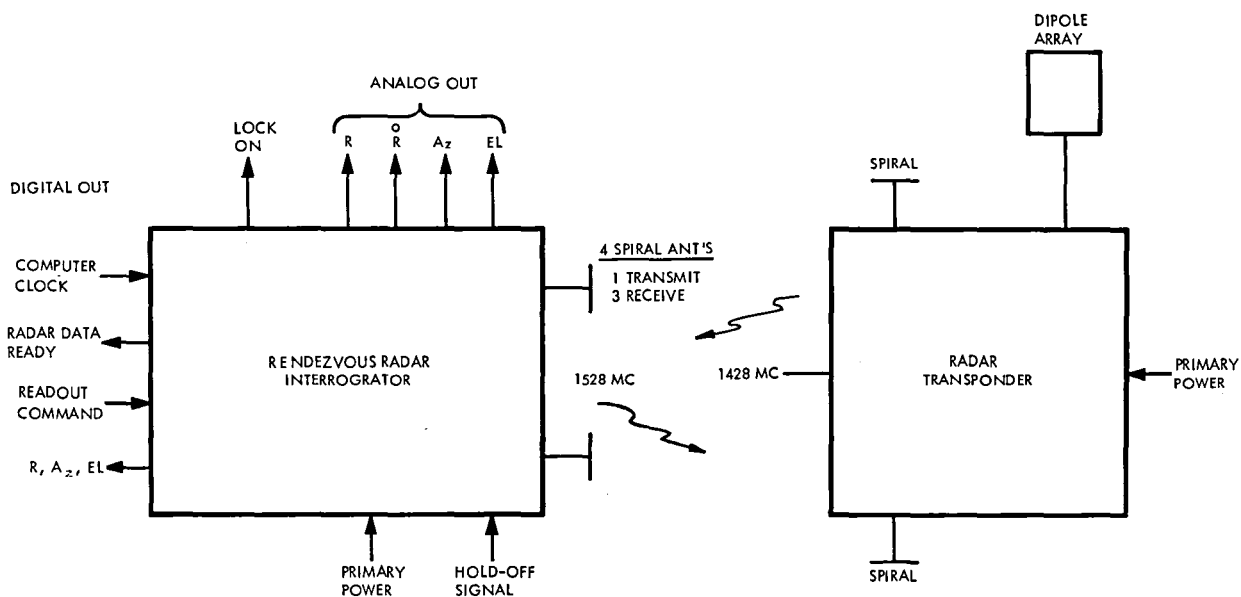

RADAR

1. TRANSMITS A 1-USEC 1528 MC PULSE AT A PRF OF 250 PPS.
2. RECEIVES THE 6-USEC TRANSPONDER REPLY AND EXTRACTS RANGE, AZIMUTH, AND ELEVATION ANGLE INFORMATION FROM EACH PULSE.
3. PROVIDES ANALOG OUTPUTS TO THE INDICATORS REPRESENTING RANGE, RANGE RATE, AZIMUTH, AND ELEVATION.
4. PROVIDES BINARY DIGITAL OUTPUTS REPRESENTING RANGE, AZIMUTH, AND ELEVATION ANGLES TO THE COMPUTER, ON COMMAND.

TRANSPONDER

1. RECEIVES THE INTERROGATING 1528-MC 1-USEC PULSES FROM THE RADAR; DELAYS 2-USEC AND TRANSMITS A 6-USEC PULSE AT A FREQUENCY OF 1428 MC FOR EACH PULSE RECEIVED.

Figure 8-59 Basic Functions of Rendezvous Radar System

FM2-8-58

UNCLASSIFIED

~~CONFIDENTIAL~~
SEDR 300

PROJECT GEMINI

SYSTEM OPERATION

RADAR

The Rendezvous Radar will, at the time of launch, be de-energized and the radar will be covered with the nose fairing for thermal protection. At staging plus 45 seconds the pilot will depress the JETT FAIRING switch thereby jettisoning the nose fairing and exposing the radar.

During the initial portion of the orbital phase the spacecraft will maneuver to catch up with the Agena vehicle. This maneuver will result with the Gemini and the Agena in co-planar, circular orbits. The Gemini shall be lagging at a range of 122 nautical miles and closing at a rate of 1.6 nautical miles per minute. Approximately 25 minutes after completing the aforementioned maneuver the Gemini crew will initiate radar transmission.

The radar is placed in the standby mode by switching the RADAR FWR circuit breaker ON the the RADAR switch to STBY. Those systems with which the radar interfaces are energized at this time. A time delay of 60 seconds is allowed for warm up prior to positioning the RADAR switch to ON. When turned ON, the radar commences transmission at a frequency of 1528 megacycles, a pulse width of 1 microsecond, a pulse repetition rate of 250 pulses per second, and a power level of 1150 watts. The radar at this time is fully operational.

TRANSPONDER

The transponder will, at the time of launch, be de-energized and the extendable boom antenna will be retracted. Control of the Agena is maintained by the Command Link System via UHF. After the Agena enters the orbital phase the transponder is placed in a standby condition and the dipole boom antenna is extended. At this time

UNCLASSIFIED

8-216

~~CONFIDENTIAL~~

UNCLASSIFIED

~~CONFIDENTIAL~~
SEDR 300



PROJECT GEMINI



the transponder is in standby and is connected to the dipole boom antenna. A sufficient amplitude detector is incorporated in the transponder, this circuit detects the initial pulses from the interrogate radar and enables the high voltage power supply. The period required for the transponder to become operational is approximately 12 interrogate pulses or 50 milliseconds. When the high voltage is energized the transponder is fully operational and will respond to the interrogate pulses of the radar.

INTEGRATED OPERATION

The initial pulses of the radar will energize the transponder high voltage power supply. Now energized, the transponder responds to the radar at the interrogate pulse repetition frequency of 250 pulses per second. The initial reply pulses from the transponder cause the illumination of the LOCK ON lamp.

The Rendezvous Radar determines the range to the transponder by observing the events which occur between radar transmission and receipt of the reply pulse from the transponder. This period of time is commenced by the time zero pulse, a pulse which occurs simultaneously with the leading edge of the radar transmission, and is terminated by the receiver video pulse, the detected transponder reply. The radar determines analog range by the initiation of a ramp voltage with the time zero pulse. The ramp voltage continues until stopped by the leading edge of the transponder reply pulse. The ramp voltage is peak detected and the resultant DC voltage is proportional to the range. Succeeding pulses are differentiated to obtain the range rate. The radar analog range and range rate voltages are provided to the Range and Range Rate meter and are, by means of a voltage divider, utilized for telemetry purposes. The radar measures digital range by counting the number of

UNCLASSIFIED

8-217

~~CONFIDENTIAL~~

UNCLASSIFIED

~~CONFIDENTIAL~~
SEDR 300



PROJECT GEMINI



50 megacycle computer clock pulses which occur during the range gate. The digital data is stored in the shift register for transmission to the computer.

The Rendezvous Radar determines the angular position of the Agena to the Gemini by observing the phase difference of the RF received at the reference antenna to the RF received at each of the two angle antennas. Each of the two angle antennas rotate to nullify the incoming phase difference. The amount of antenna rotation, from a zero position, required to achieve this result corresponds directly to the position error. An induction potentiometer and a gray binary encoder, used to provide analog and digital intelligence, is connected to each of the antenna shafts. The analog angle information is provided to the flight director indicator needles of the attitude display group. The gray binary information is converted to serial binary and stored in the shift register for transmission to the computer.

The radar digital range and angle data is stored in the shift register. The register stores a series of three readings which are continuously updated so as to indicate the latest information. The computer sends a radar data pulse to indicate a request for radar information. The shift register, after receiving the radar data pulse, obtains three complete radar readouts and discontinues updating the information. The radar now transmits a data ready pulse. The computer, upon detecting that the radar data is ready, transmits a series of three bursts of 500 KC pulses to shift the radar data into the computer. The radar at this time returns to the state of continuous data updating.

COMMAND LINK OPERATION

The radar is utilized during the rendezvous maneuver of spacecrafts six, eight, and nine as a carrier for the Command Link information. For information concerning this

UNCLASSIFIED

8-218

~~CONFIDENTIAL~~

UNCLASSIFIED

~~CONFIDENTIAL~~
SEDR 300

SECRET



PROJECT GEMINI



system refer to the Command Link portion of Section VIII. The operation of the radar, as a carrier, is explained herein.

The Command Link System, when energized, disables the radar pulse repetition frequency generator and interconnects the radar and the Time Reference System. The radar now operates at a pulse repetition rate of 256 pulses per second. The radar transmits data by pulse position modulation. The modulation is controlled by a portion of the Command Link System, the encoder. The normal pulse repetition time of 3900 microseconds is indicative of a "zero"; a "one" is transmitted by lengthening this time to 3915.2 microseconds.

The transponder received information is provided to the sub-bit detector, a portion of the Command Link System. The sub-bit detector converts the pulse position modulation to binary form and sends the message to the Agena programmer. The Agena programmer verifies that an acceptable message is received and provides a message acceptance pulse to the transponder. The message acceptance pulse, when received by the transponder, causes the transponder transmitted pulse to lengthen from 6 to 10 microseconds and remain in this condition for three transmissions. The radar detects the additional pulse width and effects the illumination of the Message Acceptance (MSG ACPT) lamp.

The previously described system operation affects only the radar pulse repetition frequency. This operation results in no alteration or interruption to the radar system.

UNCLASSIFIED

8-219

~~CONFIDENTIAL~~

UNCLASSIFIED

~~CONFIDENTIAL~~
SEDR 300



PROJECT GEMINI



SYSTEM COMPONENTS


RADAR MODULATOR AND TRANSMITTER

When the RADAR switch, located on the pedestal, is in the STBY position a hold off signal is applied to the high voltage portion of the radar power supply to prevent it from producing the high voltage required by the transmitter tube. When the pilot places the RADAR switch to the ON position, (Figure 8-60) the hold off signal is removed, the 1650 volts DC is produced and applied to the transmitter tube, and the radar commences transmitting in the search mode. In the search mode the pulse repetition frequency trigger multivibrator oscillates at 250 cycles per second, generating a square wave which is used to trigger the modulator. The modulator output is a series of one microsecond positive pulses which triggers the transmitter tube. The transmitter tube output is a 1528 megacycle, 1 microsecond, 1150 watt pulse at a repetition rate of 250 pulses per second. The transmitter output pulse is coupled to the transmitting dual spiral antenna and radiated in order to interrogate the transponder.

TRANSPONDER ANTIENNA

The transponder utilizes two antenna systems, (Figure 8-61) a dipole antenna array and two dual spiral antennas. The selected antenna system is connected to the transponder by an antenna select switch. The dipole antenna array is located on an extendable boom which is retracted until after the Agena enters the orbit phase of the mission. The spiral antennas are located on either side of the Target Docking Adapter and are mounted flush with the surface of the adapter.

The dual transponder antenna systems are designed to provide spherical coverage about the Agena vehicle. The dipole will provide omnidirectional coverage in the

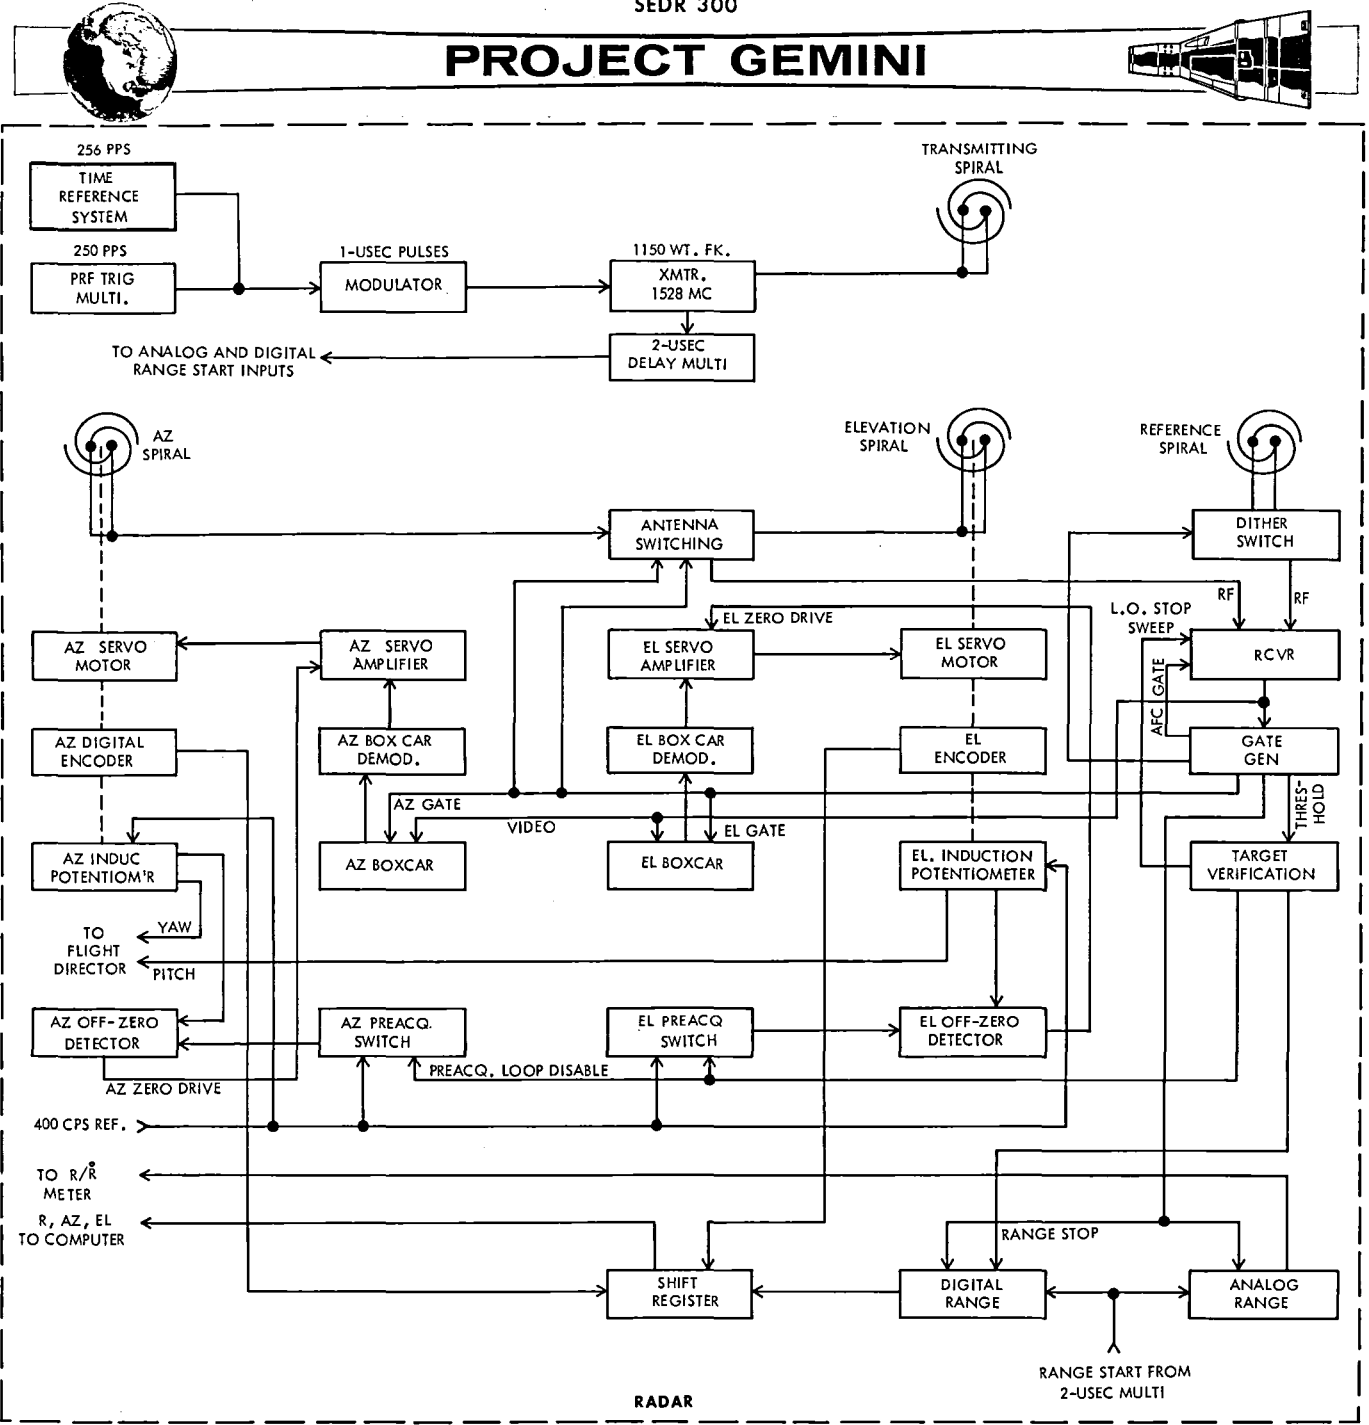

RADAR

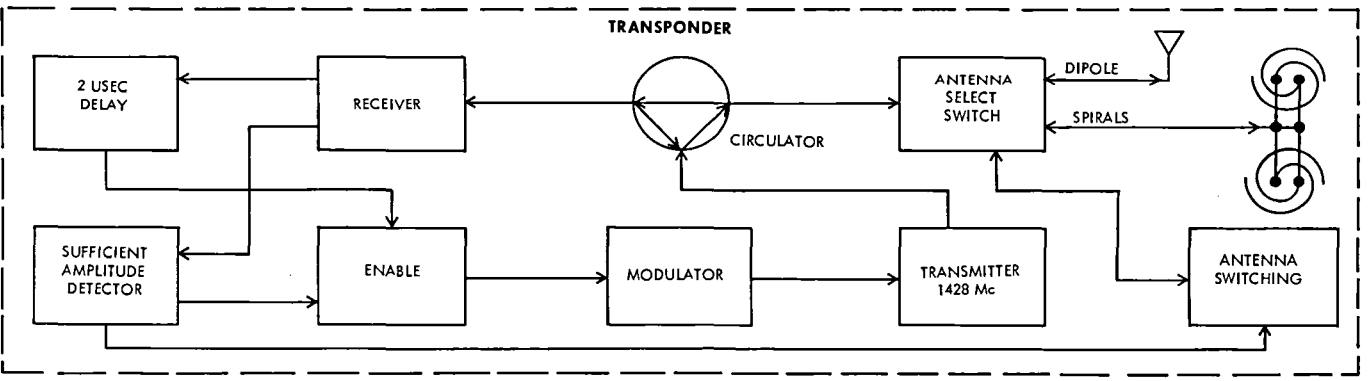


Figure 8-60 Rendezvous Radar System Block Diagram

11-7-69

UNCLASSIFIED ~~CONFIDENTIAL~~

SEDR 300



PROJECT GEMINI



horizontal plane. The dipole pattern is doughnut shaped with the dipole located in the center. The beam width considered in any horizontal direction is $\pm 25^\circ$ at the half power points. The array has a minimum gain of 3.5 db. In order to provide effectively spherical coverage the spirals will operate in the space above and below the dipole pattern. The spiral beam width is $\pm 35^\circ$ and the minimum gain of each spiral is 7.5 db.

The initial condition of the transponder will be with the internal circuitry connected to the dipole array and the spiral antennas disconnected. The dipole array is selected since this provides coverage for the anticipated acquisition area.

The initial radar pulses received by the transponder enable the sufficient amplitude detector. The detector turns on the high voltage required for transmitter operation, thereafter it monitors the received signal to ensure adequate strength. Should the signal level decrease below a specific level the detector causes the transponder to switch to the opposite antenna system in search of greater strength.

SUFFICIENT AMPLITUDE DETECTOR

The signal from the transponder video circuit is applied to the Sufficient Amplitude Detector (SAD). During the initial portion of the mission, when the transponder is in standby, the SAD monitors the antenna system for the initial interrogate pulse from the radar. When the first pulses are received it places the transponder in the transmit mode by activating the high voltage. While the transponder is operating the SAD monitors the received signal strength; if it decreases below a specific level it selects the opposite antenna system in order to seek greater signal strength. Should the interrogate signal be lost, the SAD

8-222

~~CONFIDENTIAL~~

UNCLASSIFIED

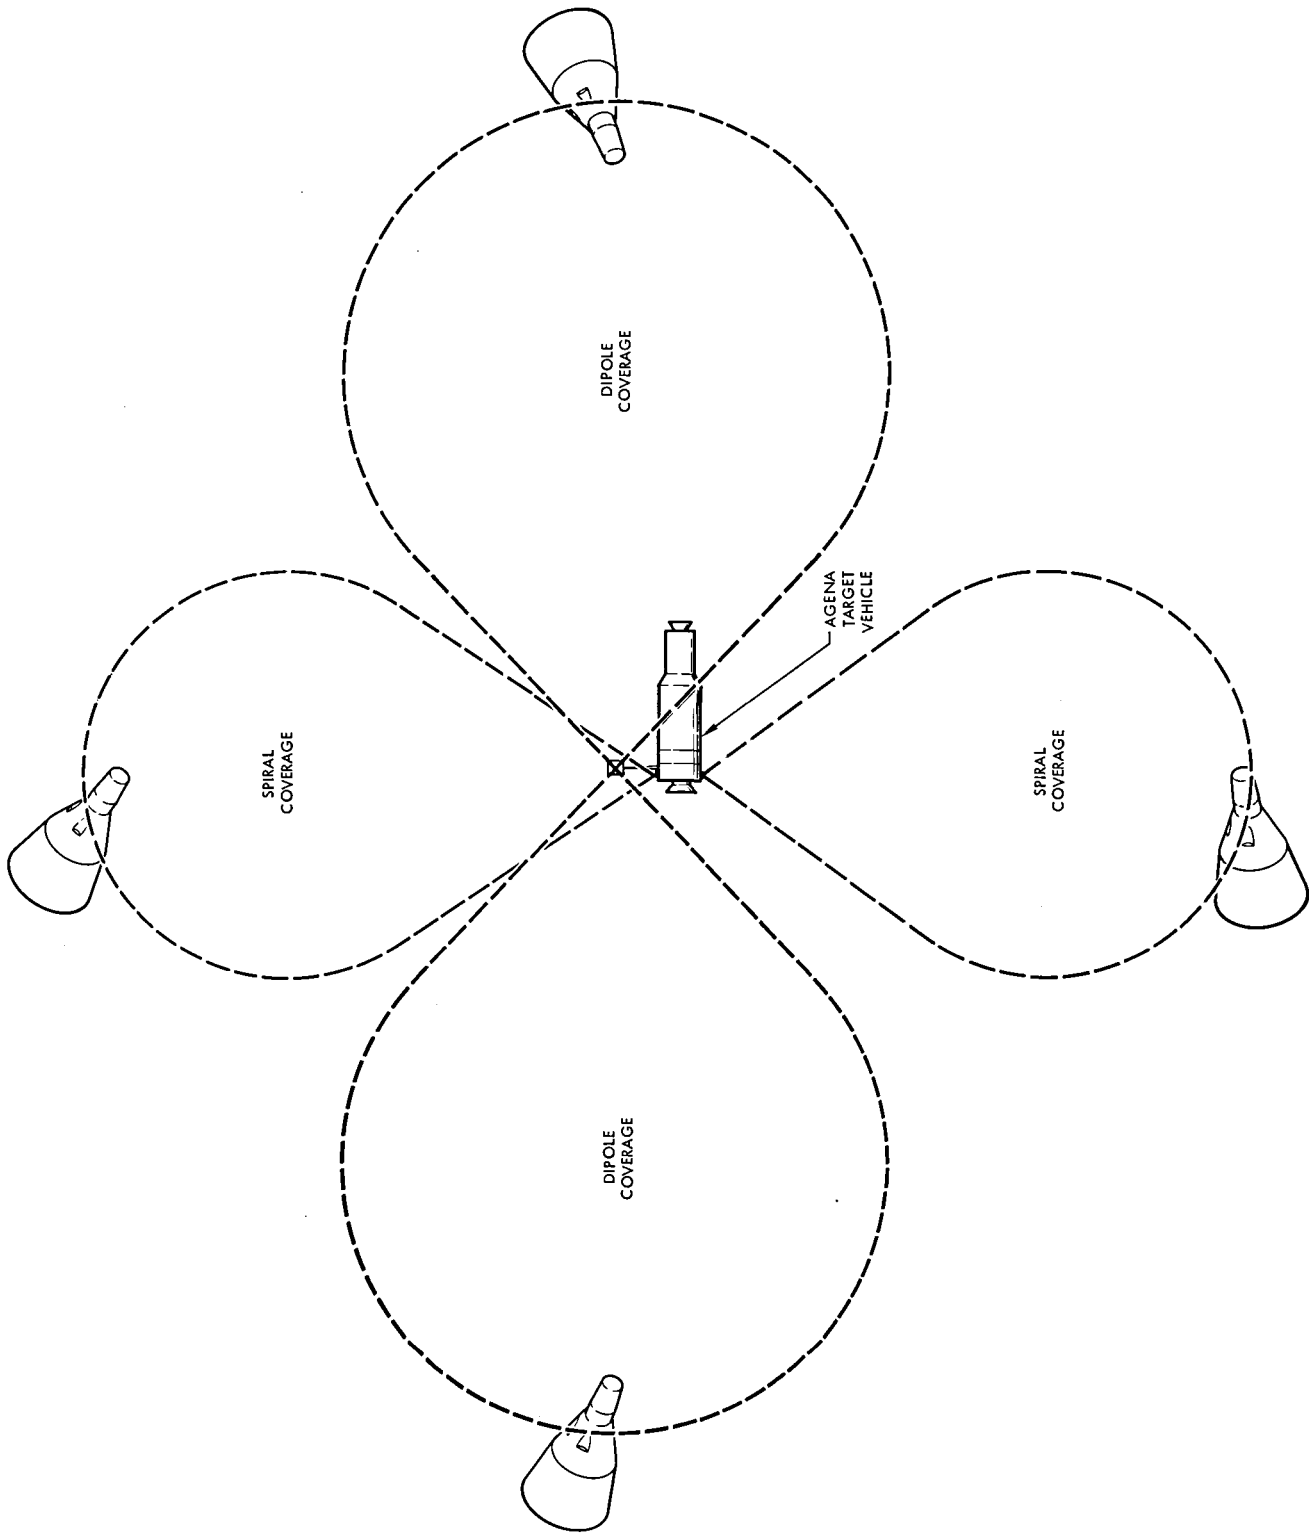


Figure 8-61 Transponder Antenna System Coverage

IM7. B-60



PROJECT GEMINI



causes the transponder to continually cycle from one antenna system to the other until lock-on re-occurs.

TRANSPONDER CIRCULATOR

The transponder circulator (Figure 8-60) is a transmit/receive device which permits the receiver and transmitter to operate by the same antenna. The circulator provides a low attenuation path for the RF from the transmitter tube to the antenna and a low attenuation path from the antenna to the receiver. The directivity of the circulator provides a high attenuation and enables the blocking of the main bang from the receiver.

RECEIVER

The transponder and radar receivers (Figure 8-62) are practically identical in most respects. There are some differences, principally in the input circuit. The receiver will be explained in the following way. The difference in the input circuitry will be discussed first, then the portion of the receiver from the bandpass filter to the video circuits output. Automatic frequency control and automatic gain control will conclude the discussion of the receiver.

Radar Receiver Input

Figure 8-60 shows the three receiving spiral antennas and the manner in which the RF is connected to the receiver. As will be discussed later in the radar receiving antenna system paragraph, the radar compares phase relationships on two receiving antennas at a time during each return pulse. Because the radar compares phase relationships while the transponder does not, the input circuits are different. The two RF signals being compared in phase are combined in the

UNCLASSIFIED

~~CONFIDENTIAL~~
SEDR 300



PROJECT GEMINI



hybrid (Figure 8-62). The signal path of the combined RF is through the circulator, the bandpass filter, the voltage controlled attenuator and into the mixer. The load associated with the radar circulator is required because of the voltage controlled attenuator. (Refer to the discussion of the voltage controlled attenuator below, where its operation in both receivers is explained.) The load associated with the radar hybrid switch is explained in the gate generator discussion.

Transponder Receiver Input

As Figure 8-62 shows, both spirals are connected to a hybrid. Since only one spiral at a time will be directed toward the radar, the signal received on either one will pass through the hybrid to the antenna select switch. The signal is passed through the circulator, the bandpass filter, and the voltage-controlled attenuator to the mixer. The loads associated with the transponder hybrid are required for equal power division in the hybrid. If neither spiral was directed toward the radar, the signal would be received on the dipole, passed through the antennas select switch and on to the mixer in the same way as was described for the spiral.

Bandpass Filters

The bandpass filters in the transponder and the radar are identical; however, the frequencies to which they are tuned are different. Each filter is tuned at the transmit frequency of the other unit. The radar is tuned to 1428 megacycles and the transponder is tuned to 1528 megacycles. These filters provide the required interference rejection and help keep the transmitter main bang out of the receiver.

8-226
~~CONFIDENTIAL~~

UNCLASSIFIED

UNCLASSIFIED

~~CONFIDENTIAL~~
SEDR 300



PROJECT GEMINI



Voltage-Controlled Attenuators

The voltage controlled attenuators in the radar and the transponder are identical. The purpose of the attenuator is to prevent saturation of the mixer by holding the mixer input to a minus 12 dbm maximum. The attenuator is inoperative at far and middle ranges. Operation commences as the range decreases and the power at the receiver increases. The attenuator is a solid state device with a maximum attenuation of 24 db. The attenuation is controlled by a delayed AGC voltage which varies from 0 to minus 6 volts.

The voltage-controlled attenuator produces attenuation by impedance mismatching. In the radar, the impedance mismatch tends to reflect the wave back to the input, which is the circulator. Due to the directional characteristic of the circulator described earlier, the reflected wave will not back up through the circulator the same way it enters. The path that the reflected wave takes through the circulator terminates in a load resistance; thus the reflected wave is prevented from becoming a standing wave. This precaution is taken in the radar because standing waves could upset stability and render the angular measurements inaccurate.

The voltage-controlled attenuator in the transponder functions in a similar manner; however, standing waves are not avoided. Attenuation is nonetheless effective, and the mixer is prevented from saturating. Since no critical measurements are made in the transponder the standing waves produce no unfavorable effects.

Automatic Frequency Control

The automatic frequency control circuit in the transponder and radar is comprised of the local oscillator, the mixer preamplifier, the narrow band amplifiers and detector, the amplifier limiter, the discriminator and gate, and the AFC varactor

~~CONFIDENTIAL~~
UNCLASSIFIED

8-227

~~CONFIDENTIAL~~



PROJECT GEMINI



and sweep circuit (Figure 8-62). The varactor, a solid-state voltage-controlled variable capacitor, is the heart of the AFC circuit. A 0.2 cycle per second sweep voltage is applied to the varactor when the receiver is turned on. This voltage causes the local oscillator frequency to vary over a 1-megacycle band about its operating frequency.

In the transponder, when the 1528 megacycle interrogation pulse is received, it is applied to the mixer. Here the 1557.5 to 1558.5 megacycle output of the local oscillator beats with it, and the 30 megacycle IF is produced. The IF is applied to the wide band and narrow band amplifiers. The signal selector gate initially selects the narrow band output since it is larger. Five pulses in 16 milliseconds produce the stop sweep pulse which ends the local oscillator sweeping. This prepares the varactor to be controlled by the discriminator. The narrow band signal is amplified, limited, and discriminated. If the video exceeds the predetermined threshold, a 1 microsecond pulse is supplied which opens the discriminator gate and allows the discriminator output to control the varactor. The discriminator increases the frequency if it is low, decreases it if it is high. There is no output from the discriminator when the IF is exactly 30 megacycles.

 
In the radar, when the 1428 megacycle return pulse is received, the 1457.5 to 1458.5 megacycle output from the oscillator beats with it. Twelve pulses in 48 milliseconds are required to produce the target verification pulse which stops the varactor sweep. The 1 microsecond multivibrator (Figure 8-64) produces the discriminator gate which enables the discriminator to control the varactor. The IF is maintained to 30 megacycles.

UNCLASSIFIED

~~CONFIDENTIAL~~
SEDR 300



PROJECT GEMINI



Automatic Gain Control (AGC)

Receiver gain in both the radar and the transponder must be adjusted automatically to accommodate a wide range of input signal levels. Figure 8-63 shows how the narrow and the wide band channels are controlled by noise levels, input signals, and range. The narrow band channel has 14 db higher gain than the wide band channel. Since the signal selector gate (Figure 8-62) will select the higher output to operate the video circuits, the narrow band circuit will have control at the distant ranges. Narrow band gain will be controlled by the narrow band noise feedback voltage. When the narrow band signal assumes control of the narrow band gain, the outputs of the narrow band noise detector and signal detector are both applied to the AGC selector. The AGC selector controls the narrow band gain. The wide band signal has also been increasing with the input signals and the decreasing range. As the side-band signal reaches the predetermined level, it is selected by the signal selector gate and assumes control. The wide band signal applied to the AGC selector along with the narrow band noise detector output further reduces narrow band gain and narrow band noise. As range continues to diminish and input signal to increase, a greater AGC voltage is developed to hold the signal at the predetermined level. The AGC delay is overcome and AGC is applied to the voltage-controlled attenuator and the mixer preamplifier at near range. AGC in these receivers is capable of maintaining a constant output level with input signals weaker than -83.3 dbm at 160 nautical miles to signals of +12 dbm at a range of 20 feet.

TRANSPONDER MODULATOR AND TRANSMITTER

The transponder transmitter is placed in the standby mode by the UHF command link. A hold off signal is applied to the high voltage portion of the transponder power

UNCLASSIFIED

8-229

~~CONFIDENTIAL~~



PROJECT GEMINI


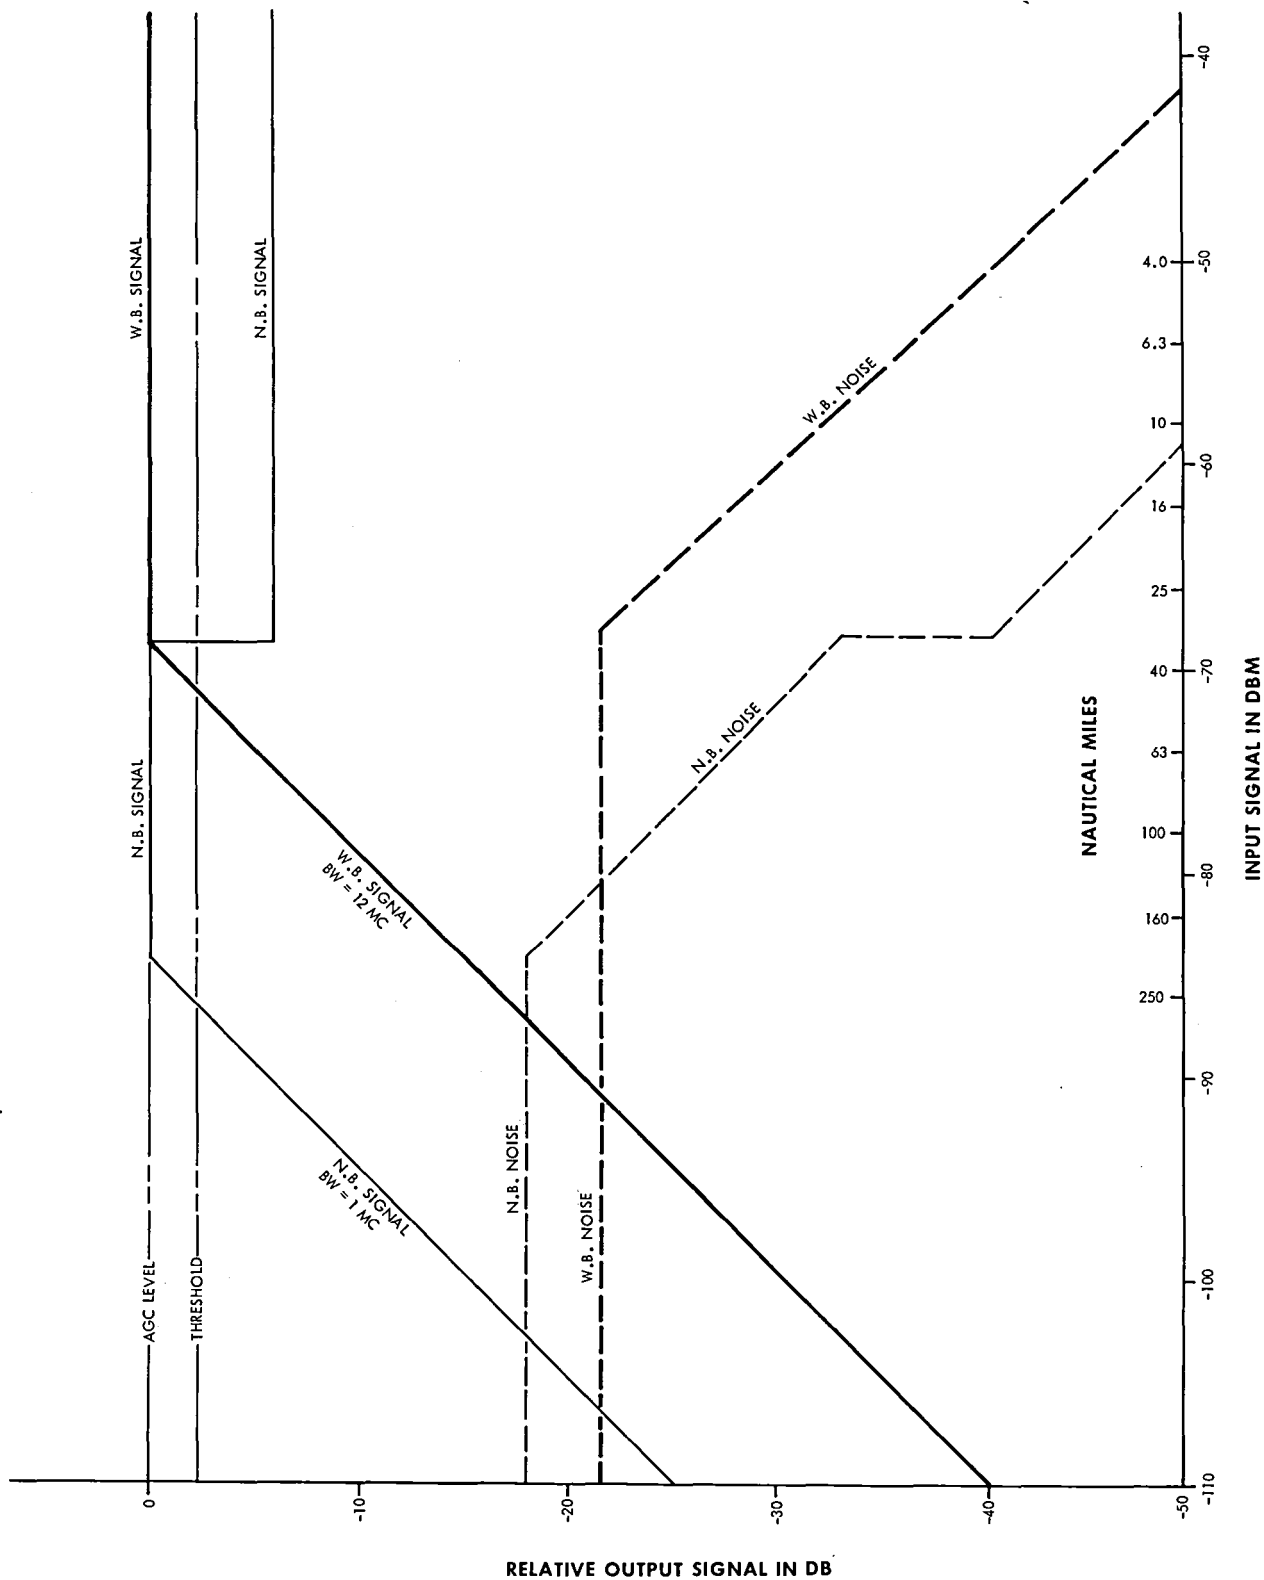


Figure 8-63 Receiver Operation Versus Range

FM2-8-62

 8-230



PROJECT GEMINI



supply to prevent it from producing the high voltage required by the transmitter tube. The initial interrogate pulses from the radar surpass the threshold of the sufficient amplitude detector and cause the removal of the hold off signal. The 1650 volts DC is produced when the signal is removed and the transmitter commences transmitting. In the transmit mode the interrogate pulse from the radar is received at the transponder, delayed for 2 microseconds, and used to trigger the modulator. The modulator output is a 6 microsecond positive pulse which triggers the transmitter tube. The transmitter output is a 1428 megacycle, 6 microsecond, 1150 watt pulse at the interrogate pulse repetition frequency. The transmitter output pulse is coupled through an RF switch to either the pair of spiral antennas or the dipole antenna array and radiated.

RADAR RECEIVING ANTENNA SYSTEM

Antenna System Description

The radar receiving antenna system consists of three dual-spiral antennas 6.5 inches in diameter. The receiving antennas, along with the transmitting antenna, form a square array spaced 0.82 wave length apart. The three receiving antennas are: the azimuth antenna, the elevation antenna, and the reference antenna. The azimuth and elevation antennas are rotatable and are pressurized to aid lubrication in the space environment. They are returned to zero rotation by a preacquisition loop. The reference antenna and the transmitting antenna do not rotate and are not pressurized. The spirals are raised about a quarter wave length (2-1/8 inches) above the radar face plate, and have a circumference of 2.4 wave lengths (20.5 inches). Their characteristic impedance is 75 ohms. The receiving antennas are operated in pairs, using the reference antenna as the common element, to measure the target bearing angle. The radar uses time sharing of the 6-microsecond return pulse,

~~CONFIDENTIAL~~
SEDR 300

UNCLASSIFIED



PROJECT GEMINI



interferometer measurement techniques, and phase dither to obtain complete tracking information.

Azimuth and Elevation Antenna Zeroing

The amount that the azimuth and/or elevation antenna is rotated is the measure of target position. When the radar is tracking a target and these antennas are following the target's changing position, lock on may be interrupted. When this happens, it is desirable to return the antennas to zero rotation. A circuit called the preacquisition loop is provided to do this when the target pulse is not being received. The loop consists of the preacquisition switch, a 400 cps reference voltage, output from the induction potentiometers, a detector, the servo amplifiers, and the servo motors.

The loop compares the output of the induction potentiometer with a 400 cps reference voltage. If the antenna is off zero, an error voltage is produced in the detector output. The error voltage drives the servo amplifier which turns the servo motor. As the rotation angle decreases, so does output of the induction potentiometer; and when the potentiometer output is zero the error voltage and the rotation angle are zero. As soon as lock on is established, this loop is disabled by the target verification signal.

Return Pulse Time Sharing

There is a reason why the transponder transmits a 6 microsecond pulse in reply to the 1-microsecond interrogation pulse. If only range data and automatic frequency control voltages were obtained from the pulse a similar 1 microsecond pulse would be wide enough; but the azimuth and elevation angle of the target must be obtained

8-232
~~CONFIDENTIAL~~

UNCLASSIFIED



PROJECT GEMINI



from the same pulse. The interferometer technique of angular measurement (which will be described later) required that two antennas in the horizontal plane receive the return signal. The signal on the two horizontal antennas must be present for an interval long enough to compare their phase relationship. Next, two antennas in the vertical plane must receive components of the return signal long enough to compare their phase relationship. In this system, the optimum interval for the phase comparison is 2 microseconds. For this reason the transponder sends back a 6-microsecond pulse.

Pulse Division

The return pulse must be divided into 3 parts each time it is received. (Figure 8-66). The first part, one microsecond, will be used for range measurement and automatic frequency control of the local oscillator and receiver intermediate frequency. The second part will be used for azimuth angular measurement, and the third part will be used for elevation angular measurement. The first interval will be made 1 microsecond; the second and third, 2 microseconds each. These intervals add up to 5 microseconds; the remaining 1 microsecond is not used.

GATE GENERATOR

The key circuit which controls pulse division, switching and time sharing is the gate generator. Figure 8-64 illustrates how the gates which perform the required switching are generated. To understand the switching that is done, the gates that are generated and used, and how the return pulse time is shared, it is necessary to know the static conditions before the pulse is returned, the return signal path, and the sequence in which the gates and switches operate.



PROJECT GEMINI


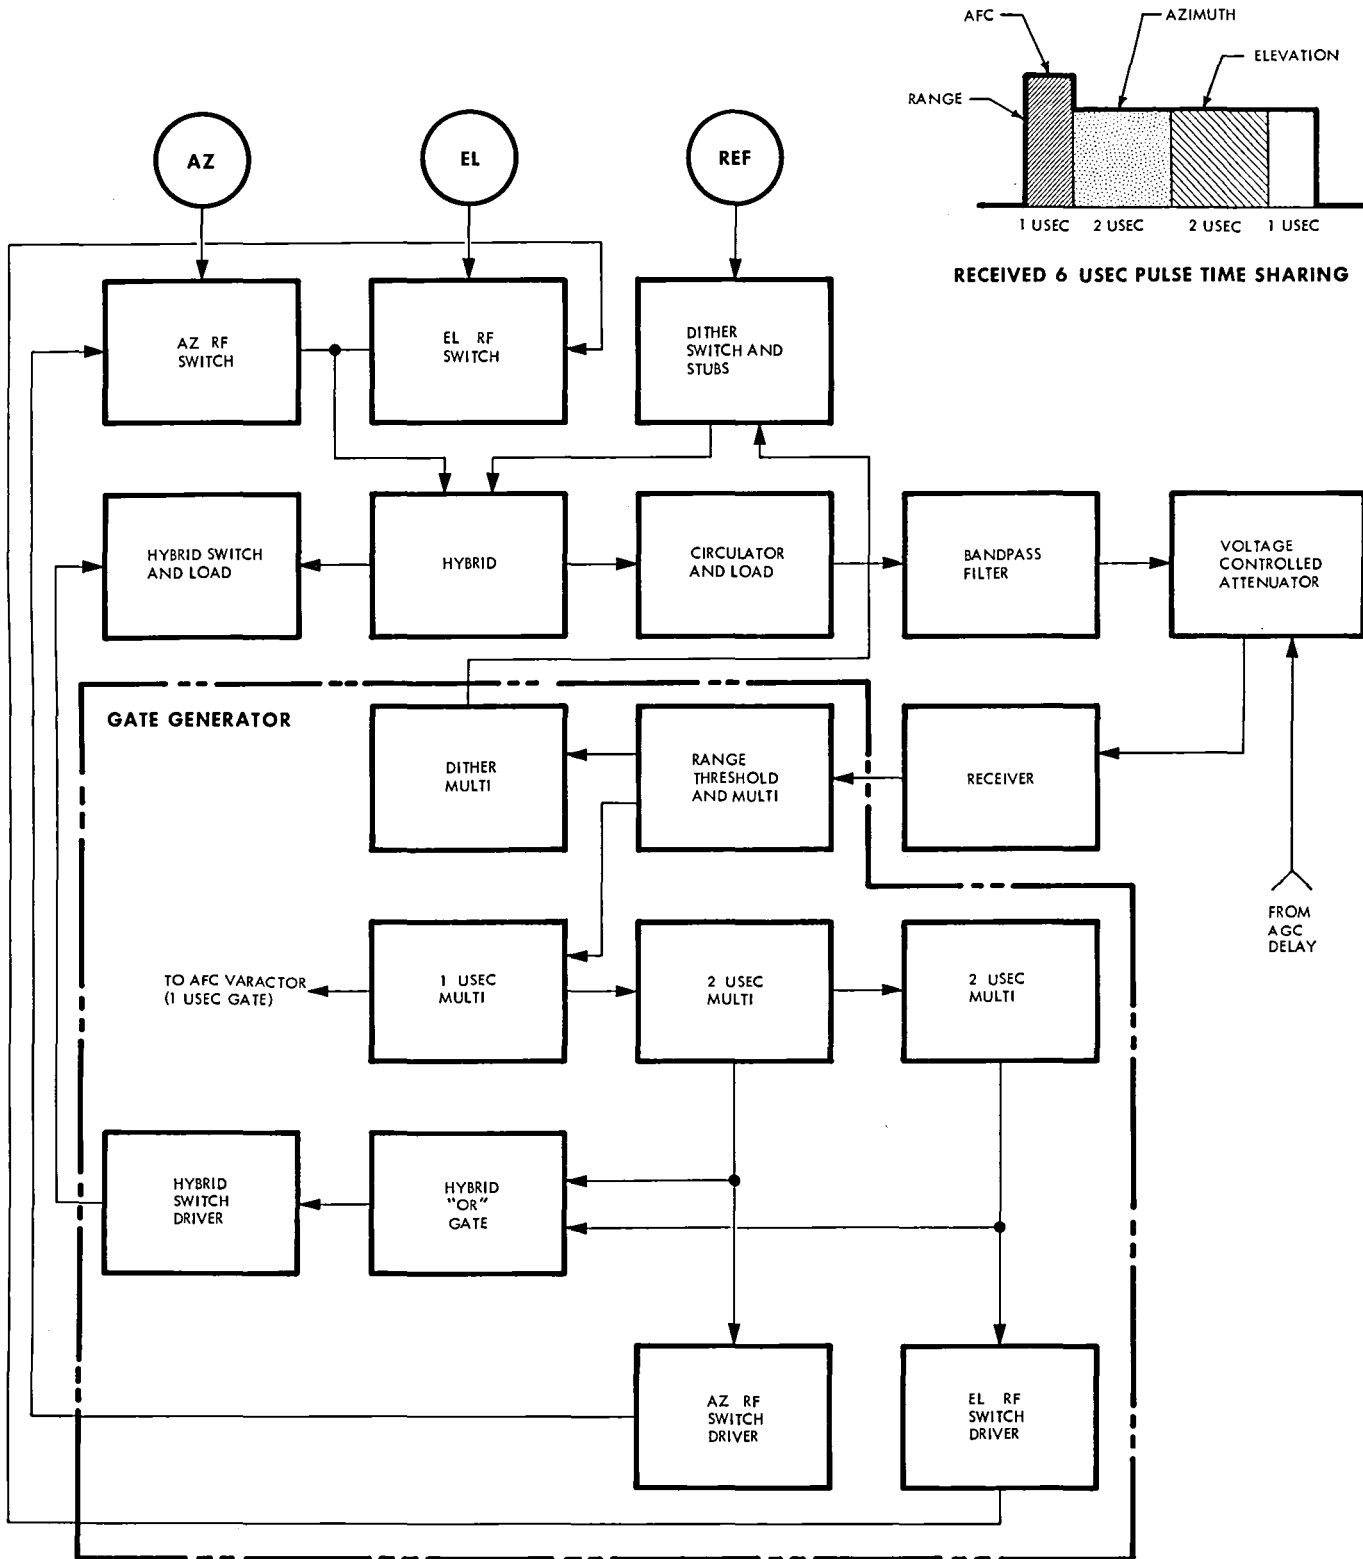


Figure 8-64 Radar RF Switching and Return Pulse Time Sharing

 FM2-8-63



PROJECT GEMINI



Static Conditions Before Arrival of Return Pulse

While the radar is waiting for the return pulse from the transponder, the following conditions prevail: The azimuth RF switch, the elevation RF switch, and the hybrid switch are open. The open azimuth and elevation switches prevent RF, which arrives on these antennas, from being connected to the hybrid and receiver. Thus this RF cannot be mixed with the reference antenna RF until the proper gate voltage is applied. The open hybrid switch keeps the hybrid load disconnected from the hybrid. The dither switch is closed in one of its two positions. All of the mvb's (multivibrators) (except the dither bistable mvb) are one-kick multivibrators, and in the quiescent state. They are waiting for the return pulse to trigger them in succession.

Return Signal Path

The reference antenna is the only receiving antenna initially connected to receive the return pulse. Following the arrows from the reference antenna to the input to the gate generator on Figure 8-64, the signal flow is as follows. The 6-microsecond pulse enters the reference antenna and flows through the dither switch and selected stub, the hybrid, the circulator, the bandpass filter, the voltage-controlled attenuator, and the receiver, and enters the gate generator.

Gate and Switching Sequence

When the transponder pulse arrives at the antenna system, it enters the reference antenna and follows the described path to the gate generator. Here, it is applied as a 6-microsecond video pulse to the range threshold and mvb. If the pulse amplitude is large enough, the leading edge of the video pulse triggers the mvb. Then the whole process of gating and switching begins.



PROJECT GEMINI



Range Threshold Multivibrator Functions

The on-period of the range threshold mvb is 12 microseconds. This threshold mvb has four functions: First, the leading edge of this 12 microsecond pulse terminates the range measurement in both the digital and analog range circuits. Second, five of these pulses are integrated by the target verification circuit to produce the target verification signal. The target verification signal stops the AFC sweep (Figure 8-62), and disables the preacquisition loop. Third, the leading edge of the threshold mvb output has no effect on the dither bistable mvb. The dither mvb and switch remain locked in position throughout the return pulse. Fourth, the one-microsecond mvb is triggered by the leading edge of the threshold mvb output.

One-Microsecond Multivibrator Functions

The 1-microsecond mvb has three functions: First, it gates the discriminator output into the AFC varactor (Figure 8-62). This gate permits the output of the discriminator to continually correct the local oscillator frequency to 1458 megacycles. Second, the 1-microsecond gate is applied to the azimuth and elevation boxcar detectors simultaneously. The gate dumps the charges built up in these detectors during the preceding sampling interval. Third, the trailing edge of the 1-microsecond gate triggers the 2-microsecond mvb. (Figure 8-64)

Azimuth Two-Microsecond Multivibrator Functions

The 2-microsecond pulse generated by the azimuth mvb is the azimuth gate. This gate performs five functions: First it excites the azimuth RF switch driver. The driver closes the azimuth RF switch. The switch connects the azimuth antenna to the hybrid (Figure 8-64). Second, the gate enters the hybrid "or" gate and excites the hybrid switch driver. The driver closes the hybrid switch. The switch



PROJECT GEMINI



connects the load during the azimuth angle measurement. This load flattens the line and prevents standing waves from producing erratic measurements. Third, the gate permits the video received during this interval to develop a charge voltage in the azimuth boxcar detector (Figure 8-65). The charge voltage is later demodulated to provide the control voltage for the azimuth servo motor. Fourth, when the azimuth gate ends, the azimuth RF switch is opened. The switch disconnects the azimuth antenna (Figure 8-64). Fifth, the trailing edge of the azimuth gate triggers the elevation 2-microsecond mvb.

ELEVATION TWO-MICROSECOND MVB FUNCTIONS

The output of the mvb is the elevation gate. It performs five functions: First, it keeps the hybrid switch closed and the load applied to the hybrid. Second, it closes the elevation RF switch and connects the elevation antenna to the hybrid. Third, it permits the video received during this interval to charge the elevation boxcar detector. This voltage charge is later demodulated to become the control voltage for the elevation servo motor. Fourth, the end of the azimuth gate opens the elevation RF switch and disconnects the elevation antenna. Fifth, the end of the gate also ends the drive to the hybrid switch and disconnects the hybrid load.

DITHER BISTABLE MVB FUNCTION

The dither bistable mvb has one function: to change the position of the double-pole double-throw dither switch. The dither mvb is insensitive to the leading edge of the 12-microsecond threshold mvb pulse. However, the trailing edge of this pulse will trigger the dither mvb. Hence, the dither switch and stub are changed 6 microseconds after every return pulse ends.



PROJECT GEMINI





SPIRAL ANTENNA IN ANGULAR MEASUREMENT

Interferometer Measurement of Angular Displacement

The method of measuring angular displacement employed in the rendezvous radar system uses RF waves from a point source, the operating transponder antenna (Figure 8-65). These waves are received simultaneously by two of the three spiral receiving antennas of the rendezvous radar. The length of the RF path to the reference antenna is compared first with the length to the azimuth antenna, then with the length to the elevation antenna. The transmission lines from the three receiving antennas are wired so that RF voltage induced in the azimuth and elevation antennas will be 180° out of phase with RF voltage induced in the reference antenna, if the transponder is on the radar boresight axis. The sum of two compared voltages will be zero. If, however, the transponder is off the boresight axis, in azimuth for instance, the path lengths to the reference antenna and to the azimuth antenna will be different. Therefore, the phase difference between the RF voltage induced in the two antennas will not be 180 degrees. As a result, there will not be complete cancellation (or a null) as before. A voltage proportional to the displacement from the boresight axis will result. This voltage is called the error voltage.

Spiral Rotation Nulls Error Voltage

The method used to null out the error voltage constitutes the interferometer method of angular measurement. This method depends upon a peculiarity of the spiral antenna. The spiral antenna shifts the phase of the RF voltage induced in it as it is rotated about its center. Therefore, the 180-degree phase difference between the azimuth and reference antennas can be obtained by rotating the azimuth antenna. The amount of azimuth antenna rotation required to get

 **PROJECT GEMINI** 

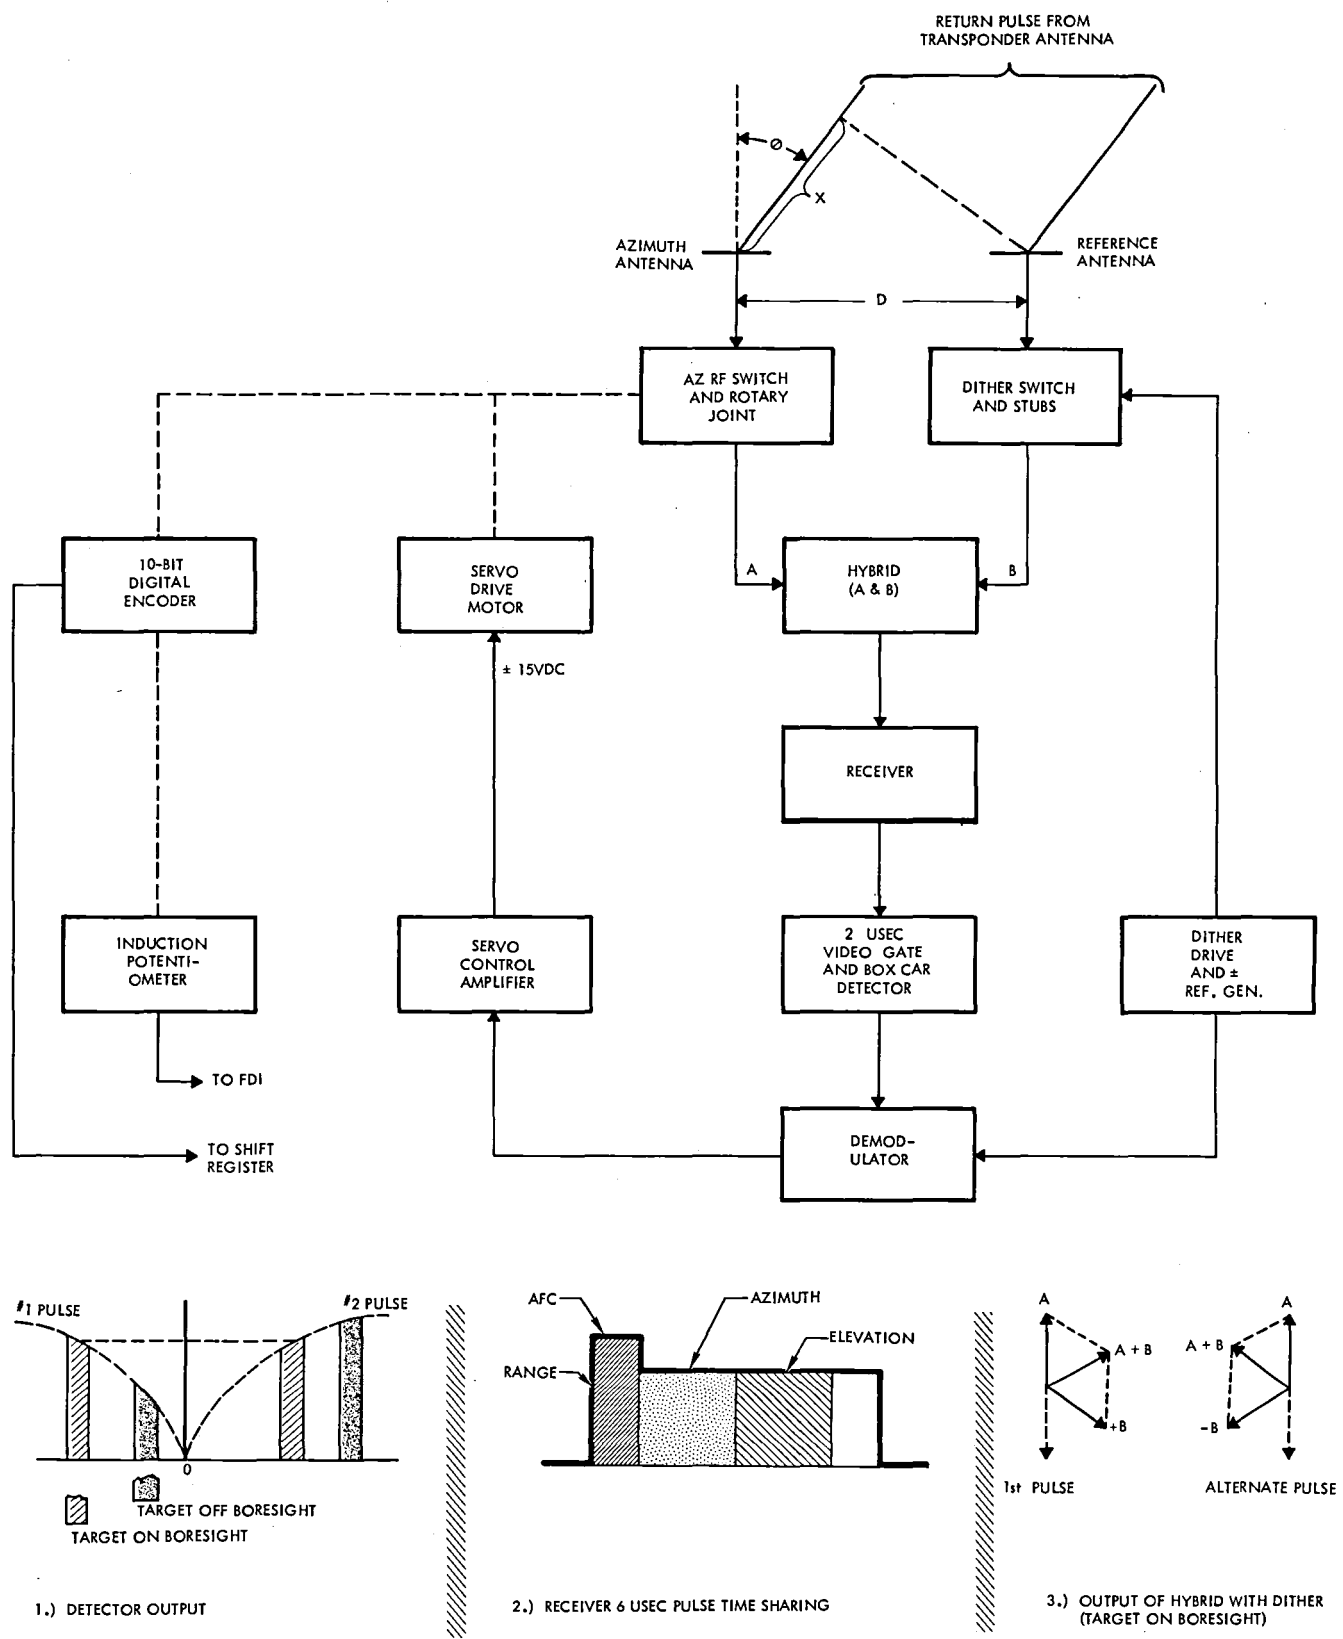


Figure 8-65 Interferometer Measurement of Target Angle

FM2-8-64



PROJECT GEMINI



the null is proportional to the target displacement in azimuth. If the error voltage is used to drive a motor which rotates the azimuth antenna, then when the null is reached, the error voltage is zero, and the motor stops rotating. The antenna also stops rotating. If a sensing device is put on the azimuth antenna which counts the angular mils of rotation or generates a voltage proportional to the rotation, a digital or analog measure of the target's angular displacement in azimuth from boresight is provided. Figure 8-65 shows that this is what is done. Displacement in elevation is measured in a similar manner.

DITHER SWITCHES

Interferometer measurement of target angle does not yield direction data. Interferometer measurement tells how much the target is off the boresight axis but not in which direction. To establish target direction, dither is added.

Dither Senses Angular Direction

The phase dither circuit contains two single-pole, double throw diode switches and two different lengths of transmission line, called stubs. The diode switches are installed in the transmission line between the reference antenna and the hybrid. One position of the diode switches is associated with the short stub of transmission line, the other position with the long stub. Successive transponder pulses are received in alternate positions of three switches. After each transponder pulse has been received, the positions of the dither switches are changed. Signals from the target on the pilot's left or from below the boresight axis are reinforced by the long stub, weakened by the short stub. Signals from the target on the pilot's right or above the boresight axis are reinforced by the short stub, weakened by the long stub. Signals along the axis are equal on both stubs but oppositely polarized; these signals average out to zero. Since



PROJECT GEMINI



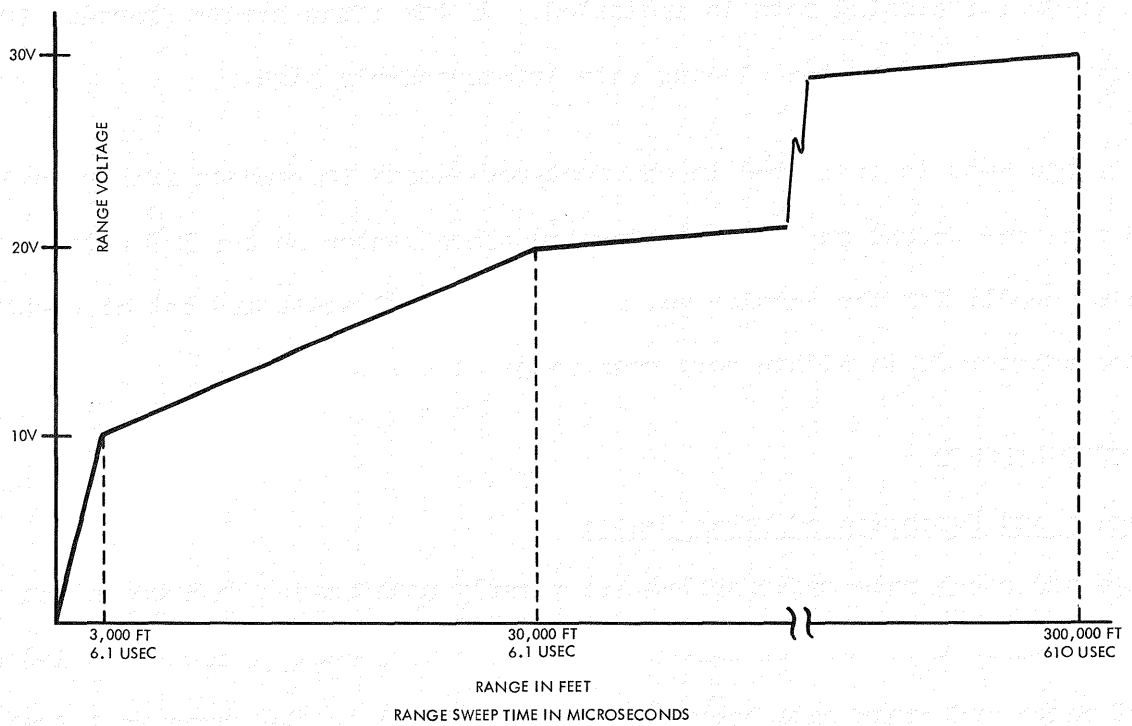


Figure 8-66 Range/Range Rate Meter and Operating Curve

FM2-8-65

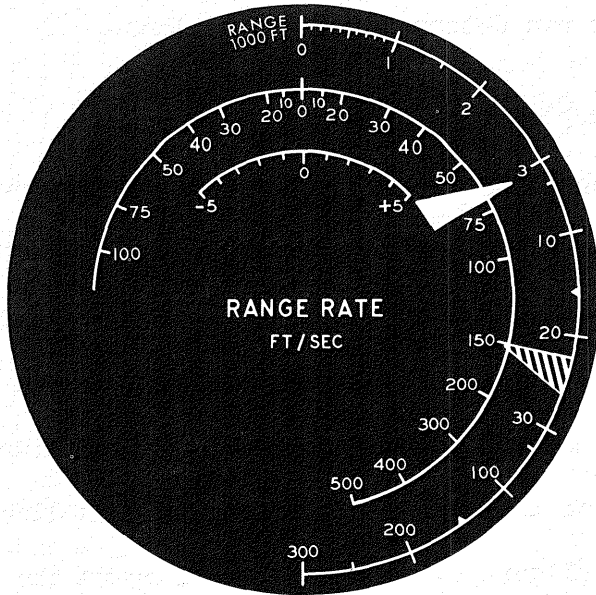

PROJECT GEMINI

 

target position is associated with a reinforced signal in a given position of the dither switches, dither can detect target directions.

RANGE AND RANGE RATE ($R/\overset{\circ}{R}$) METER

During the catch-up phase, the closing range rate in feet per second may be equal to or less than the square root of the numerical value of the range in feet. This means, for instance, that at 300,000 feet, the maximum closing range rate is 547 feet per second; at 30,000 feet, 173.2 feet per second; but at 3,000 feet, 54.7 feet per second is maximum. The range and range rate scales are arranged concentrically on the $R/\overset{\circ}{R}$ meter so that the range is on a radius directly adjacent to the maximum closing rate. (Figure 8-66) Hence, as long as the range rate needle precedes the range needle toward zero, the closing rate is not excessive. When the indicating edges of the needles coincide as the needles move toward zero, the maximum tolerable closing rate is indicated. If the range needle precedes the range rate needle toward zero, the closing rate is excessively high.

Vernier range rate is indicated in one foot-per-second increments from plus 5 to minus 5 feet per second on the scale located above center on the $R/\overset{\circ}{R}$ meter. The indicating needle for the vernier meter is usually off scale and out of sight until the spacecraft is within very near range of the target.

RANGE SWEEP CIRCUIT

Compression and Expansion of Meter Scales

The range and range rate meter scales are clearly nonlinear. Maximum values are compressed, minimum values are expanded. This is done because precision indications of range and range rate become far more critical as the range to target

UNCLASSIFIED

~~CONFIDENTIAL~~
SEDR 300



PROJECT GEMINI



closes.

Range Sweep Expansion and Compression

In order to make a current-operated meter indicate the range and range rate with high accuracy, a special range sweep circuit is used (Figure 8-66). The rate of voltage change with time during the first 6.1 microseconds of sweep is the most rapid. Thus the range indication from 0 to 3,000 feet is the most expanded. During the next 54.9 microseconds of the sweep, the voltage increased with time at about 1/9th the rate of the first 6.0 microseconds. The range indication from 3,000 to 30,000 feet is expanded to a reduced extent. During the last 549 microseconds of the sweep, the voltage increases at 1/90th the rate of the first 6.1 microseconds. The range between 30,000 and 300,000 feet is compressed into a small portion of the scale. Thus the near range is 9 times more sensitive than the middle range and 90 times more sensitive than the far range.

Range Measurement

Range is measured by sampling the sweep voltage at a time coincident with the leading edge of the transponder return pulse. The sampled voltage is stretched into a DC voltage, and applied to the range meter winding.

Range Rate Measurement

Range rate is a function of the difference in range voltages on successive transponder pulses. This voltage difference is monitored, shaped and amplified in a circuit controlled by the same logic that changes the range sweep slope. It is applied as a DC voltage to the range rate meter coil on the far and intermediate ranges, and to the vernier range rate meter coil on the near range.

UNCLASSIFIED

8-243

~~CONFIDENTIAL~~



PROJECT GEMINI



DIGITAL RANGE COUNTER

Range Gated Clock Pulse Count

A high-speed digital counter counts 10-megacycle clock pulses during the range gate to generate the digital range count. (Figure 8-61 and 8-62). The clock pulses are produced by a 10 megacycle crystal-controlled oscillator in the spacecraft radar. The range gate is started 2 microseconds after the leading edge of the interrogating pulse. This 2-microsecond delay compensates for a similar delay through the transponder. The range gate is closed by the leading edge of the transponder pulse.

Relation of Range to Clock Time

One cycle at 10 megacycles equals 0.1 microsecond or 50 feet of radar range. Digital range supplied to the computer is the average of four successive digital counts of the range to the target. Accuracies within 50 feet or 0.1 percent of the range (whichever is larger) are obtained for ranges up to 250 nautical miles.

RADAR POWER SUPPLY

 
Primary Power Requirement

Primary power to operate the rendezvous radar is obtained from the spacecraft source. Voltage from this source may vary between 22 and 30 volts DC. Noise and transients produced by various spacecraft equipment will also be present in this power. Filtering of the primary power is essential.

Electrically operated equipment in the spacecraft will reduce the voltage available from the source. The radar requires a means of maintaining its primary power voltage at a high and constant level, even though source voltage is reduced



PROJECT GEMINI



considerably.

Input Filter and Boost Regulator

Unregulated primary power is applied to the radar power supply input. An input filter removes the noise and transients. A boost regulator uses a portion of the filtered primary power to generate a voltage to add in series with the primary voltage. The voltage generated depends on the difference between 31.7 volts DC (the boost regulator output) and the primary voltage. The boost regulator generates 1.7 volts DC and adds it in series when the primary voltage is 30 volts DC. As the primary voltage decreases, the boost regulator output increases by an equal amount. (Figure 8-67.)

DC-to-AC Inverter

The DC to AC inverter changes the regulated 31.7 volts DC into 31 volts AC. The saturable reactor which is connected across the inverter stabilizes the output. The inverter energizes the power transformer. Multiple secondary windings provide all the voltages which the radar requires. Nine of the AC output voltages are rectified and filtered. Two of these, the plus and minus 15 volts DC, are used without regulation. The remaining seven rectified and filtered outputs are regulated. A short-circuit-proof circuit is built into each regulator. The regulators of the plus 120 volts DC, the plus and minus 40 volts DC, and the plus and minus 20 volts DC are each operated by the voltages they regulate. The plus and minus 6.3 volts DC do not provide a high enough voltage to operate their regulators. Therefore, additional higher voltages from the power transformer are provided to operate these regulators.



PROJECT GEMINI


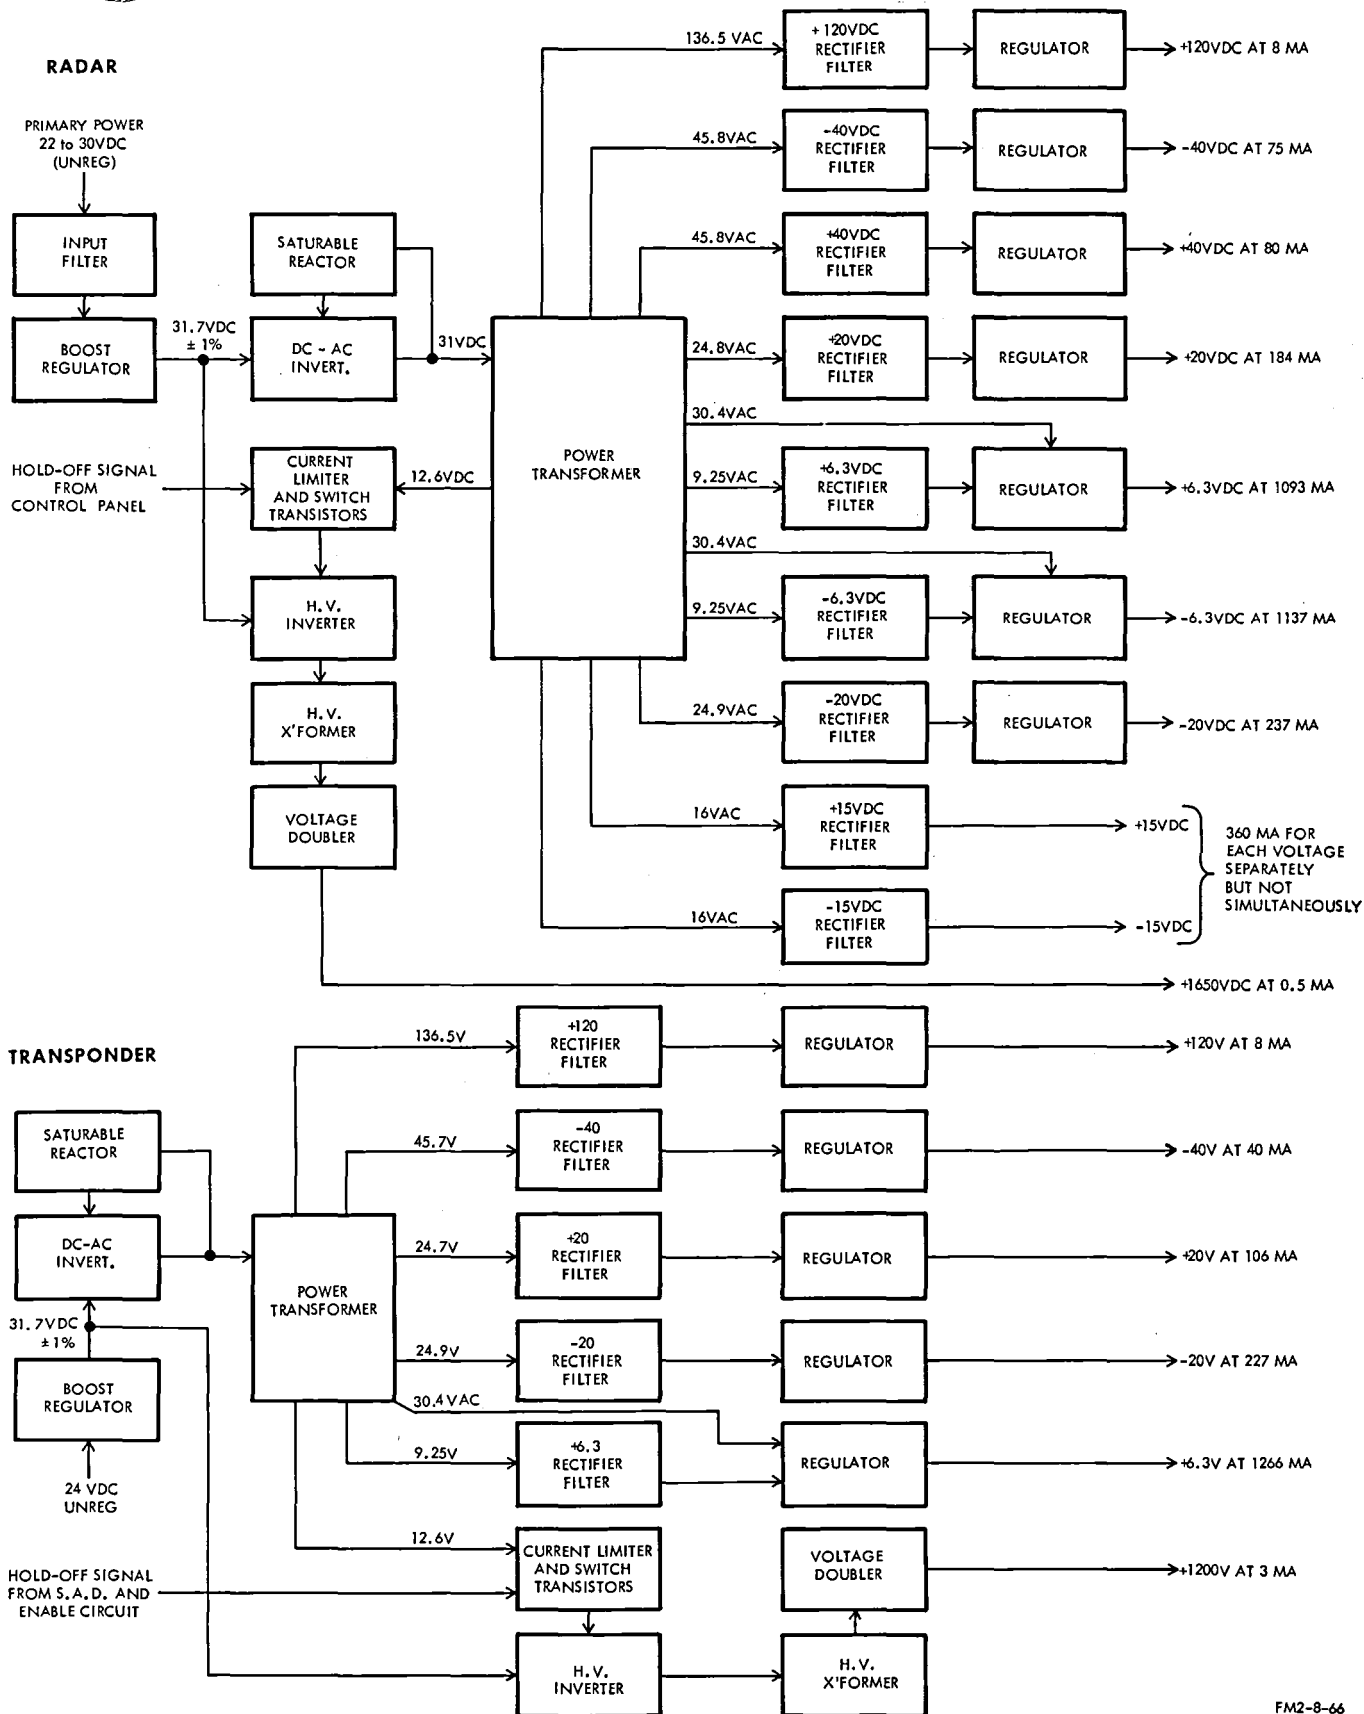


Figure 8-67 Radar and Transponder Power Supply Block Diagrams

 FM2-8-66



PROJECT GEMINI



High Voltage Power Supply

The transmitter requires plus 1650 volts DC plate voltage to produce the 1150-watt peak power interrogator pulse. A high-voltage power supply capable of generating this voltage is therefore provided. Although another winding could have been added to the power transformer to supply the high AC voltage needed, transients would be applied to the common transformer each time the transmitter was fired. Consequently, a separate DC to AC inverter and high-voltage transformer were used. Only a 6.3 volt AC switch voltage for the high-voltage inverter was taken from the common transformer. (See Figure 8-67.) In the standby state, the regulated 31.7 volts DC is applied to the high-voltage inverter. The switching voltage is applied through the current limiters to the high-voltage inverter, but is grounded out by the switching transistors which are conducting. The holdoff signal applied by the RADAR switch in the STBY position to the switching transistors causes them to conduct, preventing the high-voltage inverters from operating. When the pilot puts the radar in the search mode, he places the RADAR switch to ON. This action removes the hold off voltage, and permits the 6.3 volts AC to switch the inverter on and off. As the inverter is switched, and AC voltage is generated and applied to the high-voltage transformer. The transformer steps up this voltage and applies it to a voltage doubler. The voltage doubler rectifies and doubles the AC output of the transformer, and delivers plus 1650 volts DC to the transmitter tube plate. No high-voltage regulation is required.

TRANSPONDER POWER SUPPLY

Power Supply Similarities

By comparing the block diagrams (Figure 8-67) of the radar and transponder power

~~CONFIDENTIAL~~
SEDR 300

UNCLASSIFIED



PROJECT GEMINI



supplies, the similarities will be apparent. Both power supplies use a boost regulator, a DC to AC inverter, a power transformer, rectifiers, filters, and regulators to provide plus 120, minus 40, plus and minus 20, and plus 6.3 volt DC outputs. The same high-voltage circuitry is also used.

Transponder Power Supply Differences

Certain differences, of course, between the two power supplies do exist. The following are the differences: The transponder does not require the plus 40, minus 6.3, and plus and minus 15 volt DC power supplies. The current drains on individual supplies differ owing to the peculiar needs of the two units. The transponder high-voltage power supply is turned on when the sufficient amplitude detector triggers the enable delay circuit and removes the hold off voltage. Less transmitter power is used in the transponder to protect the solid state antenna select switch (Figure 8-62).

~~CONFIDENTIAL~~

UNCLASSIFIED

COMMAND LINK SYSTEM

TABLE OF CONTENTS

TITLE	PAGE
SYSTEM DESCRIPTION	8-251
SYSTEM OPERATION	8-256
SYSTEM UNITS	8-259
SUB BIT DETECTOR	8-259
COMMAND LINK ENCODER	8-261


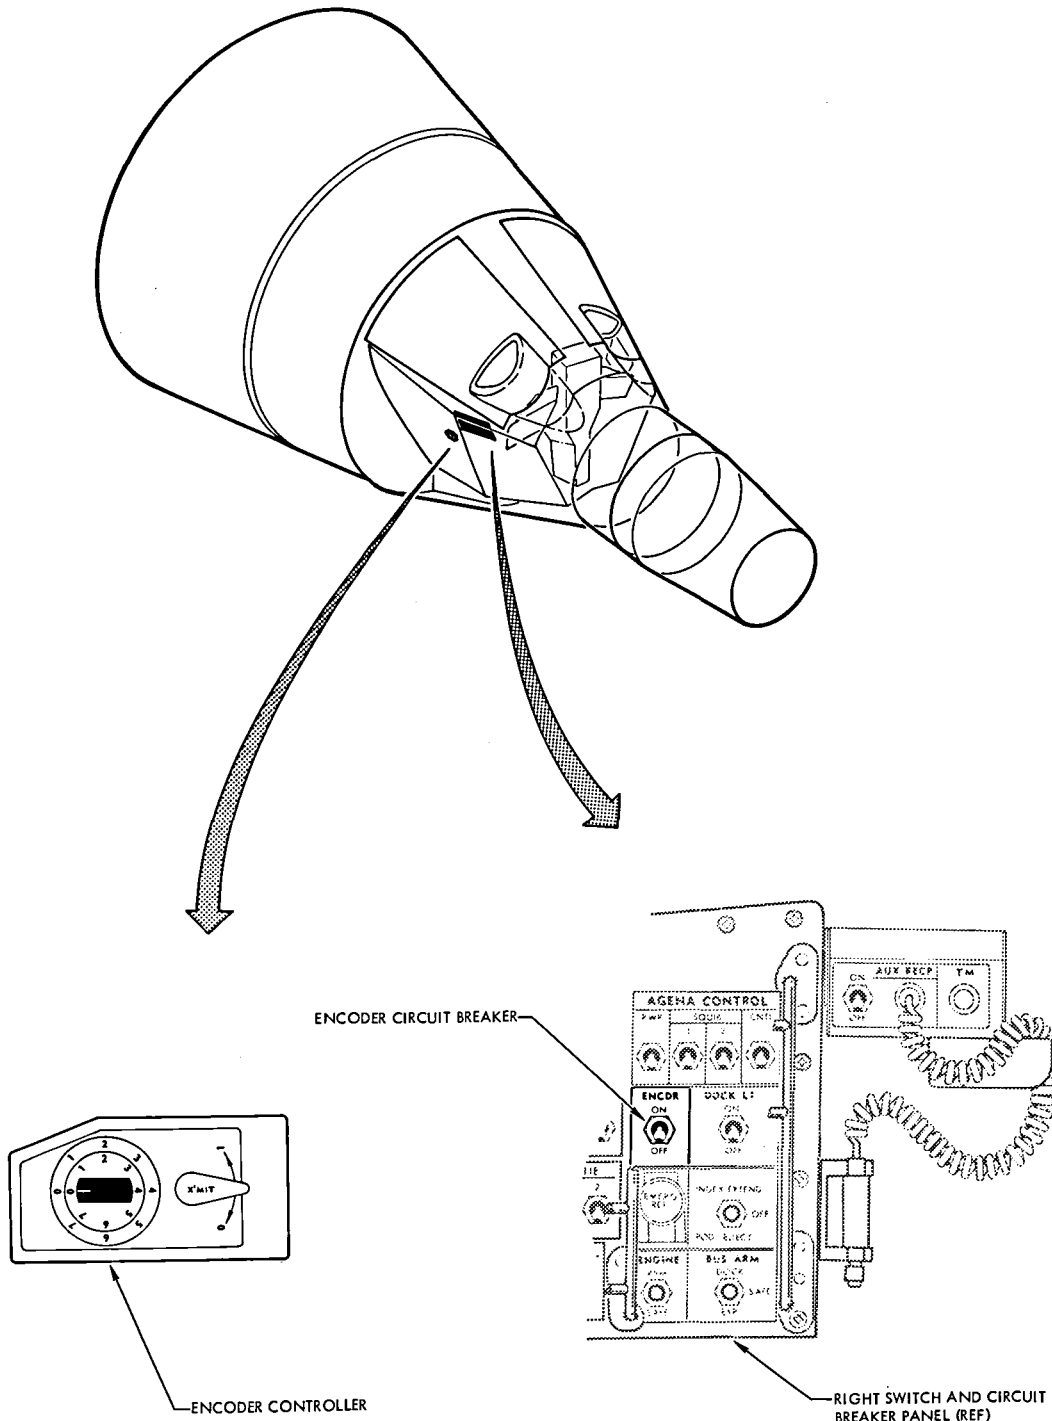


Figure 8-68 Command Link System

UNCLASSIFIED

~~CONFIDENTIAL~~
SEDR 300

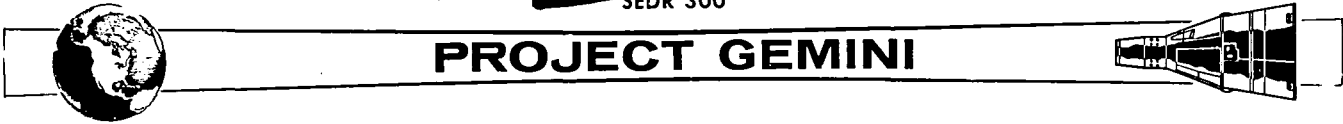

PROJECT GEMINI



COMMAND LINK SYSTEM

SYSTEM DESCRIPTION

The command link system (Figure 8-68) is incorporated into the Gemini Spacecraft to allow the spacecraft pilot to control the Agena Target Vehicle. There are a possible 128 command messages, each of which is assigned a specific number. The presently allocated commands are indicated in Table 8-3. The desired command message is inserted, by the pilot, into the encoder controller located on the right switch/circuit breaker panel. The command link system is capable of transmitting the messages by RF link prior to docking and of sending the messages by the hardline umbilical after docking (Figure 8-69).

Prior to docking the command link may be used any time after the rendezvous radar system has achieved lock-on. The desired command, consisting of 60 binary numbers, is transmitted to the target vehicle by pulse position modulation of the radar transmission. The command link control of the Agena systems is used prior to docking as a means of positioning the vehicle attitude and orbital path, of controlling the acquisition and approach lights, and of controlling the communications and instrumentation systems required for ground monitoring. The various items of electronic equipment are turned on as required and are then turned off to conserve power.

After docking has taken place and the radar has been de-energized, the command link messages are routed through the hardline umbilical. The method by which the pilot inserts the desired message remains unchanged. The purpose of the rendezvous is to provide additional attitude and maneuvering capabilities for the Gemini spacecraft. The Command Link System provides the pilot with the

UNCLASSIFIED

8-251

~~CONFIDENTIAL~~

PROJECT GEMINI

TABLE 8-3
 COMMAND FUNCTION LIST
 AGENA TARGET VEHICLE

SPACECRAFT COMMAND NUMBER	REAL TIME COMMAND	COMMAND TITLE
001	0000001	C-Band Beacon On
010	0000010	S-Band Beacon On
011	0000011	Modulation Bus Select Normal
020	0000100	Modulation Bus Select Reverse
021	0000101	Telemetry On
030	0000110	Telemetry Off
031	0000111	Stored Data Readout
041	0001001	Record Data
050	0001010	"C" and "S" Band Beacons Off
060	0001100	Reset Timer Reset
061	0001101	Time Word Reset
070	0001110	L-Band Beacon Off
071	0001111	L-Band Beacon On
140	0011000	Approach Lights Off
141	0011001	Approach Lights On
151	0011011	Extend Boom Antenna
160	0011100	Antenna Transfer, Ascent
161	0011101	Antenna Transfer, Orbit
200	0100000	Agema Status Display Off
201	0100001	Agema Status Display On Bright
211	0100011	Agema Status Display On Dim

UNCLASSIFIED

~~CONFIDENTIAL~~
SEDR 300



PROJECT GEMINI



TABLE 8-3 (Continued)
COMMAND FUNCTION LIST
AGENA TARGET VEHICLE

SPACECRAFT COMMAND NUMBER	REAL TIME COMMAND	COMMAND TITLE
220	0100100	Adapter Unrigidize
221	0100101	Adapter Ridigize
240	0101000	Stored Program Commands Disable
241	0101001	Stored Program Commands Enable
250	0101010	Acquisition Lights Off
251	0101011	Acquisition Lights On
260	0101100	Dipole Select
270	0101110	Spiral Select
271	0101111	Power Relay Reset
300	0110000	Horizon Sensor Off
301	0110001	Horizon Sensor On
310	0110010	Roll Horizon Sensor to Yaw, Inertial Reference Package On
311	0110011	Pitch Horizon Sensor to Yaw, Inertial Reference Package On
320	0110100	Horizon Sensor to Yaw Out of Phase
321	0110101	Horizon Sensor to Yaw in Phase
340	0111000	Velocity Meter Interrogate
341	0111001	Gyrocompassing On
350	0111010	Geocentric Rate Off
351	0111011	Geocentric Rate On

UNCLASSIFIED

8-253
~~CONFIDENTIAL~~

UNCLASSIFIED

~~CONFIDENTIAL~~
SEDR 300



PROJECT GEMINI



TABLE 8-3 (Continued)
COMMAND FUNCTION LIST
AGENA TARGET VEHICLE

SPACECRAFT COMMAND NUMBER	REAL TIME COMMAND	COMMAND TITLE
360	0111100	Geocentric Rate Reverse
361	0111101	Geocentric Rate Normal
370	0111110	Attitude Control System Pressure Low
371	0111111	Attitude Control System Pressure High
400	1000000	Attitude Control System Off
401	1000001	Attitude Control System On
410	1000010	Pitch/Yaw Minus
411	1000011	Pitch/Yaw Plus
420	1000100	Pitch/Yaw Low Rate
421	1000101	Pitch/Yaw High Rate
430	1000110	Pitch Rate Off
431	1000111	Pitch Rate On
440	1001000	Yaw Off
441	1001001	Yaw On
450	1001010	Attitude Control System Deadband Narrow
451	1001011	Attitude Control System Deadband Wide
460	1001100	Attitude Control System Gain Low
470	1001110	Attitude Control System Gain High - Undocked
471	1001111	Attitude Control System Gain High - Docked

UNCLASSIFIED

8-254

~~CONFIDENTIAL~~

UNCLASSIFIED

~~CONFIDENTIAL~~
SEDR 300



PROJECT GEMINI



TABLE 8-3 (Continued)
COMMAND FUNCTION LIST
AGENA TARGET VEHICLE

SPACECRAFT COMMAND NUMBER	REAL TIME COMMAND	COMMAND TITLE
500	1010000	Primary Propulsion System Cutoff
501	1010001	Primary Propulsion System Start
520	1010100	Velocity Meter Disable
521	1010101	Velocity Meter Enable
530	1010110	Velocity Meter Load "0"
531	1010111	Velocity Meter Load "1"
540	1011000	Velocity Meter to Mode IV Off
541	1011001	Velocity Meter to Mode IV On
550	1011010	Secondary Propulsion System Thrust Cutoff
551	1011011	Secondary Propulsion System 16# Thrust Initiate
560	1011100	Secondary Propulsion System 200# Thrust Initiate
561	1011101	Secondary Propulsion System Ready
570	1011110	Hydraulics Gain - Undocked
571	1011111	Hydraulics Gain - Docked

UNCLASSIFIED

~~CONFIDENTIAL~~
8-255

UNCLASSIFIED

~~CONFIDENTIAL~~
SEDR 300



PROJECT GEMINI



required control over these capabilities and to unlatch from the Agena at the completion of the mission.

SYSTEM OPERATION

The Command Link System is not capable of operation until after the Gemini rendezvous radar has locked onto the Agena transponder. The right switch/circuit breaker panel ENCDR ON circuit breaker energizes the encoder thereby enabling the transmission of messages. The only effect of the Command Link System upon the rendezvous interrogate radar is the changing of the pulse repetition frequency from the internal generated 250 pulses per second to the more stable Time Reference System generated 256 pulses per second.

The Gemini pilot is provided with a list of up to 128 possible command function words and a corresponding three digit number for each command. As an example the "target docking adapter acquisition lights on" command number is 2 5 1. The acquisition lights command would be initiated by adjusting the encoder controller to the following positions; the outer octal dial is turned to 2, the inner octal dial is turned to 5, and the binary switch is positioned to 1 and held until the message cycle described in this section is completed.

The encoder controller output is a seven bit binary word, three binary bits indicating each octal number and one binary bit corresponding to the XMIT switch. The command message is added to the vehicle address, consisting of two binary bits, and the system address, consisting of three binary bits. The vehicle address used is the two binary numbers "1 1", the system address is "1 0 1". It is therefore seen that the complete command function word is as follows:

UNCLASSIFIED

8-256

~~CONFIDENTIAL~~



<u>VEHICLE ADDRESS</u>	<u>SYSTEM ADDRESS</u>	<u>COMMAND</u>		
		2	5	1
1 1	1 0 1	0 1 0	1 0 1	1

The positioning of the XMIT switch to either the "1" or the "0" position also initiates a one time transmission of the command.

The command link data transmission is accomplished in the following manner. The Time Reference System provides two trigger pulses to the encoder, both having a repetition rate of 256 pulses per second. One pulse will be referred to as occurring at time zero (T_0) and the other at time zero plus 15.2 microseconds ($T_0 + 15.2$). At the time the ENCDR ON circuit breaker is turned "ON" the radar commences being pulsed by the T_0 pulse from the Time Reference System. The transmit command, initiated by the XMIT switch, causes the information bit to be taken, one at a time commencing with the vehicle address, and further encoded into five binary sub-bits. The encoder affects pulse position modulation of the radar interrogate transmission by allowing the T_0 pulse to trigger the radar to indicate a "0" or the $T_0 + 15.2$ pulses to trigger the radar to indicate a "1".


The interrogate transmission, at the repetition rate of 256 pulses per second, is received at the Agena transponder. The transponder receiver video signal is applied to the sub-bit detector. The sub-bit detector contains an oscillator which is synchronized with the received interrogate "0" pulse. The oscillator provides two gates, one which occurs in synchronism with the T_0 pulse and another with the $T_0 + 15.2$ pulse. The coincidence of the received pulse with one of the above gates results in the identification of the pulse modulation. A decoded "0" generates a 25 microsecond pulse across the message complement (\bar{M}) Output and a

UNCLASSIFIED


8-258

Figure 8-69 Command Link System Block Diagram

FM2-8-68

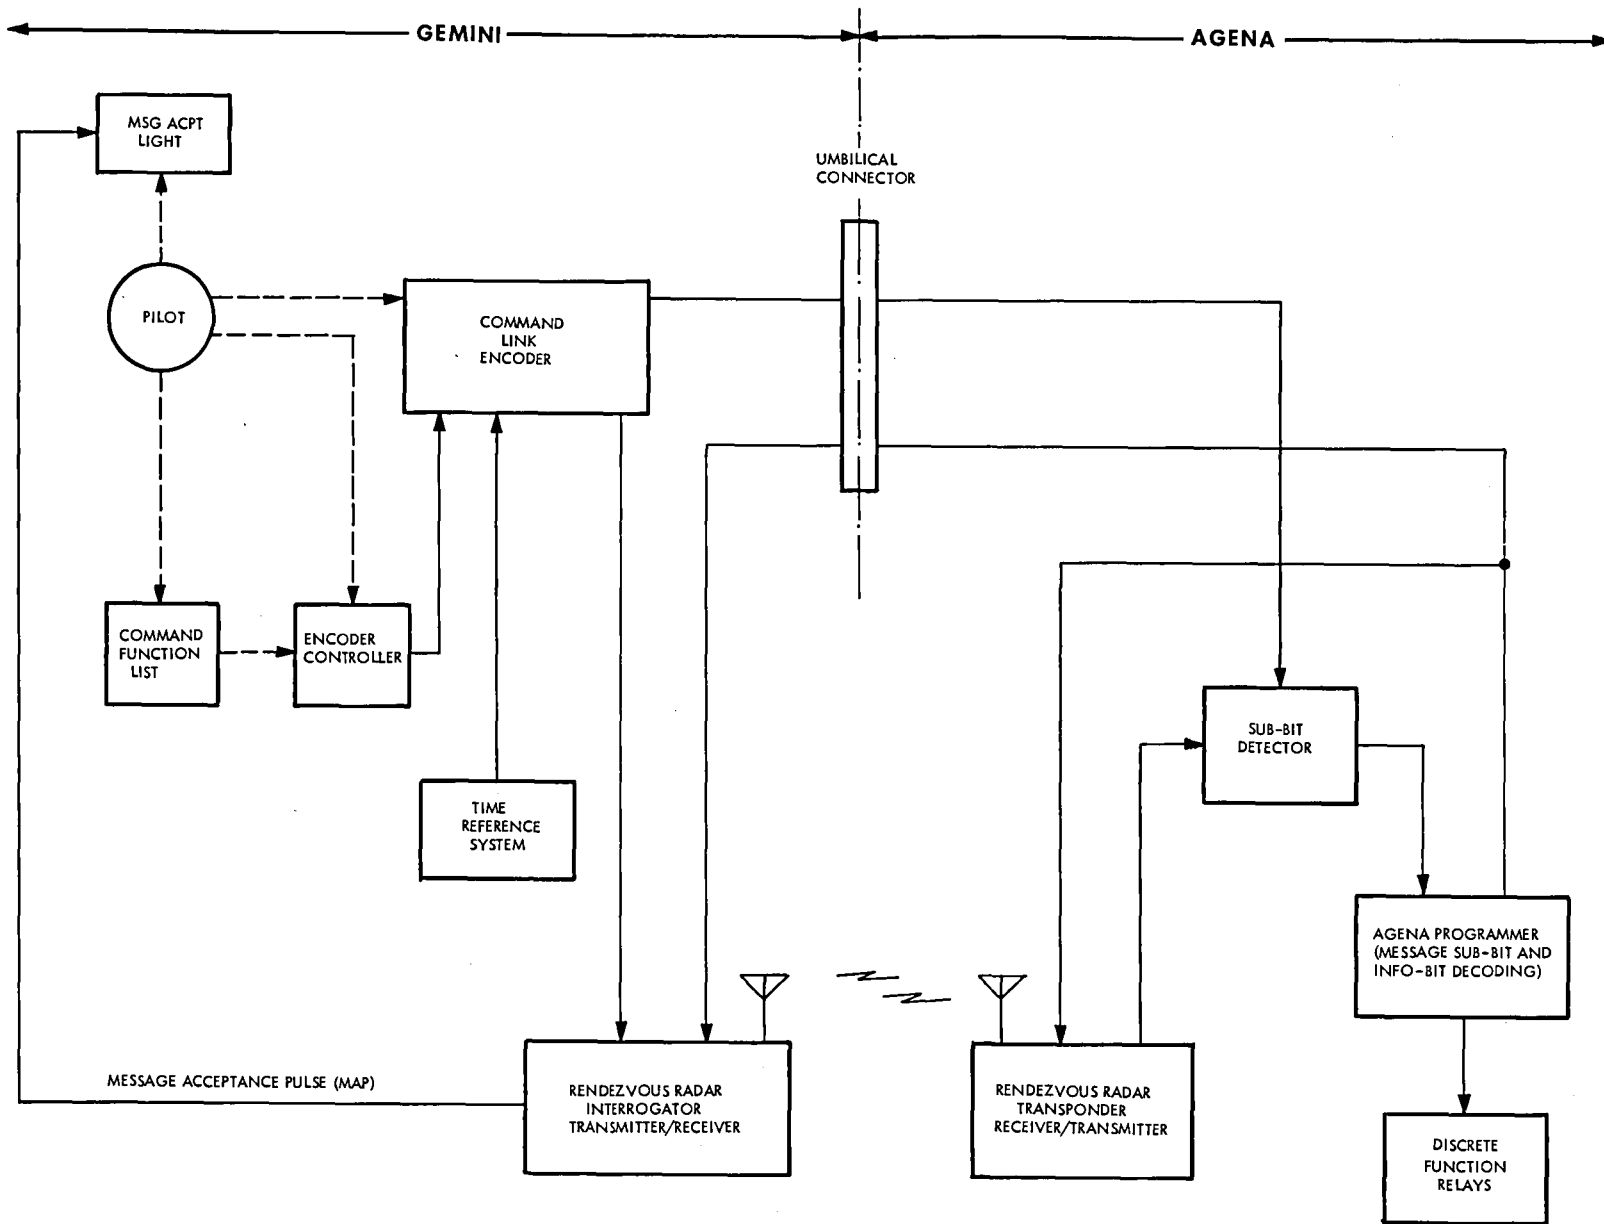

UNCLASSIFIED
PROJECT GEMINI

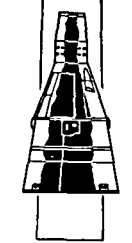

decoded "1" generates a 25 microsecond pulse across the Message (M) Output. These pulses are provided to the Agena programmer.

The Agena programmer converts the 60 sub-bits back into the 12 information bits. The programmer verifies that the sub-bit code is correct, that the vehicle and system address is correct, and that an acceptable message was received. If the aforementioned requirements are met the programmer will provide a Message Acceptance Pulse (MAP) to the transponder. The MAP causes three consecutive transmissions from the transponder to shift from the normal six microsecond pulse width to ten microseconds. The radar detects the additional pulse width and causes the Message Accept (MSG ACPT) light, located on the encoder controller to illuminate for a period of 2.5 seconds.

The illumination of the MSG ACPT light indicates to the pilot that an acceptable message has been received by the Agena. At this time the pilot may release the XMIT switch.

SYSTEM UNITS

SUB-BIT DETECTOR


The purpose of the sub-bit detector (Figure 8-70) is the conversion of the radar transmitted pulse modulation to a pulse form indicative of the "0" and "1" sub-bit code. The sub-bit detector is also used to control the sending of the message acceptance pulse (MAP) to the Gemini spacecraft.

Prior to lock-up of the command link system the sub-bit detector is held in a standby state by the incorporation of a pre-acquisition loop. The variable frequency oscillator, driven at a rate of 253 cycles per second, is insensitive

UNCLASSIFIED

8 260


Figure 8-70 Encoder Block Diagram

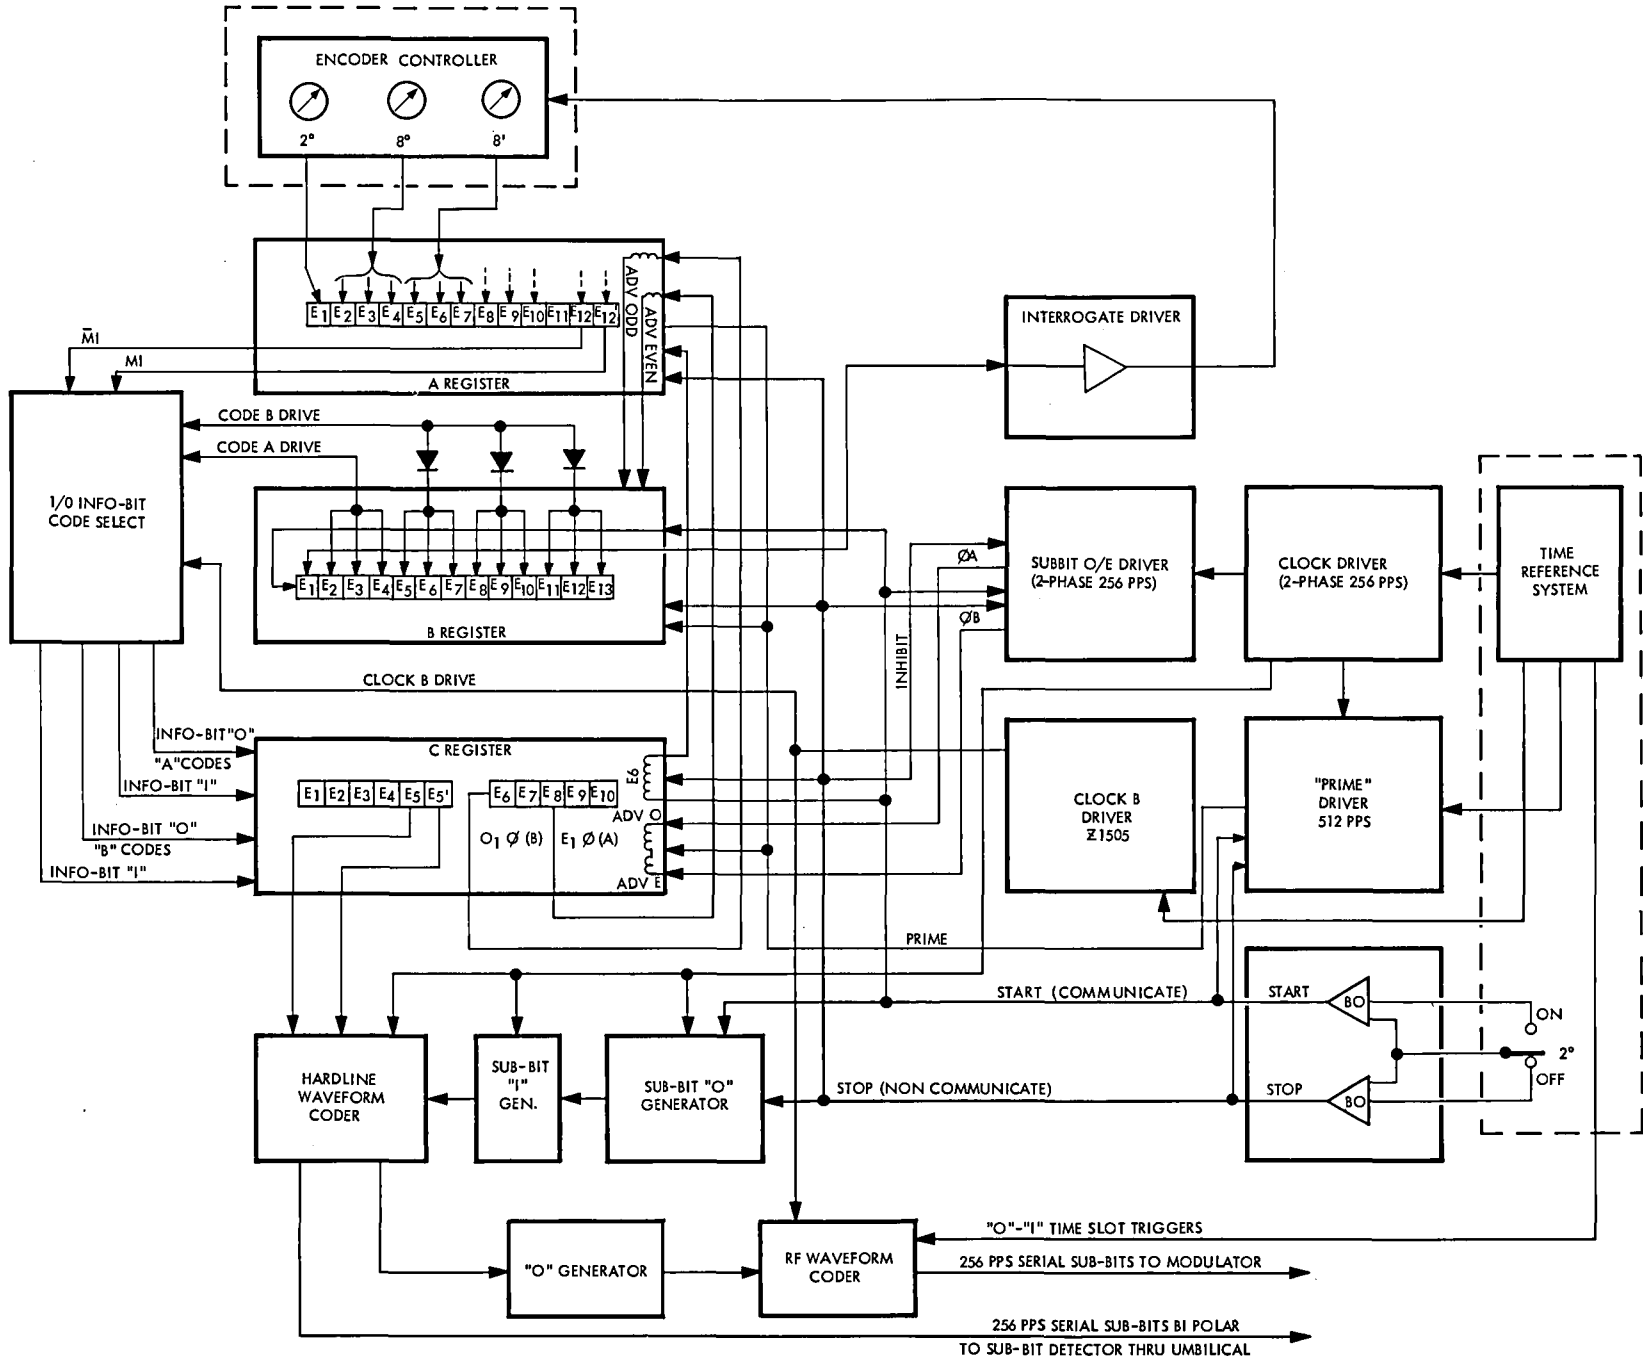

FM 2-6-63



 PROJECT GEMINI



UNCLASSIFIED

UNCLASSIFIED
SEDR 300



to lesser frequencies. The modulated radar transmission is applied to the detector in two forms, the transponder receiver video pulse and a pulse in synchronism with the leading edge of the video. The sync pulse is applied to the oscillator thereby causing the frequency to increase to 256 cycles per second and synchronizing the early and late gates to the incoming video pulse

The early gate and late gate, initiated by the variable frequency oscillator, are for tracking the interrogate pulse repetition frequency and detecting the transmission of the pulse corresponding to the binary sub-bit "0". The two gates are each 0.75 microseconds in width and are so related that the trailing edge of the early gate abuts on the leading edge of the late gate. The combined width of the gates is slightly more than the video pulse. The video pulse is to be centered equally between the two gates; any deviation from this condition will result in an appropriate control voltage applied to the variable frequency oscillator.

The radar modulation is determined by observing the presence of the radar transmission in either the combined early and late gate or the "one" gate, a 1.5 microsecond gate occurring 15.2 microseconds from the leading edge of the early gate. The continuous transmission of the sub-bit "0" enables the synchronization of the variable frequency oscillator. A slow frequency control loop provides memory so that a command message may be sent and the oscillator will maintain the correct "0" and "1" time relationship.

The sub-bit detector provides a 25 microsecond pulse over the message line to indicate a "1" and a 25 microsecond pulse over the message complement line to indicate a "0". These pulses, along, with a sync pulse which occurs for either "0" or "1", are then coupled to the Lockheed computer.


UNCLASSIFIED



8-262

Figure 8-71 Decoder Block Diagram

FM2-8-70

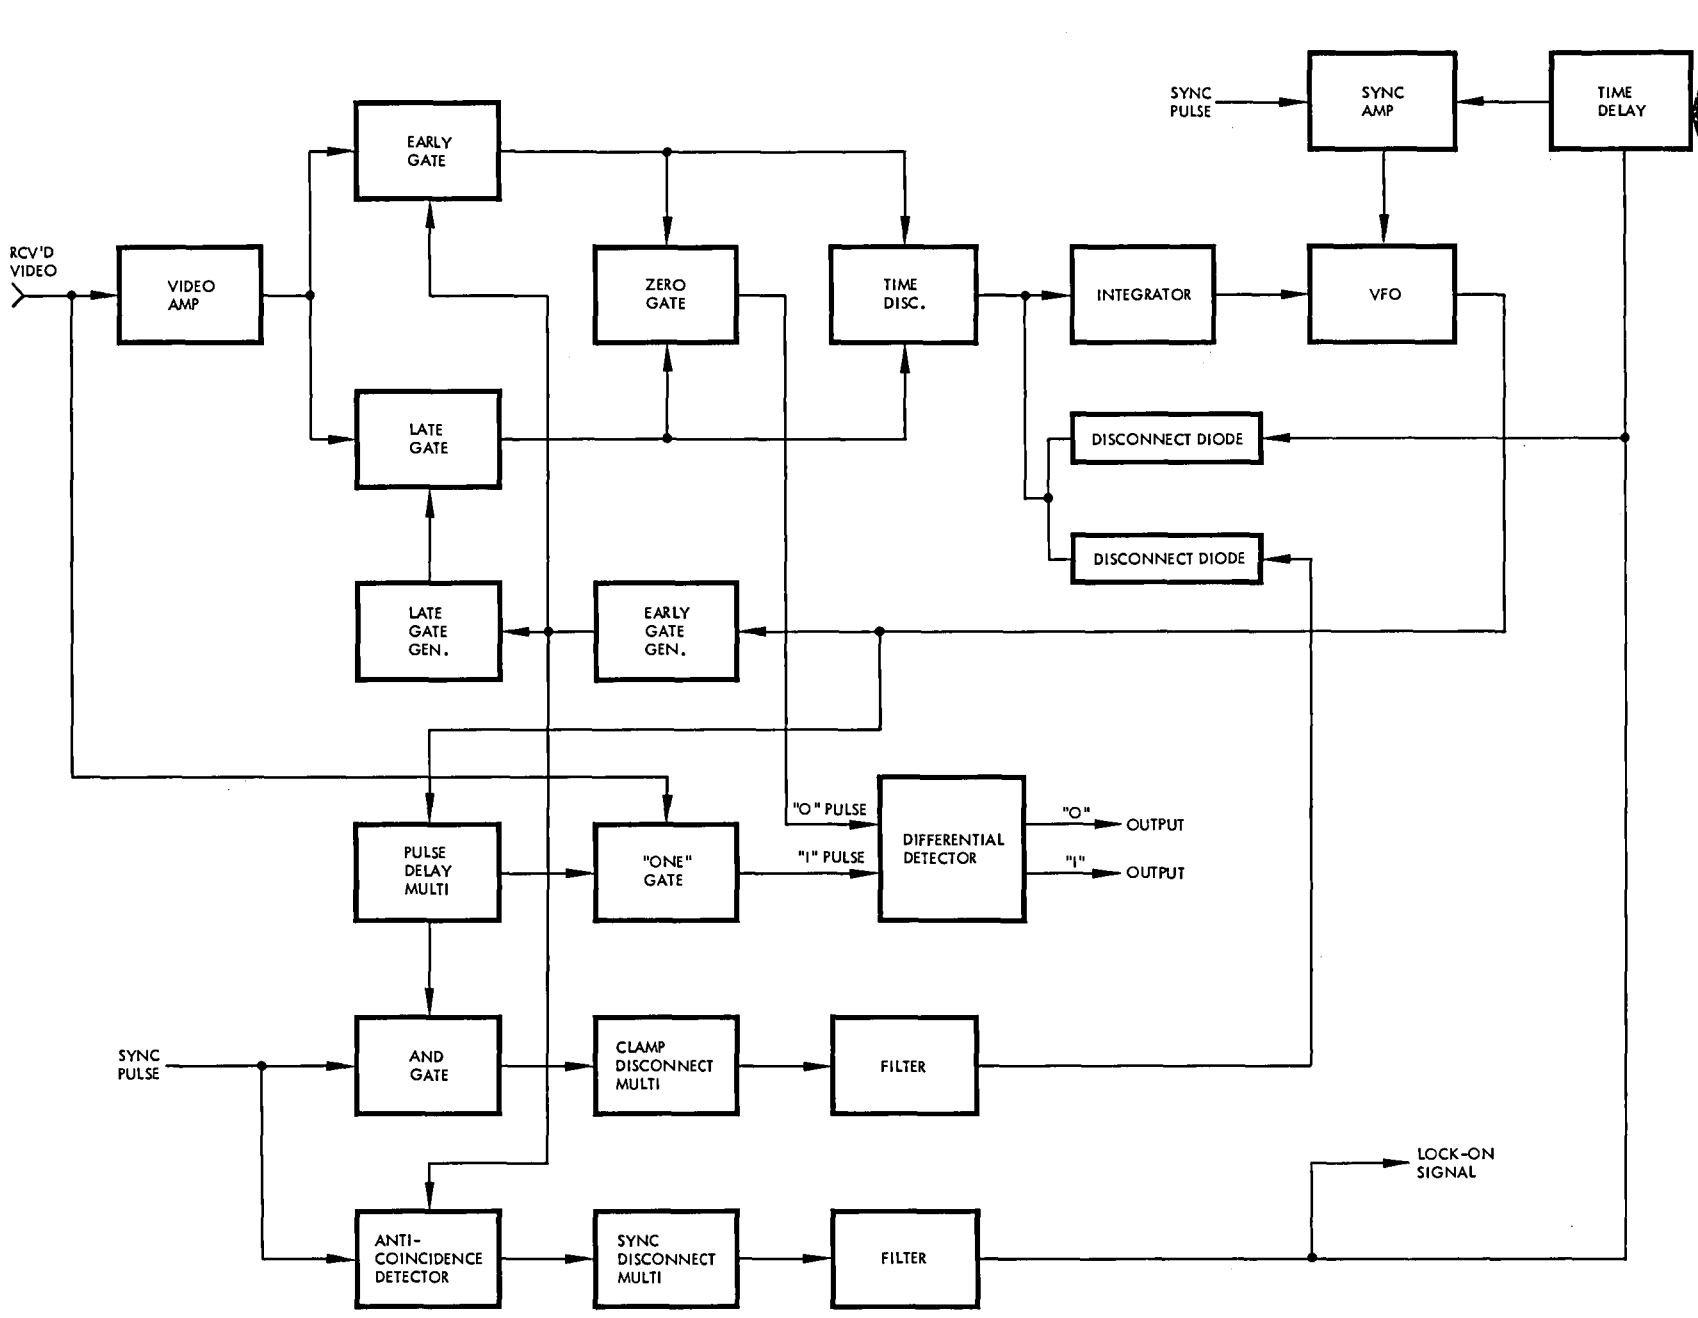


UNCLASSIFIED



SEDR 300

PROJECT GEMINI

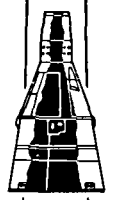

UNCLASSIFIED

~~CONFIDENTIAL~~
SEDR 300



PROJECT GEMINI



COMMAND LINK ENCODER

The command link encoder (Figure 8-71) is provided to link the commands entered into the encoder controller, by the Gemini spacecraft pilot, to the Agena vehicle via two completely separate communication channels. The channel initially used is the RF link using the rendezvous radar transmission as a carrier, the link used after the docking maneuver is the hardline umbilical.

The command link message is comprised of 12 binary information bits, a vehicle address, a system address, and a command function word. The initial portion of the message, the vehicle address consisting of two information bits and the system address consisting of three information bits, are fixed in content. The command function word is made up of seven information bits, thereby allowing 128 possible commands.

The task of entering a command by manipulating seven switches, each having binary states, is undesirable from a human factors standpoint. An octal form of coding, entered by two octal switches and a binary switch, is selected for use by the spacecraft pilots. The pilot is provided with a list showing the individual commands and the corresponding three digit number. The message is entered into the encoder controller located on the right switch/circuit breaker panel. The encoder switches establish a unique current routing path through a twelve bit multiaperture magnetic core shift register in the encoder for each of the 128 possible commands. The setting of the encoding switches, which represent a particular command function word, are interrogated and encoded into the infobit shift register as magnetization states of magnetic cores by means of the interrogate current pulse generated by the encoder subsequent to actuation of the XMIT switch.

UNCLASSIFIED

8-263

~~CONFIDENTIAL~~

UNCLASSIFIED

~~CONFIDENTIAL~~
SEDR 300



PROJECT GEMINI



The twelve infobits are shifted sequentially in information bit message ("1") and message complement ("0") form from the infobit shift register and further encoded, one at a time, into another shift register in accordance with pseudo-random sub-bit code. Each infobit is encoded into five sub-bits which are shifted sequentially in sub-bit message ("1") and message complement ("0") form at a 256 pulses per second rate to the hardline waveform coder. The complete message format, as a consequence of the encoding process, is a serial group of 60 sub-bits. For the hardline link the binary coded message is presented to the Agena sub-bit detector, located in the transponder, as bipolar RZ signals. For the RF link, the sub-bit message and message complement signals are pulse position modulated by the RF waveform coder in the encoder and are connected to the grid modulator of the radar. The method of pulse position modulation used will cause a normal radar pulse, indicative of the sub-bit message "0", to be transmitted in the first defined time slot while a sub-bit message "1" will cause transmission of an R.F. pulse delayed 15.2 microseconds from the normal, or "0" position.

UNCLASSIFIED

8-264

~~CONFIDENTIAL~~

UNCLASSIFIED

~~CONFIDENTIAL~~

RENDEZVOUS EVALUATION POD

TABLE OF CONTENTS

TITLE	PAGE
SYSTEM DESCRIPTION	8-267
SYSTEM OPERATION	8-267
SYSTEM UNITS	8-270
TRANSPONDER	8-270
ANTENNA SYSTEM	8-270
FLASHING LIGHT BEACONS	8-271
SQUIB BATTERIES	8-272
RENDEZVOUS POD COVER	8-274

UNCLASSIFIED

8-265

~~CONFIDENTIAL~~

~~CONFIDENTIAL~~
SEDR 300

UNCLASSIFIED

PROJECT GEMINI

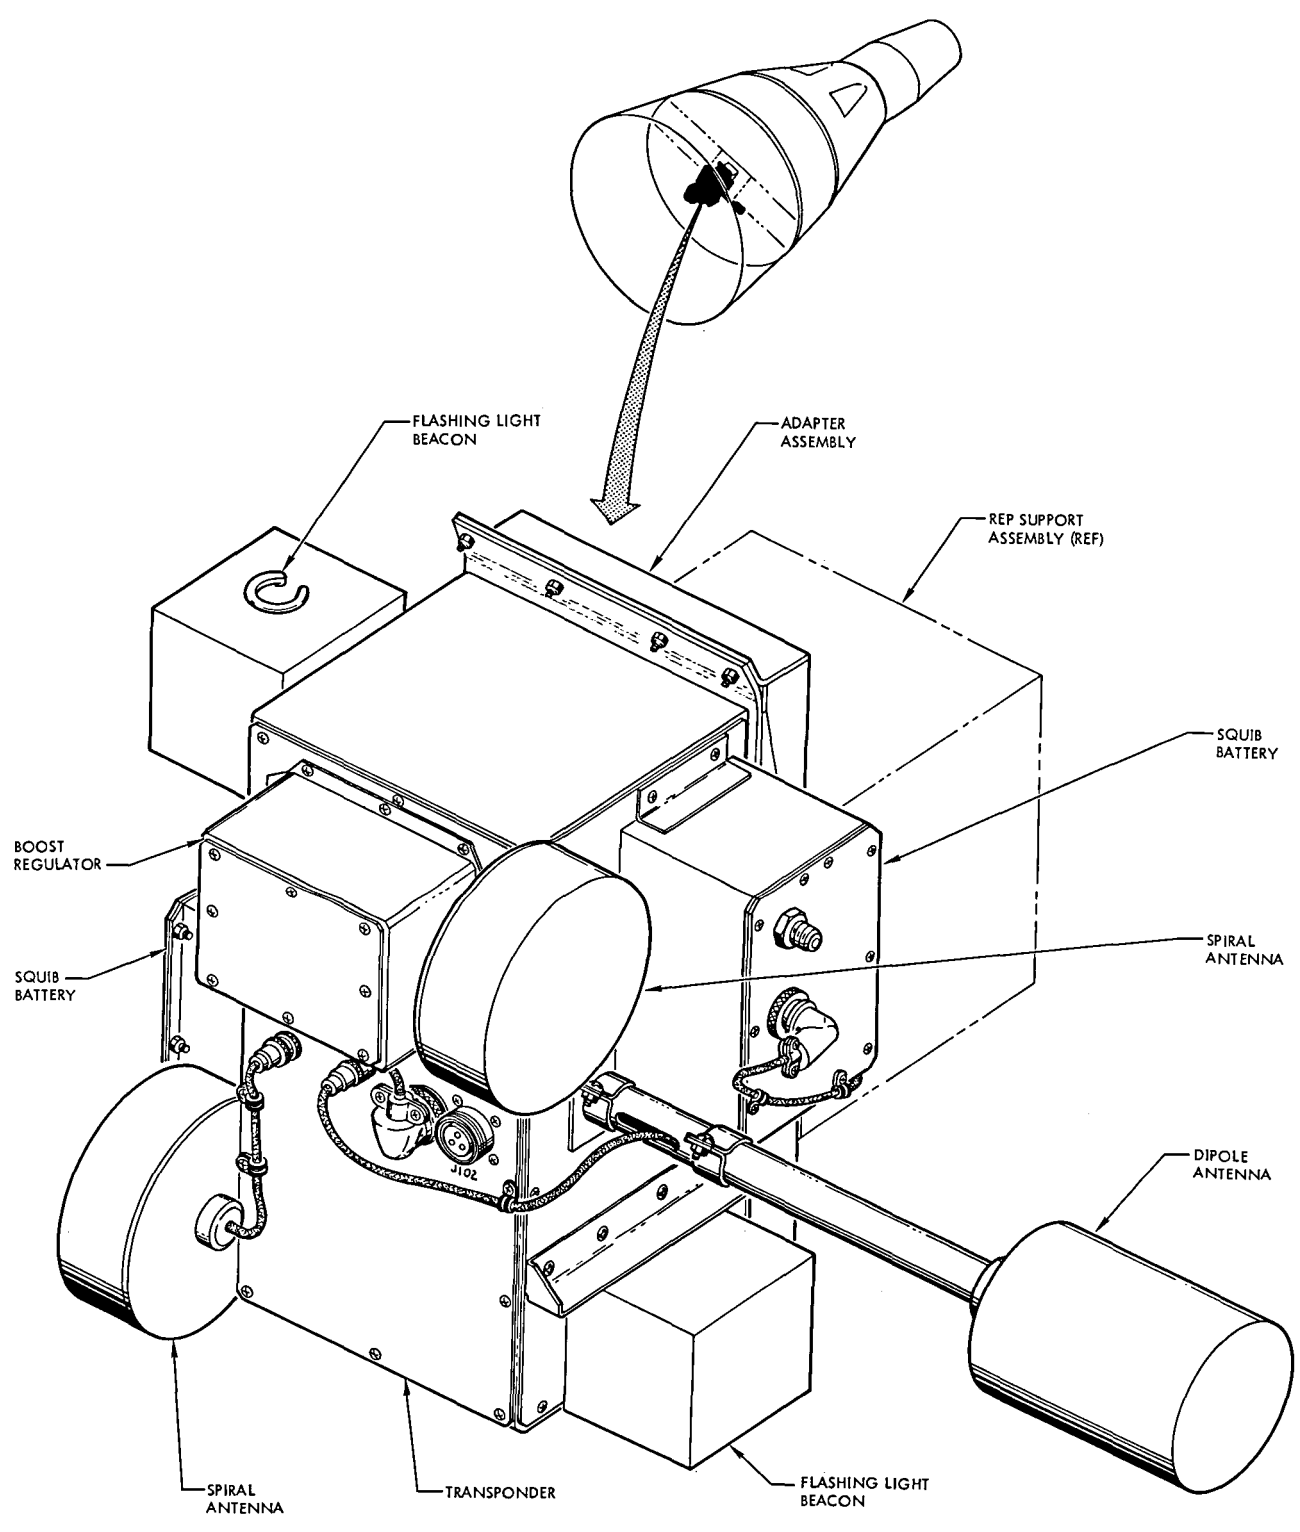
 


Figure 8-72 Rendezvous Evaluation Pod

FM2-8-71

UNCLASSIFIED

8-266

~~CONFIDENTIAL~~

UNCLASSIFIED

~~CONFIDENTIAL~~
SEDR 300

PROJECT GEMINI

RENDEZVOUS EVALUATION POD

SYSTEM DESCRIPTION

The Rendezvous Evaluation Pod (REP) (Figure 8-22) is an assembly used to simulate the Agena Target Vehicle during Gemini Spacecraft mission number 5. The REP is initially installed in the center of the equipment adapter section of the spacecraft (Figure 8-71). Thermal protection for the REP prior to ejection is provided by the rendezvous pod cover. After the spacecraft has been inserted into a satisfactory orbit, the REP is ejected into orbit by a pyrotechnic charge. The REP consists of a transponder, two antenna systems, two flashing light beacons, and two squib batteries. The transponder is nearly identical to the transponder installed in the Agena. The flashing light beacons, which emit 80 ± 1 flashes per minute, are visible for approximately twenty miles. These beacons enable the crew to gain tracking experience by visually observing the REP in space at measured distances from the spacecraft against both earth and sky backgrounds. This experience is used to determine the placement and intensity required for the Agena acquisition lights. The REP also provides a means of studying the man/equipment interface problems which might be encountered during an actual rendezvous mission with the Agena.

SYSTEM OPERATION



The Rendezvous Evaluation Pod (REP) is ejected from the spacecraft near the end of the first orbit. Other activities related to the REP occur primarily during the second orbit. During the first 65 minutes after lift-off, the REP remains stationary in the equipment adapter section of the spacecraft (Figure 8-73).

UNCLASSIFIED

8-267

~~CONFIDENTIAL~~

PROJECT GEMINI

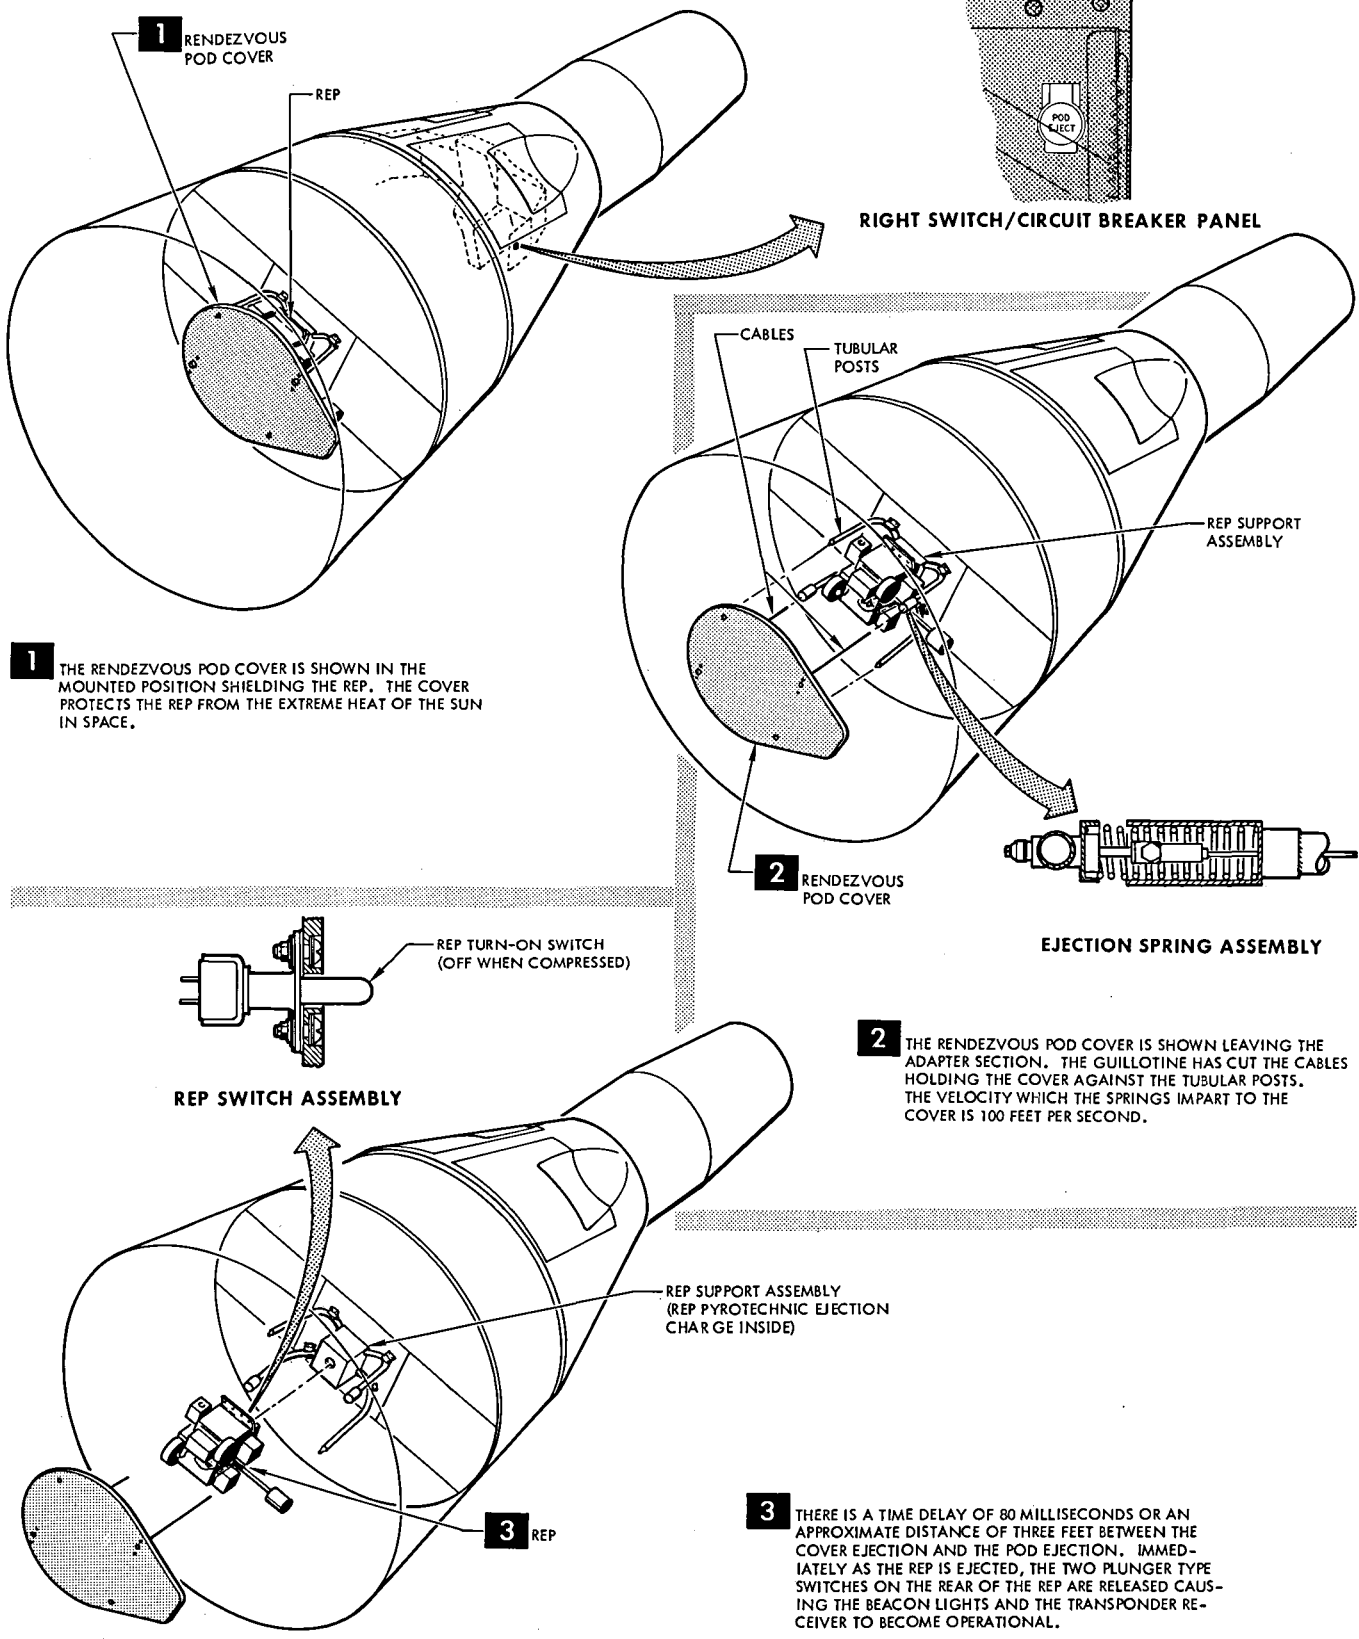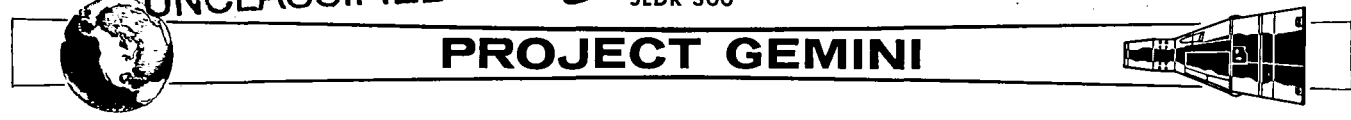

1 THE RENDEZVOUS POD COVER IS SHOWN IN THE MOUNTED POSITION SHIELDING THE REP. THE COVER PROTECTS THE REP FROM THE EXTREME HEAT OF THE SUN IN SPACE.

2 THE RENDEZVOUS POD COVER IS SHOWN LEAVING THE ADAPTER SECTION. THE GUILLOTINE HAS CUT THE CABLES HOLDING THE COVER AGAINST THE TUBULAR POSTS. THE VELOCITY WHICH THE SPRINGS IMPART TO THE COVER IS 100 FEET PER SECOND.

3 THERE IS A TIME DELAY OF 80 MILLISECONDS OR AN APPROXIMATE DISTANCE OF THREE FEET BETWEEN THE COVER EJECTION AND THE POD EJECTION. IMMEDIATELY AS THE REP IS EJECTED, THE TWO PLUNGER TYPE SWITCHES ON THE REAR OF THE REP ARE RELEASED CAUSING THE BEACON LIGHTS AND THE TRANSPONDER RECEIVER TO BECOME OPERATIONAL.

Figure 8-73 Mounting and Ejection of Cover and Rendezvous Evaluation Pod

FM2-8-72

UNCLASSIFIED

~~CONFIDENTIAL~~
SEDR 300



PROJECT GEMINI



The REP has two spring-loaded, plunger-type switches (Figure 8-73) which control the battery power to the beacon lights and the transponder. Prior to ejection these normally closed switches are held depressed (open) so that power is conserved. The pilot will eject the REP approximately fifteen minutes prior to the first perigee. The spacecraft will yaw left 90° and the POD EJECT switch located on the right switch/circuit breaker panel (Figure 8-69) will be depressed. Pushing the POD EJECT switch activates two pyrotechnic charges (Figure 8-73). One charge drives a guillotine type cable cutter which severs the two cables shown in Figure 8-73. The cables, when released, allow the two compressed springs to expand, thereby propelling the rendezvous pod cover from the rear of the spacecraft. The relative ejection velocity of the cover is 100 feet per second. The other charge, initiated after an 80 millisecond time delay, propels the REP from the spacecraft with the relative velocity of 3.4 feet per second. The cover will not interfere with the ejection of the REP since the ejection velocity of the cover is much greater than and is prior to the ejection of the REP.

Since the REP will be orbiting outside the earth's atmosphere, it will experience extreme hot and cold temperature conditions. Therefore, a slow rate of rotation or tumble of the REP is desirable to allow uniform heating and cooling throughout the mission. If the retrograde thrust were applied to the exact center of gravity of the REP, no tumbling would result. Since a very minute error is anticipated in locating the exact center of gravity, a slow tumble within the required limits is expected. For successful operation, the rate of tumbling of the REP will be between one revolution per minute and one revolution per hour.

UNCLASSIFIED

8-269

~~CONFIDENTIAL~~

UNCLASSIFIED

~~CONFIDENTIAL~~
SEDR 300



PROJECT GEMINI



Immediately upon ejection the compressed, spring-loaded, plunger-type switches are released causing the transponder receiver and the two flashing light beacons to become operational. It is estimated that the flashing lights on the REP at 20 nautical miles are equivalent to the intensity of a third magnitude star. Thus, a range of 30-35 nautical miles between the REP and the spacecraft is desired to assure exceeding the visible limit of the REP lights. The REP and the spacecraft trajectories will be designed so that the crew can make visual observations of the REP up to the maximum observational distance in both daylight and darkness. The ejection of the REP and the maneuvering of the spacecraft is performed over ground tracking stations to provide ground monitoring capability.

SYSTEM UNITS

TRANSPONDER

The transponder of the REP (Figure 8-72) is nearly identical to the transponder of the Agena Target Vehicle. The transponder, 10" X 10" X 20", is the largest component of the REP. For this reason, the transponder serves as the basic component to which all other components are attached. For a detailed discussion of the operation of the transponder, refer to the Rendezvous Radar System portion of this section.

ANTENNA SYSTEM

The REP radar antenna systems (Figure 8-72) consist of two circularly polarized double-spiral antennas and one dipole antenna array. The REP antennas are the same type and size as the antennas used on the Agena, however, there are several slight differences in the manner in which the antennas are mounted. The spiral antennas of the REP extend outward approximately two inches from the case of the

UNCLASSIFIED

 
~~CONFIDENTIAL~~
8-270

UNCLASSIFIED

~~CONFIDENTIAL~~
SEDR 300



PROJECT GEMINI



transponder. In comparison, the spiral antennas of the Agena are mounted flush with the outer surface of the Agena. The dipole antenna of the REP is mounted on the end of a two-foot long fixed boom, whereas the dipole antenna of the Agena is mounted on an electrically operated, retractable boom. The electrical operations of the two antenna systems are the same. All antennas have the capability of transmitting and receiving. Refer to the Rendezvous Radar System in this manual for a detailed discussion of the antenna system operation.

FLASHING LIGHT BEACONS

The REP has two toroid-shaped, xenon-filled, 25-watt beacon lights. These lights are the same type lights as the 100 candlepower Agena acquisition lights which are used on the Agena target vehicle. The lights are located on opposite sides of the REP so that at least one light is visible to the crew from any direction. The beacon lights assist the crew in maneuvering the spacecraft relative to the REP.

The flashing of the lights is regulated by an R-C charging circuit located in each mounting case. The charging circuit is designed so that both lights operate simultaneously and assume the flashing rate of the light having the higher rate of flash. This rate can be manually adjusted within a range of 75 to 90 flashes per minute however the optimum rate is 80 ± 1 flashes per minute. The lights have a life expectancy of 25,000 flashes, or approximately 5 hours. This is more than sufficient time, since the REP will be used for approximately only one and one half hours.

UNCLASSIFIED

8-271

~~CONFIDENTIAL~~

~~CONFIDENTIAL~~
SEDR 300
UNCLASSIFIED

UNCLASSIFIED

PROJECT GEMINI



Each beacon light has a thermal bonding strap attached. The thermal bonding strap is a $\frac{1}{4}$ " thick strap of laminated copper which is used to help dissipate the heat generated by the light. The lights are connected through two redundant plunger-type switches to a 24 volt silver-zinc battery. The flashing circuit uses a D-C to D-C converter to increase the battery voltage to the 2500 volts required to flash the xenon filled lamps. The electrical schematic diagram of the lighting system is shown in Figure 8-74.

SQUIB BATTERIES

The REP utilizes two low impedance, 24-volt, silver-zinc squib batteries. The batteries are the same type of squib battery used in the spacecraft. Figure (8-72) shows one of the squib batteries attached to the case of the transponder. The other battery is on the other side of the REP and cannot be identified in the illustration. The squib batteries serve as the power source for the transponder and the two beacon lights. The transponder and the beacon lights are each served from a separate squib battery and operate independently of one another.

During spacecraft mission number 5 the REP will be required to function for only a very small time, approximately one orbit or 90 minutes. Therefore, it is not necessary that the batteries possess an exceptionally long life. The life of the lights is the limiting factor. Due to the short usage period, the size and weight of the batteries can be held to a minimum. For a detailed discussion of the internal structure and operation of the squib battery, refer to the section entitled "Electrical Power System".

The battery supplying power to the transponder is augmented by a boost regulator. The operating level of the transponder is 28.3 volts and the rated voltage

UNCLASSIFIED

8-272
~~CONFIDENTIAL~~

UNCLASSIFIED

~~CONFIDENTIAL~~
SEDR 300

PROJECT GEMINI

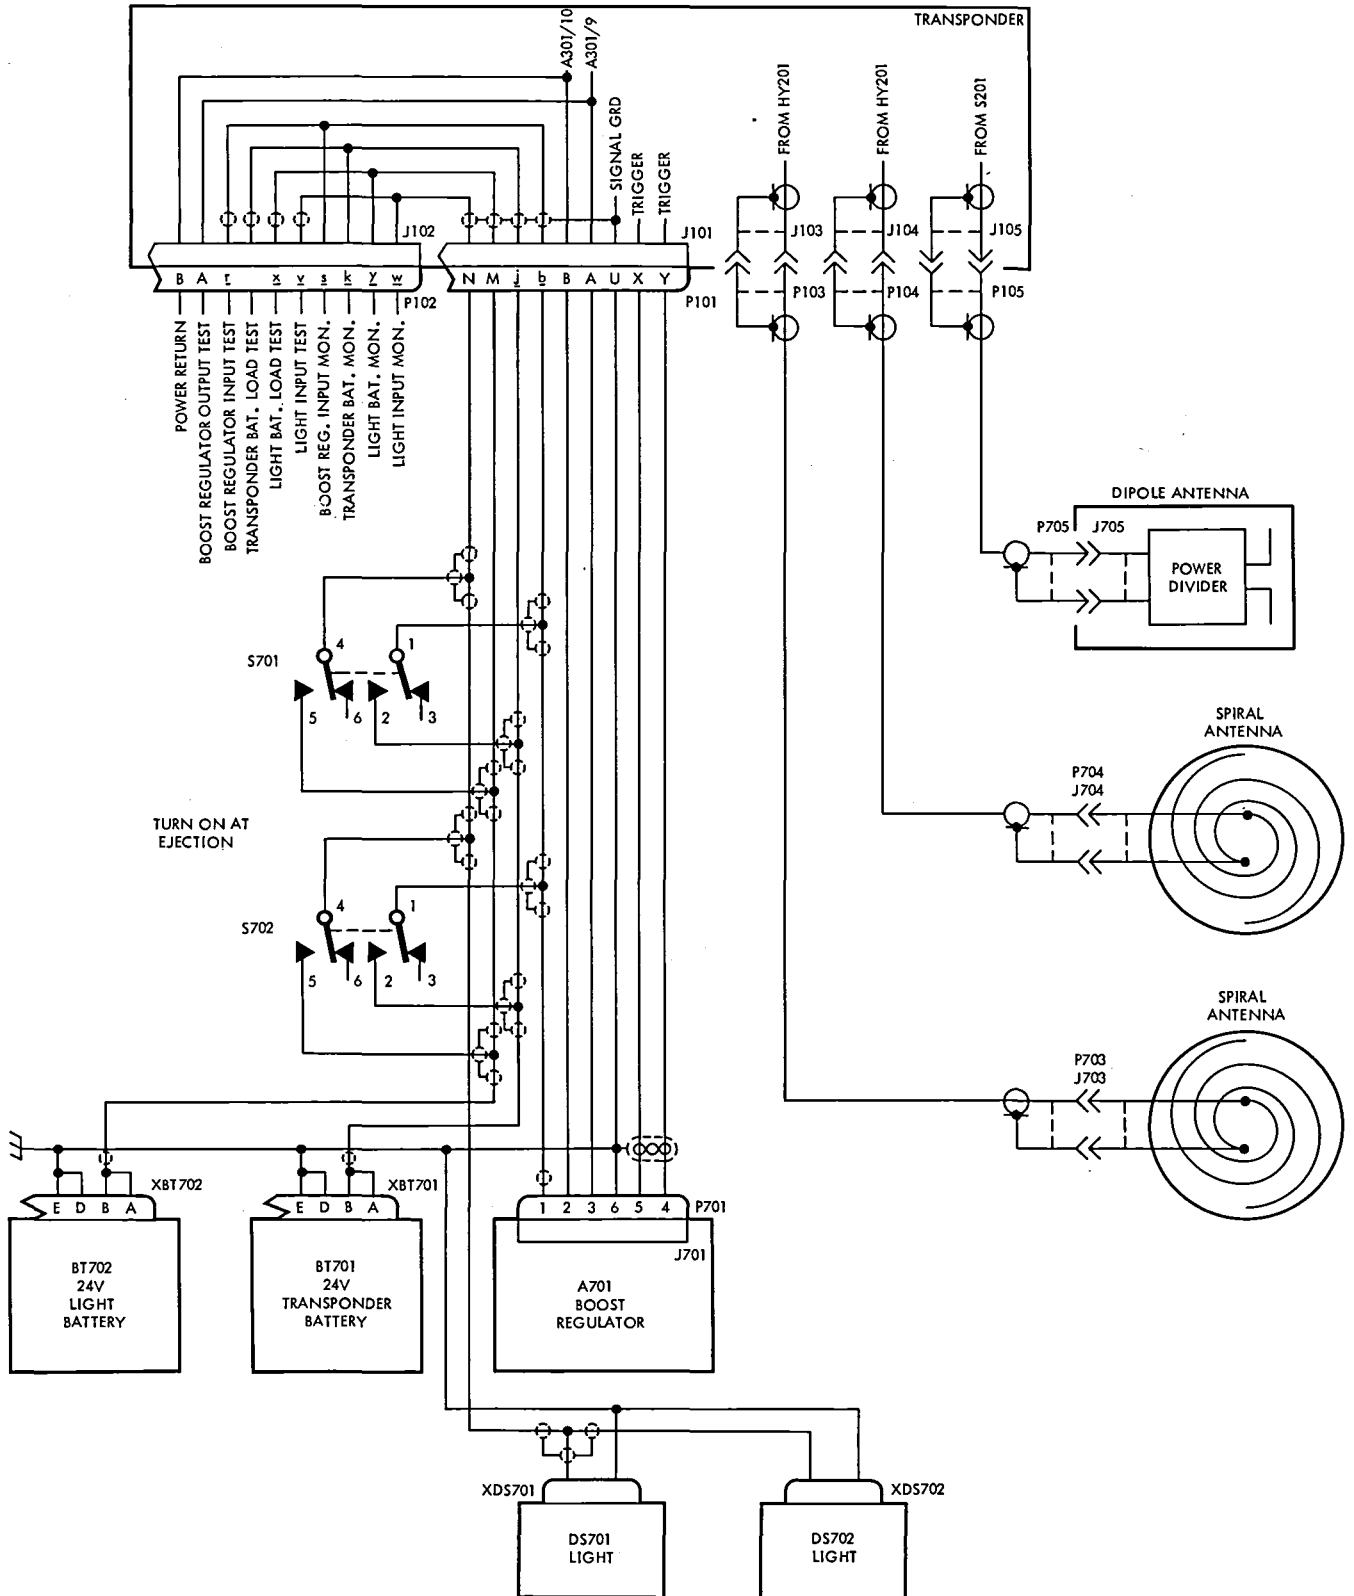


Figure 8-74 Rendezvous Evaluation Pod Schematic Diagram

FM2-8-73

UNCLASSIFIED

8-273

~~CONFIDENTIAL~~

UNCLASSIFIED

~~CONFIDENTIAL~~
SEDR 300



PROJECT GEMINI



of the squib battery is only 24 volts, therefore it is necessary that a boost regulator be incorporated into the system. The purpose of the boost regulator is to increase the transponder input voltage to and maintain it at the required 28.3 volt operating level.

As the power is consumed and the voltage of the squib battery decreases, the boost regulator compensates for the decrease by adding a variable voltage in series with the squib battery. The additional voltage of the boost regulator varies so that there is a constant 28.3 volts input to the transponder at all times. Refer to the schematic diagram of Figure (8-74) for further information on how the batteries of the REP are employed.

RENDEZVOUS POD COVER

The rendezvous pod cover (Figure 8-73) is an oval, plane structure which is located directly behind the REP in the equipment-adaptor section of the spacecraft. The cover is like an umbrella which serves to protect the REP from the intense heat of the sun's rays in space. The cover is made of a tubular metal frame over which a thin fiberglass cloth is stretched. The outer face of the cover has a .00035 inch thick silvered surface. This silvered surface reflects the sun's rays, thereby ensuring that the temperature of the REP remains within the required limits.

Four tubular posts, which extend past the REP, are provided to support the cover. Two of the posts diagonally located terminate in guide pins. These guide pins are used to properly align the cover. The other two posts terminate

UNCLASSIFIED

8-274

~~CONFIDENTIAL~~

UNCLASSIFIED

UNCLASSIFIED

~~CONFIDENTIAL~~
SEDR 300



in sockets which house the spring ejection assembly. The cover is held in place by two cables which pass through the springs, sockets, and tubes. Both cables pass through a pyrotechnic guillotine and are anchored to the REP support assembly. The other end of each cable is attached to the rendezvous pod cover by a screw and a nut. This screw and nut serves as a turnbuckle and is used to apply tension to the cable, causing the spring to be compressed.

Ejection of the cover is initiated in the same manner as the ejection of the REP. When the pilot pushes the POD EJECT switch, a pyrotechnic charge activates the guillotine-type cable cutter which severs the two cables. Cutting the cables allows the two compressed springs to expand, thus imparting a relative velocity to the cover of 100 feet per second. The cables remain with the cover after ejection.

UNCLASSIFIED

8-275/-276
~~CONFIDENTIAL~~

~~CONFIDENTIAL~~
UNCLASSIFIED

TIME REFERENCE SYSTEM

TABLE OF CONTENTS

TITLE	PAGE
SYSTEM DESCRIPTION	8-279
SYSTEM OPERATION	8-280
ELECTRONIC TIMER	8-280
TIME CORRELATION BUFFER	8-300
EVENT TIMER	8-302
MECHANICAL CLOCK	8-310

UNCLASSIFIED

8-277

~~CONFIDENTIAL~~

 **PROJECT GEMINI** 

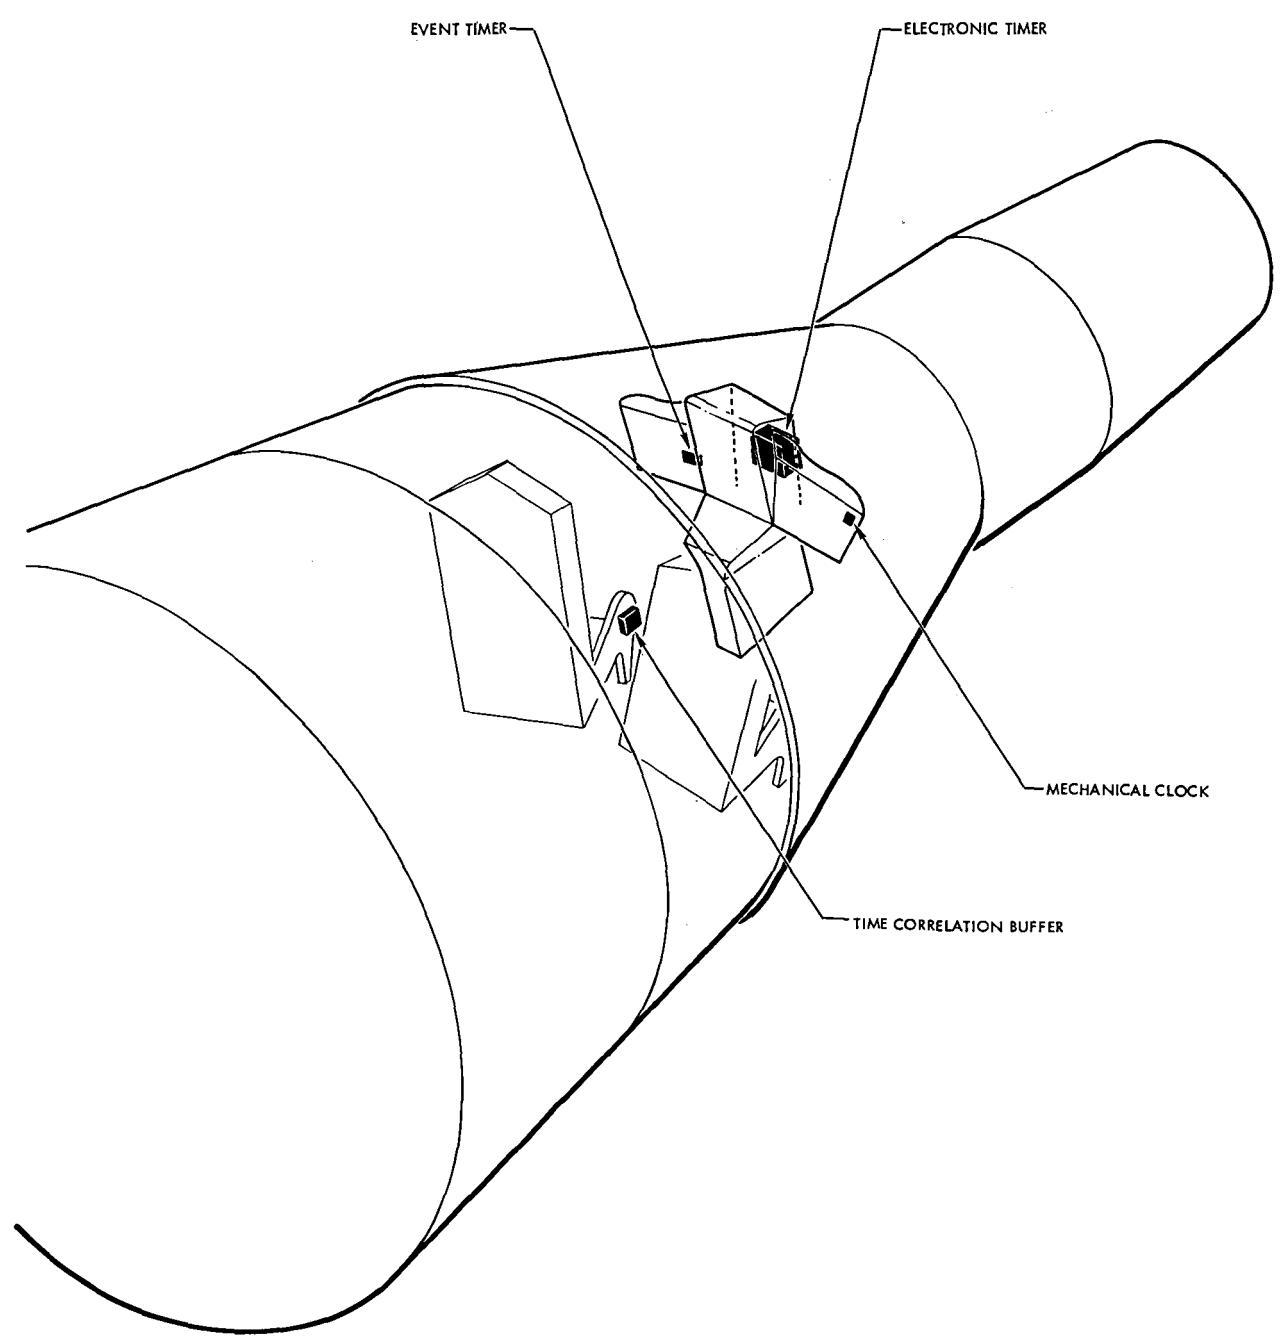



Figure 8-75 Time Reference System Equipment Locations

UNCLASSIFIED

~~CONFIDENTIAL~~
SEDR 300



 PROJECT GEMINI



TIME REFERENCE SYSTEM

SYSTEM DESCRIPTION

The Time Reference System (TRS) provides the facilities for performing all timing functions aboard the spacecraft. The system is comprised of an electronic timer, a time correlation buffer, an event timer, and a clock. The event timer and the clock are mounted on the spacecraft instrument panel, the electronic timer is located in the area behind the center instrument panel and the time correlation buffer is located in back of the second astronaut's seat (Refer to Figure 8-75).

The electronic timer provides (1) an accurate countdown of time-to-go to retrofire (T_r) and to equipment reset (T_x), (2) time correlation for the PCM data system (Instrumentation) and the bio-med and voice tape recorders, and (3) a record of elapsed time (ET) from lift off through impact.

The time correlation buffer provides signal conditioning for time correlation signals to the bio-medical and voice tape recorders. Provision is included to supply buffered serial data and data clock signals for DOD experiments in later versions of the spacecraft.

The event timer provides the facility for timing various short-term functions aboard the spacecraft. It is also started at liftoff to provide the astronauts with a visual display of elapsed time during the ascent phase of the mission. In case the electronic timer should fail, the event timer may serve as a backup method of timing out retrofire.

UNCLASSIFIED

8-279

~~CONFIDENTIAL~~

UNCLASSIFIED

~~CONFIDENTIAL~~
SEDR 300

UNCLASSIFIED



PROJECT GEMINI



The mechanical clock displays Greenwich Mean Time (GMT) and the calendar date. In addition, it has a stopwatch capability. The stopwatch provides an emergency method of performing the functions of the event timer.

SYSTEM OPERATION

The three primary components of the time reference system function independently of each other. They are grouped together as a system because all three perform timing functions. A fourth component is used to condition certain output signals. A functional diagram of the system is shown in Figure 8-76.

The electronic timer and the time-of-day portion of the mechanical clock operate continuously, during the spacecraft mission. The clock is started during the pre-launch period. The electronic timer starts operating upon receipt of a remote start signal from the spacecraft sequential system at the time of liftoff. In case this signal is not received, starting may be accomplished by actuation of a control on the face of the event timer.

During the mission, the event timer and the stopwatch portion of the clock are started and stopped, manually, at the discretion of the crew. At liftoff, however, the event timer is started by a remote start signal from the sequential system.

ELECTRONIC TIMER

General

At the time of liftoff, the electronic timer begins its processes of counting up elapsed time and counting down time-to-go to retrofire and time-to-go to equipment reset. Elapsed time is counted up from zero to a maximum of approximately 24 days.

UNCLASSIFIED

8-280

~~CONFIDENTIAL~~

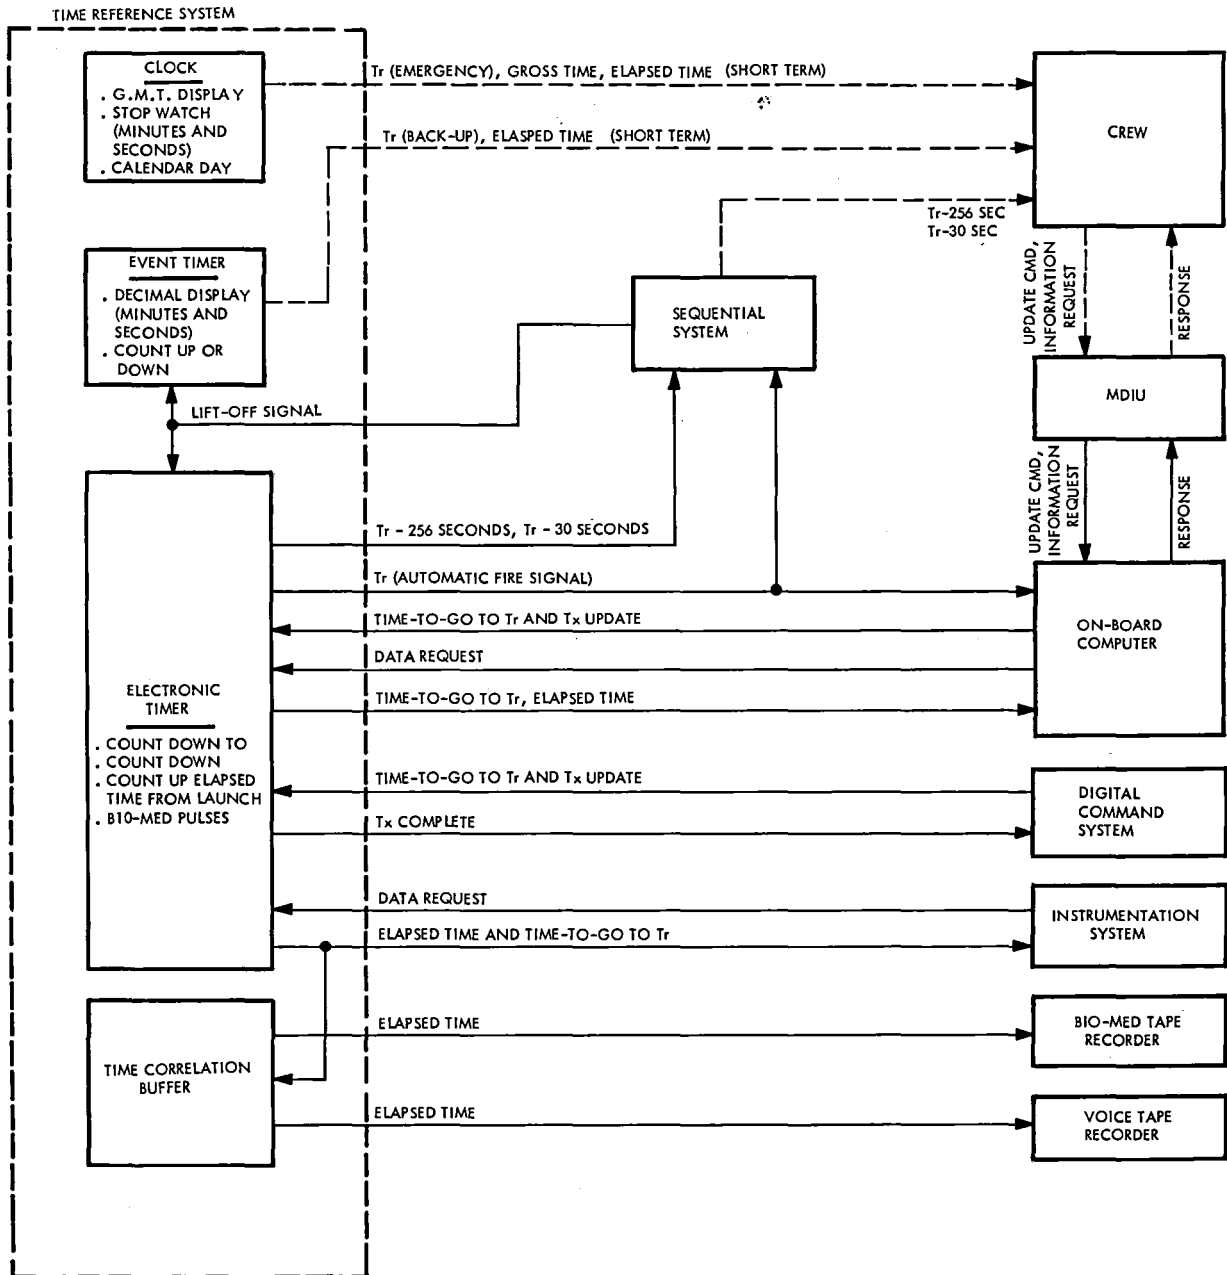


Figure 8-76 Time Reference System Functional Diagram


FMG2-131

UNCLASSIFIED

~~CONFIDENTIAL~~
SEDR 300



 PROJECT GEMINI



The retrofire and equipment reset functions are counted down to zero from certain values of time which are "written" into the timer prior to liftoff. The timer is capable of counting time-to-go to retrofire from a maximum of 24 days and to equipment reset from a maximum of two hours.

The time-to-go to retrofire data contained by the timer may be updated at any time during the mission by insertion of new time-to-go data. Updating may be accomplished either by a ground station, through the Digital Command System (DCS), or by the crew, via the Manual Data Insertion Unit (MDIU) and the digital computer. To prevent inadvertent, premature countdown of T_r as a result of equipment failure or personnel error during update, the timer will not accept any new time-to-go of less than 128 seconds duration. Upon receipt of new data of less than 128 seconds, the timer will cause itself to be loaded with a time in excess of two weeks.

The time-to-go to equipment reset function of the timer serves to reset certain equipment which operates while the spacecraft is passing over a ground station equipped with telemetry. As the spacecraft comes within range, the ground station inserts, via the DCS, a time-to-go to T_x in the timer. Then, as the spacecraft moves out of the range of the ground station, the TIG to T_x reaches zero, and the equipment is automatically reset. If the ground station is unable to insert the time data, it may be done by the crew, using the MDIU and digital computer.

Information from the electronic timer is not continuously displayed; however, confirmation of satisfactory operation may be made by the readout of T_r data through use of the digital computer MDIU display readout capability.

UNCLASSIFIED

8-282

~~CONFIDENTIAL~~

UNCLASSIFIED

~~CONFIDENTIAL~~
SEDR 300



PROJECT GEMINI



Construction

The electronic timer (Refer to Figure 8-77) is approximately 6" x 8 3/4" x 5 1/2" and weighs about ten pounds. It has two external connectors for interface with its associated systems. The enclosure for the unit is sealed to keep out moisture but is not pressurized. The timer utilizes a modular construction, containing eight modules which are wired directly into the enclosure. The modules are: (1) crystal oscillator, (2) timing assembly, (3) register control assembly, (4) memory control assembly, (5) memory assembly, (6) driver assembly, (7) relay assembly, and (8) power supply. Printed circuit boards and solid state components are used in all modules except the crystal oscillator.

Operation

The electronic timer is basically an electronic binary counter. It performs the counting operation for each of its functions (ET, TIG to Tr, and TIG to Tx) by an add/subtract program which is repeated every 1/8 second. (Refer to Figure 8-78). In each repetition of the counting operation, a binary word, representing elapsed time or a time-to-go, is modified to represent a new amount of time. Magnetic core storage registers are used to store or "remember" the binary words between counting cycles. A storage register is provided for each of the three timer functions and another is provided for use as a "buffer" register for data transfer between the timer and the digital computer.

A crystal controlled oscillator is used as a frequency standard for developing the timing pulses necessary for the operation of the timer. This type of oscillator provides the high degree of accuracy required for the timer whose

UNCLASSIFIED

8-283

~~CONFIDENTIAL~~

UNCLASSIFIED

~~CONFIDENTIAL~~
SEDR 300

PROJECT GEMINI


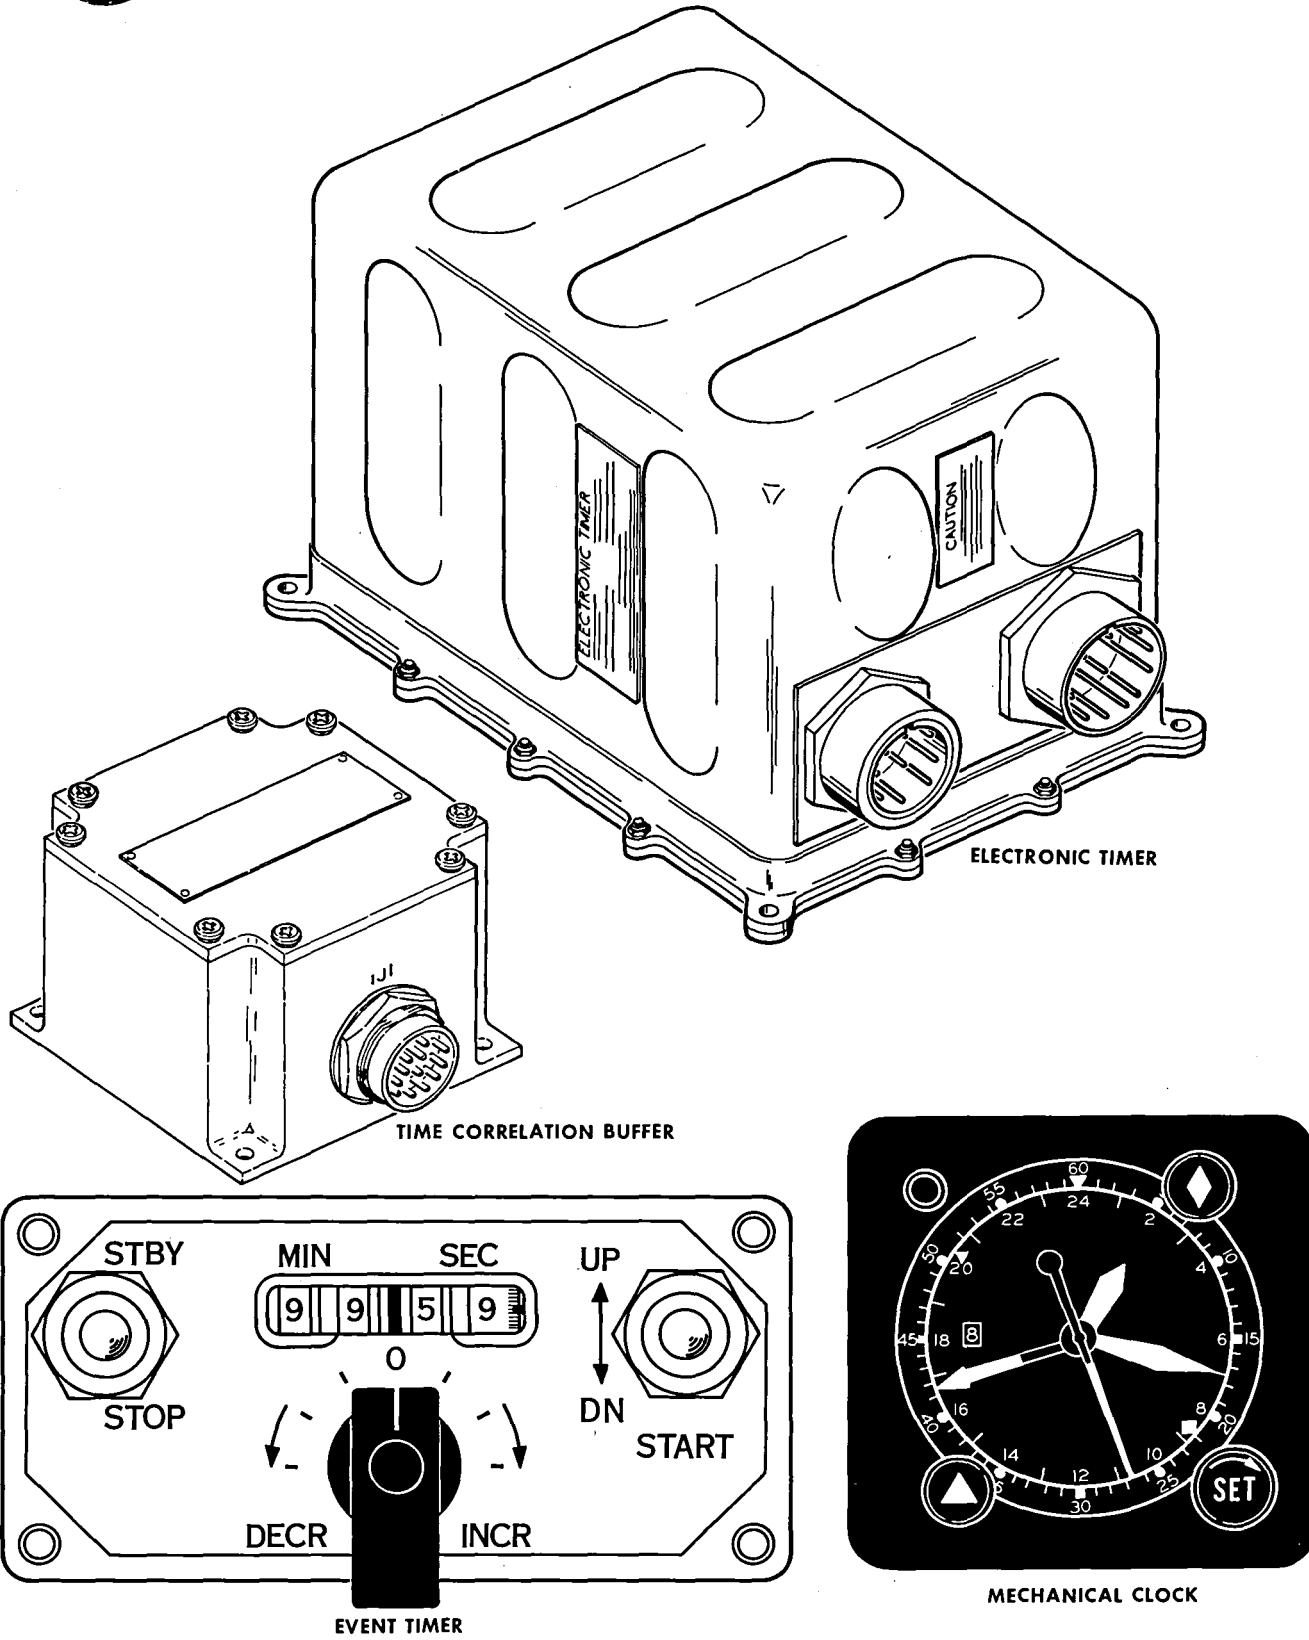


Figure 8-77 Time Reference System Components

FMG2-189A

UNCLASSIFIED

8-284
~~CONFIDENTIAL~~

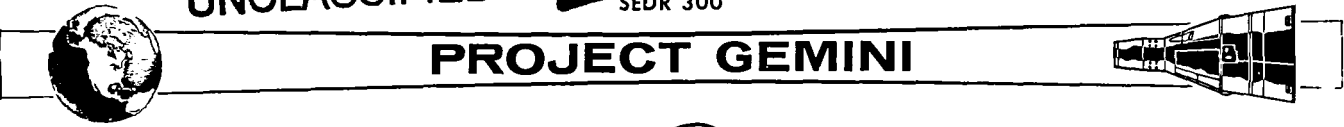

UNCLASSIFIED

~~CONFIDENTIAL~~
SEDR 300

PROJECT GEMINI

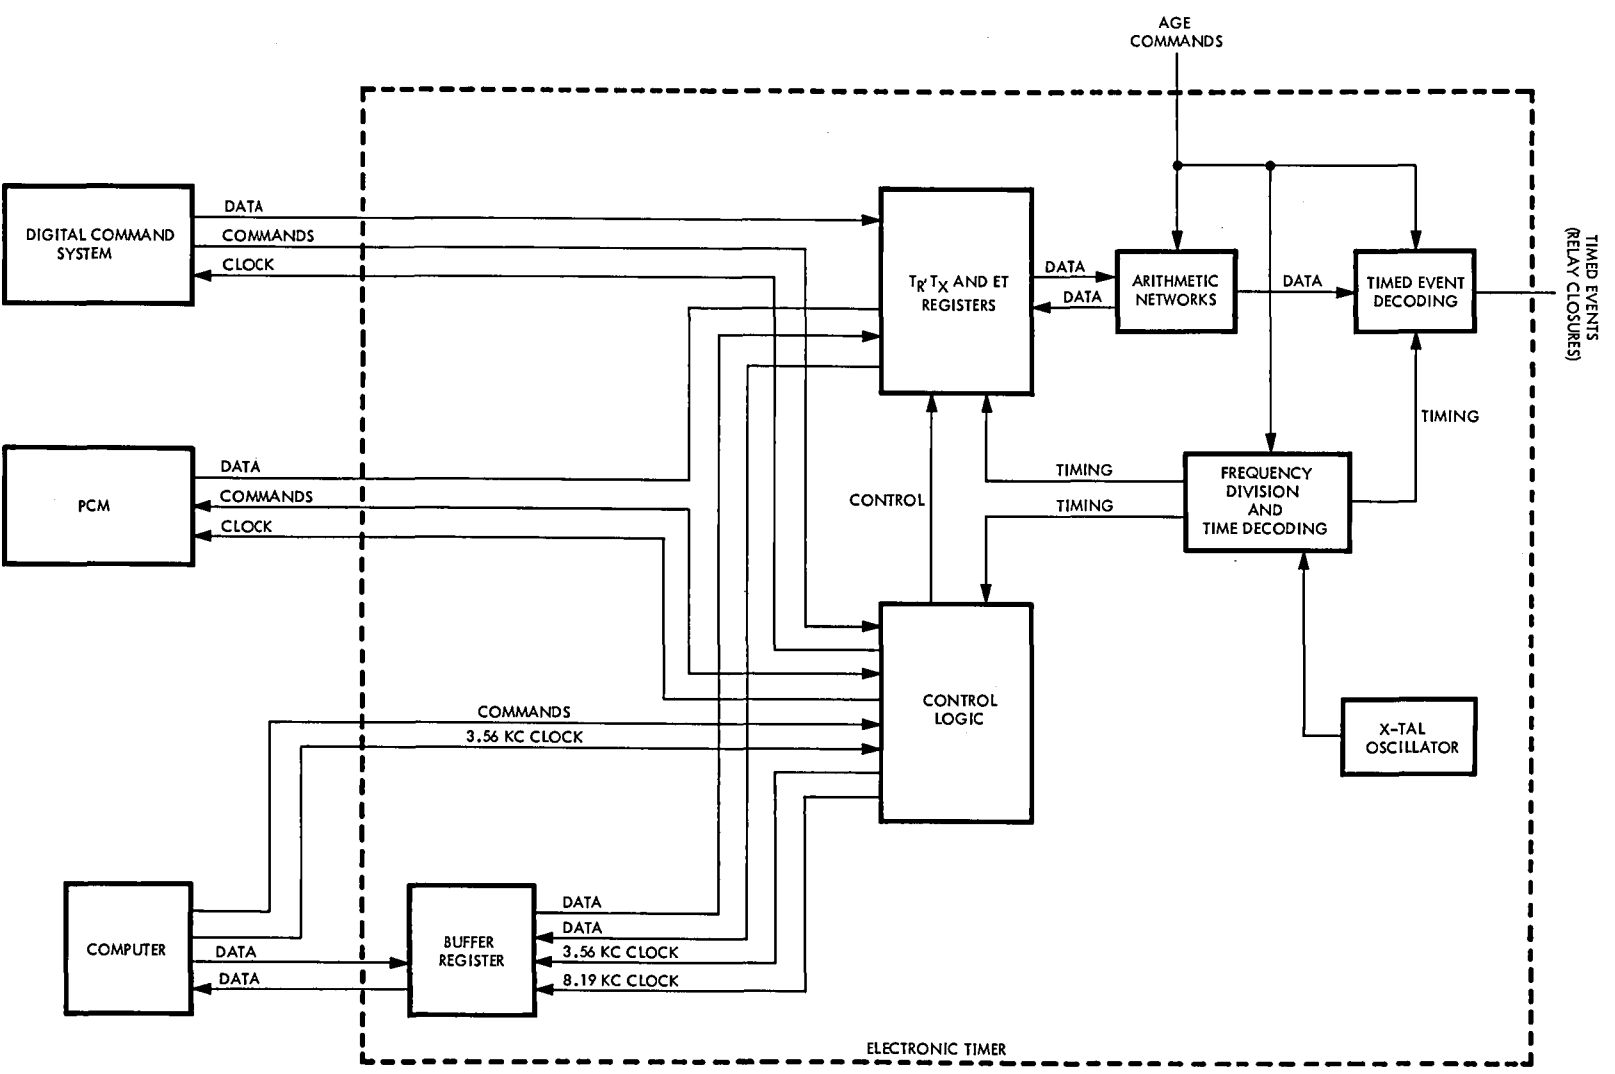
 


Figure 8-78 Electronic Timer Functional Block Diagram

8-285

FMG2-137

UNCLASSIFIED

 
~~CONFIDENTIAL~~

UNCLASSIFIED

~~CONFIDENTIAL~~
SEDR 300



PROJECT GEMINI



operations take place in very small fractions of a second. The oscillator is coupled to a series of toggle flip flops whose outputs provide the actual timing pulses for the timer operation.

The electronic timer utilizes a 32-word time "program." That is, each 1/8 second of time is further divided into 32-word times. Each word time is divided into 32 bit times, and each bit time is divided into 32 "S" pulse times. "S" pulses are the shortest pulses used in the timer operation and are 3.8 microseconds long. One bit time is equal to 122 microseconds and one word time 3.9 milliseconds. It is pulses of these durations, and their multiples, which are produced by the toggle flip flops in the timing module.

Timer Start Circuit

Timer operation is initiated when a 28 VDC start signal is received from either the spacecraft sequential system or the event timer. The signal from the sequential system is transmitted to the electronic timer, automatically, at liftoff; the one from the event timer is generated when the UP/DN toggle switch on the face of the unit is placed in the UP position. Receipt of a signal from either source causes the set side of the clock-start relay to be actuated. Until liftoff, the relay is held in the reset position by a clock-hold signal from the AGE via the spacecraft umbilical. This is done to assure that the timer will not be started prematurely and will be at zero at the time of liftoff. Actuation of the clock-start relay causes a positive control signal to be applied to a gate in the timing module. This gate allows the output of the crystal controlled oscillator to be coupled to the countdown flip flops.

 
UNCLASSIFIED

8-286

~~CONFIDENTIAL~~



PROJECT GEMINI



Countdown and Time Decoding

The countdown and time decoding operations take place primarily in the timing module. When timer operation is initiated, the 1.048576 megacycle output of the crystal-controlled oscillator is coupled to the first of a series of 17 toggle flip flops (Refer to Figure 8-79). Twelve of the flip flops are contained in the timing module and five in the register control module. The flip flops form a frequency dividing network, each stage of which produces one square wave output pulse for every two input pulses. The output frequency of the final stage in the series is eight pulses per second.

Outputs of all but the first two stages of the countdown circuitry are utilized to develop the timing pulses necessary for timer operations. Output pulses from either the "1" or the "0" side of an individual flip flop may be used; however, the polarity of the pulses from one side will be 180° out of phase with those from the other side. Pulses from the flip flop outputs are supplied, in certain combinations, to gate circuits in the time decoding section. Each gate circuit receives several input pulse trains and produce output pulses which are usable for the timer circuitry (Refer to Figure 8-80a). Basically, a gate will produce output pulses which will have the pulse width of the narrowest input pulses and the frequency of the input pulse train with the widest pulses. If the polarity of one input is reversed, the time at which the output pulse occurs, will change (Refer to Figure 8-80b).

Operational Control

Two complete modules are required to encompass all of the circuitry necessary to



PROJECT GEMINI


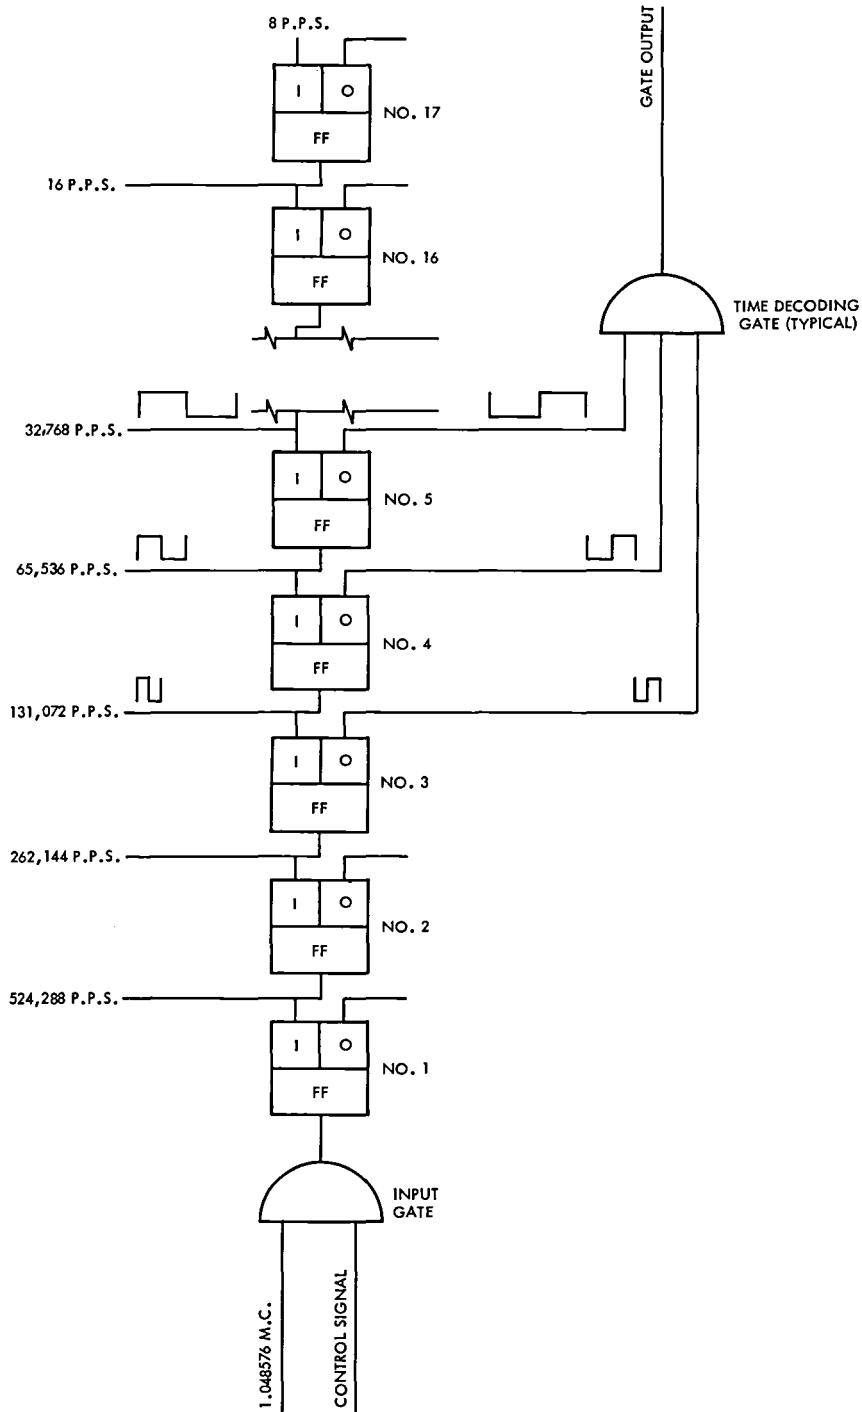


Figure 8-79 Schematic Diagram, Frequency Division & Time Decoding

 FMG2-136



PROJECT GEMINI

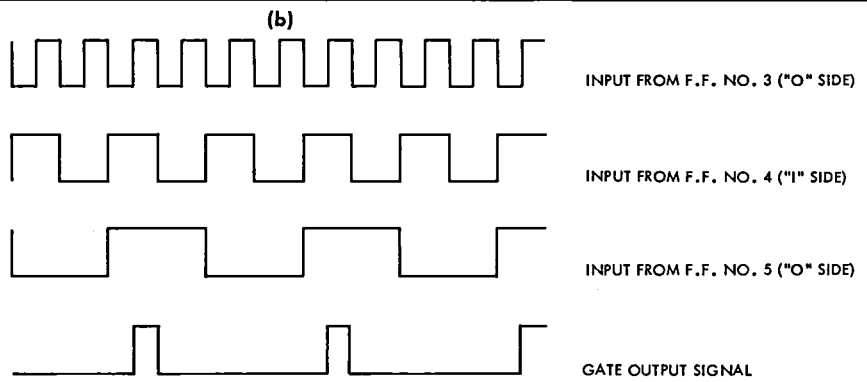
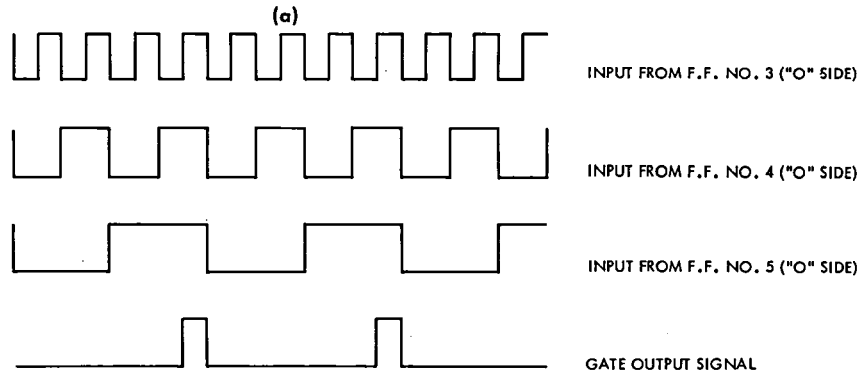
 


Figure 8-80 Time Decoding Gate Inputs and Outputs (Typical)

FMG2-135

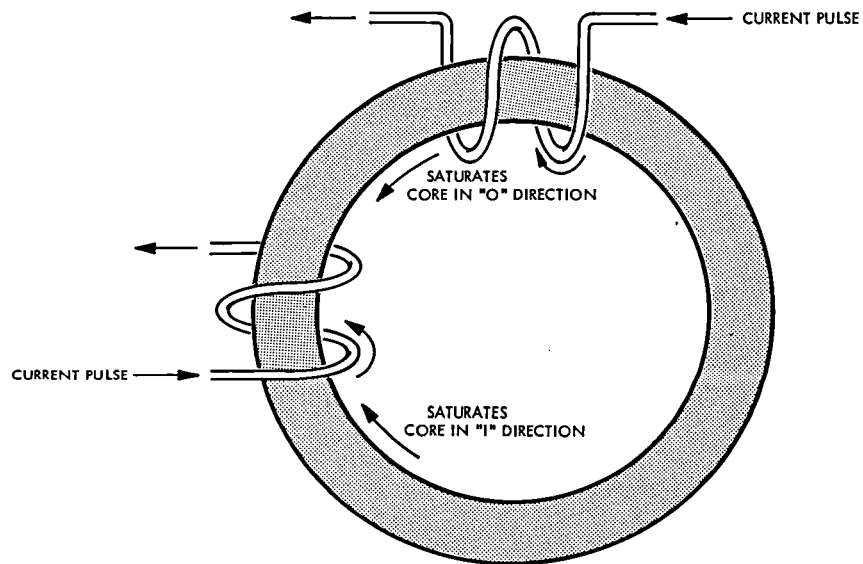


Figure 8-81 Magnetic Core Operation


FMG2-133

UNCLASSIFIED

~~CONFIDENTIAL~~
SEDR 300



 PROJECT GEMINI



perform the control functions in the electronic timer. The register control module primarily controls the transfer of data into and out of the timer. The memory control module directly controls the operations of the magnetic storage registers in the memory module.

The register control module supplies the control signals which are required to perform the operations directly associated with the transfer of time data. It utilizes the various command and clock signals from the other spacecraft systems to produce its control signals. The control signals are then supplied to the appropriate circuitry to: (1) receive a new binary data word (as in the updating process), (2) initiate the shifting operations of the proper storage registers to "write" in or "read" out the desired time data (ET, Tr, or Tx), and (3) supply data, read out of the storage registers, to the proper timer output terminal(s) to be transferred to the system requesting it.

The memory control module directly controls the operation of the magnetic storage registers and performs the arithmetic computations of the counting process. Inputs from the timing and register control modules are utilized to develop the "shift" and "transfer" output pulses for shifting data words into and out of the storage registers. These pulses are developed separately for each register.

Both control modules are made up of rather complex and overlapping networks of logic circuitry. The memory control module also employs shift current generators and transfer switches, as output stages, to develop the required power capabilities.

UNCLASSIFIED

8-290

~~CONFIDENTIAL~~

UNCLASSIFIED

~~CONFIDENTIAL~~
SEDR 300



PROJECT GEMINI



Storage Register Operation

The magnetic storage registers for ET, Tr, and Tx are used to store or "remember" binary words of time data. These data words may be shifted out of their respective registers, as required, for the counting operations and for transfer to other spacecraft systems. The transfer of data into and out of a storage register is accomplished, serially, with the least significant bit (LSB) first.

A storage register is comprised of a series of magnetic memory cores, each of which is capable of storing one binary bit of time data. This capability is based upon the characteristic of a magnetic core to saturate in one of two directions when a current pulse is applied to one of its windings. (Refer to Figure 8-81.)

Saturation in one direction represents a binary "1" and indicates the presence of a data bit. Saturation in the other direction represents a binary "0" and indicates the absence of a data bit. The storage registers for elapsed time and time-to-go to retrofire each contain 2^4 magnetic cores and the register for time-to-go to equipment reset contains 16. Therefore, a binary word for ET or Tr consists of 2^4 bits, while a word for Tx consists of 16 bits.

The use of the binary system for time representation permits the storage of data which can represent an amount of time as small as $1/8$ second and as large as 2^4 days. Each data bit in a binary data word represents one individual increment of time. In looking at the flow diagram in Figure 8-82a the 2^4 sections of the storage register represent its 2^4 individual cores. The data bit which represents the smallest time increment ($1/8$ second) is stored in core number 2^4 . It is referred to as the "Least Significant Bit" in the data word. Core number 23, then, would store the next bit (representing $1/4$ of a second) of the data word.

UNCLASSIFIED

8-291
~~CONFIDENTIAL~~

UNCLASSIFIED

~~CONFIDENTIAL~~
SEDR 300



PROJECT GEMINI



The sequence continues, with core number 22 representing $1/2$ second, back through core number 1 with each successive core representing a time increment twice that of the preceding one. By adding together the increments of time represented by all of the cores, the total time capacity of the register can be determined. Thus, it is found that the ET and Tr registers have capacities of approximately 2^4 days and the Tx register, approximately two hours. Conversion of a data word to its representative time may be accomplished by totaling the increments of time represented by the bit positions of the word where binary ones are present. For the data word shown in Figure 8-82b the representative time is $583 \frac{3}{8}$ seconds.

The process of shifting a data word into or out of a storage register is controlled by the occurrence of the shift and transfer pulses and by the condition of a control gate preceding each register and its write-in amplifier. The shift and transfer pulses from the control section are supplied to a storage register whenever a data word is to be "written" in or "read" out. These pulses occur once each bit time for a duration of one word time. The actual flow of data into a storage register is controlled by a logic gate preceding the write-in amplifier for each register. (Refer to Figure 8-83) The "count enable" input of the gate will have a continuously positive voltage applied after liftoff has occurred. The "write-in pulse" input will have a positive pulse applied for 7.6 microseconds during each bit time (122 microseconds). These two inputs control the gate. The result is that a positive data pulse may pass through the gate only during a 7.6 microsecond period during each bit time.

When a binary data word is to be "written" into a storage register, its individual


UNCLASSIFIED

8-292

~~CONFIDENTIAL~~

UNCLASSIFIED

~~CONFIDENTIAL~~
SEDR 300

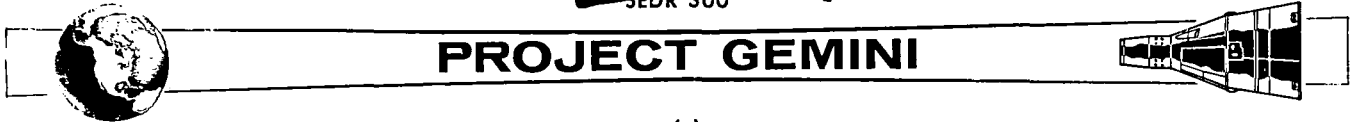

PROJECT GEMINI

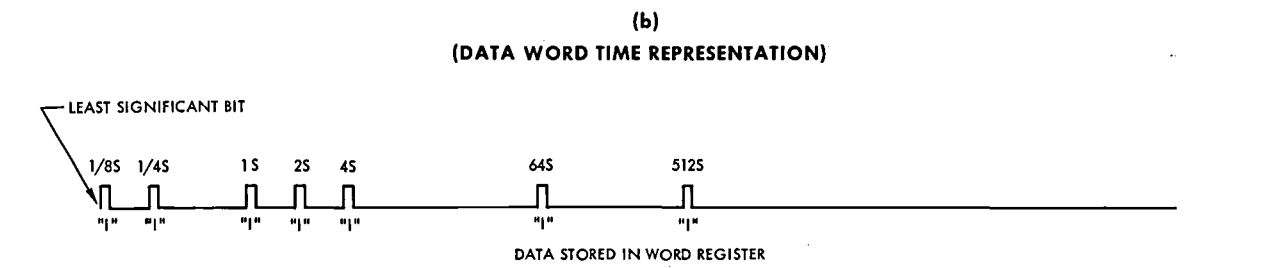
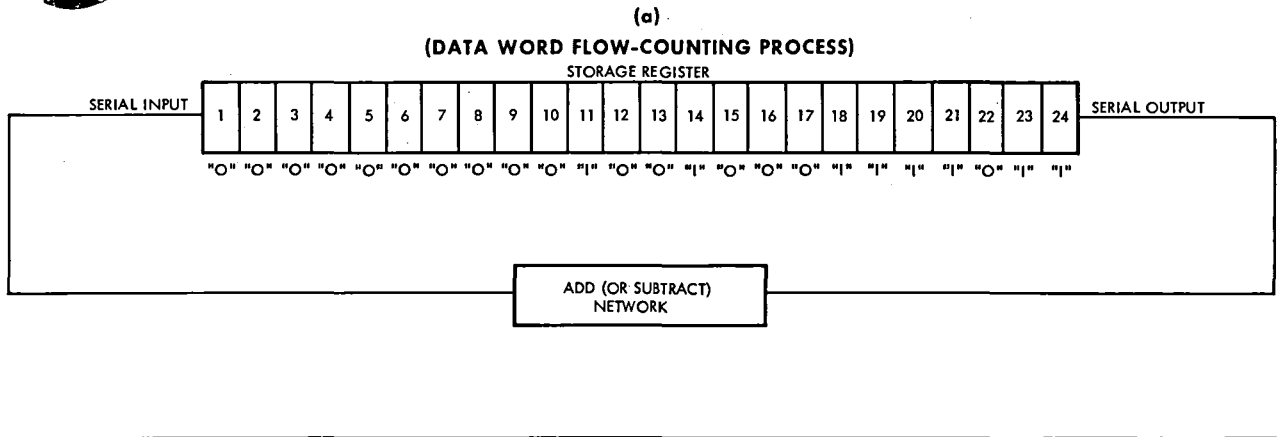


Figure 8-82 Time Data Word Flow & Representation

FMG2-134

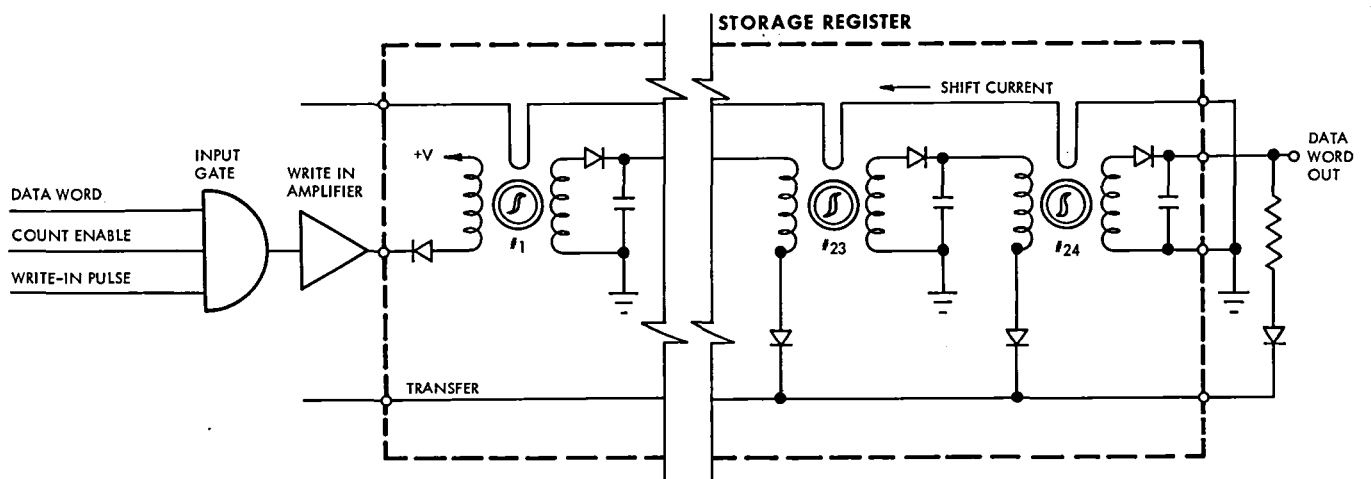


Figure 8-83 Schematic Diagram-Storage Register

FMG2-132

UNCLASSIFIED

8-293

~~CONFIDENTIAL~~

UNCLASSIFIED

~~CONFIDENTIAL~~
SEDR 300



PROJECT GEMINI



bits appear at the input of core number 1 as a series of current pulses. When the first current pulse (representing 1/8 second) of the word flows through the input winding of core number 1, the core is saturated in the binary "1" direction. It remains in this condition until a current pulse flows through the "shift" winding of the core. The shift pulse causes the flux of the core to collapse and reform, switching the core back to the "0" condition. When this occurs, a voltage is developed across the output winding of the core and the temporary storage capacitor is charged through the winding from the diode end. When the shift pulse decays and a ground potential is placed on the transfer line, the capacitor discharges through the input winding of the next core, setting it to the binary "1" condition. Whenever a bit position of the incoming data word does not contain a pulse, core No. 1 is not switched to "1." As a result, its shift pulse causes no change of flux; no voltage is developed across the output and the capacitor is not charged or discharged. Hence, the next core is not set to the "1" condition. Because the shift pulses are applied to all the cores in a register, simultaneously, it is assured that each one is set to the "0" condition before the transfer pulse (also applied to all cores, simultaneously) allows the storage capacitors to discharge. When a complete word has been written into the register, the cores which are in the binary "1" condition contain the binary data bits.

"Reading" a data word out of a storage register involves basically the same processes as writing one in.

UNCLASSIFIED

8-294

~~CONFIDENTIAL~~



The data bits shift from left to right, with the bit in core number 24 leaving the register first. An additional bit is shifted out of the register with each repetition of the shifting process.

Counting Operations

The counting operation for each of the timer functions consists of "reading" a binary data word out of a storage register, cycling it through an arithmetic network, and "writing" it back into the register. (Refer to Figure 8-81a.) The operation is completed in one word time and is repeated every 1/8 second. In the process, the time representation of the word is changed by an increment of 1/8 second.

The "read" and "write" portions of the counting operation take place concurrently. As the first data bit is shifted out of a register, the remaining bits shift one core to the right, leaving core number 1 vacant. Before the next shift operation takes place, the bit which has been shifted out of the register is cycled, instantaneously, through the arithmetic circuitry and inserted back into core number 1. The process is the same for each bit of the word. Thus, when the last bit of the original word is shifted out of the register, the first bit of the new one shifts into core number 24. The last bit then cycles through the arithmetic circuitry and enters core number 1, completing the counting operation.

In the arithmetic portion of the counting process, the output of the elapsed time register is supplied to an add circuit and those from the Tr and Tx registers to separate subtract circuits. Both types of circuits are made up of combinations of logic and switching circuits. Their operation is quite similar, the main difference being in their logic programs.

UNCLASSIFIED

~~CONFIDENTIAL~~
SEDR 300



PROJECT GEMINI



The add process for the elapsed time function consists of adding a binary "1" to the first bit position (the LSB) of the word coming into the add circuit. If there is already a "1" in that bit position, the "1" is carried to the next bit position. The carry operation continues until the "1" reaches an open bit position.

When the first bit of a data word read out of the ET register is a binary "0", the add circuit produces a positive output signal. The positive signal is then inverted by the write-in amplifier and supplied to the input of the storage register. With a negative input to the register, a binary "1" is written into core number 1 as the first bit of the new word. Thus, the first bit of the word has been changed from a binary "0" to a binary "1" adding 1/8 second to the representative time of the word. The remaining bits are written back into the register just as they were read out.

When a binary "1" is read out of the ET register as the first bit of a data word, the output of the add circuit will be negative. Upon inversion by the write-in amplifier, the signal will be positive. A positive signal at the register input causes a binary "0" to be written into the first core. If the subsequent, consecutive, data bits are also binary "1"'s, the output of the add circuit remains negative, causing binary "1"'s to be written into the register. Upon receipt of the first binary "0" in the data word from the register, the output of the add circuit becomes positive, causing a binary "1" to be written back into the register for that bit position. For example, if the first five bits of the word being read out of the register are binary "1"'s (representing a total

UNCLASSIFIED

8-206
~~CONFIDENTIAL~~

UNCLASSIFIED

~~CONFIDENTIAL~~
SEDR 300



PROJECT GEMINI



of $3 \frac{7}{8}$ seconds of Elapsed Time) and the next one is a binary "0", then the first five bits of the new word will be binary "0"'s; and the sixth will be a binary "1." A binary "1" in the sixth bit position represents an Elapsed Time of four seconds. The remaining bits of the data word, again, are inserted back into the register just as they were read out.

Although the circuitry of a "subtract" network is much the same as that of an add network, the operation is different because of the subtract logic. If the least significant bit of a word coming into a subtract network is a binary "1", the output for that bit position will be negative, causing a binary "0" to be written back into register. In this case, the $1/8$ second has now been subtracted, and the balance of the word will remain the same. If the LSB of the incoming word is a binary "0" the output of the subtract network will become positive, allowing a binary "1" to be written into the register. The output of the subtract circuitry will remain positive until the first binary "1" enters the circuitry. When this occurs, the output becomes negative and causes a binary "0" to be written into the register. The rest of the word is then written back into the register just as it came out.

Data Transfer

Binary words of time data are transferred into and out of the electronic timer by several different methods. Data words received from the ground station, via the Digital Command System, are inserted directly into their respective storage registers in the timer. Data from the guidance system computer, however, is transferred into the "buffer" register of the timer and then shifted into the

UNCLASSIFIED

8-297
~~CONFIDENTIAL~~

UNCLASSIFIED

~~CONFIDENTIAL~~
SEDR 300



PROJECT GEMINI



proper storage register. The same process is involved in the transfer of data from the timer to the computer: a word is shifted out of its storage register into the buffer register and then transferred to the computer. Data transfer from the timer to the Data Transmission System (DTS) is accomplished by shifting the desired data out of its register to a pulse transformer. The output of the transformer is coupled to a storage register in the DTS.

Timer Interfaces

The following is a list of the inputs and outputs of the electronic timer together with a brief description of each:

INPUTS

- (a) A continuous 28 VDC signal from the spacecraft sequential system at liftoff to start the recording of ET and countdown of Tr and Tx.
- (b) A 28 volt emergency start signal from the event timer to initiate the electronic timer operation in the event that the liftoff signal is not received from the sequential system. The signal would be crew-ground co-ordinated and would be initiated by actuation of the event timer up-down switch to "up".
- (c) A Read/Write command signal from the digital computer to direct the timer as to which function is to be accomplished.
- (d) A TIG to Tr address signal from the digital computer to update or readout TIS to Tr.

UNCLASSIFIED

8-298

~~CONFIDENTIAL~~

~~CONFIDENTIAL~~
SEDR 300

UNCLASSIFIED



PROJECT GEMINI



- (e) A TTG to Tx address signal from the digital computer to enter a TTG to Tx.
- (f) An elapsed time address signal from the digital computer to readout ET.
- (g) Twenty-four clock pulses from the digital computer to accomplish data transfer. (25 pulses for data transfer out of the electronic timer)
- (h) "Write" data for update of TTG to Tr, or TTG to Tx from the digital computer. Twenty-four data bits will be forwarded serially, least significant bit first.
- (i) A TTG to Tr ready signal from the DCS to command update of TTG to Tr.
- (j) A TTG to Tx ready signal from the DCS to command entry of a TTG to Tx.
- (k) Serial data from the DCS to update TTG to Tr, or TTG to Tx. Twenty-four data bits will be forwarded serially, least significant bit first. Clocking is provided by the electronic timer.
- (l) TTG to Tr readout signals from the PCM data system.
- (m) An elapsed time readout signal from the PCM data system.
- (n) An AGE/Count inhibit signal from ground based equipment via the spacecraft umbilical to keep the elapsed time register at zero time prior to launch.
- (o) A clock hold signal from ground based equipment via the spacecraft umbilical to prevent the timer from operating prior to launch.
- (p) An event relay reset signal from ground based equipment via the spacecraft umbilical.
- (q) An event relay check signal from ground based equipment via the spacecraft umbilical.

UNCLASSIFIED

8-299

~~CONFIDENTIAL~~

UNCLASSIFIED

~~CONFIDENTIAL~~
SEDR 300

PROJECT GEMINI

OUTPUTS

- (a) A contact closure at Tr for the digital computer.
- (b) A contact closure at Tr (Continuous) for the sequential system.
- (c) A contact closure at Tx for the DCS.
- (d) "Read" data to the digital computer for ET or TIG to Tr. Data bits are forwarded serially, least significant bit first.
- (e) Signal power ($12 \begin{smallmatrix} +0 \\ -1 \end{smallmatrix}$ volts) to the DCS and PCM.
- (f) Twenty-four clock pulses to the DCS to accomplish data transfer.
- (g) Twenty-four clock pulses to the PCM data system to accomplish data transfer.
- (h) Serial data to the PCM data system for readout of ET or TIG to Tr. Data bits are forwarded serially, least significant bit first.
- (i) A contact closure from Tr-256 seconds to Tr for the sequential system.
- (j) A contact closure from Tr-30 seconds to Tr for the sequential system.
- (k) An input power monitor signal to ground based equipment via the spacecraft umbilical.

TIME CORRELATION BUFFER

General

The Time Correlation Buffer (TCB) supplies the time correlation signals for the bio-medical and voice tape recorders. Serial data and data clock output from the electronic timer is applied to the TCB input. Serial data contains 24 elapsed time words, and extra elapsed time word and a time to go to retrograde word. The TCB selects the extra elapsed time word and modifies the word format to make it

UNCLASSIFIED

8-300
~~CONFIDENTIAL~~

UNCLASSIFIED

~~CONFIDENTIAL~~
SEDR 300



PROJECT GEMINI



compatible with the tape recorder frequency responses. Information to the recorder is updated once every 2.4 seconds and has the same resolution (1/8 second) as the electronic timer.

Construction

The dimensions of the TCB (Figure 8-77) are 2.77" X 3.75" X 3.80" and the weight is approximately 3.0 pounds. The TCB contains magnetic shift registers, a 100 KC astable multivibrator, a power supply and logic circuitry. One 19 pin connector provides both input and output connections.

Operation

The operation of the TCB is dependent on signals from the instrumentation system and the electronic timer. In response to request pulses from the instrumentation system, the electronic timer provides elapsed time and time to go to retrograde words to both the instrumentation system and the TCB. The elapsed time word is supplied every 100 milliseconds. In addition, once every 2.4 seconds it provides an extra elapsed time word and 100 milliseconds later it provides a time to go to retrograde word.

The TCB requires elapsed time information only; therefore, the time to go to retrograde word is rejected. The tape recorders, due to their response times, are not capable of recording time data every 100 milliseconds and for this reason only the extra elapsed time word is accepted by the TCB. The remaining 24 elapsed time words and the time to go to retrograde word are rejected by logic circuitry in the TCB. Rejection of unused words is based on their time relationship to other words.

UNCLASSIFIED

8-301
~~CONFIDENTIAL~~

~~CONFIDENTIAL~~
SEDR 300

UNCLASSIFIED



PROJECT GEMINI



The TCB contains three 8-bit magnetic shift registers in which the 24 bit extra elapsed time word is loaded once every 2.4 seconds. The TCB then shifts out bits at the rate of one every 100 milliseconds. The shift rate is based on data clock pulses from the electronic timer. The first data clock pulse in a word causes the TCB to shift out one bit of the data and the other 23 data clock pulses are disregarded.

Each bit that is shifted out of the shift register is stretched in time and coded to make it compatible with tape recorder response times. The output to the biomedical recorder is one positive pulse for a binary "0" and two positive pulses for a binary "1." The most significant bit has two additional pulses to distinguish it from the other 23 bits in the word. Data is shifted out of the TCB in a least significant bit first and most significant or marker bit last.

The output to the voice tape recorder is the same basic format as for the biomedical recorders. However, to make it compatible with the higher frequency response characteristics of the voice tape recorder, each pulse is chopped into two pulses.

All input and output signals are coupled through isolation transformers providing complete DC isolation.

EVENT TIMER

General

The event timer is capable of counting time, either up or down, to a maximum of 99 minutes and 59 seconds. The time is displayed on a decimal display indicator

UNCLASSIFIED

8-302

~~CONFIDENTIAL~~

UNCLASSIFIED

~~CONFIDENTIAL~~
SEDR 300



PROJECT GEMINI



on the face of the unit. The seconds tumbler of the display indicator is further graduated in 0.2 second increments. Counting, in either direction, may be started or stopped either remotely or manually. Prior to starting a counting operation, the indicator must be manually preset to the time from which it is desired to start counting.

Construction

The dimensions of the event timer are approximately 2" x 4" x 6" and the weight about two pounds. On the face of the timer, there are two toggle switches, one rotary switch, and a decimal display window. (Refer to Figure 8-77.) In addition to the panel-mounted controls, the unit contains four electronic modules, two relays, a tuning fork resonator, and a step servo motor. A gear train connects the servo motor with the decimal display tumblers. There is one electrical connector on the back of the unit.

Operation

The operation of the event timer is independent of the electronic timer. (Refer to Figure 8-84.) It provides its own time base which is used to control the operation of the decimal display mechanism. The time base used for normal counting operation is developed when the output of a tuning fork resonator is connected to a series of toggle-type flip flops. The resulting signal establishes the repetition rate of a step-type servo motor. The servo motor is coupled, through a gear train, to the display tumblers. Additional counting rates may be selected in order to rapidly reset the timer to zero or to some other desired indication.

UNCLASSIFIED

8-303
~~CONFIDENTIAL~~

 **PROJECT GEMINI** 

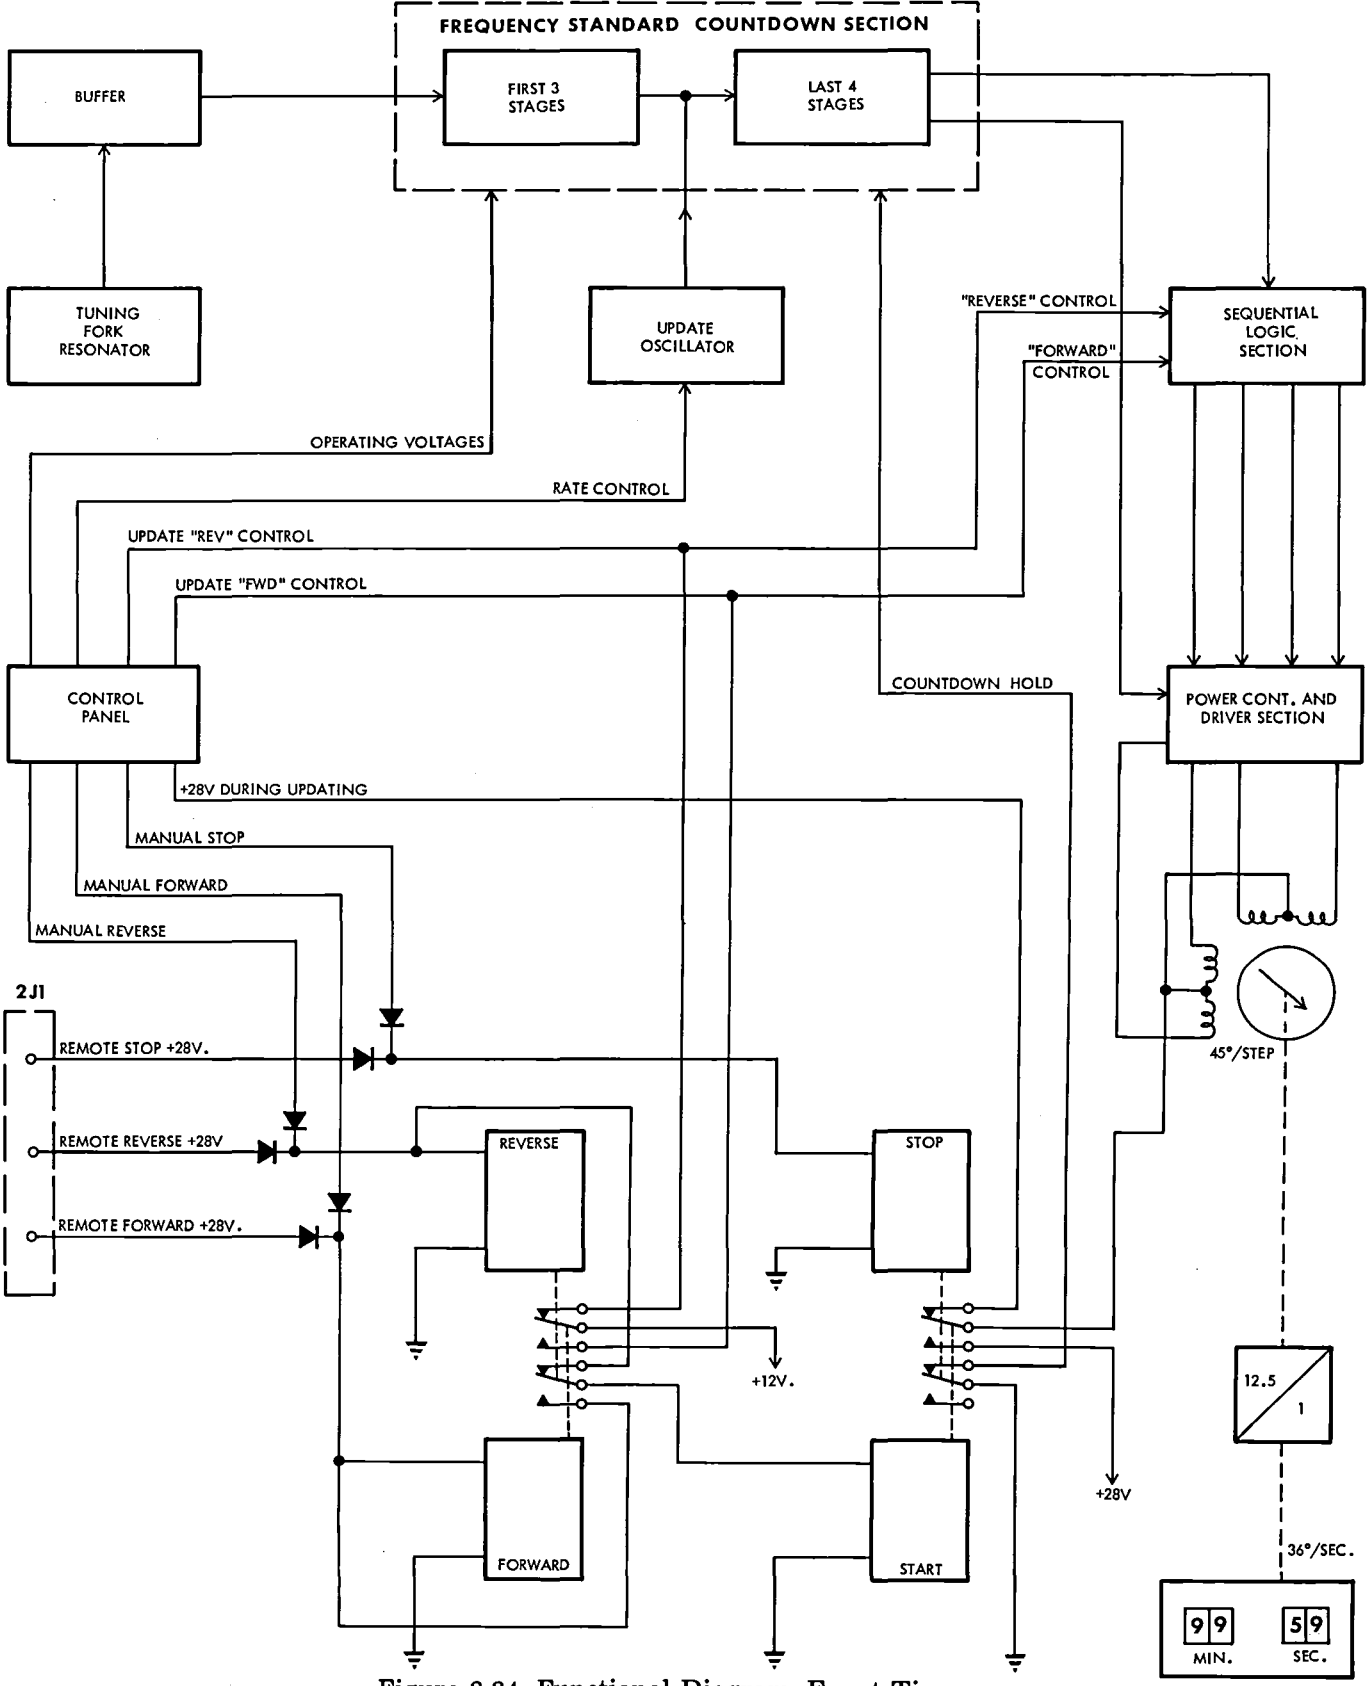


Figure 8-84 Functional Diagram, Event Timer

8-304

UNCLASSIFIED

~~CONFIDENTIAL~~
SEDR 300



PROJECT GEMINI



Start/Stop Operations

The remote and manual start/stop functions of the timer are accomplished in almost exactly the same manner. The difference is only in the source of the control signals. In order to initiate counting operations by either method, it is necessary to first have the STOP-STBY toggle switch in either the STBY or the center off position. (Refer to Figure 8-77.) When starting is accomplished with the switch in the center position, a small inaccuracy is incurred. Manual starting may then be accomplished by placing the UP-DN toggle switch in either the UP or the DN position. This energizes one of the two coils of the forward/reverse relay, also causing the start coil of the start/stop relay to be energized. When these events take place, control and operating voltages are supplied to the counting circuitry, thus allowing the operation to begin. When starting is to be accomplished remotely, either a remote forward or a remote reverse signal is transmitted from the ground station to energize the forward/reverse relay. The counting process may be stopped upon receipt of a remote stop signal or by placing the STOP-STBY Switch in the STOP position. Either of these functions energizes the stop side of the start/stop relay, removing critical operating voltages from the counting circuitry.

Counting Operations

Normal counting operations begin with the actuation of the forward/reverse relay in either direction and the start/stop relay in the start direction. When the forward/reverse and the start/stop relays are actuated, and operating voltage of +28 VDC is applied to the servomotor and a ground level inhibit signal is removed from the toggle flip flops. Also, a +12 VDC control signal, denoting

UNCLASSIFIED

8-305
~~CONFIDENTIAL~~

UNCLASSIFIED

~~CONFIDENTIAL~~
SEDR 300



PROJECT GEMINI



either a forward or reverse counting process, is transmitted to the logic circuitry preceding the servomotor. The remainder of the timer circuitry has operating voltages applied when the STOP/STBY switch is placed in STBY.

With the application of operating voltages, the tuning fork resonator emits an AC signal of 1280 cycles per second. The signal is passed through a buffer to condition it for use by the series of seven toggle flip flops in the frequency standard countdown section. Since the output frequency of each flip flop is half that of its input, the final one in the series generates a signal of ten pulses per second. The outputs of the countdown section are connected to the sequential logic section and the power conversion and driver section.

Sequential logic section consists of four set-reset flip flops which provide the necessary sequences of output signals to cause the servomotor to step in one direction or the other (Figure 8-84). As the counting process begins, three of the flip flops are in the reset condition (reset output positive) and one is in the set condition (set output positive). With receipt of the first timing pulse, the next flip flop switches to the set condition. The first one also remains set, but the other two remain reset. Then, when another timing pulse is received, the first flip flop resets, leaving only the second one set. The sequence continues with alternate timing pulses setting one flip flop, then resetting the preceding one. After the fourth flip flop has been set and the third one subsequently reset, the first one is again switched to the set condition and the sequence is started over again. In order to have the logic section function properly, either a forward or reverse control signal must be received from the F/R relay. These are used as steering signals for the timing

UNCLASSIFIED

8-306
~~CONFIDENTIAL~~

UNCLASSIFIED

~~CONFIDENTIAL~~
SEDR 300



PROJECT GEMINI



pulses which set and reset the flip flops. For counting up, the control signals cause the flip flop operating sequence to be in one direction. When counting down, they cause the sequence to reverse: flip flop number 4 is set first, then number 3, etc., back through number 1.

The power conversion and driver section converts the voltage-pulse outputs of the logic section to current pulses which are used to drive the servomotor. The driver section provides four separate channels, one for each input. Each channel has a logic gate and a power driver. The logic gate permits the logic section output to be sensed at ten selected times each second. The gate senses only the occurrence of a positive signal which will allow the power driver to conduct and send a pulse of current through one of the four servomotor stator windings.

The sequence of pulses from the driver section causes the servomotor to step ten times each second and 45° each step. Figure 8-85 illustrates the step positions relative to the sequence of operating pulses from the driver section. If pulses were applied to each of the four servomotor windings, without overlap, the unit would step 90° each repetition. It is this overlapping of signal applications which causes it to step 45° at a time.

The display indicator is a rotating counter with wheels to display seconds, tens of seconds, minutes, and tens of minutes. It is coupled to the servomotor through a gear train with a reduction ratio, from the servomotor, of 12.5;1. Therefore, as the servomotor rotates 450° (in one second), the indicator shaft turns 36° or $1/10$ of a rotation. Since the seconds wheel is directly coupled to the shaft


 
UNCLASSIFIED

8-307

~~CONFIDENTIAL~~



PROJECT GEMINI

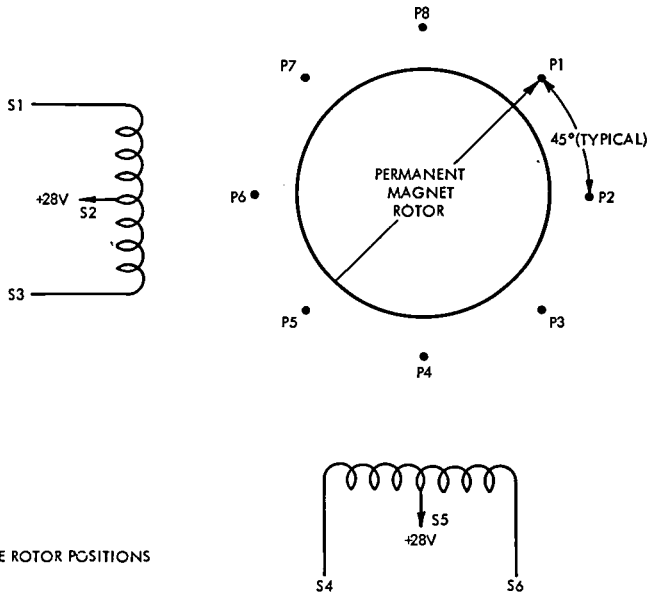

NOTE
(1) P1 - P8 ARE ROTOR POSITIONS

OPERATION	RESULT
GROUND S1, GROUND S6	ROTOR INDEXES TO ARBITRARY REF. POSITION (P1)
OPEN S1	ROTOR STEPS 45° C.W. (P2)
GROUND S3	ROTOR STEPS 45° C.W. (P3)
OPEN S6	ROTOR STEPS 45° C.W. (P4)
GROUND S4	ROTOR STEPS 45° C.W. (P5)
OPEN S3	ROTOR STEPS 45° C.W. (P6)
GROUND S1	ROTOR STEPS 45° C.W. (P7)
OPEN S4	ROTOR STEPS 45° C.W. (P8)
GROUND S6	ROTOR RETURNS TO REF. POSITION (P1)
OPEN S6	ROTOR STEPS 45° C.C.W. (P8)
GROUND S4	ROTOR STEPS 45° C.C.W. (P7)
OPEN S1	ROTOR STEPS 45° C.C.W. (P6)
GROUND S3	ROTOR STEPS 45° C.C.W. (P5)
OPEN S4	ROTOR STEPS 45° C.C.W. (P4)
GROUND S6	ROTOR STEPS 45° C.C.W. (P3)
OPEN S3	ROTOR STEPS 45° C.C.W. (P2)
GROUND S1	ROTOR RETURNS TO REF. POSITION (P1)

Figure 8-85 Step Servomotor Operation

FMG2-188

UNCLASSIFIED

~~CONFIDENTIAL~~
SEDR 300



PROJECT GEMINI



and is calibrated from zero to nine, a new decimal is displayed each second. As the seconds wheel moves from nine to zero, the tens-of-seconds wheel moves to the one position. The operations of the other wheels are similar.

Updating

The display may be returned to zero or updated to some other readout with the use of the DECR-INCR rotary switch on the face of the timer. The rotary switch must be in the 0 position in order to have the timer operate at a normal rate; with the switch in one of the other positions, it counts at a different rate. There are three rate selections, each, for the INCR and DECR (count-up and count-down) updating modes. The positions on each side that are farthest from the 0 position are utilized to make the timer count at 25 times its normal rate. The next closer positions are utilized to count at four times the normal rate. The positions nearest the 0 position are used to count at a rate 0.4 times the normal one. This position serves to more accurately place the indicator at a desired readout.

Operationally, positioning the rotary switch in some position other than 0 causes the tuning fork resonator and the first three toggle flip flops to be replaced in the circuitry by an update oscillator. The frequency of the oscillator is established by the position of the rotary switch. In the 25X positions, the frequency is 4,000 cycles per second; in the 4X position, it is 640 cps; and in the 0.4X positions, it is approximately 64 cycles per second. The accuracy of the oscillator output is not critical since the oscillator functions only for updating purposes.

UNCLASSIFIED

8-309

 
~~CONFIDENTIAL~~

UNCLASSIFIED

~~CONFIDENTIAL~~
SEDR 300



PROJECT GEMINI



MECHANICAL CLOCK

Construction

The mechanical clock is shown in Figure 8-77. The unit is approximately 2 1/4" x 2 1/4" x 3 1/4" and weighs about one pound. The dial face is calibrated in increments of 0-24 and 0-60. The clock has two hands for the time of day portion and two for the stopwatch portion. The controls for operating both portions of the clock are located on the face of the unit.

Operation

The clock is a mechanical device which is self-powered and requires no outside inputs. The hand and dial-face clock displays Greenwich Mean Time (GMT) in hours and minutes. A control on the face provides for winding and setting the unit. With the passing of each 24-hour period, the calendar date indicator advances to the next consecutive number. The stopwatch portion of the clock can be started, stopped, and returned to zero at any time. Two settable markers are provided on the minute dial to provide a time memory, permitting the clock to serve as a short-term back-up timer.

UNCLASSIFIED

8-310

~~CONFIDENTIAL~~

UNCLASSIFIED

~~CONFIDENTIAL~~

PROPULSION SYSTEMS

TABLE OF CONTENTS

TITLE	PAGE
GENERAL INFORMATION	8-313
ORBIT ATTITUDE AND MANEUVERING SYSTEM .	8-313
SYSTEM DESCRIPTION	8-313
SYSTEM OPERATION	8-317
SYSTEM UNITS	8-319
RE-ENTRY CONTROL SYSTEM (RCS)	8-325
SYSTEM DESCRIPTION	8-325
SYSTEM OPERATION	8-329
SYSTEM UNITS	8-331

UNCLASSIFIED

8-311

~~CONFIDENTIAL~~



PROJECT GEMINI

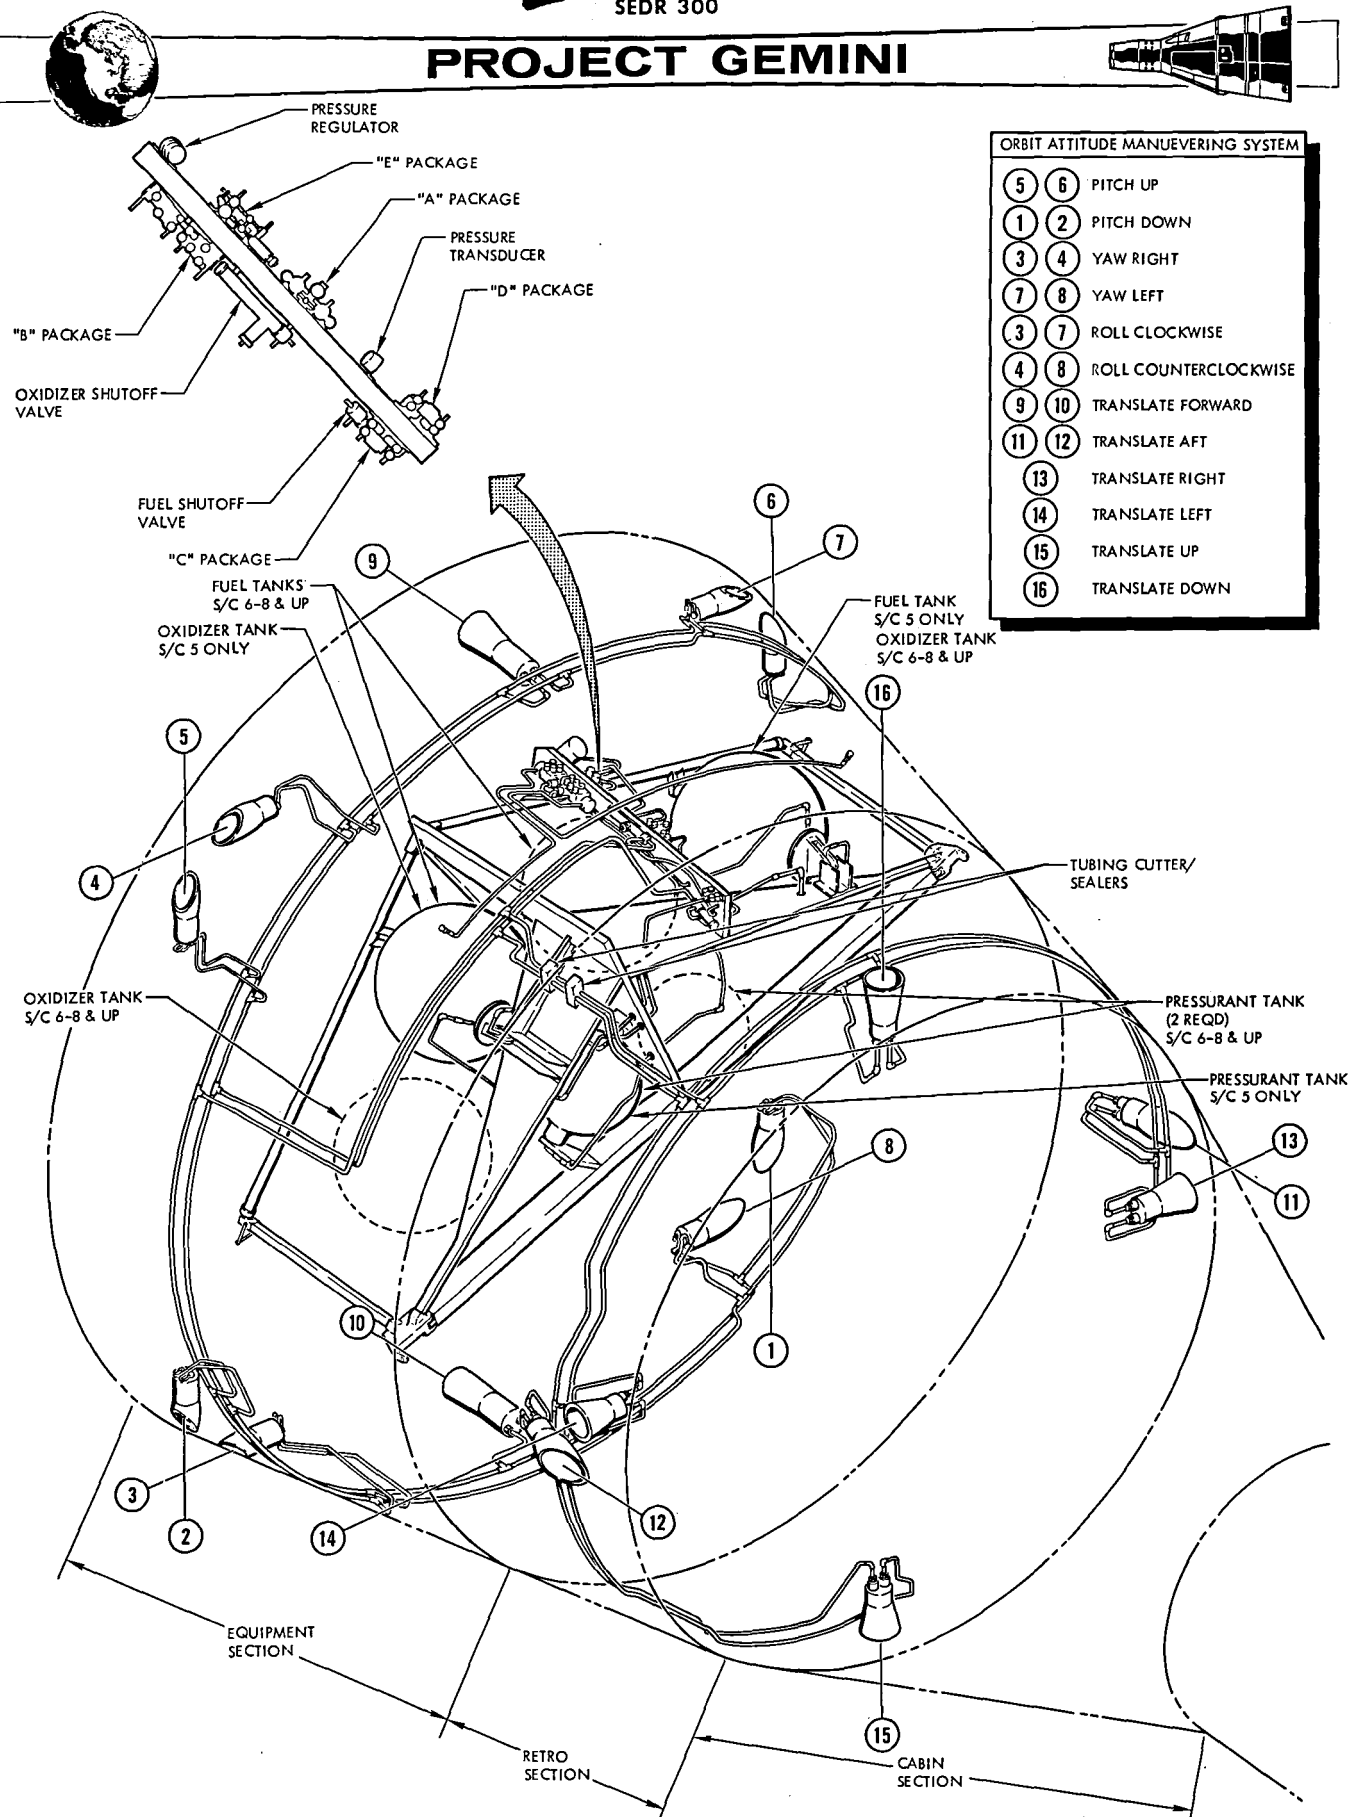


Figure 8-86 Orbit Attitude Maneuvering System and TCA Location

UNCLASSIFIED

~~CONFIDENTIAL~~
SEDR 300



PROJECT GEMINI



PROPULSION SYSTEM

GENERAL INFORMATION

The Gemini Spacecraft is provided with an attitude and maneuvering control capability. (Figure 8-86). This control capability is used during the entire spacecraft mission, from the time of launch vehicle separation until the re-entry phase is completed. Spacecraft control is accomplished by two rocket engine systems, the Orbit Attitude and Maneuvering System (OAMS) and the Re-entry Control System (RCS).

The OAMS controls the spacecraft attitude and provides maneuver capability from the time of launch vehicle separation until the initiation of the retrograde phase of the mission. The RCS provides attitude control for the re-entry module during the re-entry phase of the mission. The OAMS and RCS respond to electrical commands from the Attitude Control Maneuvering Electronics (ACME) in the automatic mode or from the crew in the manual mode.

ORBIT ATTITUDE AND MANEUVERING SYSTEM

SYSTEM DESCRIPTION

The Orbit Attitude Maneuvering System (OAMS) (Figure 8-86) is a fixed thrust, cold gas pressurized, storable liquid, hypergolic bi-propellant, self contained propulsion system, which is capable of operating in the environment outside the earth's atmosphere. Maneuvering capability is obtained by firing thrust chamber assemblies (TCA) singly or in groups. The thrust chamber assemblies are mounted at various points about the adapter in locations consistent with the modes of rotational or translation acceleration required.

UNCLASSIFIED

8-313

~~CONFIDENTIAL~~



PROJECT GEMINI



The QAMS provides a means of rotating the spacecraft about its three attitude control axes (roll, pitch, and yaw) and translation control in six directions (right, left, up, down, forward and aft). The combination of attitude and translational maneuvering creates the capability of rendezvous and docking with another space vehicle in orbit.

The primary purpose of QAMS is spacecraft control in orbit. The QAMS is also used, after firing of shaped charges, to separate the spacecraft from the launch vehicle during a normal launch or in case of an abort which may occur late in the launch phase. During initiation of retrograde sequence, tubing cutter/sealer devices sever and seal the propellant feed lines from the equipment adapter. All of the QAMS (except six TCA's located in retro section) are separated from the spacecraft with the equipment section of the adapter. Spacecraft control functions are then assumed by the Re-entry Control System (RCS). QAMS control units and tanks are mounted on a structural frame (module concept) in the equipment section. The control units consist of forged and welded "packages". Each package consists of several functioning components and filters. The delivery of pressurant, fuel and oxidizer is accomplished by a uniquely brazed tubing manifold system. The QAMS system is divided into three groups; pressurant group, fuel/oxidizer group and thrust chamber assembly (TCA) group.

Pressurant Group

The pressurant group (Figure 8-87) consists of a pressurant tank, "A" package, "E" package, pressure regulator, and "B" package. Inlet valves, ports and test ports are provided at accessible points to permit servicing, venting, purging and testing. Filters are provided throughout the system to prevent contamination of

PROJECT GEMINI

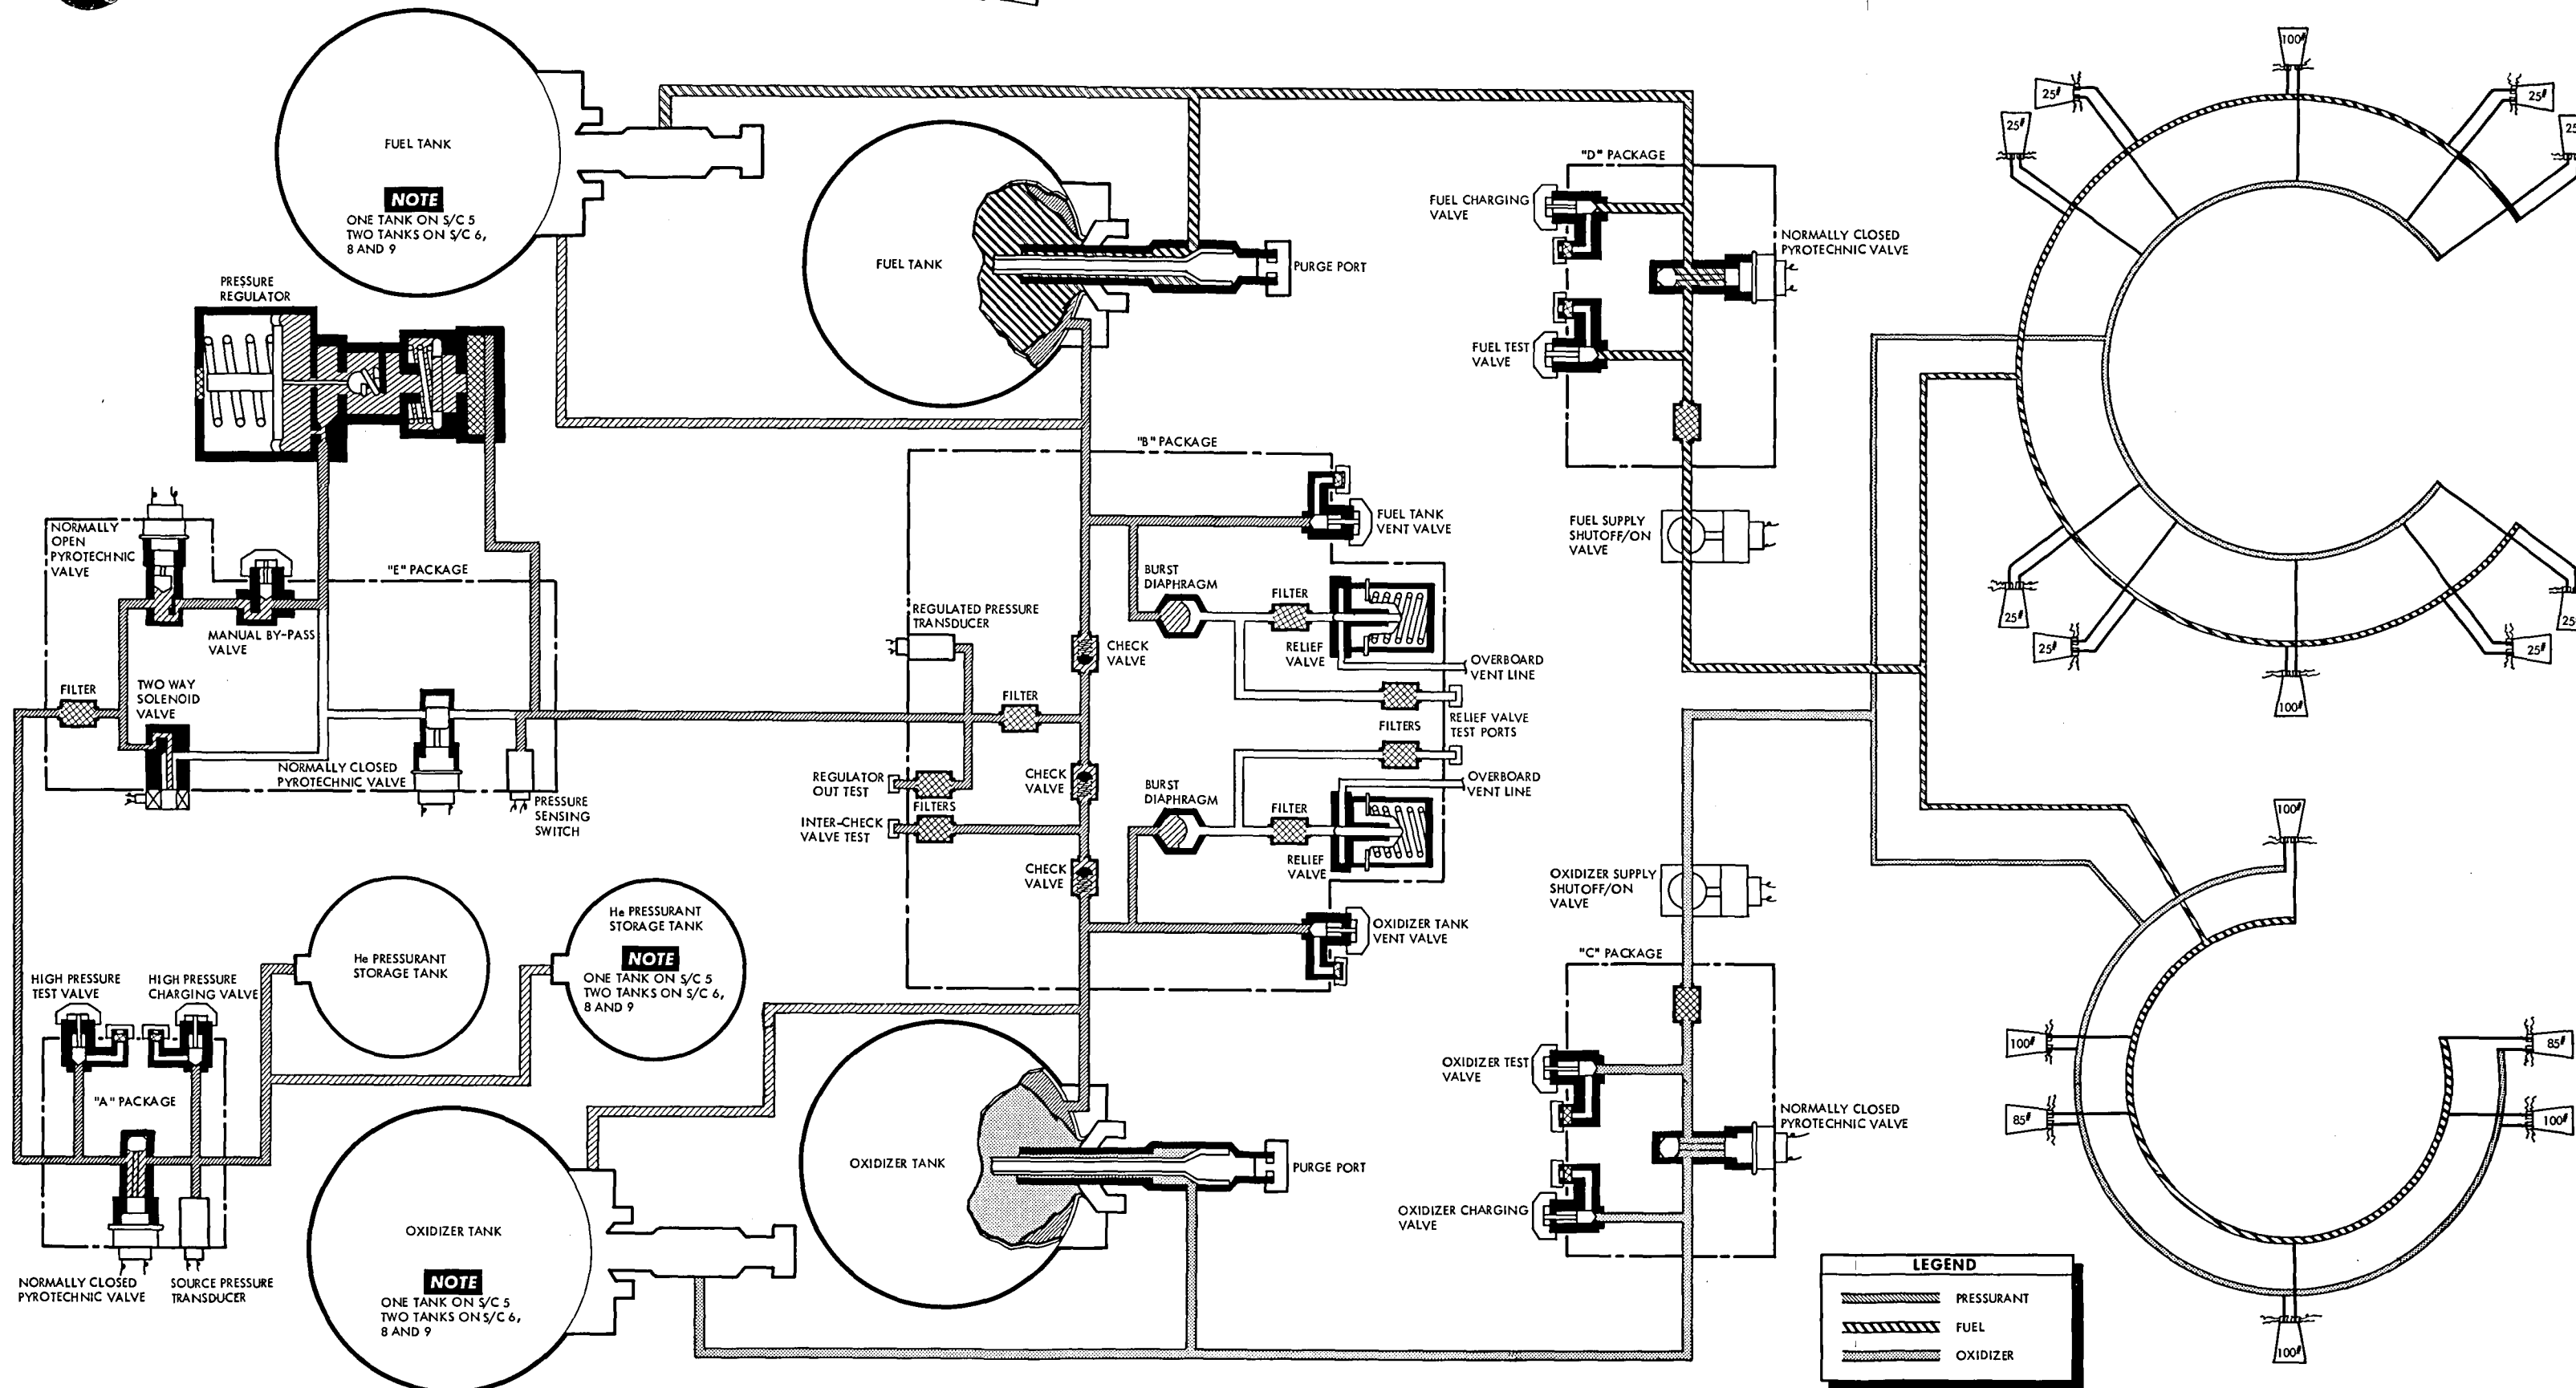


Figure 8-87 Orbit Attitude Maneuvering System Schematic

**PROJECT GEMINI**

the system. The pressurant is isolated in the storage tank during pre-launch periods by a normally closed pyrotechnic actuated valve, located in the "A" package.

Fuel/Oxidizer Group

The fuel/oxidizer (propellant) group (Figure 8-87) consists of expulsion bladder storage tanks, "C" and "D" packages and two propellant shut off valves. Charging valves and ports and test valves and ports are provided at accessible points to permit servicing, venting, purging and testing. The propellants are isolated in the storage tanks by normally closed, pyrotechnic actuated valves ("C" and "D" packages). Filters are provided in the "C" and "D" packages, down stream of the isolation valves to guard against contamination of the thrust chamber assemblies. The propellants used are:

OXIDIZER - nitrogen tetroxide (N_2O_4) conforming to
specification MIL - P - 26539 A

FUEL - monomethyl hydrazine ($CH_3 N_2H_3$) conforming
to specification MIL - P - 27403

Thrust Chamber Assembly (TCA) Group

The TCA group consists of thrust chambers and electrical solenoid valves. Sixteen TCA's are used per spacecraft (Figure 8-86). Eight twenty-five pound thrust capacity TCA's are used for attitude control, (roll, pitch and yaw). Six one-hundred pound and two eighty-five pound thrust capacity TCA's are used for translational maneuvering.



PROJECT GEMINI



SYSTEM OPERATION

Pressurant Group

The pressurant tank contains high pressure helium (He) stored at 3000 PSI. (Figure 8-87). The tank is serviced through the "A" package high pressure gas charging port. Pressure from the pressurant tank is isolated from the remainder of the system by a normally closed pyrotechnic actuated isolation valve located in the "A" package. Upon command, the system isolation valve is opened and pressurized helium flows through the "E" package, to the pressure regulator, "B" package and propellant tanks. Normally, pressurant is controlled through system pressure regulator, and regulated pressure flows to the "B" package. The "B" package serves to deliver pressurant at regulated pressure to the fuel and oxidizer tanks, imposing pressure on the propellant tank bladder exteriors. Relief valves in the "B" package prevent over pressurization of the system downstream of the regulator. Burst diaphragms are provided in series with the relief valves, in the "B" package, to provide a positive leak tight seal between system pressure and the relief valve.

The "E" package provides a secondary mode of pressure regulation in the event of regulator failure. In the event of regulator over-pressure failure, resulting in excess pressure passage through the regulator, a pressure switch ("E" package) intervenes and automatically closes the normally open cartridge valve. Regulated pressure is then controlled manually by the crew by utilizing the OAMS-PULSE switch. Control pressure information is obtained from the "B" package regulated pressure transducer. Should regulator under-pressure failure occur, the crew can manually select the OAMS - REG switch to SQUIB. This selection opens the normally closed

UNCLASSIFIED

~~CONFIDENTIAL~~
SEDR 300

UNCLASSIFIED



PROJECT GEMINI



valve and closes the normally open valve, thus pressurant by-passes the regulator completely. Pressure is then regulated manually (OAMS-PULSE) by the crew with control pressure information obtained from the "B" package regulated pressure transducer. The "B" package provides a division of pressurant flow to the propellant tanks. The regulated pressure is sensed by the pressure transducer and provides a signal to the cabin instrument, indicating pressure downstream of the regulator. In the event of regulator failure, the crew utilizes the reading to maintain the required pressure in the system for proper operation of pressurant in the propellant tanks. Three check valves prevent back flow of propellant vapors into the pressurant system. The "B" package also affords a safety feature for prevention of over pressure on the fuel and oxidizer tank bladders. Should the system be over pressurized downstream of the regulator, the over pressure would first rupture the burst diaphragms, then be vented overboard through the relief valves. The relief valves will reset when system pressure returns to normal.

 
Fuel/Oxidizer Group

Fuel and oxidizer are stored in their respective tanks and are isolated from the remainder of the system by normally closed pyrotechnic valves in the "C" (oxidizer) and "D" (fuel) packages. Upon command, the "A" (pressurant), "C" and "D" package isolation valves are opened. The pressurant imposes pressure on the propellant tank bladders and fuel and oxidizer are distributed through their separate tubing manifold systems to the inlet of the thrust chamber solenoid valves. Two normally open electric-motor valves are located in the propellant feed lines, upstream of the TCA's. In the event of fuel or oxidizer leakage through the TCA

8-318

~~CONFIDENTIAL~~

UNCLASSIFIED

**PROJECT GEMINI**

solenoid valves the motor operated valves can be closed by the crew to prevent loss of propellants. The valves can again be actuated open by the crew, when required, to deliver propellants to TCA solenoids.

Thrust Chamber Assembly (TCA) Group

Upon command from the automatic or manual controls, signals are transmitted through the attitude control maneuvering electronics (ACME) to selected TCA's to open simultaneously the normally closed, quick-acting fuel and oxidizer solenoid valves mounted on each TCA. In response to these commands, propellants are directed through small injector jets into the combustion chamber. The controlled fuel and oxidizer impinge on one another, where they ignite hypergolically to burn and create thrust.

SYSTEM UNITS

Pressurant Storage Tank

The helium pressurant is stored in welded, titanium spherical tanks. Each tank dimension is 16.20 inches outside diameter and has an internal volume of 1696.0 cubic inches. (Spacecraft 5 has one tank, and Spacecraft 6, 8 and 9 have two tanks each.) The helium gas is stored at 3000 PSI and held therein by the "A" package normally closed pyrotechnic actuated valve. The pressurized helium is used to expel the fuel and oxidizer from their respective tanks. Temperature sensors are affixed to the pressurant tank and outlet line to provide readings for the cabin instrument and telemetry.

~~CONFIDENTIAL~~
SEDR 300

UNCLASSIFIED



PROJECT GEMINI



"A" Package

The "A" package consists of a source pressure transducer, isolation valve, two high pressure gas charging and test valves and filters. The source pressure transducer monitors the pressurant tank pressure and transmits an electric signal to the cabin propellant instrument and spacecraft telemetry system. The normally closed pyrotechnic isolation valve is used to isolate pressure from the remainder of the system. The valve is pyrotechnic actuated to the open position to activate the system for operation. Two dual seal, high pressure gas charging valves and ports are provided, one on each side of the isolation valve. The upstream valve is used for servicing, purging and venting the pressurant tank, while the downstream valve is used to test downstream components. The valve filters prevent contamination during testing and servicing.

"E" Package

The "E" package consists of a filter, one normally open pyrotechnic actuated valve, one normally closed pyrotechnic actuated valve, a normally closed two way solenoid valve, a pressure sensing switch, and a manual by-pass valve. The input filter prevents any contaminants from the "A" package from entering the "E" package. The two pyrotechnic actuated valves are activated (open to closed and closed to open) as required to maintain regulated system pressure, in the event of system regulator malfunction. The two way (open-close) solenoid valve is normally closed and functions upon crew command to maintain regulated system pressure in the event of a system regulator malfunction. The pressure switch senses regulated pressure from the system regulator. Upon sensing over pressure, the pressure switch intervenes and causes the normally open valve to actuate to the closed position, closing the inlet to the pressure regulator. The solenoid valve,

8-320

~~CONFIDENTIAL~~

UNCLASSIFIED



when opened, allows pressurant flow through the package after the normally opened valve is actuated to the closed position. The manual by-pass (normally open) test valve is used to divert pressure to the solenoid valve, during system test.

In the normal mode of operation, gas flows through the normally open pyrotechnic valve to the system regulator. In the event system regulator over pressure malfunction, the pressure switch intervenes and causes the normally opened pyrotechnic valve to actuate to the closed position, diverting pressure to the normally closed solenoid valve. The solenoid valve is manually controlled (pulsed) by the crew to maintain regulated system pressure. In the event of system regulator (under pressure) malfunction, the normally closed pyrotechnic valve can be actuated to the open position. Simultaneously insured by the circuitry, the normally open valve is activated to the closed position. This prevents by-pass of the solenoid valve. In this mode a regulator by-pass circuit is provided and pressure is regulated by the crew.

Pressure Regulator

The pressure regulator is a conventional, mechanical-pneumatic type. The regulator functions to reduce the source pressure to regulated system pressure. An inlet filter is provided to reduce any contaminants in the gas to an acceptable level. An outlet line is provided from the regulated pressure chamber to the pressure switch ("E" package) and activates the switch in the event of an over pressure malfunction.

"B" Package

The "B" package consists of filters, regulated pressure transducer, three check valves, two burst diaphragms, two relief valves, regulator out test port, fuel

**PROJECT GEMINI**

tank vent valve, inter-check valve test port, oxidizer tank vent valve, and two relief valve test ports. The inlet filter reduces any contaminants in the gas to an acceptable level. The relief valve filters prevent ruptured diaphragm particles from entering the relief valve. Test valve inlet filters prevent any contaminants from entering the system. The regulated pressure transducer monitors the regulated pressure and transmits an electric signal to the cabin instrument and spacecraft telemetry indicating the amount of regulated pressure. A single check valve prevents backflow of fuel vapors into the gas system. Two check valves are provided on the oxidizer side to prevent backflow of oxidizer into the system. The burst diaphragms are safety (over pressure) devices that rupture when regulated pressure reaches the design failure pressure, thus, prevents imposing excessive pressure on the propellant bladders. The two relief valves are conventional, mechanical-pneumatic type with pre-set opening pressure. In the event of burst diaphragm rupture, the relief valve opens venting excess pressure overboard. The valve reseats to the closed position when a safe pressure level is reached, thereby, prevents venting the entire gas source. Manual valves and ports are provided to vent, purge and test the regulated system.

Fuel Tank

The fuel storage tanks are welded, titanium spherical tanks which contain an internal bladder and purge port. Each tank dimension is 21.12 inches in diameter, and has a fluid volume capacity of 5355.0 cubic inches. (Spacecraft 5 has one tank and Spacecraft 6, 8 and 9 have two tanks each.) The tank bladder is a triple layered Teflon, positive expulsion type. The helium pressurant is imposed on the exterior of the bladder to expel the fuel through the "D" package, to the thrust chamber solenoid valves. Purge ports are provided to purge and vent the



fuel tanks. Temperature sensors are affixed to the input pressurant line, fuel tank exterior and output line to provide readings for the cabin instrument and telemetry.

Oxidizer Tank

The oxidizer tanks are welded, titanium spherical tanks which contain a bladder and purge port. Spacecraft 5 uses one tank which has a volume of 5355.0 cubic inches. Spacecraft 6, 8 and 9 use two tanks each with a total volume of 8260.0 cubic inches. The tank bladder is double layered Teflon, positive expulsion type. The helium pressurant is imposed on the exterior of the bladder to expel the oxidizer through the "C" package to the thrust chamber solenoid valves. Purge ports are provided to purge and vent the oxidizer tanks. Temperature sensors are affixed to the input pressurant line, oxidizer tank exterior and output line to provide readings for the cabin instrument and telemetry.

"C" and "D" Packages

The "C" (oxidizer) and "D" (fuel) packages are identical in function and are located downstream of the tanks of their respective system. Each package consists of a filter, isolation valve, propellant charging valve and test valve. The filter is located at the outlet port to prevent contaminants from entering the downstream system. The normally closed isolation valve is used to isolate propellants from the remainder of the system during the pre-launch waiting period. The isolation valve is pyrotechnic actuated to the open position for system operation. The propellant charging valve is located upstream of the isolation valve and is used for servicing and venting the system. The test valve is located downstream of the isolation valve and is used to test the downstream system.

UNCLASSIFIED

~~CONFIDENTIAL~~
SEDR 300



PROJECT GEMINI



Propellant Supply Shutoff/On Valves

Propellant supply shutoff/on valves are provided for both the oxidizer and fuel system and are located downstream of the "C" and "D" packages in the system. The valves are motor operated, manual/electric controlled type. The propellant valves serve as safeguards in the event of TCA leakage. The valves are normally open, and are closed at the option of the crew to prevent loss of propellants. The valve is thereafter reopened only when it is necessary to actuate the TCA's for the purpose of spacecraft control.

Thrust Chamber Assembly (TCA) Group

Each TCA consists of two propellant solenoid valves, an electric heater, injection system, calibrated orifices, combustion chamber and an expansion nozzle. The propellant solenoid valves are quick acting, normally closed, which open simultaneously upon application of an electric signal. This action permits fuel and oxidizer flow to the injector system. The injectors utilize precise jets to impinge fuel and oxidizer streams on one another for controlled mixing and combustion. The calibrated orifices are fixed devices used to control propellant flow. Hypergolic ignition occurs in the combustion chamber. The combustion chamber and expansion nozzle is lined with ablative materials and insulation to absorb and dissipate heat, and control external wall temperature. TCA's are installed within the adapter with the nozzle exits terminating flush with the outer moldline and located at various points about the adapter section suitable for the attitude and maneuvering control required. Electric heaters, located at various points in the system, are used to prevent the propellant from freezing.

Tubing Cutter/Sealer

 
8-324

~~CONFIDENTIAL~~

UNCLASSIFIED



PROJECT GEMINI



The tubing cutter/sealer is a pyrotechnic actuated device and serves to positively seal and cut the propellant feed lines. Two such devices are provided for each feed line and are located downstream of the propellant supply on/off valve, one each in the retro and equipment section of the adapter. Prior to re-entry the equipment section is jettisoned. The devices are actuated to permit separation of the feed lines crossing the parting line, and to contain the propellants upon separation.

RE-ENTRY CONTROL SYSTEM (RCS)

SYSTEM DESCRIPTION

The Re-entry Control System (RCS) (Figure 8-88) is a fixed thrust, cold gas pressurized, storable liquid, hypergolic bi-propellant, self contained propulsion system used to provide attitude control of the spacecraft during re-entry.


 
NOTE

The RCS consists of two identical but entirely separate and independent systems. The systems may be operated individually or simultaneously. One system will be described, all data is applicable to either system.

The RCS system is capable of operating outside of the earth's atmosphere. Attitude control (roll, pitch and yaw) is obtained by firing the TCA's in groups. The TCA's are mounted at various points about the RCS section of the spacecraft consistent with the modes of rotational control required. The entire RCS, (tanks and control packages) with the exception of instrumentation is located in



PROJECT GEMINI

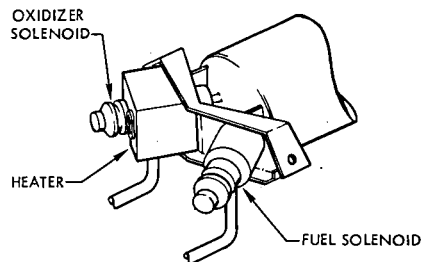

DETAIL A

RCS THRUST CHAMBER ATTITUDE CONTROL				
		5	6	PITCH UP
		1	2	PITCH DOWN
		3	4	YAW RIGHT
		7	8	YAW LEFT
		3	7	ROLL RIGHT
		4	8	ROLL LEFT
THRUST CHAMBER ARRANGEMENT				

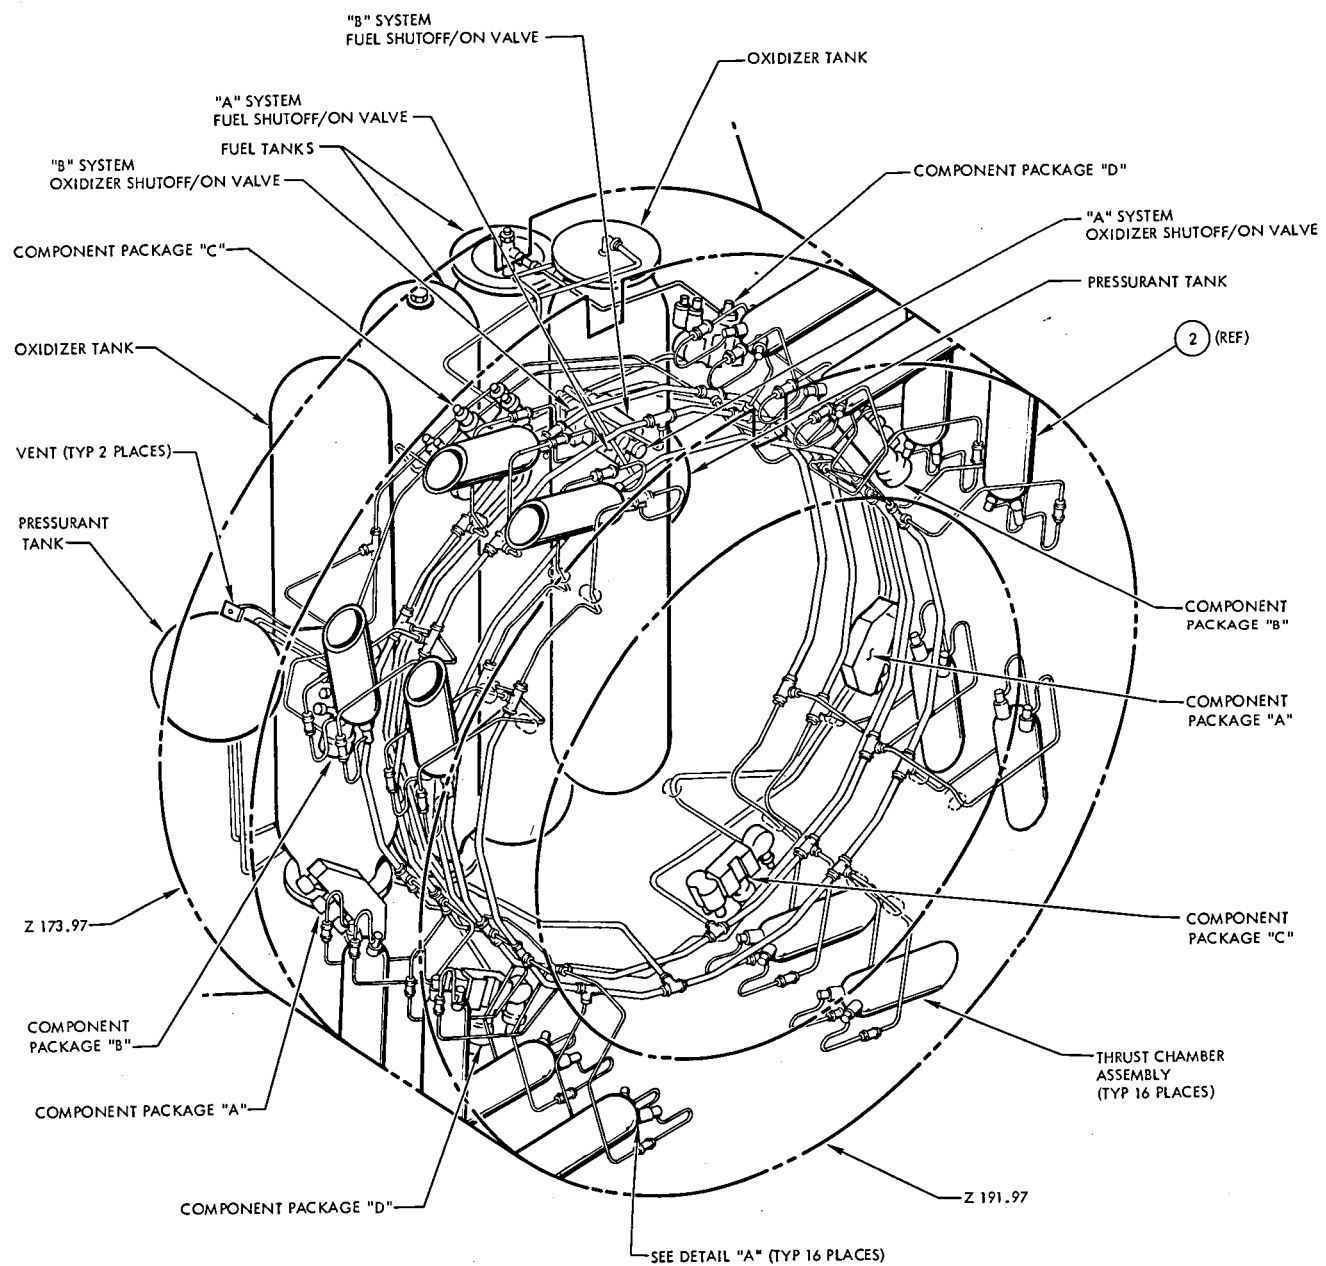


Figure 8-88 Re-Entry Control "A" and "B" Systems

**PROJECT GEMINI**

the RCS section of the spacecraft. Each package consists of several functioning components and filters. The delivery of pressurants and propellants is accomplished by a uniquely brazed tubing manifold system. The RCS system is divided into three groups; pressurant group, the oxidizer/fuel (propellant) group and the thrust chamber assembly (TCA) group.

Pressurant Group

The pressurant group (Figure 8-89) consists of a pressurant tank, "A" package, pressure regulator and "B" package. Valves and test ports are provided at accessible points to permit servicing, venting, purging and testing. Filters are provided throughout the system to prevent system contamination. The pressurant is stored and isolated from the remainder of the system during pre-launch periods by a normally closed pyrotechnic actuated valve, located in the "A" package.

Fuel/Oxidizer Group

The fuel/oxidizer (propellant) group (Figure 8-89) consists of expulsion bladder storage tanks, "C" (oxidizer) and "D" (fuel) packages. Valves, ports and test ports are provided at accessible areas to permit servicing, venting, purging and testing. Filters are provided throughout the system to prevent contamination. The propellants are isolated in the storage tanks from the remainder of the system by normally closed pyrotechnic actuated valves in the "C" and "D" packages. Heaters are provided on the "C" and "D" packages to maintain the propellants at an operating temperature. The propellants used are:

Oxidizer - Nitrogen Tetroxide (N_2O_4) conforming to
Specification MIL - P - 26539A

 **PROJECT GEMINI** 

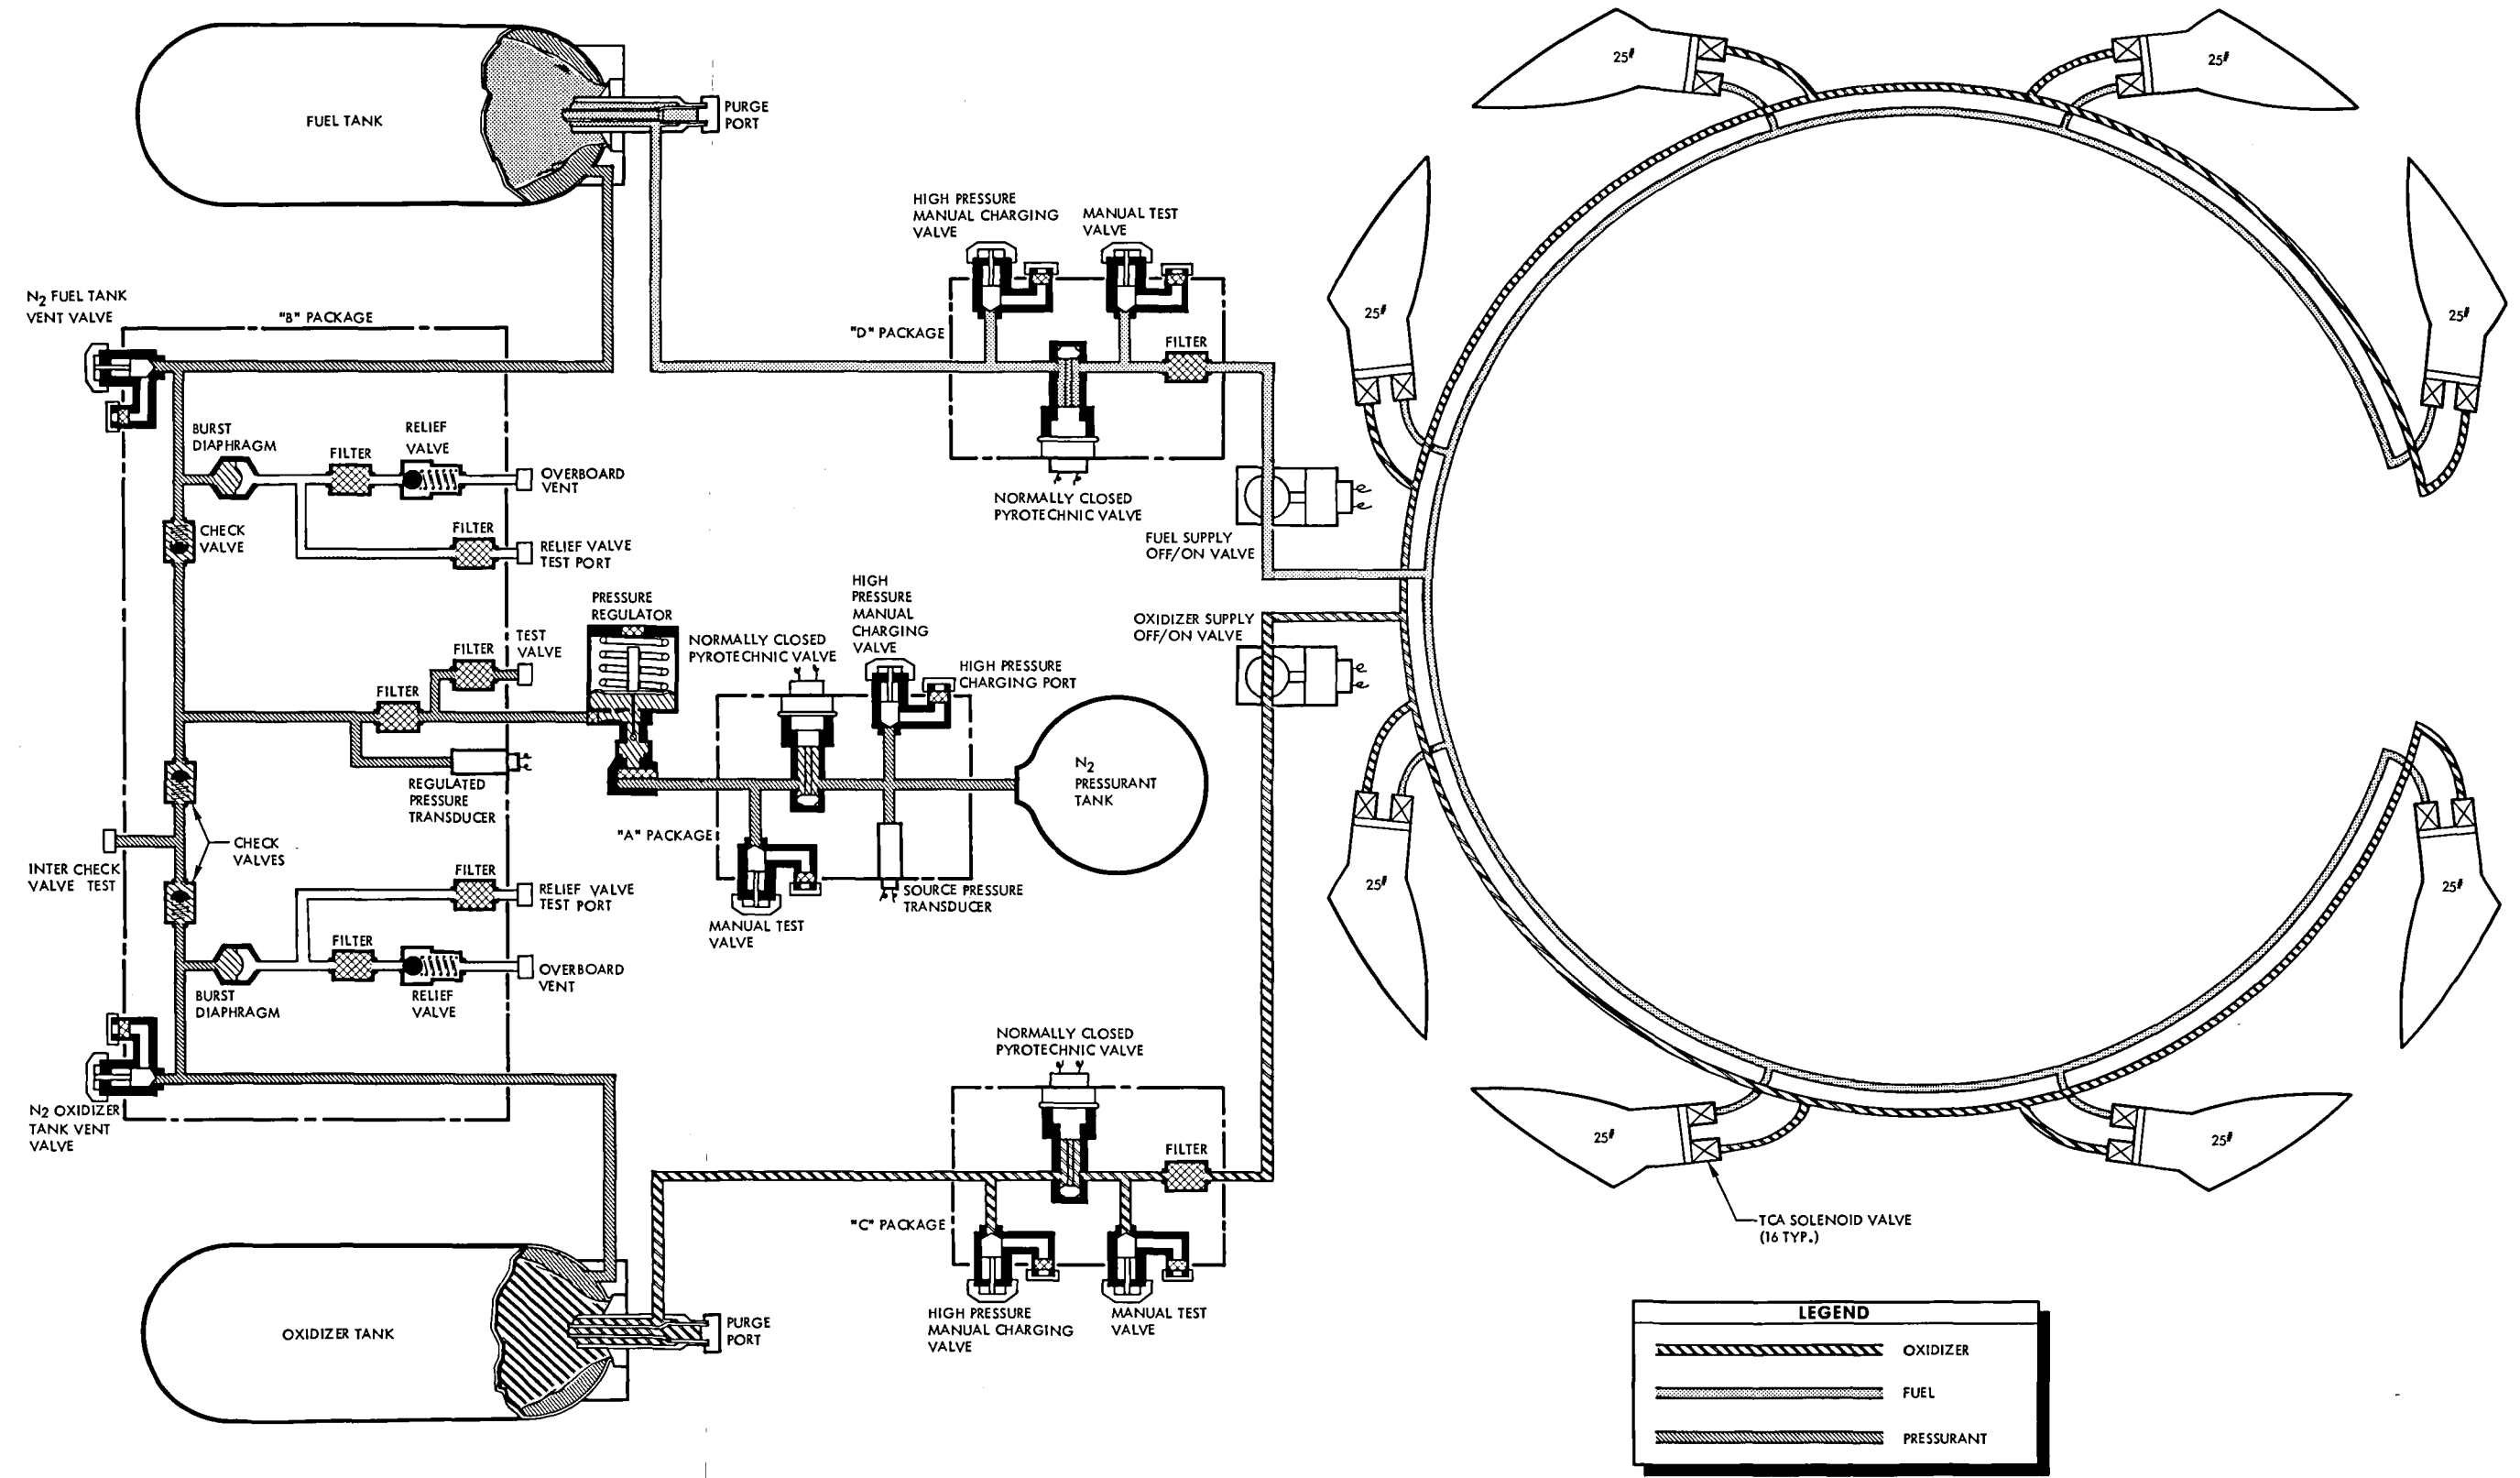


Figure 8-89 RCS (Single System)



FUEL - Monomethyl Hydrazine (CH₃) N₂H₃ conforming
to specification MIL - P 27403


Thrust Chamber Assembly (TCA) Group

The TCA group (Figure 8-88) consists of eight twenty-five pound TCA's used for attitude (roll, pitch and yaw) control of the re-entry module. Each TCA is equipped with thrust chamber and electric controlled solenoid valves. Heaters are provided on the oxidizer solenoid valves to maintain the oxidizer at an operating temperature.

SYSTEM OPERATION

Pressurant Group

(Figure 8-89) High pressure nitrogen (N₂) (pressurant), is stored at 3000 PSI in the pressurant tank. The tank is serviced through the "A" package high pressure gas charging port. Pressure from the pressurant tank is isolated from the remainder of the system, until ready for operation, by a normally closed pyrotechnic actuated valve located in the "A" package. Stored nitrogen pressure is monitored and transmitted to the cabin instrumentation and spacecraft telemetry system by the source pressure transducer located in the "A" package. Upon command, the "A" package pyrotechnic actuated valve is opened (simultaneously, with propellant "C" and "D" package pyrotechnic actuated valves) and nitrogen flows to the pressure regulator and "B" package. The "B" package provides a division of flow to the propellant tanks. The regulated pressure is sensed by the regulated pressure transducer ("B" package) and provides a signal to the spacecraft telemetry system

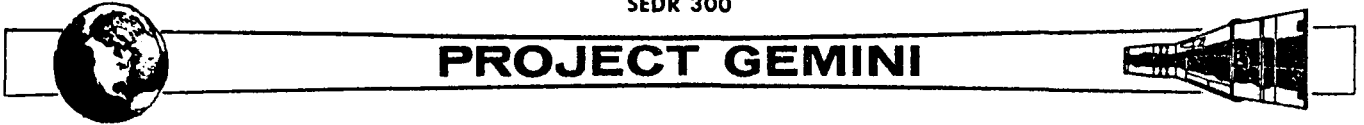

open simultaneously, the normally closed, quick acting fuel and oxidizer solenoid valves mounted on each TCA. In response to the signals, propellants are directed through small injector jets into the combustion chamber. The controlled fuel and oxidizer impinge on one another, where they ignite hypergolically to burn and create thrust.

SYSTEM UNITS

Pressurant Storage Tank

The nitrogen (N₂) pressurant is stored in a welded, titanium spherical tank. The tank dimension is 7.25 inches outside diameter and has an internal volume of 185.0 cubic inches. Nitrogen gas is stored at 3000 PSI and held therein by the "A" package pyrotechnic valve. This nitrogen under pressure is used to expel the fuel and oxidizer from their respective tanks. Temperature sensors are affixed to the pressurant outlet line to provide readings for the cabin instrument and telemetry.

"A" Package

The "A" package consists of a source pressure transducer, isolation valve, filters and two high pressure gas charging valves. The source pressure transducer monitors the stored pressure and transmits an electric signal to the cabin propellant instrument, indicating the pressure of the stored gas. The normally closed isolation valve is used to isolate the pressure from the remainder of the system.

 
The valve is pyrotechnically actuated to the open position to activate the system for operation. Two dual seal, high pressure gas charging valves and ports are

UNCLASSIFIED

~~CONFIDENTIAL~~
SEDR 300



PROJECT GEMINI



The two relief valves are conventional mechanical-pneumatic type with pre-set opening pressure. In the event of burst diaphragm rupture, the relief valve opens venting excess pressure overboard. The valve reseats to the closed position when a safe level is reached, thereby, prevents venting the entire gas source. Manual valves and ports are provided to vent, purge and test the regulated system.

Fuel Tank

The fuel tank is a welded, titanium cylindrical tank which contains an internal bladder and purge port. The tank dimension is 5.10 inches outside diameter, 30.7 inches in length and has a fluid volume capacity of 546.0 cubic inches. The nitrogen pressurant is imposed on the exterior of the bladder to expel fuel through the "D" package to the TCA solenoid valves. The purge port is provided to purge and vent the fuel tank bladder. Temperature sensors are affixed to the nitrogen input line and fuel output line to transmit signals to telemetry stations.

Oxidizer Tank

The oxidizer tank is a welded, titanium cylindrical tank which contains a bladder and purge port. The tank dimension is 5.10 inches outside diameter, 25.2 inches in length and has a fluid volume capacity of 439.0 cubic inches. The bladder is a double layered Teflon, positive expulsion type. The nitrogen pressurant is imposed on the exterior of the bladder to expel the oxidizer through the "C" package to the TCA solenoid valve. The purge port is provided for purging and venting the oxidizer tank bladder. Temperature sensors are affixed to the

UNCLASSIFIED

8-333

~~CONFIDENTIAL~~

UNCLASSIFIED

~~CONFIDENTIAL~~
SEDR 300



PROJECT GEMINI



combustion chamber and expansion nozzle. The fuel and oxidizer solenoid valves are quick acting, normally closed, which open simultaneously upon application of an electric signal. The action permits fuel and oxidizer flow into the injector system. The injectors use precise jets to impinge fuel and oxidizer streams on one another for controlled mixing and combustion. The calibrated orifices are fixed devices used to control propellant flow. Hypergolic ignition occurs in the combustion chamber. The combustion chamber and expansion nozzle is lined with ablative materials and insulation to absorb and dissipate heat and control external wall temperature. TCA's are installed within the RCS section mold line, with the nozzles terminating flush with the outer mold line. TCA's are located at fixed points in the RCS section in a location suitable for attitude control. Electric heaters, located at various points in the system, are used to prevent the propellant from freezing.

 
UNCLASSIFIED

8-335/-336

~~CONFIDENTIAL~~



PROJECT GEMINI



FUEL - Monomethyl Hydrazine (CH₃) N₂H₃ conforming
to specification MIL - P 27403

Thrust Chamber Assembly (TCA) Group

The TCA group (Figure 8-88) consists of eight twenty-five pound TCA's used for attitude (roll, pitch and yaw) control of the re-entry module. Each TCA is equipped with thrust chamber and electric controlled solenoid valves. Heaters are provided on the oxidizer solenoid valves to maintain the oxidizer at an operating temperature.

SYSTEM OPERATION

Pressurant Group


(Figure 8-89) High pressure nitrogen (N₂) (pressurant), is stored at 3000 PSI in the pressurant tank. The tank is serviced through the "A" package high pressure gas charging port. Pressure from the pressurant tank is isolated from the remainder of the system, until ready for operation, by a normally closed pyrotechnic actuated valve located in the "A" package. Stored nitrogen pressure is monitored and transmitted to the cabin instrumentation and spacecraft telemetry system by the source pressure transducer located in the "A" package. Upon command, the "A" package pyrotechnic actuated valve is opened (simultaneously, with propellant "C" and "D" package pyrotechnic actuated valves) and nitrogen flows to the pressure regulator and "B" package. The "B" package provides a division of flow to the propellant tanks. The regulated pressure is sensed by the regulated pressure transducer ("B" package) and provides a signal to the spacecraft telemetry system

UNCLASSIFIED

~~CONFIDENTIAL~~
SEDR 300



 PROJECT GEMINI



indicating pressure downstream of the regulator. The check valves prevent back-flow of propellant vapors into the pressurant system. The "B" package also provides a safety feature to prevent over pressure of the fuel and oxidizer tank bladders. Should the system be over pressurized downstream of the regulator, the over pressure would first rupture the burst diaphragms, then be vented over-board through the relief valves.

Fuel/Oxidizer Group

Fuel and oxidizer (propellants) are stored in their respective tanks, and are serviced through the high pressure charging ports in the "C" and "D" packages. The propellants are isolated from the remainder of the system, until ready for operation, by the normally closed pyrotechnic valves in the "C" and "D" packages. Upon command, the "A" (pressurant), "C" (oxidizer) and "D" (fuel) package pyrotechnic actuated valves are opened and propellants are distributed through their separate tubing manifold system to the thrust chamber inlet solenoid valves.

Two normally open electric-motor valves are located in the propellant feed lines, upstream of the TCA's. In the event of fuel or oxidizer leakage through the TCA solenoid valves, the motor operated valves can be closed by the crew to prevent loss of propellants. The valves can again be actuated open by the crew, when required, to deliver propellants to the TCA solenoids.

 
Thrust Chamber Assembly (TCA) Group

Upon command from the automatic or manual controls, signals are transmitted through the Attitude Control Maneuvers Electronics (ACME) to selected TCA's to

UNCLASSIFIED

8-330

~~CONFIDENTIAL~~

**PROJECT GEMINI**

open simultaneously, the normally closed, quick acting fuel and oxidizer solenoid valves mounted on each TCA. In response to the signals, propellants are directed through small injector jets into the combustion chamber. The controlled fuel and oxidizer impinge on one another, where they ignite hypergolically to burn and create thrust.

SYSTEM UNITSPressurant Storage Tank

The nitrogen (N₂) pressurant is stored in a welded, titanium spherical tank. The tank dimension is 7.25 inches outside diameter and has an internal volume of 185.0 cubic inches. Nitrogen gas is stored at 3000 PSI and held therein by the "A" package pyrotechnic valve. This nitrogen under pressure is used to expel the fuel and oxidizer from their respective tanks. Temperature sensors are affixed to the pressurant outlet line to provide readings for the cabin instrument and telemetry.

"A" Package

The "A" package consists of a source pressure transducer, isolation valve, filters and two high pressure gas charging valves. The source pressure transducer monitors the stored pressure and transmits an electric signal to the cabin propellant instrument, indicating the pressure of the stored gas. The normally closed isolation valve is used to isolate the pressure from the remainder of the system. The valve is pyrotechnically actuated to the open position to activate the system for operation. Two dual seal, high pressure gas charging valves and ports are

UNCLASSIFIED

~~CONFIDENTIAL~~
SEDR 300



PROJECT GEMINI



provided, one on each side of the isolation valve. The upstream valve is used for servicing, venting and purging the pressurant tank, while the downstream valve is used to test downstream components. Filters are provided to prevent contaminants from entering the system.

Pressure Regulator

The pressure regulator is a conventional, mechanical-pneumatic type. The regulator functions to reduce the source pressure to regulated system pressure. An inlet filter is provided to reduce any contaminants in the gas to an acceptable level.

"B" Package

The "B" package consists of filters, regulated pressure transducer, three check valves, two burst diaphragms, two relief valves, regulator output test port, fuel tank vent valve, oxidizer tank vent valve, inter-check valve test port and two relief valve test ports. The inlet filter reduces any contaminants in the gas to an acceptable level. The relief valve filters prevent ruptured diaphragm particles from entering the relief valves. Valve inlet filters prevent contaminants from entering the system. The pressure transducer monitors the regulated pressure and transmits an electrical signal to the spacecraft Instrumentation System. A single check valve prevents backflow of fuel vapors into the gas system. Two check valves are provided on the oxidizer side to prevent backflow of oxidizer vapor into the gas system. The burst diaphragms are safety devices that rupture when the regulated pressure reaches the design failure pressure, thus, prevents imposing excessive pressure on the propellant bladders.

8-332

~~CONFIDENTIAL~~

 
UNCLASSIFIED

UNCLASSIFIED

~~CONFIDENTIAL~~
SEDR 300



PROJECT GEMINI



The two relief valves are conventional mechanical-pneumatic type with pre-set opening pressure. In the event of burst diaphragm rupture, the relief valve opens venting excess pressure overboard. The valve reseats to the closed position when a safe level is reached, thereby, prevents venting the entire gas source. Manual valves and ports are provided to vent, purge and test the regulated system.

Fuel Tank

The fuel tank is a welded, titanium cylindrical tank which contains an internal bladder and purge port. The tank dimension is 5.10 inches outside diameter, 30.7 inches in length and has a fluid volume capacity of 546.0 cubic inches. The nitrogen pressurant is imposed on the exterior of the bladder to expel fuel through the "D" package to the TCA solenoid valves. The purge port is provided to purge and vent the fuel tank bladder. Temperature sensors are affixed to the nitrogen input line and fuel output line to transmit signals to telemetry stations.

Oxidizer Tank

The oxidizer tank is a welded, titanium cylindrical tank which contains a bladder and purge port. The tank dimension is 5.10 inches outside diameter, 25.2 inches in length and has a fluid volume capacity of 439.0 cubic inches. The bladder is a double layered Teflon, positive expulsion type. The nitrogen pressurant is imposed on the exterior of the bladder to expel the oxidizer through the "C" package to the TCA solenoid valve. The purge port is provided for purging and venting the oxidizer tank bladder. Temperature sensors are affixed to the

UNCLASSIFIED

8-333

 
~~CONFIDENTIAL~~

UNCLASSIFIED

~~CONFIDENTIAL~~
SEDR 300



PROJECT GEMINI



nitrogen input line, oxidizer output line and transmit signals to telemetry stations.

"C" and "D" Packages

The "C" and "D" packages are identical in function and are located downstream of the tanks of their respective system. Each package consists of filters, an isolation valve, propellant charging valve and test valve. The filter located at outlet port reduces contaminants to an acceptable level. The valve and port filters prevent contaminants from entering the downstream system. The normally closed isolation valve is used to isolate propellants from the remainder of the system during the pre-launch waiting period. The isolation valve is pyrotechnic actuated to the open position for system operation. The propellant charging valve is located upstream of the isolation valve and is used for servicing and venting the system. The test valve is located downstream of the isolation valve and is used to test the downstream system.

Propellant Supply Shutoff/On Valves

Propellant supply shutoff/on valves are provided for both the oxidizer and fuel system, and are located downstream of the "C" and "D" packages in the system. The valves are motor operated, manual/electric controlled type. The valves are normally open, and are closed at the option of the crew to prevent loss of propellants. The valves are reopened only when the TCA's are needed for spacecraft control.

Thrust Chamber Assembly (TCA) Group

Each TCA consists of two propellant valves, injection system, calibrated orifices,

8-334

~~CONFIDENTIAL~~

UNCLASSIFIED

UNCLASSIFIED

~~CONFIDENTIAL~~
SEDR 300



combustion chamber and expansion nozzle. The fuel and oxidizer solenoid valves are quick acting, normally closed, which open simultaneously upon application of an electric signal. The action permits fuel and oxidizer flow into the injector system. The injectors use precise jets to impinge fuel and oxidizer streams on one another for controlled mixing and combustion. The calibrated orifices are fixed devices used to control propellant flow. Hypergolic ignition occurs in the combustion chamber. The combustion chamber and expansion nozzle is lined with ablative materials and insulation to absorb and dissipate heat and control external wall temperature. TCA's are installed within the RCS section mold line, with the nozzles terminating flush with the outer mold line. TCA's are located at fixed points in the RCS section in a location suitable for attitude control. Electric heaters, located at various points in the system, are used to prevent the propellant from freezing.

UNCLASSIFIED

8-335/-336
~~CONFIDENTIAL~~



End of Document