



Air Traffic Management Demonstration II (ATD-2)

Washington Center Training

NEXTGEN


ZDC

September 19-20, 2017



Time	Event	Presenter
0000	NASA Menu and Multi-function Display	Eric
0010	Overview of STBO Client	Eric
0040	APREQ Procedures	Bob
0110	TBFM IDAC Disconnecting Procedure	Bob
0115	DASH	Eric
0120	What-If	Eric
0130	Hands-on Training	


Kiosk Type Display with "My Desktop" view

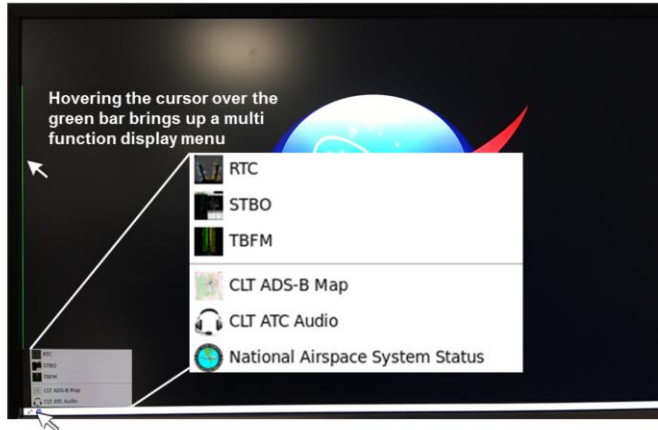



Time	Event	Presenter
0000	NASA Menu and Multi-function Display	Eric
0010	Overview of STBO Client	Eric
0040	APREQ Procedures	Bob
0110	TBFM IDAC Disconnecting Procedure	Bob
0115	DASH	Eric
0120	What-If	Eric
0130	Hands-on Training	



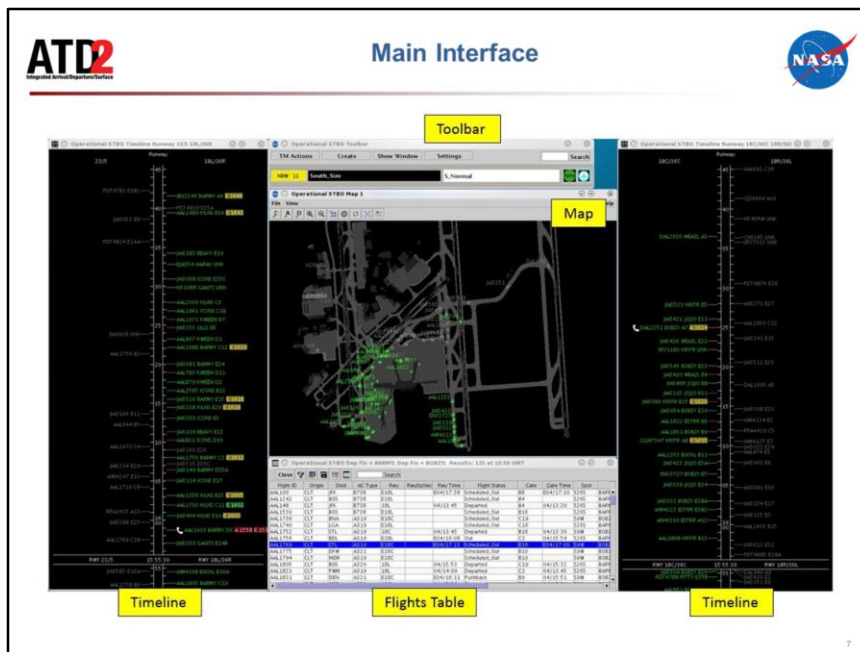

The full interface of the STBO Client is composed of multiple display windows that all serve different purposes and can be configured and arranged however the user wants.


The Toolbar allows the user to interact with the system by adding new display windows, managing current display windows, saving and loading display configurations, searching for flights, scheduling TMIs and airport events, and displaying new notifications to the user.

The Timelines provide information about the predicted OFF times for departures, predicted ON times for arrivals, gate conflicts, and TMIs that aircraft are subject to. They can be displayed to show flight-specific information in the Timeline datablocks.

The Map displays surface surveillance data and provides a visual representation of aircraft current positions. The map also displays runway closures and can be set up to display flight-specific information in the map datablocks.

The Flights Table is a list of all known arrivals and departures for the airport. The list can be sorted and filtered according to the user's preference, and information

columns can be moved, sorted, added, and removed.

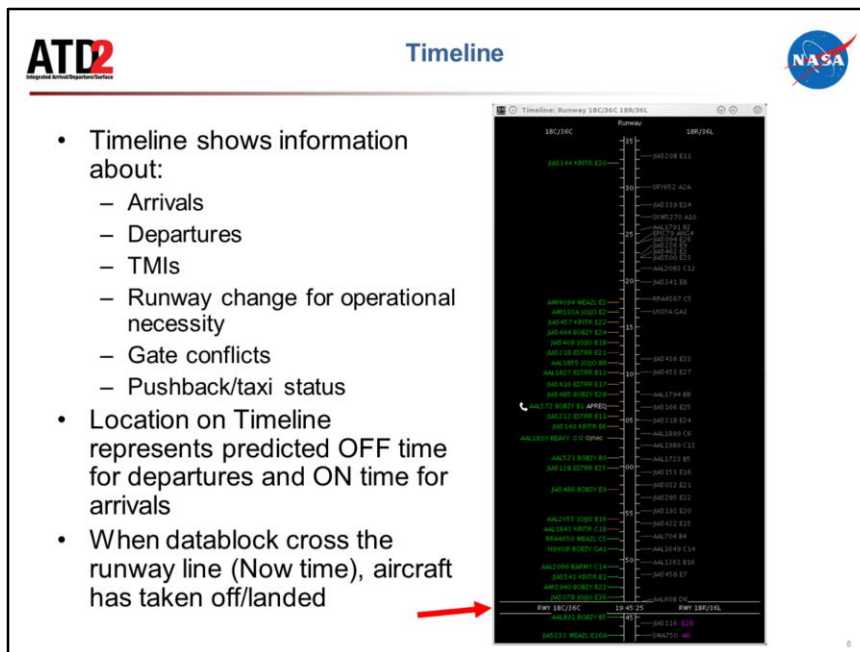


The Timeline is set up to display flight positions, resource labels (e.g., “18C/36C”) at the top and bottom of the display, the type of resource (e.g., “Runway” at the top of the timeline or “RWY” at the bottom), and the now time. The timeline also provides information about arrivals, departures, TMLs, runway assignments and changes for operational necessity, gate conflicts, and pushback and taxi status.

The position on the timeline is the prediction the tactical scheduler generates of OFF time for departures and ON time for arrivals. For departures, this is either the TTOT, CTOT or EFTT.

- EFTT is only provided for APREQs that have yet to be negotiated with Center.

- TTOT is a prediction of OFF. It can be equal to CTOT (the controlled departure time from ATC) for APREQ and EDCT flights.

When flight datablocks cross the resource line with the Now time, arrivals have landed and departures have taken off.

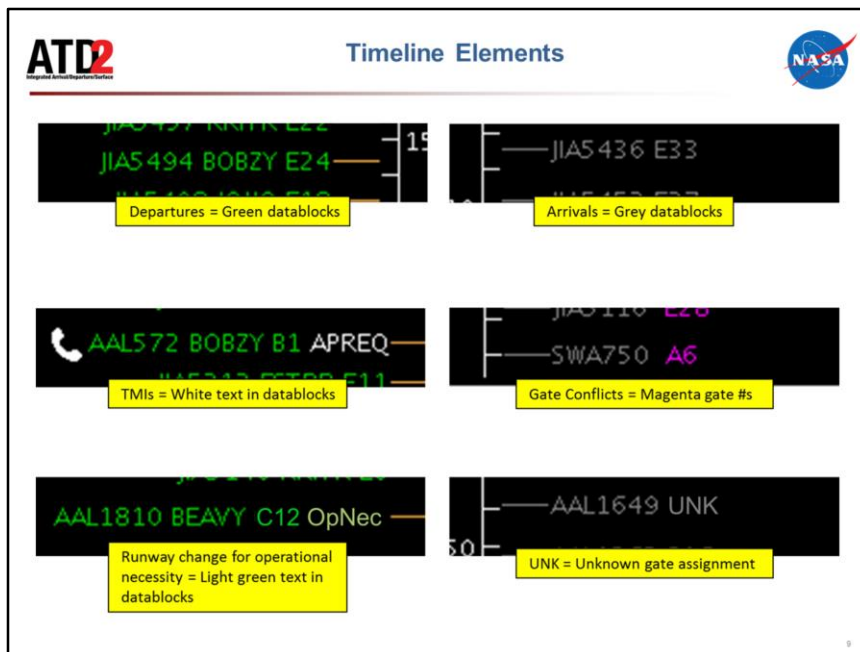


When the timeline is configured by arrivals and departures, arrival flights are displayed in grey and departure flights are displayed in green.

APREQ flights have additional symbology (e.g., the telephone icon displayed here), but all TMI information is displayed in white text. APREQ and EDCT times are also displayed on the Timeline in white text once the system has the times.

When parking gates are selected to be displayed on the Timeline, unknown parking gate assignments are displayed as “UNK”. When gate conflicts are selected to be displayed on the Timeline, the parking gate number is colored magenta for flights with gate conflicts.


When ramp inputs a requested change of runway assignment for operational necessity, the flight datablock moves to the new runway assignment and “OpNec” is written in light green text on the datablock.

Additional flight information can be configured to display on the timeline flight datablocks (see slide 7).

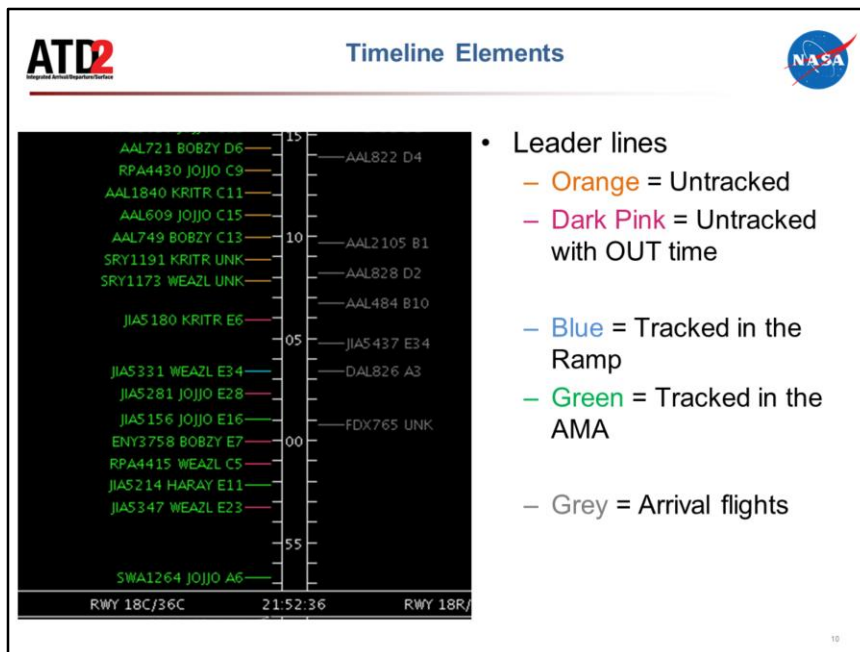

Leader lines are useful for determining the status/position of the flight on the surface.


- Orange leader lines show untracked departure flights that are scheduled but have not yet pushed off the gate (no OUT time)
- Dark pink leader lines show untracked departure flights that have pushed back from the gate (have an OUT time)
- Blue leader lines are for tracked departure flights that are still in the ramp area
- Green leader lines are for tracked departure flights that are in the AMA
- Grey leader lines are for arrival flights

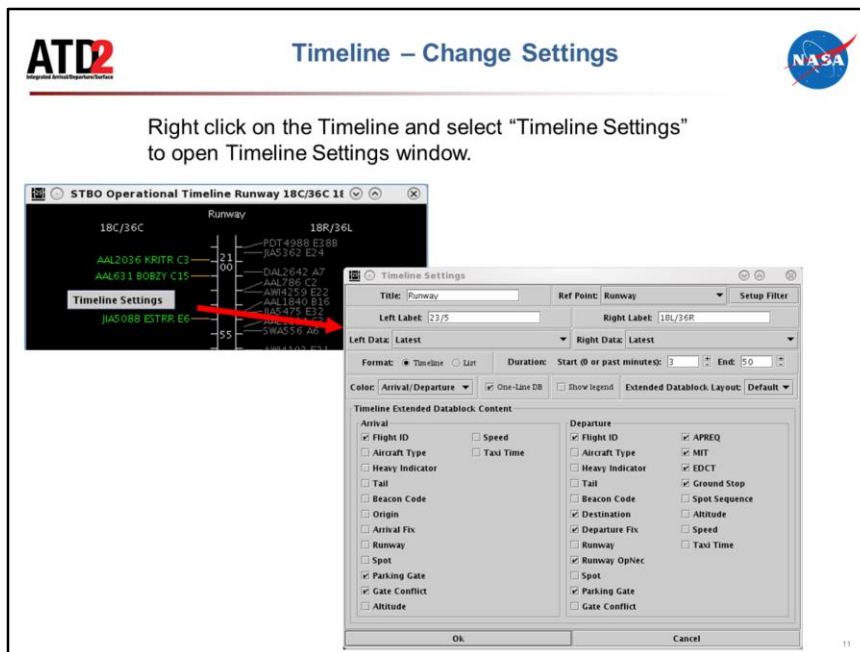

Timeline display windows are not limited to showing information about arrivals and departures to the runway. Timelines can be configured for other resources (or reference points), to input different data, to have color coding beyond that of arrivals and departures, be filtered to display select information, and can be shown in list format rather than as a timeline. Timelines can also be configured to show a variety of information in the datablocks about arrival and departure flights.


To open the Timelines Settings window, right click anywhere on the timeline background (anywhere not on a flight datablock) and select “Timeline Settings.”

The duration of the Timeline display can be configured to any interval of the user’s choice. The user also has the ability to left or right click on the center column of the Timeline and drag the Timeline up or down and look further into the timeline’s past or future. When dragging the Timeline, the interval remains the same, but the start and end times will differ. For example, lets say the Timeline is displaying a 53-minute interval of time that starts 3 minutes in the past and ends 50 minutes into the future. If you click and drag the timeline down 10 minutes, the Timeline will keep displaying a 53-minute interval, but the start and end time for the timeline display will now be from 7 minutes into the future to 60 minutes into the future.

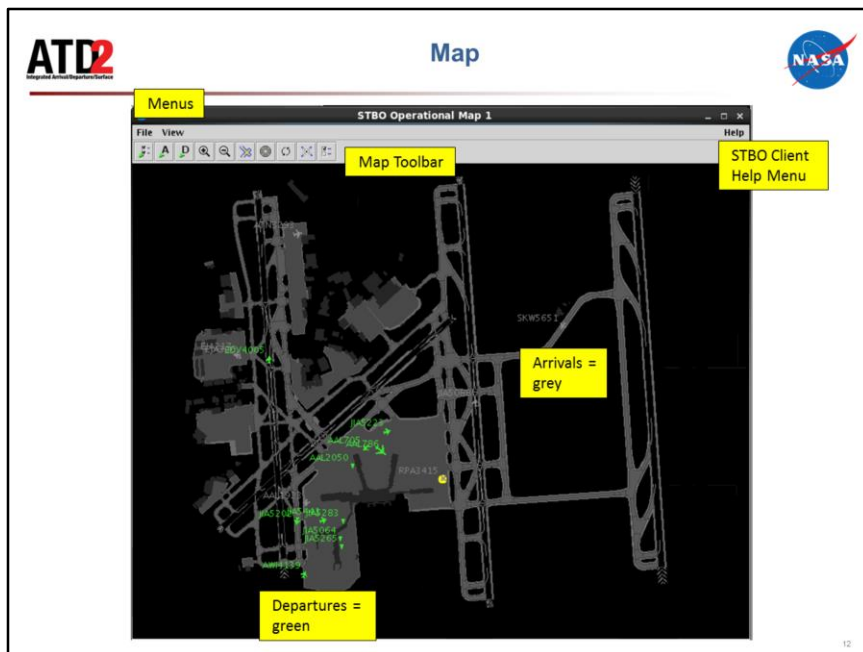

STBO Client Map consists of dropdown menus (which will not be covered in these slides since most of the functions are found elsewhere on the GUI), a Map toolbar, STBO Client Help menu, and flight positions on the surface. Flight positions are collected from surface surveillance.

Like on the Timeline, departure flights are displayed in green and arrival flights are displayed in grey. Gate conflicts appear as magenta parking gates.

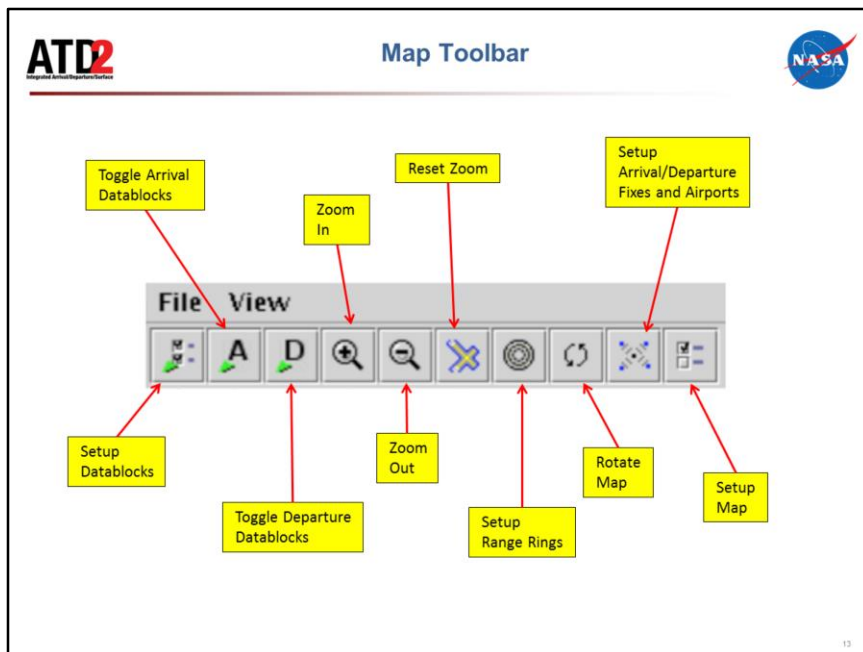


There are several functions available to the user on the Map toolbar. The labels above are what appear on the hover tooltips feature for each button. From left to right:

- Setup Datablocks: opens a settings window for making adjustments to how all Map datablocks are displayed (see slide 10)
- Toggle Arrival Datablocks: toggle between no DB, ACID only DB, and Extended DB
- Toggle Departure Datablocks: toggle between no DB, ACID only DB, and Extended DB
- Zoom In: zoom in on the map
- Zoom Out: zoom out on the map
- Reset Zoom: return to the default map zoom level
- Setup Range Rings: opens settings window to set interval for range ring spacing, show range rings, show distance labels for each range ring, and set the max distance to show range rings
- Rotate Map: select one of four orientations for the map (0°, 90°, 180°, 270°) – note: choosing the orientation the map is currently on will result in no rotation
- Setup Arrival/Departure Fixes and Airports: add specific fixes and


airports to the display, overlay TRACON map onto airport map

- Setup Map: opens a window to change settings for showing or hiding labels, shapes, and other items on the map (see slide 10)

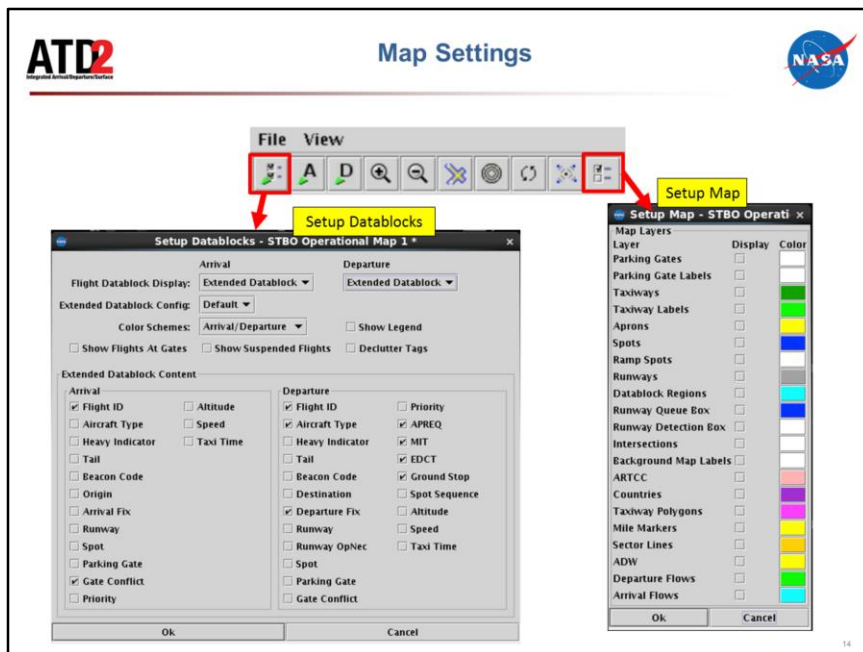


The Setup Datablocks button on the Map toolbar opens a window that enables changing the settings for what items are displayed on arrival and departure datablocks, as well as setting up how aircraft icons are color coded, showing (untracked) flights at the gate, and other display filters.

The Setup Map button on the Map toolbar opens a window that enables changing the labels, shapes, and other items on the map (e.g., selecting the “ADW” checkbox displays the physical boundary for the ADW on the map).

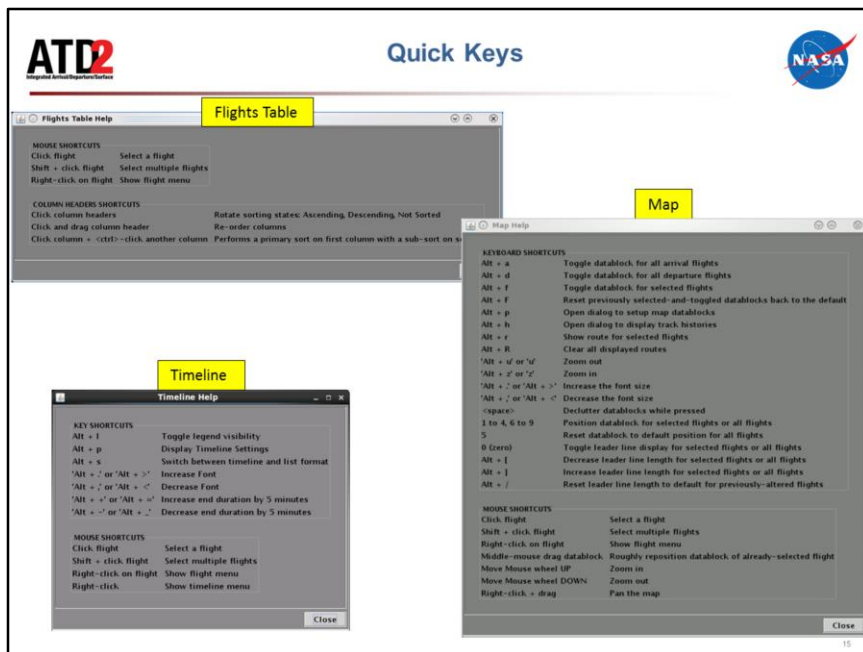

Some users prefer to use quick key functions to navigate through the interface and interact with it. Some quick key functions exist in the system today.

The Map toolbar currently uses hover tooltips to display the button labels. Menu tooltips will be added to the system to describe some of the quick keys.

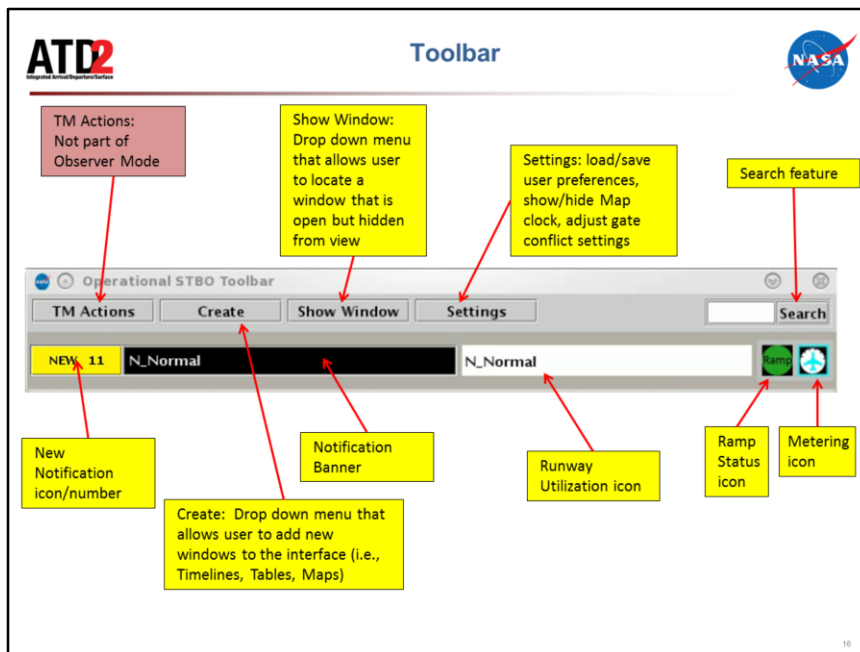

There are several functions available to the user on the Toolbar. From left to right:

- TM Actions: dropdown menu that allows user to schedule/make changes to TMIs and runway utilization
- New Notification Icon/Number: displays in yellow with the number of new notifications when new notifications are populated in the notification window. When there are no new notifications, this icon is grey with the number "0" displayed.
- Notification Banner: this banner cycles through the new notifications in the notification table. Once notifications are cleared/acknowledged, the banner is blank. Only new notifications are displayed. Clicking on the banner populates the notification window.
- Create: drop down menu that allows user to add new windows to the interface (i.e., timelines, tables, maps, load graphs)
- Show Window: drop down menu that allows user to locate a window that is open but hidden from view beneath other windows
- Settings: button that opens a window to allow users to save the current display configuration for the whole STBO Client or to load a previously saved configurations
- Search Feature: search for a flight either by entering the full callsign

or numbers only

- Ramp Status Icon: shows when the Ramp is open, pending closure, or closed.

- Flow Icon: provides situational awareness for the airport runway configurations and runway utilization.

Use the search feature on the toolbar or in the Flights Table search for flight numbers, callsigns, destination airports, or departure fixes. All flights that match the search criteria are highlighted.



The search function is located on the STBO Client Toolbar and Flights Table. It can be used to locate groups of flights from the same carrier or to locate individual flights. To search, type the flight number, callsign, destination airport, or departure fix in to the search textbox. When typing begins, the search feature will highlight all flights that match the first character (the first image). As more characters are entered, the number of flights that match the search will narrow (the second image).



Flights Table



Edit Filters
Column Settings

Close
Search

Flight ID	Origin	Dest	AC Type	Rwy	RwyOptNec	Rwy Time	Flight Status	Gate	Gate Time	Spot
AAL1466	BOS	CLT	B738	E36R			Scheduled_In	UNK		25
AAL1477	CLT	ORD	B738	36C		15/17:20	Departed	B5	15/17:10	125
AAL1477	MIA	CLT	B738	18L		15/15:35	In	B5	15/15:43	9W
AAL1489	AUS	CLT	B738	18L		15/14:24	In	B16	15/14:33	9W
AAL1489	CLT	EWB	B738	36R		15/15:54	Departed	B16	15/15:38	24
AAL1530	CLT	BOS	B738	E36R		E15/18:42	Scheduled_Out	B16	E15/18:27	24
AAL1608	STT	CLT	B752	E36R			Scheduled_In	UNK		25
AAL1637	CLT	LAX	A321	E36C			Scheduled_Out	C15		22W
AAL1637	LGA	CLT	A320	E23		E15/20:18	Scheduled_In	C16	E15/20:22	125
AAL1644	CLT	MEM	A319	E36C			Scheduled_Out	B14		13
AAL1644	MYR	CLT	A319	E23		E15/19:20	Scheduled_In	B14	E15/19:24	125
AAL1659	RDU	CLT	A320	E36R			Scheduled_In	C18		25
AAL1663	CLT	PVD	A320	E36R		E15/18:26	Taxiing_AMA	D11	15/18:18	24
AAL1668	CLT	ORF	A319	E36R			Scheduled_Out	C16		24

Edit Filters - All
Close

Field	Operator	Values
AND		
AND		
AND		
AND		

More
Less
Preview Query
Apply
New Alert
Close

Column Settings
Close

Available

- AMT
- ALDT
- AMA Taxi
- AMAT
- AGBT
- ATOT
- Altitude
- ApReq Earliest Time
- ApReq Forced
- ApReq Latest Time

Shown

- Flight ID
- Origin
- Dest
- AC Type
- Rwy
- RwyOptNec
- Rwy Time
- Flight Status
- Gate
- Gate Time

Move Up

Move Down

OK
Cancel

The Flights Table provides a list of scheduled flights for the airport. The column headings on the list can be traded out and moved around in the “Column Settings” window. The list of flights displayed can be adjusted by using the “Edit Filters” window and adding filter parameters.

18

- Data Exchange and sharing between CLT Tower and AA Ramp is foundational to Scheduling and Metering
 - Improves Situational Awareness among decision makers
 - Allows automated exchange of information and less reliance on phone calls
 - Allows for collaboration between different kind of users
 - Data exchange generates a notification for the users in their respective system

Data exchange is the key to information sharing between the Ramp and Tower and is likely to improve situational awareness. Many of these exchanges will remove the over reliance on phone calls and hopefully make the process a lot more efficient and streamlined. It also puts the onus on one party to make inputs into the system so that it is effectively disseminated among others. Even though pilots are not getting any new ATD-2 technologies, many of the changes in their procedures are included here

- Metering – Time based metering
- Pushback and Surveillance information
- APREQ Scheduling
- MIT handling
- EDCT flights
- Airport configurations and runway utilization
- Runway assignments – operational necessity only
- Gate Conflicts
- Manual updates/corrections to flights
- Ground Stop
- Cancellations
- Departure fix close
- Long On Board
- Runway Closure
- Ramp Closure



Metering Mode Icon

Displayed Top Right of Window





- **No Metering :**
 - No time-based advisories are displayed



- **Sequence-based metering:**
 - This is provided primarily for legacy backward compatibility
 - This is how ATD-2 allows the count-based metering that CLT has previously called "departure sequencing"
 - Requires selection of a queue size on RMTC



- **Time-based metering:**
 - This is the new tactical surface metering ATD-2 is adding which leverages time-based-metering & ration-by-schedule principles
 - The time-based pushback advisory is for individual aircraft using trajectory based predictions & scheduling algorithms


21

The metering modes are described above. These will be updated depending on Mode set by the Ramp Manager, STBO Client will also display the Metering Mode Icon on the right hand corner of the Toolbar.

- Notification of APREQ restrictions


Reported	Event Type	Description	Event Start	Event End	Details
7/21/17 2207	Fix	BOBZY OPENED	7/21/17 1934		
7/21/17 2147	Airport	North	7/21/17 2147		
7/21/17 2147	Airport	N_Normal	7/21/17 2147		
7/21/17 2147	Airport	VMC	7/21/17 2147		
7/21/17 2146	Airport	South_Sim	7/21/17 2146	7/21/17 2147	
7/21/17 2146	Airport	S_Normal	7/21/17 2146	7/21/17 2147	
7/21/17 2146	Airport	VMC	7/21/17 2146	7/21/17 2147	
7/21/17 2032	Airport	North	7/21/17 2032	7/21/17 2146	
7/21/17 2032	Airport	N_Normal	7/21/17 2032	7/21/17 2146	
7/21/17 2032	Airport	VMC	7/21/17 2032	7/21/17 2146	
7/21/17 1957	TMI	APREQ to ORD	7/21/17 1950	7/22/17 0000	
7/21/17 1938	TMI	ROA STOP	7/21/17 1938	7/21/17 1938	
7/21/17 1938	TMI	PHX STOP	7/21/17 1938	7/21/17 1938	
7/21/17 1938	TMI	PHL STOP	7/21/17 1938	7/21/17 1938	
7/21/17 1938	TMI	MEM STOP	7/21/17 1938	7/21/17 1938	

Adding an APREQ restriction will generate a notification on RTC and add the word "APREQ" to the Flight Strips of the affected flights.

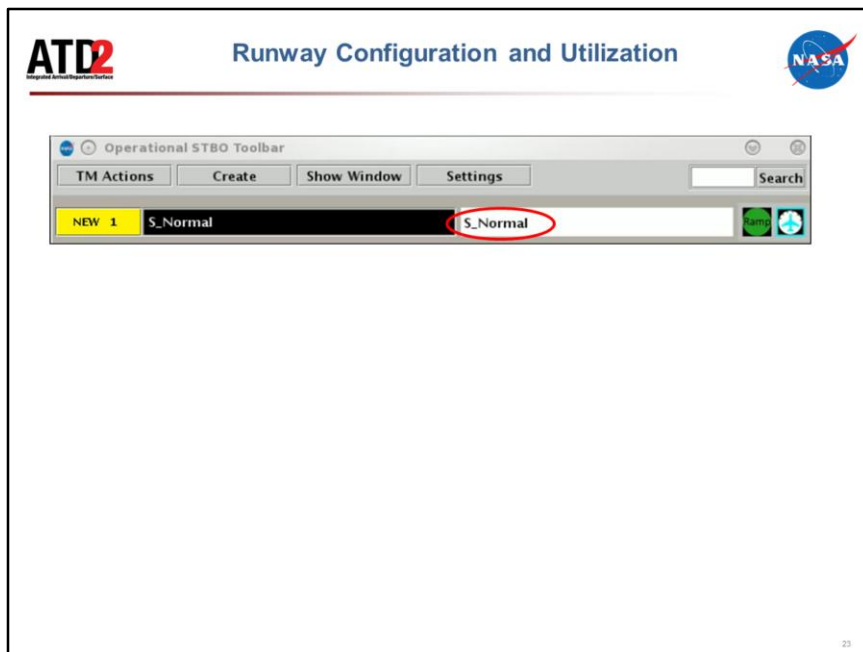


This feature will certainly eliminate the need for phone calls between the Ramp and ATC-T. The ATC-T has agreed to input the airport configuration and any changes to runway utilization. This will be displayed to the Ramp as well as the ATC-T as a notification.

NEW 11 BOBZY 15MIT

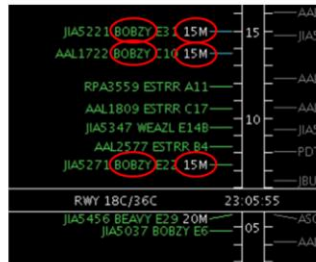

Added restrictions show up as "M15" on Timeline.

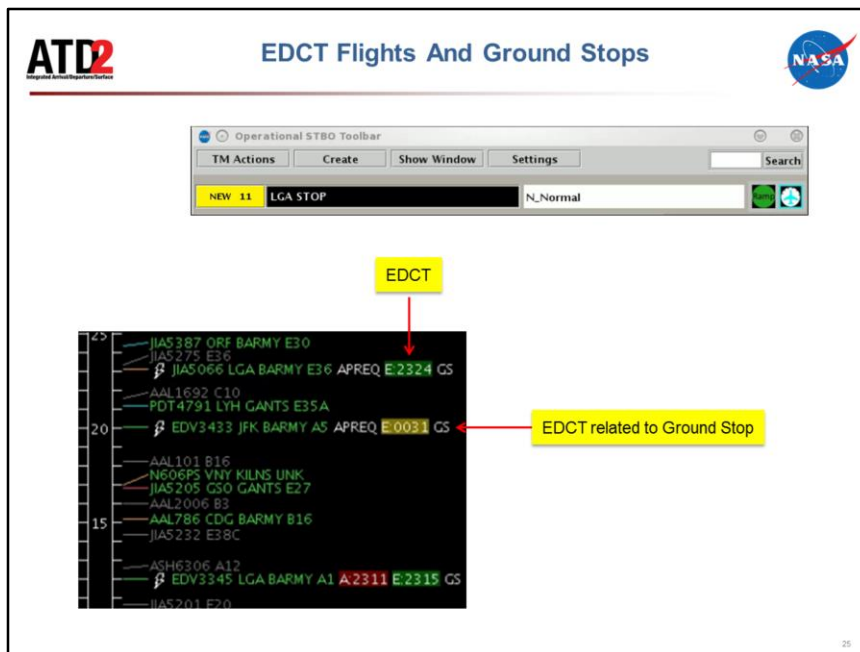

Expected Departure Clearance Times (EDCT) are “Wheels Up” times that are assigned to aircraft due to Traffic Management Initiatives (TMIs) that require holding aircraft on the ground at the departure airport. They have a - 5 minute / + 5 minute conformance window.

EDCTs are read through our system and show up on the STBO Client timeline as “E:hhmm.” If the flight is subject to EDCT agreeen compliance indicator show if the flight is inside the +/- 5 window, it’s red when it is outside the window and late, and it’s yellow when it’s outside the window and early.



Departure Fix Closures



Operational STBO Toolbar

TM Actions
Create
Show Window
Settings

NEW 11
BOBZY CLOSED
N_Normal

Closed Dep Fix with CDR Fix selected

20

- AAL436 DFW BOBZY->CHOPN D2
- JIAS275 E36
- JIAS066 LGA BARMY E36 APREQ E2324
- AAL1692 C10
- AAL435 DFW BOBZY->CHOPN B10
- PDT4791 LYH GANTS E35A
- JIAS387 ORF BARMY E30
- AAL101 B16
- JIAS221 TYS BOBZY->CHOPN E31
- AAL2006 B3
- AAL1722 SEA BOBZY->CHOPN C10
- N606PS VNY KILNS UNK
- JIAS232 E36C

Closed Dep Fix with no CDR Fix selected

If no “CDR Flights To” fix was selected in STBO Client, the fix will turn red and the datablock will move to the end of the closure after a few seconds (or 2 hours into the future if “No End Time” was selected). If a CDR fix was selected, the red will update to show the CDR as “[original fix]→[CDR fix]”. On the RTC/RMTC, regardless of whether a CDR fix was selected or not, the original fix will be displayed in red.

Ramp Open



Ramp Closure
Pending



Ramp Closed



Ramp Closures often occur due to inclement weather especially lightning. This information will be entered by the Ramp and shared with the ATC-T.

Time	Event	Presenter
0000	NASA Menu and Multi-function Display	Eric
0010	Overview of STBO Client	Eric
0040	APREQ Procedures	Bob
0110	TBFM IDAC Disconnecting Procedure	Bob
0115	DASH	Eric
0120	What-If	Eric
0130	Hands-on Training	



ATD2 Electronic APREQ Coordination STBO Client Timeline



Tower/STBO Client

- You can request time electronically: indicated by the **lightning bolt symbol** on Timeline datablock



- To begin the APREQ process:
 - Right click on Timeline datablock
 - Click on "Request Release Time"
 - This action automatically picks earliest time aircraft is projected to meet
 - Yellow arrow appears to right of Timeline datablock—you sent it to Center




If a lightning bolt symbol is present on the flight's timeline datablock, the APREQ release time can be negotiated electronically.

To begin the APREQ process, right click on the flight's timeline datablock and select "Request Release Time." This option automatically picks the earliest feasible takeoff time as the time to request to Center. When the time is sent, a yellow arrow will appear next to the Timeline datablock.

Tower/STBO Client

- Alternately, you can request time electronically by:
 - Right click on Timeline datablock
 - Click on “Select Slot on Timeline”
 - Click on the desired slot on the timeline
 - Yellow arrow appears to right of Timeline datablock

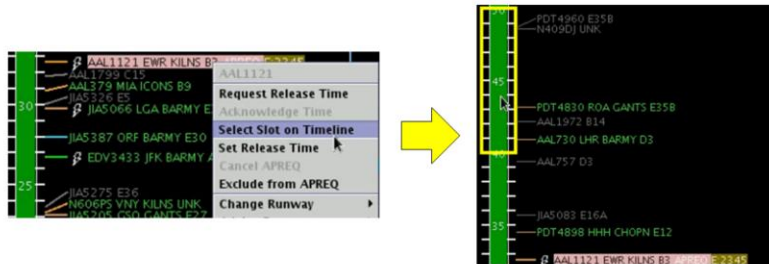


Alternately, the Tower user can send an electronic request for a specific time by choosing the “Select Slot on Timeline” option from the flight’s right click menu. This will populate red and green bars in the middle of the Timeline to show available slots that the flight can be scheduled to in the overhead stream. Green slots are available, red slots are unavailable. Available slots are drawn from 15 minutes before the current predicted OFF time to 30 minutes after the current predicted OFF time. Click on a time on the Timeline and the STBO Client will send a request for that time to Center. Again, a yellow arrow will appear next to the Timeline datablock to show that the time was sent.

Center/TBFM TGUI

- On TBFM Meter Fix timeline an exclamation point in yellow appears



 - If you forget, this reminder will appear in 2 minutes, accompanied by an audio alert (if audio is turned on)



Note that the images are for demonstrative purposes and do not match the flight callsigns between ATCT and Center.

Center/TBFM TGUI

- #1:
 - Right click on exclamation point
 - Select Accept, Freeze, or Cancel
- #2:
 - Left click on the yellow diamond with the "!" to accept the requested time



See slide for full description

Center/TBFM TGUI

- #3:
 - Go to F4 window in TBFM
 - Accept or Reject

Internal Departures for TGUI-ZDC-EDC (FCI) (F4)

Unscheduled Flights Schedule... Sort by: ACID

Airports Partial All None

Meter Points Partial All None

☐ ZOB ☐ ZNY ☒ DYL ☐ HOG ☐ J22 ☐ JAI ☐ TER ☐ ZBN
☐ ZID ☐ TLN ☐ TLS ☐ JXI ☐ JXA ☒ DCM ☐ VCN

AA11170/GSO	ASQ1972/CLT	GJS2068/CLT	TCF3311/RDU
AA11356/CLT	ASQ3807/GSO	GJS6280/GSO	TCF3377/ORF
AA11455/CLT	ASQ4824/CLT	JIA2332/CLT	
AA11611/CLT	ASQ5108/RIC	JIA4951/RDU	
AA11864/CLT	ASQ5797/CLT	LOF3360/ORF	
AA11950/CLT	ASQ6755/IAD	LOF3387/CLT	
AA12063/CLT	AAI3737/ORF	RPA144/CLT	
AA12083/CLT	AAI19558/GSO	SHA1962/CLT	
ASH2597/CLT	FLG2050/CLT	SWA2999/ORF	
ASH5593/CLT	FLG4870/RDU	SWA925/RDU	

Pending Approval Flights Accept Reject

JIA2332/CLT

Flight Data for FLG4078/RDU.916 JIA2332/CLT

916 L/CRJ9/X 4602 417 KRDU 2156 270 KRDU../LVL..HPW.
J191..PXT..KORRY3..KLGA

Status: **UNSCHEDULED** Original NP STA: **N/A**

- #4:
 - Go to "Schedule a Departure Window" in TBFM
 - Press "Schedule"

Schedule a Departure

LIB Arrival: JIA2332/CLT.286

286 L/CRJ9/X 515/ 449 KCLT 2158 350 KCLT.MERIL7.MERIL..
RDU.J55.HPW.J191.PXT..ENO..RBV..KLGA

Original Flight Estimate

View/Change Scheduled Route

Compute STA and Suggest Departure Time

Flight Times & ETA: ETE ETA

● To MP: DYL 01:00 2129z

Aircraft-Ready Time (z): 2029 Current + 25

Desired STA (z): 2131 Schedule

Closest Available STA (z): 2131

Suggested Dep (z): 2031 Delay: +2

Scheduled Dep (z): 2031 Unschedule

☐ Delay Scheduled Flights for This Aircraft Only

Freeze Accept Close

Center/TBFM TGUI

- STA will look turn green and will display the delay in minutes after ACID (02)



Tower/STBO Client

- When Center sends back a release time, it will appear on the datablock ("A:2344") and be highlighted by a compliance indicator.
- If the time differs from what was requested, a yellow diamond with an "!" accompanies time.
 - Click on symbol to acknowledge new time.



- If the new time doesn't work, right click and select "Cancel APREQ", then renegotiate a new release time.

If Center returns a time that differs from the requested release time, a yellow diamond with an exclamation mark appears next to the flight's timeline datablock. If you accept this time, right click on the timeline datablock and choose "Acknowledge Time." In future versions of STBO Client, you will be able to click on the diamond to accept the time without having to right click on the timeline datablock first.

If you don't want to accept this time, right click on the timeline datablock, cancel the APREQ, and begin the APREQ process again.

Tower/STBO Client

Once flight has a release time, compliance indicators highlight the APREQ release time.

- If indicator is green = on time
- If indicator is red = aircraft late
 - Right click on Timeline datablock
 - Cancel the APREQ first.
 - Restart process for requesting a release time.
- If indicator is yellow = aircraft early
 - Option 1: Delay the aircraft until it can meet it's release time.
 - Option 2: Right click on Timeline datablock
 - Cancel the APREQ first.
 - Restart process for requesting a release time.



Ramp is automatically notified of the new time.



Manual APREQ Coordination on STBO Client Timeline





Tower/STBO Client

- Aircraft appears on timeline with white APREQ written to the right of the Timeline datablock



- Telephone symbol means you have to call the Center to request a time
 - After receiving time, right click on Timeline datablock
 - Select "Set Release Time"
 - Set time
 - Compliance blocks appear on sides of Timeline datablock
 - You are done!

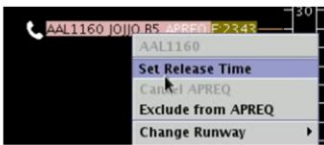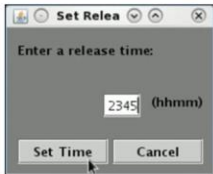

→


Flights that require manual coordination of APREQ release times will have a telephone symbol next to the flight's datablock. For these flights, you will need to verbally call the Center. Once Tower and Center agree on a time, right click on the flight's timeline datablock on the STBO Client Timeline and click "Set Release Time," then type in the time and click "Set."

Ramp is automatically notified of the release time.

Tower/STBO Client

- To cancel or reschedule an APREQ release time
 - Right click on Timeline datablock
 - Click "Cancel APREQ"
 - Begin the APREQ process again

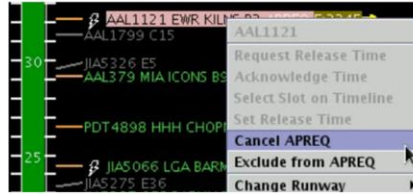

- When the APREQ is cancelled, datablock will return to the original configuration with no time or compliance indicator.



Ramp is automatically notified of the cancellation.

Time	Event	Presenter
0000	NASA Menu and Multi-function Display	Eric
0010	Overview of STBO Client	Eric
0040	APREQ Procedures	Bob
0110	TBFM IDAC Disconnecting Procedure	Bob
0115	DASH	Eric
0120	What-If	Eric
0130	Hands-on Training	




- In case of need to disable, or stop, the TBFM IDAC connection with CLT ATCT STBO system arises, the following three actions need to be followed:
- ACTION 1
 - Washington Center configures the IDAC APREQ modes for CLT Tower to "Call for Release" in the TBFM IDAC set-up panel:
 - **Step 1:** Open the F1 panel in the Timeline GUI.
 - **Step 2:** Click on stream classes (or super stream class) button.
 - **Step 3:** Click on "Dep" button to open the Airport Departure Scheduling Window
 - **Step 4:** Select "Call For Release" under APREQ mode for CLT
 - The Airport Departure Scheduling window is available for each stream class and each super stream class for each gate.
 - CLT can be set in the following super stream classes: BOS, BWI, DCA, EWR, HPN, IAD, JFK, LGA, MMU, PHL, TEB
 - Eventually, APREQ mode "ON" should be set to "Call for Release" for CLT tower in all stream classes and super stream classes.
 - If Action 1 cannot be completed, follow Action 2

- ACTION 2
 - Atlanta Center SOC disables the IDAC portion for CLT without affecting the use of TBFM for arrivals. (this instruction refers to prior official IDAC deployment at ATL since IDAC and T2T are only used to ATD-2.
 - Disable both the IDAC and ZDC-ZTL T2T icons to disable communication between TBFM and ATD-2.
- ACTION 3
 - Notify NASA's ATD-2 Technical Support by calling or texting # 704-802-2589 and report the reason, issues and the actions taken.

Time	Event	Presenter
0000	NASA Menu and Multi-function Display	Eric
0010	Overview of STBO Client	Eric
0040	APREQ Procedures	Bob
0110	TBFM IDAC Disconnecting Procedure	Bob
0115	DASH	Eric
0120	What-If	Eric
0130	Hands-on Training	



 


DASH Operational: localhost


Feedback

Updated: 20:52

S_Normal

Ramp


Monitors

Quick Look
Dep & Arr Monitor
Predicted Excess Queue Times Monitor
Taxi Out Time Monitor
Taxi In Time Monitor
Throughput Monitor

AFREQ			Predicted Excess Queue Time				Taxi Status		
Dest	Start Time	End Time	Predicted Excess Queue Times				Resource	Taxi In	Taxi Out
LGA	14/10:45	15/01:30	15 min	26	60 min	0	Full	22	9
DCA	14/11:30	15/01:30	30 min	0	90 min	0	Ramp	16	2
JFK	14/17:00	15/01:30					AMA	6	7
EMR	14/17:40	15/02:00							


MIT			Gate Conflicts				Arrival/Departure Rate		
Fix	Start Time	End Time	Gate	Start	End		Rate	Actual	
NA			6C101	21:20	22:05		ARRIVAL	82/h	66
			JBU1446(D)	JBU1445(A)			DEPARTURE	78/h	61
			ARL1752(A)	ARL1160(D)	B6 22:07 22:11				
			ARL503(A)	ARL767(A)	B7 22:42 22:42				
			ARL503(A)	ARL749(D)	B7 22:42 22:42				
			ARL18R(D)	ARL2018(A)	B9 21:50 22:04				

Fix Closures			Ground Stops			Throughput		
Fix	Start Time	Alternate	Dest	Start Time	End Time	Resource	Arrival	Departure
NA			NA			18L/36R	3	35
						18R/36L	35	0
						18C/36C	3	26
						23/5	25	0

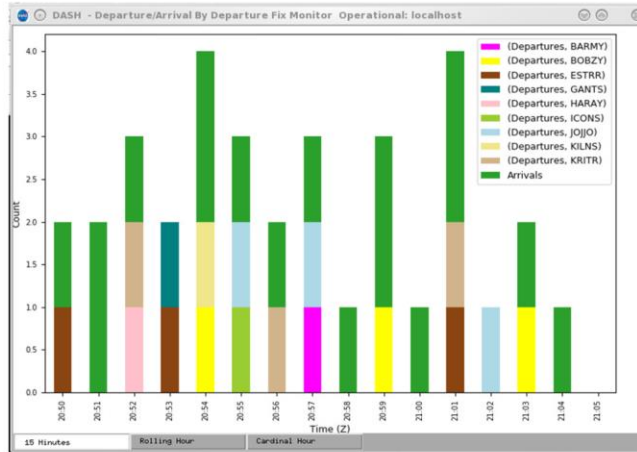

Operational user presses
feedback button on real
time dashboard

Resolve problem and report to originator

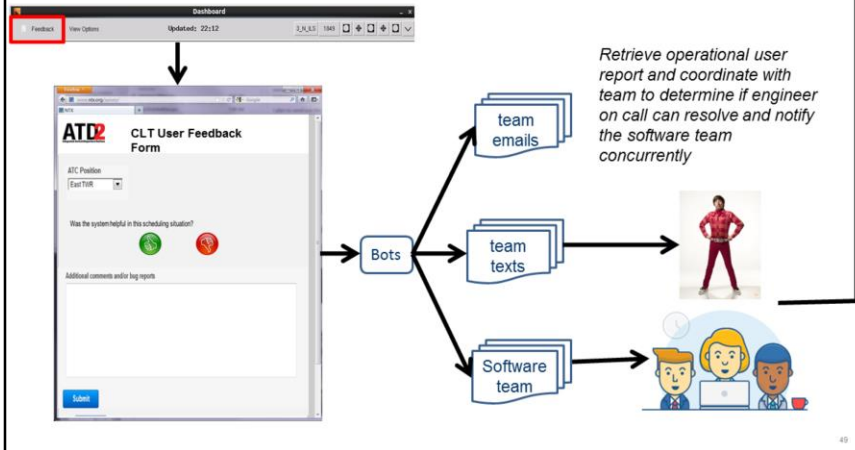

Time	Event	Presenter
0000	NASA Menu and Multi-function Display	Eric
0010	Overview of STBO Client	Eric
0040	APREQ Procedures	Bob
0110	TBFM IDAC Disconnecting Procedure	Bob
0115	DASH	Eric
0120	What-If	Eric
0130	Hands-on Training	



Title bars of all windows labeled *What-If*



Desktop Background marked yellow *What-If*

Time	Event	Presenter
0000	NASA Menu and Multi-function Display	Eric
0010	Overview of STBO Client	Eric
0040	APREQ Procedures	Bob
0110	TBFM IDAC Disconnecting Procedure	Bob
0115	DASH	Eric
0120	What-If	Eric
0130	Hands-on Training	

