COMPOSITE MATERIALS LABORATORY

PURDUE UNIVERSITY
School of Aeronautics and Astronautics
West Lafayette, Indiana 47907

CML 82-5 NASA CR 168057

WAVE PROPAGATION IN GRAPHITE/EPOXY LAMINATES DUE TO IMPACT

by

T.M. Tan and C.T. Sun

December, 1982

1. Report No.	2. Government Accession No.	3. Recipient's Catalog No.
NASA CR-168057		

4. Title and Subtitle	5. Report Date
WAVE PROPAGATION IN GRAPHITE/EPOXY LAMINATES DUE TO IMPACT	December 1982
	6. Performing Organization Code

7. Author(s)	8. Performing Organization Report No.
T. M. Tan and C. T. Sun	
	10. Work Unit No.

9. Performing Organization Name and Address	11. Contract or Grant No.
Purdue University School of Aeronautics and Astronautics West Lafayette, IN 47907	NSG 3185
	13. Type of Report and Period Covered
12. Sponsoring Agency Name and Address National Aeronautics & Space Administration Washington, DC 20546	Interim Report
	14. Sponsoring Agency Code

15. Supplementary Notes Project Monitor: C. C. Chamis, Structures & Mechanical Technologies Div.
NASA Lewis Research Center, M.S. 49-6
21000 Brookpark Road
Cleveland, OH 44135

16. Abstract

The low velocity impact response of graphite/epoxy laminates is investigated theoretically and experimentally. A 9-node isoparametric finite element in conjunction with an empirical contact law was used for the theoretical investigation. Flat laminates subjected to pendulum impact were used for the experimental investigation. Theoretical results are in good agreement with strain gage experimental data. The collective results of the investigation indicate that the theoretical procedure describes the impact response of the laminate up to about 150 in/sec. impact velocity.

17. Key Words (Suggested by Author(s))	18. Distribution Statement
Impact fiber composites, laminates contact law, finite element, stress waves	Unclassified, Unlimited

19. Security Classif. (of this report)	20. Security Classif. (of this page)	21. No. of Pages	22. Price*
Unclassified	Unlimited	130	

* For sale by the National Technical Information Service, Springfield, Virginia 22161

TABLE OF CONTENTS

LIST OF TABLES

LIST OF FIGURES

LIST OF SYMBOLS

A	Cross-sectional area of the projectile
A_{ij}, B_{ij}, D_{ij}	Laminate stiffnesses
E_s	Young's modulus of the steel indenter
E_1	Young's modulus of laminar in the fiber direction
E_2	Young's modulus of laminar in the transverse direction
F	Contact force
F_m	Maximum contact force
G	Shear modulus
$[K_p]$, $[K_r]$	Stiffness matrices
$[M_p]$, $[M_r]$	Mass matrices
M	Stress couples of laminate
N	Stress resultants of laminate
$\{P_p\}$, $\{P_r\}$	Assembled global load vectors
Q	Transverse shear force of laminate
Q_{ij}	Reduced stiffnesses
$\bar{Q}_{ij}$	Transformed reduced stiffnesses
R_s	Radius of steel indenter
S_i	Shape functions of plate element
V_F	Output voltage of the force transducer
V_a	Output voltage of the accelerometer

a	Acceleration
c	Phase velocity
c_a	Sensitivity of the accelerometer
c_F	Sensitivity of the impact-force transducer
c_n	Normal velocity of wave front
f_I	Shape functions of rod element
$[f]$	Discontinuity of f across wave front surface
h	Laminate thickness
k	Wave number
k	Contact coefficient
k_1	Reloading rigidity
$[k_p]$, $[k_r]$	Element stiffness matrices
$[m_p]$, $[m_r]$	Element mass matrices
n	Power index of loading law
n_I	Unit normal on the wave front
p	Power index of reloading law
p_I	Slowness vector
$\{p_p\}_e$, $\{p_r\}_e$	Element load vectors
q	Power index of unloading law
$\{q_p\}$, $\{q_r\}$	Assembled global displacement vectors
$\{q_p\}_e$, $\{q_r\}_e$	Element displacement vectors
s	Unloading rigidity
t	Time
t^*	Non-dimensional time
u, v, w	Displacement components of laminate
u^0, v^0, w^0	Midplane displacement components

x, y, z	Laminate coordinate system
x_1, x_2, x_3	Laminar coordinate system
Ω	Wave front surface
α	Indentation depth
α_0	Permanent indentation
α_m	Maximum indentation
α_{cr}, α_p	Critical indentations
γ	Shearing strain
ϵ	Normal strain
$\kappa_x, \kappa_y, \kappa_{xy}$	Rotation gradients
λ	Wave length
ν	Poisson's ratio
ν_s	Poisson's ratio of the steel indenter
ξ, η	Normalized local coordinates of plate element
ρ	Mass density of laminate
σ	Normal stress
τ	Shearing stress
ϕ_x, ϕ_y	Rotations of cross-sections of laminate
ω	Frequency

CHAPTER 1

INTRODUCTION

Advanced fiber-reinforced composite materials such as boron/epoxy and graphite/epoxy have been successfully employed as structural materials in aircrafts, missiles and space vehicles in recent years, and the performance of these composites has shown their superiority over metals in applications requiring high strength, high stiffness as well as low weight. The advantages of these composites, however, are overshadowed by their relatively poor resistance to the impact loadings, which has prevented the application of these materials to turbine fan bladings. Many other reports dealing with the responses of advanced composites to various types of impact have further increased the need for a better understanding of the problem so that the survivability of these composites can be improved.

It is obvious that impact produces damage and consequently reduces the strength of composite materials. The damage modes usually include local permanent deformations, breakage of fibers, delaminations, etc.. While the cause of these damages are still unknown and may not be simple in nature, in general, the impact of a soft object could give a longer contact duration, and the dynamic

response of the whole structure is of importance. The hard object impact usually gives a short contact time and results in the initial transmisson of impact energy into a local region of the structure. This initial energy will propagate into the rest of the structure in the form of stress waves. Far field damage away from the impact area could result from the reflection of stress waves. It is generally agreed that the cause of the sudden failure must be examined from the point of transient wave propagation phenomena.

Flexural waves induced by dynamic loads in laminated composites are more complicated than those in homogeneous and isotropic plates due to the anisotropic and nonhomogeneous properties in the laminate. Moreover, because of the low transverse shear modulus in fiber composites, the effect of transverse shear deformation becomes significant and should be considered in the formulation. In Chapter 2, the laminate theory which includes the transverse shear deformation effect is reviewed, and harmonic waves in a graphite/epoxy laminated plate are studied. The propagation of wave front which, for a given time after impact, bound the stressed region surrounding the impact point, is also investigated.

A survey of wave propagation and impact in composite materials has been given by Moon [1]. Many analytical [2-5], numerical [6-7] and experimental [8-10] methods have been employed to study the transient impact problems. The

respone of a laminated plate can be analyzed using these methods provided the applied load history is prescribed. However if the dynamic load results from an impact of an object on the laminated plate, then the resulting contact force must be determined first. An accurate account of the contact behavior becomes the most important step in analyzing the impact response problems.

A classical contact law between two elastic spheres was derived by Hertz [11]. When letting the radius of one of the spheres go to infinity, one obtains the contact law between an elastic sphere and an elastic half-space. Many authors have used the Hertzian contact law for the study of impact on metals and composites [12-13]. Recently, Yang and Sun [14] performed statical indentation tests on graphite/epoxy composite laminates using spherical steel indenters of different sizes and found that the Hertzian law of contact was not adequate. In particular, they found that significant permanent indentations existed and that the unloading paths were very different from the loading path. Noting that energy dissipation takes place during the process of impact, Yang and Sun [14] suggested that this energy is responsible for the local damage of the target materials. The unloading curves and permanent indentations obtained from the statical indentation tests may provide a useful information in estimating the amount of damage due to impact since this energy is simply the area enclosed by the

loading-unloading curves. In this study, similar statical indentation tests were conducted and the results are presented in Chapter 3.

Wang [15] has performed a number of impact tests on graphite/epoxy laminated beams and plates. It was shown that the strain responses calculated using finite element method and the statically determined contact laws from [14] agreed with the experimental measurements quite well. This indicates that the statical indentation law is reasonably adequate in the dynamical impact analysis. It was also suggested that the contact force should be measured experimentally to provide an additional basis for comparison with the finite element solution which could allow further evaluation the applicability of the contact laws in impact analysis. Chapter 4 describes an impact experiment on graphite/epoxy laminated plate using an impact-force transducer with a spherical steel cap as the impactor. The contact force history and strain responses at various points on the plate were measured by means of the transducer and surface strain gages, respectively, and were compared with the predictions of finite element analysis using the statically determined contact law.

Chapter 5 summarizes the results obtained in Chapter 2, 3 and 4.

CHAPTER 2

STRESS WAVE IN A LAMINATED PLATE

A laminated plate theory which includes the effects of transverse shear deformation and rotatory inertia was developed by Yang, Norris and Stavsky [16] in a way suggested by Mindlin [17] for homogeneous isotropic plates. It was shown that the frequency curves for the propagation of harmonic waves in an infinite two-layer isotropic plate in plane strain agreed with the predictions of the exact solution obtained from theory of elasticity very well. A similar laminated plate theory was developed by Whitney and Pagano [18] and was employed in the study of static bending and vibration for antisymmetric angle-ply composite plates with particular layer properties. It was found that the effect of shear deformation can be quite significant for composite plates with span-to-depth ratio as high as 20. Good agreement was also observed in numerical results for plate bending as comparing with exact solutions of elasticity. In this study, the laminate theory developed by Whitney and Pagano was used for its simplicity yet quite satisfactory in describing the harmonic wave propagation [19].

2.1 Laminate Theory with Transverse Shear Effects

2.1.1 Lamina Constitutive Equations

A laminated plate of constant thickness h consists of a number of thin laminas of unidirectionally fiber-reinforced composite perfectly bonded together. Each lamina, whose fiber may orient in any arbitrary direction, can be regarded as a homogeneous orthotropic solid. Consider a typical k-th lamina. A coordinate system (x_1, x_2, x_3) is chosen in such a way that the x_1-x_2 plane coincides with the midplane of lamina, and x_1 and x_2 axes are parallel and perpendicular to the fiber direction, respectively. If a state of plane stress parallel to the x_1-x_2 plane is assumed, then the in-plane stress-strain relations are given by

$$\begin{Bmatrix} \sigma_{11} \\ \sigma_{22} \\ \tau_{12} \end{Bmatrix}^k = \begin{bmatrix} Q_{11} & Q_{12} & 0 \\ Q_{12} & Q_{22} & 0 \\ 0 & 0 & Q_{66} \end{bmatrix} \begin{Bmatrix} \epsilon_{11} \\ \epsilon_{22} \\ \gamma_{12} \end{Bmatrix}^k \qquad (2\text{-}1)$$

The transverse shear stress-strain relations are given by

$$\begin{Bmatrix} \tau_{23} \\ \tau_{13} \end{Bmatrix}^k = \begin{bmatrix} Q_{44} & 0 \\ 0 & Q_{55} \end{bmatrix} \begin{Bmatrix} \gamma_{23} \\ \gamma_{13} \end{Bmatrix}^k \qquad (2\text{-}2)$$

In which

$$
\begin{aligned}
Q_{11} &= E_1/(1-\nu_{12}\nu_{21}) \\
Q_{22} &= E_2/(1-\nu_{12}\nu_{21}) \\
Q_{12} &= \nu_{12}E_2/(1-\nu_{12}\nu_{21}) = \nu_{21}E_1/(1-\nu_{12}\nu_{21}) \\
Q_{66} &= G_{12} \\
Q_{44} &= G_{23} \\
Q_{55} &= G_{13}
\end{aligned}
\qquad (2\text{-}3)
$$

are the so-called reduced stiffnesses, where E, G and ν are Young's modulus, shear modulus and Poisson's ratio, respectively, and subscripts 1 and 2 denote the directions parallel to x_1 and x_2 axes, respectively.

The coordinate system for an arbitrarily oriented lamina does not, in general, coincide with the reference axes (x,y,z) of laminated plate (see Figure 2.1). Using the coordinate transformation laws for stress and strain, we obtain the stress-strain relations in laminate reference system as

$$
\begin{Bmatrix} \sigma_{xx} \\ \sigma_{yy} \\ \tau_{xy} \\ \tau_{yz} \\ \tau_{xz} \end{Bmatrix}^k
=
\begin{bmatrix}
\bar{Q}_{11} & \bar{Q}_{12} & \bar{Q}_{16} & 0 & 0 \\
\bar{Q}_{12} & \bar{Q}_{22} & \bar{Q}_{26} & 0 & 0 \\
\bar{Q}_{16} & \bar{Q}_{26} & \bar{Q}_{66} & 0 & 0 \\
0 & 0 & 0 & \bar{Q}_{44} & \bar{Q}_{45} \\
0 & 0 & 0 & \bar{Q}_{45} & \bar{Q}_{55}
\end{bmatrix}
\begin{Bmatrix} \epsilon_{xx} \\ \epsilon_{yy} \\ \gamma_{xy} \\ \gamma_{yz} \\ \gamma_{xz} \end{Bmatrix}^k
\qquad (2\text{-}4)
$$

In which $\bar{Q}_{ij}$ are given by

$$\bar{Q}_{11} = Q_{11}m^4+2(Q_{12}+2Q_{66})m^2n^2+Q_{22}n^4$$

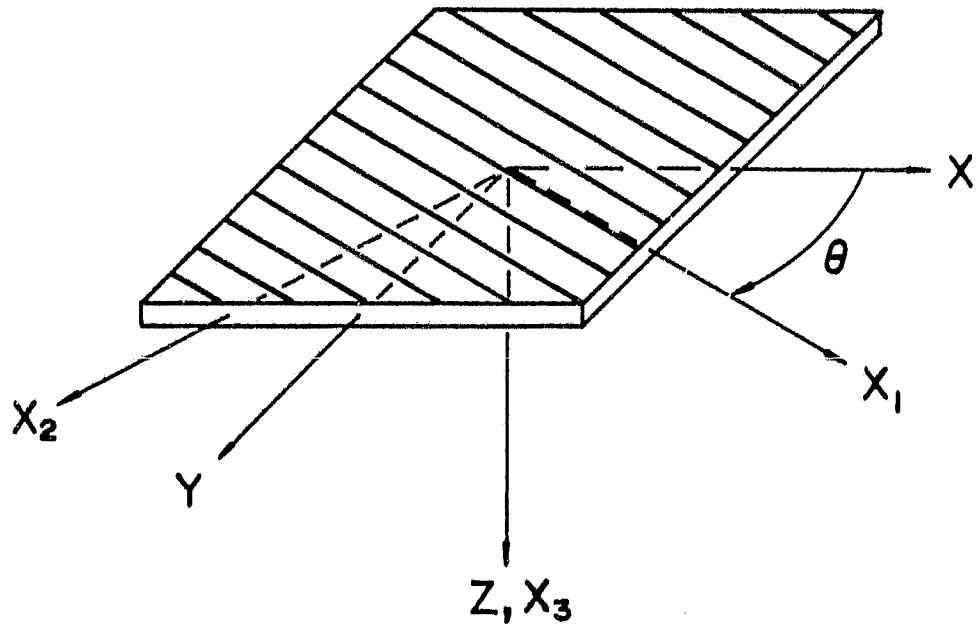

(X_1, X_2, X_3) — Lamina Reference Axes

(X, Y, Z) — Laminate Reference Axes

Figure 2.1 Lamina reference axes and laminate reference axes

$$\begin{aligned}
\bar{Q}_{22} &= Q_{11}n^4+2(Q_{12}+2Q_{66})m^2n^2+Q_{22}m^4 \\
\bar{Q}_{12} &= (Q_{11}+Q_{22}-4Q_{66})m^2n^2+Q_{12}(m^4+n^4) \\
\bar{Q}_{16} &= (Q_{11}-Q_{12}-2Q_{66})m^3n+(Q_{12}-Q_{22}+2Q_{66})mn^3 \\
\bar{Q}_{26} &= (Q_{11}-Q_{12}-2Q_{66})mn^3+(Q_{12}-Q_{22}+2Q_{66})m^3n \\
\bar{Q}_{66} &= (Q_{11}+Q_{22}-2Q_{12}-2Q_{66})m^2n^2+Q_{66}(m^4+n^4) \\
\bar{Q}_{44} &= Q_{44}m^2+Q_{55}n^2 \\
\bar{Q}_{45} &= (Q_{44}-Q_{55})mn \\
\bar{Q}_{55} &= Q_{44}n^2+Q_{55}m^2
\end{aligned} \qquad (2\text{-}5)$$

where

$$m = \cos\theta \qquad n = \sin\theta$$

and θ is the angle between x-axis and x_1-axis measured from x to x_1 counterclockwise as shown in Figure 2.1.

2.1.2 Plate Strain-Displacement Relations

The displacement components of the laminated plate are assumed to be of the form [16]

$$\begin{aligned}
u(x,y,z) &= u^0(x,y) + z\phi_x(x,y) \\
v(x,y,z) &= v^0(x,y) + z\phi_y(x,y) \\
w(x,y,z) &= w^0(x,y) = w(x,y)
\end{aligned} \qquad (2\text{-}6)$$

where u^0, v^0 and w^0 are the midplane displacement components in the x-, y- and z-directions, respectively, and ϕ_x and ϕ_y are rotations of cross-sections perpendicular to x- and y-axis, respectively (see Figure 2.2). In Equation (2.6) we

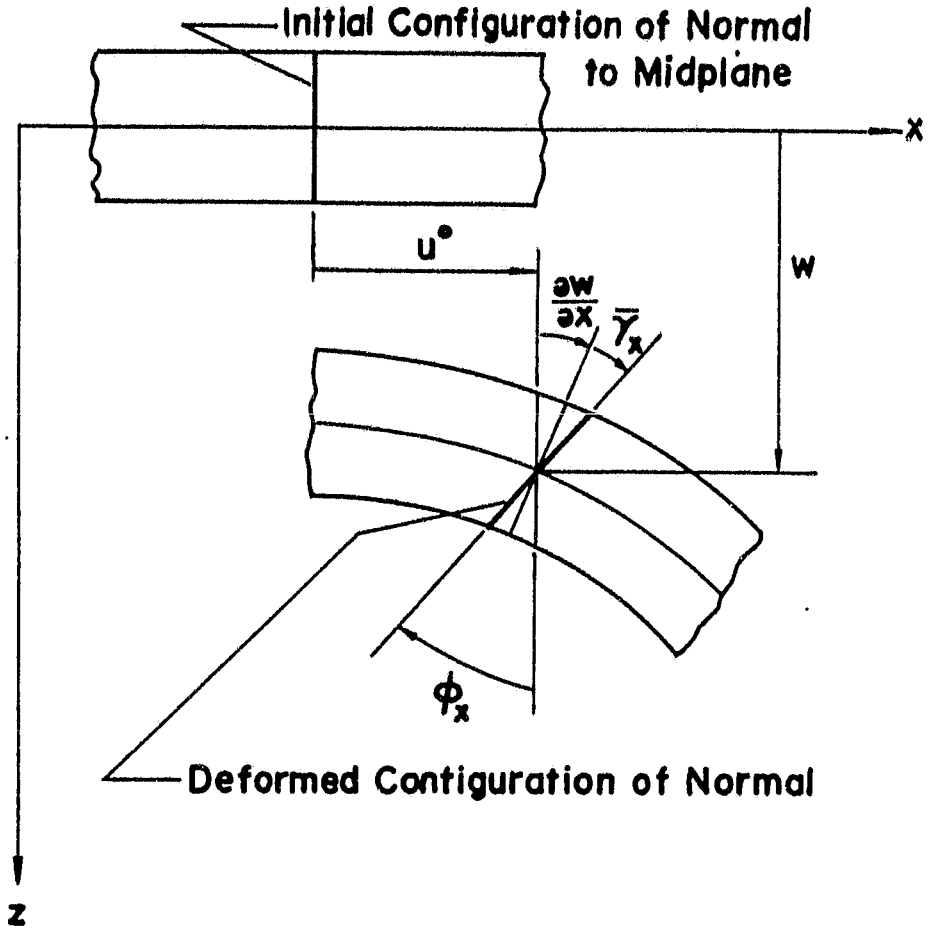

Figure 2.2 Laminate displacement components for a cross-section perpendicular to the y-axis

have assumed that u and v vary linearly in the thickness direction, while w is constant through the thickness.

The strain components for a point in k-th lamina of the laminated plate with a distance z from the midplane can be computed as

$$\begin{aligned}
\epsilon_{xx}^{k} &= \epsilon_{x}^{0} + z\kappa_{x} \\
\epsilon_{yy}^{k} &= \epsilon_{y}^{0} + z\kappa_{y} \\
\gamma_{xy}^{k} &= \gamma_{xy}^{0} + z\kappa_{xy} \\
\gamma_{yz}^{k} &= \partial w/\partial y + \partial v/\partial z = \partial w/\partial y + \phi_{y} = \gamma_{yz}^{0} \\
\gamma_{xz}^{k} &= \partial w/\partial x + \partial u/\partial z = \partial w/\partial x + \phi_{x} = \gamma_{xz}^{0}
\end{aligned} \tag{2-7}$$

where

$$\begin{aligned}
\gamma_{x}^{0} &= \partial u^{0}/\partial x \\
\gamma_{y}^{0} &= \partial v^{0}/\partial y \\
\gamma_{xy}^{0} &= \partial u^{0}/\partial y + \partial v^{0}/\partial x
\end{aligned} \tag{2-8}$$

are the in-plane strain components of midplane, and

$$\begin{aligned}
\kappa_{x} &= \partial\phi_{x}/\partial x \\
\kappa_{y} &= \partial\phi_{y}/\partial x \\
\kappa_{xy} &= \partial\phi_{x}/\partial y + \partial\phi_{y}/\partial x
\end{aligned} \tag{2-9}$$

are the rotation gradients.

In Equation (2-7), since w, ϕ_x and ϕ_y are independent of z, it follows that the transverse shear strains are constant through the thickness of the plate.

Equation (2-7) can be written in concise matrix form as

$$\begin{Bmatrix}\epsilon\\ \gamma\end{Bmatrix}^{k} = \begin{Bmatrix}\epsilon_x\\ \epsilon_y\\ \gamma_{xy}\\ \gamma_{yz}\\ \gamma_{xz}\end{Bmatrix}^{k} = \begin{Bmatrix}\epsilon_x^{0}\\ \epsilon_y^{0}\\ \gamma_{xy}^{0}\\ \gamma_{yz}^{0}\\ \gamma_{xz}^{0}\end{Bmatrix} + z\begin{Bmatrix}\kappa_x\\ \kappa_y\\ \kappa_{xy}\\ 0\\ 0\end{Bmatrix} = \begin{Bmatrix}\epsilon\\ \gamma\end{Bmatrix}^{0} + z\begin{Bmatrix}\kappa\\ 0\end{Bmatrix} \qquad (2\text{-}10)$$

Thus, the strain components at any point in the plate can be determined from the extensional strain components of the midplane, the rotation gradients of the plate and the distance z from the midplane.

2.1.3 Stress-Resultants and Laminate Constitutive Equations

Substitution of Equation (2-10) in Equation (2-4) gives the stress components for a point in the k-th lamina as:

$$\begin{Bmatrix}\sigma_{xx}\\ \sigma_{yy}\\ \tau_{xy}\\ \tau_{yz}\\ \tau_{xz}\end{Bmatrix}^{k} = \begin{bmatrix}\overline{Q}_{11} & \overline{Q}_{12} & \overline{Q}_{16} & 0 & 0\\ \overline{Q}_{12} & \overline{Q}_{22} & \overline{Q}_{26} & 0 & 0\\ \overline{Q}_{16} & \overline{Q}_{26} & \overline{Q}_{66} & 0 & 0\\ 0 & 0 & 0 & \overline{Q}_{44} & \overline{Q}_{45}\\ 0 & 0 & 0 & \overline{Q}_{45} & \overline{Q}_{55}\end{bmatrix}\left(\begin{Bmatrix}\epsilon_x^{0}\\ \epsilon_y^{0}\\ \gamma_{xy}^{0}\\ \gamma_{yz}^{0}\\ \gamma_{xz}^{0}\end{Bmatrix} + z\begin{Bmatrix}\kappa_x\\ \kappa_y\\ \kappa_{xy}\\ 0\\ 0\end{Bmatrix}\right) \qquad (2\text{-}11)$$

The stress-resultants acting on a laminate can be obtained by integration of the stresses in each lamina through the laminate thickness. Specifically, the in-plane

stress-resultants are given by

$$\begin{Bmatrix} N_x \\ N_y \\ N_{xy} \end{Bmatrix} = \int_{-h/2}^{h/2} \begin{Bmatrix} \sigma_{xx} \\ \sigma_{yy} \\ \gamma_{xy} \end{Bmatrix} dz = \sum_{k=1}^{N} \int_{h_{k-1}}^{h_k} \begin{Bmatrix} \sigma_{xx} \\ \sigma_{yy} \\ \tau_{xy} \end{Bmatrix}^k dz \qquad (2\text{-}12)$$

the stress couples are given by

$$\begin{Bmatrix} M_x \\ M_y \\ M_{xy} \end{Bmatrix} = \int_{-h/2}^{h/2} \begin{Bmatrix} \sigma_{xx} \\ \sigma_{yy} \\ \gamma_{xy} \end{Bmatrix} z dz = \sum_{k=1}^{N} \int_{h_{k-1}}^{h_k} \begin{Bmatrix} \sigma_{xx} \\ \sigma_{yy} \\ \tau_{xy} \end{Bmatrix}^k z dz \qquad (2\text{-}13)$$

and the transverse shear forces are given by

$$\begin{Bmatrix} Q_y \\ Q_x \end{Bmatrix} = \int_{-h/2}^{h/2} \begin{Bmatrix} \tau_{yz} \\ \tau_{xz} \end{Bmatrix} dz = \sum_{k=1}^{N} \int_{h_{k-1}}^{h_k} \begin{Bmatrix} \tau_{yz} \\ \tau_{xz} \end{Bmatrix}^k dz \qquad (2\text{-}14)$$

The sign convention for these stress-resultants along with the geometry of a typical N-layer laminated plate are shown in Figure 2.3.

Substituting Equation (2-11) into the right hand sides of the above three equations and performing the integrations, we obtain

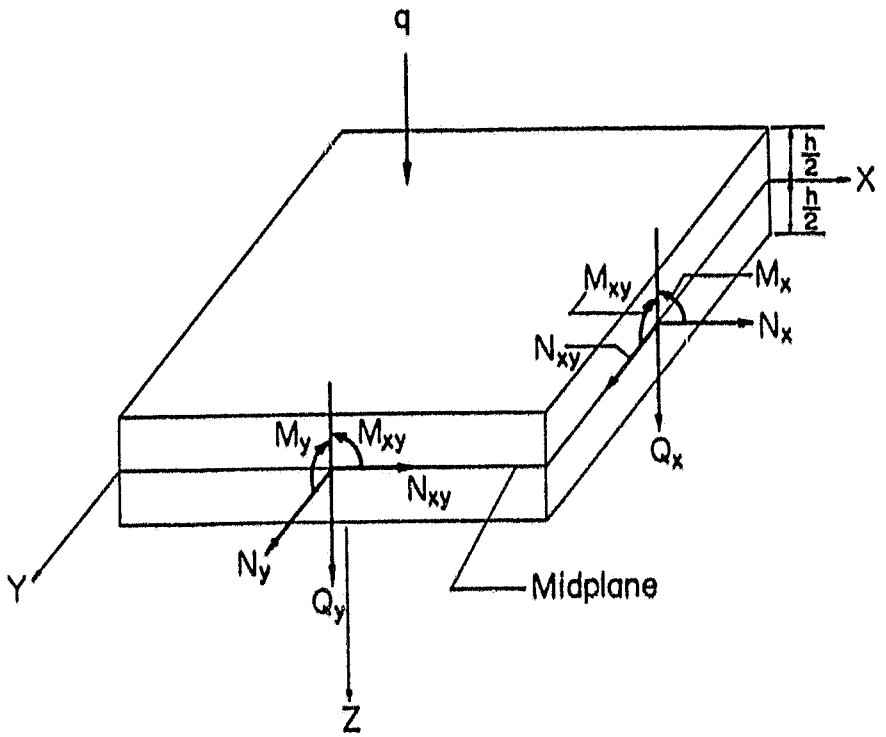

(a) STRESS RESULTANTS OF A LAMINATE

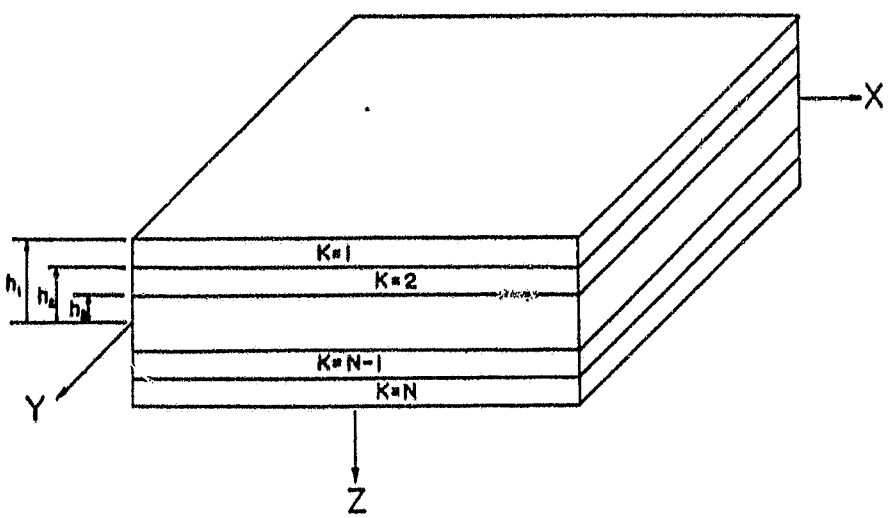

(b) GEOMETRY OF AN N-LAYER LAMINATE

Figure 2.3 Stress-resultants and geometry of a typical N-layer laminate

$$\begin{Bmatrix} N_x \\ N_y \\ N_{xy} \end{Bmatrix} = \begin{bmatrix} A_{11} & A_{12} & A_{16} \\ A_{12} & A_{22} & A_{26} \\ A_{16} & A_{26} & A_{66} \end{bmatrix} \begin{Bmatrix} \epsilon_x^0 \\ \epsilon_y^0 \\ \gamma_{xy}^0 \end{Bmatrix} + \begin{bmatrix} B_{11} & B_{12} & B_{16} \\ B_{12} & B_{22} & B_{26} \\ B_{16} & B_{26} & B_{66} \end{bmatrix} \begin{Bmatrix} \kappa_x \\ \kappa_y \\ \kappa_{xy} \end{Bmatrix} \quad (2\text{-}15)$$

$$\begin{Bmatrix} M_x \\ M_y \\ M_{xy} \end{Bmatrix} = \begin{bmatrix} B_{11} & B_{12} & B_{16} \\ B_{12} & B_{22} & B_{26} \\ B_{16} & B_{26} & B_{66} \end{bmatrix} \begin{Bmatrix} \epsilon_x^0 \\ \epsilon_y^0 \\ \gamma_{xy}^0 \end{Bmatrix} + \begin{bmatrix} D_{11} & D_{12} & D_{16} \\ D_{12} & D_{22} & D_{26} \\ D_{16} & D_{26} & D_{66} \end{bmatrix} \begin{Bmatrix} \kappa_x \\ \kappa_y \\ \kappa_{xy} \end{Bmatrix} \quad (2\text{-}16)$$

$$\begin{Bmatrix} Q_y \\ Q_x \end{Bmatrix} = \begin{bmatrix} A^*_{44} & A^*_{45} \\ A^*_{45} & A^*_{55} \end{bmatrix} \begin{Bmatrix} \gamma_{yz} \\ \gamma_{xz} \end{Bmatrix} \quad (2\text{-}17)$$

where

$$(A_{IJ}, B_{IJ}, D_{IJ}) = \int_{-h/2}^{h/2} \bar{Q}_{IJ}(1, z, z^2)dz \qquad I, J = 1, 2, 6 \quad (2\text{-}18)$$

and

$$A^*_{IJ} = \int_{-h/2}^{h/2} \bar{Q}_{IJ}dz \qquad I, J = 4, 5 \quad (2\text{-}19)$$

Equations (2-15) through (2-17) are usually written symbolically as

$$\begin{Bmatrix} N \\ M \\ Q \end{Bmatrix} = \begin{bmatrix} A & B & 0 \\ B & D & 0 \\ 0 & 0 & A^* \end{bmatrix} \begin{Bmatrix} \epsilon^0 \\ \kappa \\ \gamma \end{Bmatrix} \quad (2\text{-}20)$$

which is the laminate constitutive equation with transverse shear effect included.

2.1.4 Plate Equations of Motion

The stress-equations of motion for the k-th lamina are given by

$$\begin{aligned} \sigma_{xx,x} + \tau_{xy,y} + \tau_{xz,z} &= \rho\ddot{u} \\ \tau_{xy,x} + \sigma_{yy,y} + \tau_{yz,z} &= \rho\ddot{v} \\ \tau_{xz,x} + \tau_{yz,y} + \sigma_{zz,z} &= \rho\ddot{w} \end{aligned} \tag{2-21}$$

where ρ is the mass density. Integrating Equation (2-21) through the thickness of laminate and then substituting Equation (2-12), (2-14) and (2-6) in, we obtain

$$\begin{aligned} N_{x,x} + N_{xy,y} &= P\ddot{u}^0 + R\ddot{\phi}_x \\ N_{xy,x} + N_{y,y} &= P\ddot{v}^0 + R\ddot{\phi}_y \\ Q_{x,x} + Q_{y,y} + q &= P\ddot{w} \end{aligned} \tag{2-22}$$

where q is the normal traction on the plate. Multiplying the first two equations of Equation (2-21), integrating through the thickness of laminate and then substituting Equations (2-13), (2-14) and (2-5) in, we obtain

$$\begin{aligned} M_{x,x} + M_{xy,y} - Q_x &= R\ddot{u}^0 + I\ddot{\phi}_x \\ M_{xy,x} + M_{y,y} - Q_y &= R\ddot{v}^0 + I\ddot{\phi}_y \end{aligned} \tag{2-23}$$

In which P, R and I are defined as

$$(P,R,I) = \int_{-h/2}^{h/2} \rho(1,z,z^2)dz \tag{2-24}$$

Equations (2-22) and (2-23) are the plate equations of

motion. Substitution of Equation (2-20) and then the strain-displacement relations in these two equations yield the equations of motion in terms of midplane displacements and rotations of the plate.

A graphite/epoxy laminated plate provided by NASA Lewis Research Center was used throughout this study. This laminate is a $[0^0/45^0/0^0/-45^0/0^0]_{2s}$ graphite/epoxy composite with 0.0053 inch ply thickness and the following ply properties [15]:

$$\begin{aligned} E_1 &= 17.5 \times 10^6 \text{ psi.} \\ E_2 &= 1.15 \times 10^6 \text{ psi.} \\ G_{12} &= G_{13} = G_{23} = 0.8 \times 10^6 \text{ psi.} \\ \nu_{12} &= 0.30 \\ \rho &= 0.000148 \text{ lb-sec}^2/\text{in}^4 \end{aligned} \tag{2-25}$$

For symmetrically laminated composite plate, $B_{ij} = 0$ and $R = 0$. In addition, by choosing the x-axis of the laminate reference system to coincide with the 0^0 fiber direction, we obtain $A_{16} = A_{26} = 0$ and $D_{16} = D_{26}$. Further, in this study, we assume $G_{13} = G_{23} = G_{12}$, and consequently, $A^*_{45} = 0$ and $A^*_{44} = A^*_{55}$. For this particular laminate, the displacement-equations of motion are given by

$$A_{11}\partial^2 u^0/\partial x^2 + A_{66}\partial^2 u^0/\partial y^2 + (A_{12} + A_{66})\partial^2 v^0/\partial x \partial y = P\ddot{u}^0$$

$$(A_{12} + A_{66})\partial^2 u^0/\partial x \partial y + A_{66}\partial^2 v^0/\partial x^2 + A_{22}\partial^2 v^0/\partial y^2 = P\ddot{v}^0$$

$$D_{11}\partial^2\phi_x/\partial x^2 + 2D_{16}\partial^2\phi_x/\partial x\partial y + D_{66}\partial^2\phi_x/\partial y^2$$
$$+ D_{16}(\partial^2\phi_y/\partial x^2 + \partial^2\phi_y/\partial y^2) + (D_{12} + D_{66})\partial^2\phi_y/\partial x\partial y$$
$$-A^*_{44}(\partial w/\partial x + \phi_x) = I\ddot{\phi}_x \qquad (2\text{-}26)$$

$$D_{16}(\partial^2\phi_x/\partial x^2 + \partial\phi_x/\partial y^2) + (D_{12} + D_{66})\partial^2\phi_x/\partial x\partial y$$
$$+ D_{66}\partial^2\phi_y/\partial x^2 + 2D_{16}\partial^2\phi_y/\partial x\partial y + D_{22}\partial^2\phi_y/\partial y^2$$
$$-A^*_{44}(\partial w/\partial y + \phi_y) = I\ddot{\phi}_y$$

$$A^*_{44}(\partial^2 w/\partial x^2 + \partial^2 w/\partial y^2 + \partial\phi_x/\partial x + \partial\phi_y/\partial y) + q = \rho\ddot{w}$$

In Equation (2-26), the first two equations govern the in-plane motion while the last three equations govern the flexural motion.

2.2 Propagation of Harmonic Waves

Consider a infinitely large laminated plate governed by the equations of motion (2-26). We assume plane harmonic waves in the form

$$u^0 = U \exp[ik(\eta - ct)]$$
$$v^0 = V \exp[ik(\eta - ct)]$$
$$w = W \exp[ik(\eta - ct)] \qquad (2\text{-}27)$$
$$\phi_x = \Phi_x \exp[ik(\eta - ct)]$$
$$\phi_y = \Phi_y \exp[ik(\eta - ct)]$$

propagating over the plate, where U, V, W, Φ_x and Φ_y are constant amplitudes, k is the wave number, c is the phase

velocity and η is given by

$$\eta = x\cos\alpha + y\sin\alpha \tag{2-28}$$

In which α is the angle between the direction of wave propagation and x-axis.

Substitution of Equation (2-27) into Equation (2-26) with $q = 0$ yields a system of five homogeneous equations for the five constant amplitudes. In order to have a nontrivial solution, the determinant of the coefficient matrix is set equal to zero. Since the equations are uncoupled into two groups, the determinantal equation can be seperated into two equations as

$$|a_{IJ}| = 0 \tag{2-29}$$

for the in-plane extensional and in-plane shear waves, and

$$|b_{IJ}| = 0 \tag{2-30}$$

for the flexural waves. In Equations (2-29) and (2-30) the coefficients a_{IJ} and b_{IJ} are given by

$$\begin{aligned} a_{11} &= A_{11}\cos^2\alpha + A_{66}\sin^2\alpha - Pc^2 \\ a_{12} &= a_{21} = (A_{12} + A_{66})\sin\alpha\cos\alpha \\ a_{22} &= A_{66}\cos^2\alpha + A_{22}\sin^2\alpha - Pc^2 \end{aligned} \tag{2-31}$$

and

$$\begin{aligned} b_{11} = {} & D_{11}k^2\cos^2\alpha + 2D_{16}k^2\sin\alpha\cos\alpha + D_{66}k^2\sin^2\alpha \\ & + A^*_{44} - Ik^2c^2 \end{aligned}$$

$$b_{12} = b_{21} = D_{16}k^2\cos^2\alpha + (D_{12} + D_{66})k^2\sin\alpha\cos\alpha + D_{16}k^2\sin^2\alpha$$

$$b_{13} = b_{31} = IA^*_{44}k\cos\alpha \qquad (2\text{-}32)$$

$$b_{22} = D_{66}k^2\cos^2\alpha + 2D_{16}k^2\sin\alpha\cos\alpha + D_{22}k^2\sin^2\alpha + A^*_{44} - Ik^2c^2$$

$$b_{23} = b_{32} = IA^*_{44}k\sin\alpha$$

$$b_{33} = -A^*_{44}k^2 + Pk^2c^2$$

Expanding Equation (2-29) we obtain a quadratic equation in c^2 as

$$c^4 - d_1c^2 + d_2 = 0 \qquad (2\text{-}33)$$

where

$$d_1 = (A_{11}\cos^2\alpha + A_{22}\sin^2\alpha + A_{66})/P \qquad (2\text{-}34)$$

$$d_2 = \begin{vmatrix} A_{11}\cos^2\alpha + A_{66}\sin^2\alpha & (A_{12} + A_{66})\sin\alpha\cos\alpha \\ (A_{12} + A_{66})\sin\alpha\cos\alpha & A_{66}\cos^2\alpha + A_{22}\sin^2\alpha \end{vmatrix}$$

It is noted that the phase velocity c does not depend on the wave number k, thus these waves are nondispersive. In studying of transverse impact problem where in-plane deformation is negligible, this nondispersive property has no significant effect. Should in-plane deformation become important, higher order approximation of displacement

components u and v must be assumed and the dispersive property of these in-plane waves could be included.

From Equation (2-34) it is evident that there exist two phase velocities corresponding to two modes of wave. Although these two waves involve both in-plane extensional deformation as well as in-plane shear, from the eigenvectors we are able to tell which one is dominant. Thus we label the two waves as in-plane extensional wave and in-plane shear wave accordingly.

The determinantal equation given by Equation (2-30) yields three positive roots in c^2 indicating that three flexural waves exist. These phase velocities are functions of the wave number k, thus they are dispersive. Among these three modes of wave, only the lowest one corresponding to the transverse shear wave has a finite velocity as $k \to 0$ or as the wave length becomes infinite. The dispersion curves for the waves of the lowest mode propagating in the directions of 0^0, 45^0 and 90^0 respectively are plotted in Figure 2.4 with the non-dimensional phase velocity vs. the non-dimensional wavelength λ/h. It can be seen that they all approach the value of $\sqrt{G_{13}/\rho}$ as the wavelength becomes shorter. The phase velocities for the two higher modes, however, approach different values in different propagation directions when $\lambda \to 0$. For laminated composite which are anisotropic in general, the phase velocity varies from one direction to another. As a result the wave surface will

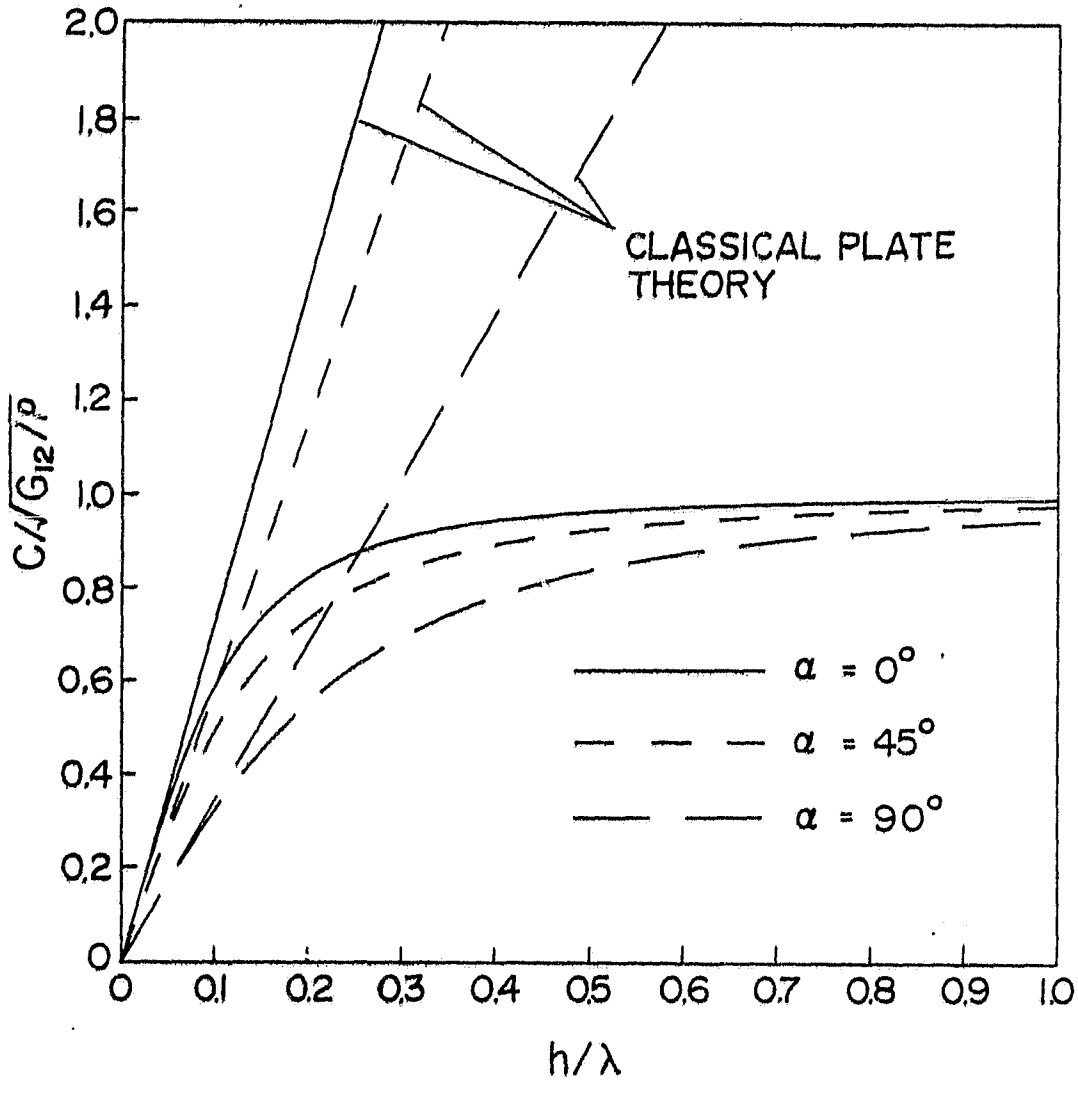

Figure 2.4 Dispersion curves for plane harmonic waves propagating in the 0°- 45°- and 90°- directions

become a rather complicated shape as it propagates. This will be discussed in the next section.

Substitution of $\omega = kc$ in Equation (2-32) yields a set of frequency equations for flexural waves. Figure 2.5 shows the frequency curves of these waves for $\alpha = 0^0$, 45^0 and 90^0, respectively, with the non-dimensional frequency vs. the non-dimensional wavelength. The cutoff frequencies for the two higher modes have a value of $\sqrt{12G_{13}/\rho}/h$. Comparing with the exact cutoff frequency $(\pi/h)\sqrt{G_{13}/\rho}$, it can be seen that if the shear correction factor $\pi^2/12$ is introduced, this theory will predict the correct cutoff frequency.

2.3 Propagation of Wave Front

Impact of foreign objects on a laminated plate with a very short duration could generate weak shock waves which will propagate into the rest of the structure with finite velocities, and the positions of the wave fronts define the regions being disturbed at any instant after impact. Damages to the laminated plate may possibly occur as the first wave front hits the weakest part. It is hence important to investigate the propagation of these shocks in the plate. There have been works dealing with the propagation of wave front in anisotropic elastic media [20-22]. Moon [23] presented an analysis of wave surfaces in a laminate by treating it as an equivalent homogeneous

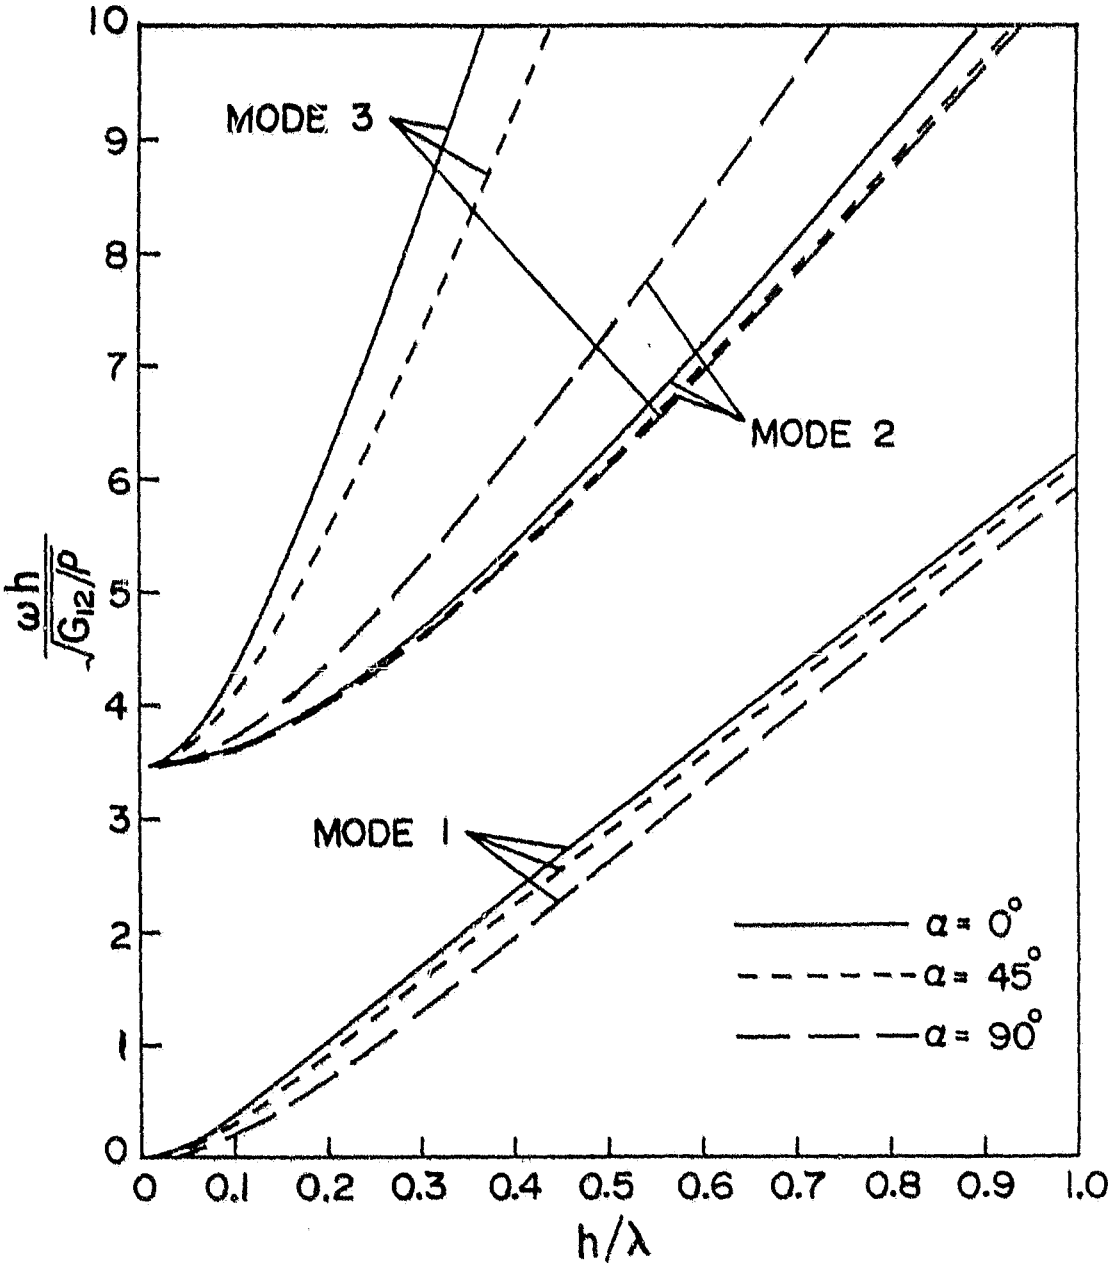

Figure 2.5 Frequency curves for flexural waves propagating in the 0°- 45°- and 90°- directions

orthotropic plate. The acceleration waves and their wave fronts were investigated. The propagation of shock waves in more general laminates which exhibit the bending-extensional coupling were studied by Sun [2]. The ray theory was employed to construct the wave front surface. The growth and decay of the shock strength were also discussed. In this section, the analytical procedures developed by Sun [2] were applied on a $[0^{\circ}/45^{\circ}/0^{\circ}/-45^{\circ}/0^{\circ}]_{2s}$ graphite/epoxy laminated plate.

2.3.1. Kinematic Conditions of Compatibility on the Wave Front

A wave front, which will be denoted by Ω, is defined as a surface travelling over the plate as time varies continuously, and across which there may exist a discontinuity in the stress, particle velocity and their derivatives.

Consider a discontinuous surface Ω passing some observation point in a medium at a certain time t. Let f^- be the value of a field function $f(x_i,t)$ (e.g. stress, particle velocity, etc.) behind the surface Ω, and f^+ be the value of f in front of it, then the discontinuity of function f can be expressed as

$$[f] = f^+ - f^- \tag{2-35}$$

In which the right hand side is to be evaluated at the time and location on Ω passing the observation point, and the jump across the wave front is denoted by square bracket.

Surface Ω may be expressed mathematically by an equation of the form

$$\Psi(x_i,t) = 0 \tag{2-36}$$

or, by making t explicit, as

$$\Psi(x_i,t) = F(x_i) - t = 0 \tag{2-37}$$

which represents a family of surfaces in x_i-space with t as a parameter. By evaluating f^+ and f^- at $t = F(x_i)$, the jump of f across the wave front becomes

$$[f(x_i)] = f^+(x_i,F(x_i)) - f^-(x_i,F(x_i)) \tag{2-38}$$

The rate of change of $[f]$ for an observer moving with Ω is given by

$$\begin{aligned} d[f]/dt &= (\partial f^+/\partial x_i - \partial f^-/\partial x_i)dx_i/dt + (\partial f^+/\partial t - \partial f^-/\partial t) \\ &= c_i[\partial f/\partial x_i] + [\partial f/\partial t] \end{aligned} \tag{2-39}$$

where $t = F(x_i)$ is substituted, and $c_i = dx_i/dt$ are velocity components of wave front relative to the material.

If the laminate theory introduced in previous section is used, then the plate displacement components are u^0, v^0, w, ϕ_x and ϕ_y, while the spatial variables are $x_1 = x$ and $x_2 = y$. It is assumed that the integrity of the material is not

affected by the propagation of the stress wave front, then these displacement components will remain continuous. Consequently, we have

$$[u^0] = [v^0] = [w] = [\phi_x] = [\phi_y] = 0 \qquad (2\text{-}40)$$

across the wave front. Applying the general condition of Equation (2-39) on u^0, together with Equation (2-40), we obtain

$$[\partial u^0/\partial x_j]c_j + [\dot{u}^0] = 0 \qquad j = 1,2 \qquad (2\text{-}41)$$

Let c_n and n_j be the normal velocity and the unit normal on the wave front, respectively, it follows that

$$n_j c_j = c_n \qquad (2\text{-}42)$$

and Equation (2-41) becomes

$$[\partial u^0/\partial x_j] = -[\dot{u}^0]n_j/c_n \qquad j = 1,2 \qquad (2\text{-}43)$$

Similar relations can be derived for the other displacement components v^0, w, ϕ_x and ϕ_y. Together they specify the kinematic conditions of compatibility on the wave front.

2.3.2 Dynamical Conditions on the Wave Front

Consider a finite volume V of a material medium and denoted by S the boundary or surface of V. For a continuous and differentiable function $f(x_i,t)$ in V, it can be shown

[23] that

$$\frac{d}{dt}\int_V f(x_i,t)dV = \int_V f_{,t}dV + \int_\Omega GfdS \qquad (2\text{-}44)$$

under deformation of the medium, where G is the normal velocity of the surface S. In the case where the deformation of the volume V is determined solely by the motion of material particles, we have

$$G = \dot{u}_i n_i = \dot{u}_n \qquad (2\text{-}45)$$

where u_i is the displacement components, n_i is the outward normal on S, and $\dot{u}_n$ is the normal velocity of material particle on S. If there exists a discontinuity surface (or wave front) travelling with velocity c_i in the medium, by choosing this surface as the boundary of V, we have

$$G = c_i n_i = c_n \qquad (2\text{-}46)$$

where c_n is the normal velocity of wave front.

Suppose that a volume V whose motion is determined by the deformation of the material medium, is divided by a travelling surface Ω into two volumes V^- and V^+ as shown in Figure 2.6. The surface S is also divided into two portions S^- and S^+ which form parts of the boundaries of V^- and V^+, respectively. The remaining part of the boundary is formed by Ω_0 which is a segment of Ω. In Figure 2.6, n_i denotes the unit normal of Ω in the direction of travelling, and n_i^* denotes the unit outward normal of S.

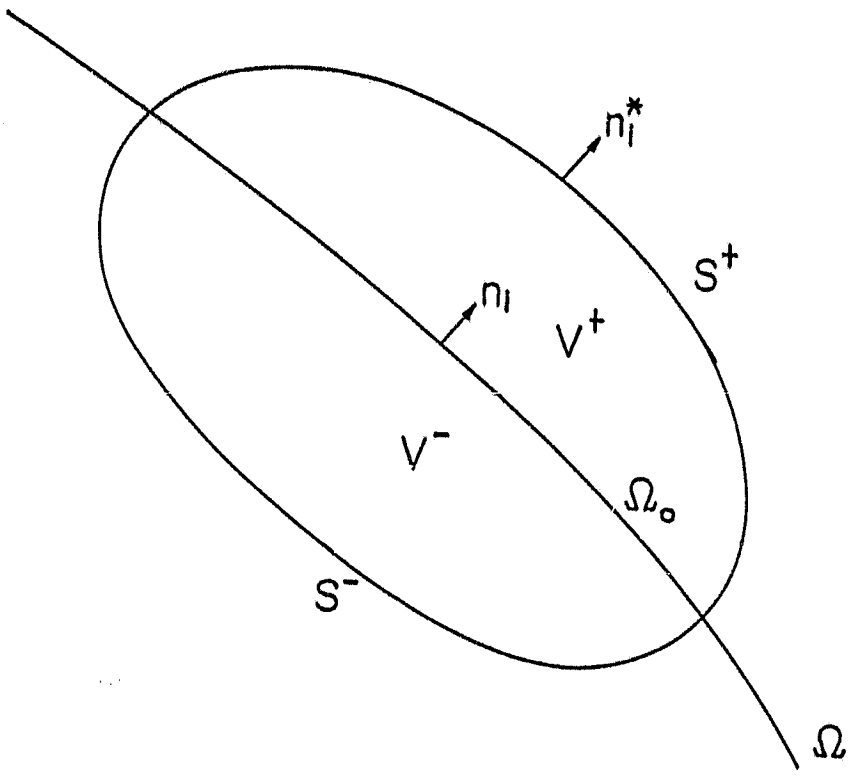

Figure 2.6 A deformed volume V divided by a travelling surface Ω

Taking $f = \rho\dot{u}_i$ in Equation (2-44) and using equation (2-45) and (2-46), we obtain

$$\frac{d}{dt}\int_{V^-}\rho\dot{u}_i^-dV = \int_{V^-}(\rho\dot{u}_i^-)_{,t}dV + \int_{\sigma^-}\dot{u}_n^-\rho\dot{u}_i^-dS + \int_{\Omega_0}c_n\rho\dot{u}_i^-d\Omega \quad (2-47)$$

$$\frac{d}{dt}\int_{V^+}\rho\dot{u}_i^+dV = \int_{V^+}(\rho\dot{u}_i^+)_{,t}dV + \int_{\sigma^+}\dot{u}_n^+\rho\dot{u}_i^+dS - \int_{\Omega_0}c_n\rho\dot{u}_i^+d\Omega \quad (2-48)$$

where $\dot{u}_i^-$ and $\dot{u}_i^+$ are the velocity components of material particle in V^- and V^+, respectively. Combining the above two equations gives

$$\frac{d}{dt}\int_{V}\rho\dot{u}_i dV = \int_{V}(\rho\dot{u}_i)_{,t}dV + \int_{\sigma^-}\dot{u}_n^-\rho\dot{u}_i^-dS + \int_{\sigma^+}\dot{u}_n^+\rho\dot{u}_i^+dS$$

$$+ \int_{\Omega_0}c_n\rho(\dot{u}_i^- - \dot{u}_i^+)d\Omega \quad (2-49)$$

From theory of elasticity we have

$$\frac{d}{dt}\int_{V}\rho\dot{u}_i dV = \int_{\sigma}\sigma_{ij}n_j dS \quad (2-50)$$

If we let the volume V approach zero at a fixed time in such a way that it will pass into Ω_0, then the volume integral in Equation (2-49) will evidently approach zero; however

$$\int_{\sigma^+}\dot{u}_n^+\rho\dot{u}_i^+dS \to -\int_{\Omega_0}\dot{u}_n^+\rho\dot{u}_i^+d\Omega \quad (2-51)$$

$$\int_{s^-} \dot{u}_n^- \rho \dot{u}_i^- ds - \int_{\Omega_0} \dot{u}_n^- \rho \dot{u}_i^- d\Omega \qquad (2\text{-}52)$$

$$\int_{s} \sigma_{ij} n_j ds - \int_{\Omega_0} (\sigma_{ij}^+ - \sigma_{ij}^-) n_j d\Omega \qquad (2\text{-}53)$$

where σ_{ij}^- and σ_{ij}^+ are the stress components on the sides of Ω_0, respectively.

Substituting Equations (2-50) through (2-53) into Equation (2-49) gives

$$\int_{\Omega_0} (\sigma_{ij}^+ - \sigma_{ij}^-) n_j d\Omega = \int_{\Omega_0} \rho \dot{u}_i^- (c_n - \dot{u}_n^-) d\Omega - \int_{\Omega_0} \rho \dot{u}_i^+ (c_n - \dot{u}_n^+) d\Omega \qquad (2\text{-}54)$$

Using $[\sigma_{ij}]$ and $[\dot{u}_i]$ to represent the jumps of stress and particle velocity across the wave front, and utilizing the fact that $c_n >> \dot{u}_n$, we obtain

$$\int_{\Omega_0} [\sigma_{ij}] n_j d\Omega = - \int_{\Omega_0} \rho c_n [\dot{u}_i] d\Omega \qquad (2\text{-}55)$$

Since this condition is independent of the extent of the surface integration Ω_0, it follows that

$$[\sigma_{ij}] n_j = - \rho c_n [\dot{u}_i] \qquad (2\text{-}56)$$

In the case of laminated plate, i = x,y,z and j = x,y.

Substitution of Equation (2-6) into Equation (2-56) yields

$$
\begin{aligned}
[\sigma_{1J}]n_J &= -\rho c_n\{[\dot{u}^0] + z[\dot{\phi}_x]\} \\
[\sigma_{2J}]n_J &= -\rho c_n\{[\dot{v}^0] + z[\dot{\phi}_y]\} \\
[\sigma_{3J}]n_J &= -\rho c_n[\dot{w}]
\end{aligned}
\tag{2-57}
$$

Integrating Equation (2-57) over the thickness of plate gives

$$
\begin{aligned}
[N_x]n_x + [N_{xy}]n_y &= -Pc_n[\dot{u}^0] - Rc_n[\dot{\phi}_x] \\
[N_{xy}]n_x + [N_y]n_y &= -Pc_n[\dot{v}^0] - Rc_n[\dot{\phi}_y] \\
[Q_x]n_x + [Q_y]n_y &= -Pc_n[\dot{w}]
\end{aligned}
\tag{2-58}
$$

Multiplying the first two equations of Equation (2-57) by z and then integrating over the thickness, we obtain two more equations

$$
\begin{aligned}
[M_x]n_x + [M_{xy}]n_y &= -Rc_n[\dot{u}^0] - Ic_n[\dot{\phi}_x] \\
[M_{xy}]n_x + [M_y]n_y &= -Rc_n[\dot{v}^0] - Ic_n[\dot{\phi}_y]
\end{aligned}
\tag{2-59}
$$

where P, R and I have been defined in Equation (2-24)

The five equations given by Equations (2-58) and (2-59) are the dynamical conditions on the wave front for the laminated plate.

2.3.3 Propagation Velocity of the Wave Front

Across the wave front, the laminate constitutive relations given by Equation (2-20) can be written as

$$\begin{Bmatrix} [N] \\ [M] \\ [Q] \end{Bmatrix} = \begin{bmatrix} A & B & 0 \\ B & D & 0 \\ 0 & 0 & A^* \end{bmatrix} \begin{Bmatrix} [\epsilon] \\ [\kappa] \\ [\gamma] \end{Bmatrix} \qquad (2\text{-}60)$$

where

$$\begin{aligned} \{[N]\}^T &= \{[N_x], [N_y], [N_{xy}]\} \\ \{[M]\}^T &= \{[M_x], [M_y], [M_{xy}]\} \\ \{[Q]\}^T &= \{[Q_x], [Q_y]\} \end{aligned} \qquad (2\text{-}61)$$

are the jumps of the stress resultants, and

$$\begin{aligned} \{[\epsilon]\}^T &= \{[\partial u^0/\partial x], [\partial v^0/\partial y], [\partial u^0/\partial y]+[\partial v^0/\partial x]\} \\ \{[\kappa]\}^T &= \{[\partial \phi_x/\partial x], [\partial \phi_y/\partial y], [\partial \phi_x/\partial y]+[\partial \phi_x/\partial x]\} \\ \{[\gamma]\}^T &= \{[\partial w/\partial y], [\partial w/\partial x]\} \end{aligned} \qquad (2\text{-}62)$$

are the jumps of the strain components. In Equation (2-62), the conditions $[\phi_x] = [\phi_y] = 0$ are substituted.

Substituting of Equation (2-43) and the similar relations for other kinematic variables in Equation (2-60), we can express the jumps of the stress resultants in terms of the jumps of the time derivatives of the displacement components u^0, v^0, w, ϕ_x and ϕ_y. These relations are then substituted in Equations (2-58) and (2-59), which results in five homogeneous equations. For $[0^\circ/45^\circ/0^\circ/-45^\circ/0^\circ]_{2s}$ graphite/epoxy laminated plate which is symmetrical and balanced (i.e. $B_{ij} = 0$, $A_{16} = A_{26} = 0$, $R = 0$ and $D_{16} = D_{26}$), these five equations are uncoupled into three groups as

$$[a_{ij}]\begin{Bmatrix}[\dot{u}^0]\\[\dot{v}^0]\end{Bmatrix} = 0 \tag{2-63}$$

$$[b_{ij}]\begin{Bmatrix}[\dot{\phi}_x]\\[\dot{\phi}_y]\end{Bmatrix} = 0 \tag{2-64}$$

$$(A^*_{44} - Pc_n^2)[\dot{W}] = 0 \tag{2-65}$$

In which $[a_{ij}]$ and $[b_{ij}]$ are both two by two symmetric matrices, and their entries are given by

$$\begin{aligned} a_{11} &= n_x^2 A_{11} + n_y^2 A_{66} - Pc_n^2 \\ a_{12} &= a_{21} = n_x n_y (A_{12} + A_{66}) \\ a_{22} &= n_x^2 A_{66} + n_y^2 A_{22} - Pc_n^2 \end{aligned} \tag{2-66}$$

$$\begin{aligned} b_{11} &= n_x^2 D_{11} + 2n_x n_y D_{16} + n_y^2 D_{66} - Ic_n^2 \\ b_{12} &= b_{21} = D_{16} + n_x n_y (D_{12} + D_{66}) \\ b_{22} &= n_x^2 D_{66} + 2n_x n_y D_{16} + n_y^2 D_{22} - Ic_n^2 \end{aligned} \tag{2-67}$$

It can be seen that Equation (2-63) describes the in-plane extensional and the in-plane shear wave fronts, Equation (2-64) describes the bending moment and the twisting moment wave fronts and Equation (2-65) describes the transverse shear wave front.

From Equation (2-65), we obtain the normal velocity with which the transverse shear wave front propagates as

$$c_n^2 = A^*_{44}/P \tag{2-68}$$

It is noted that this velocity is independent of the direction of propagation, and is called directionally

isotropic wave front.

Equations (2-63) and (2-64) yield non-trivial solutions only if the determinant of the coefficients matrices vanish, i.e.

$$|a_{ij}| = 0 \tag{2-69}$$

$$|b_{ij}| = 0 \tag{2-70}$$

Each of the above equations can be expanded into a quadratic equation of c_n^2. For $[0^\circ/45^\circ/0^\circ/-45^\circ/0^\circ]_{2s}$ graphite/epoxy laminated plate, the normal velocities of wave fronts corresponding to the in-plane modes and flexural modes are plotted in Figure 2.7 and 2.8, respectively. It is noted that the normal velocities of the in-plane extensional and in-plane shear modes are symmetrical about x-axis and y-axis, while there is no such symmetry for the bending moment and twisting moment modes.

2.3.4 Wave Surface and Ray

From Figure 2.7 and 2.8, it can be seen that for laminated composites which are anisotropic in general, the in-plane and flexural wave fronts travel with different normal velocities in different directions. In other words, the initial shape of a wave surface will be distorted after it propagates. However, Equations (2-66) and (2-67) show

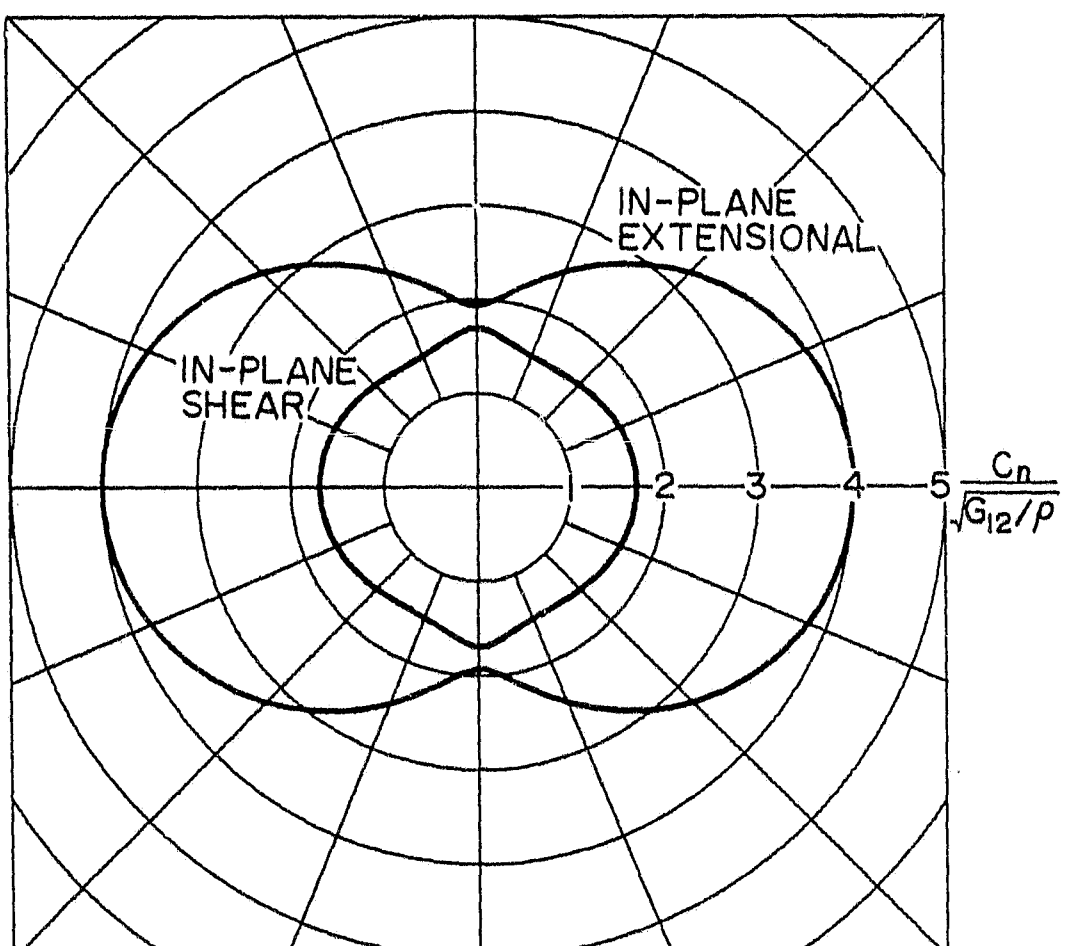

Figure 2.7 Normal velocities of in-plane wave fronts

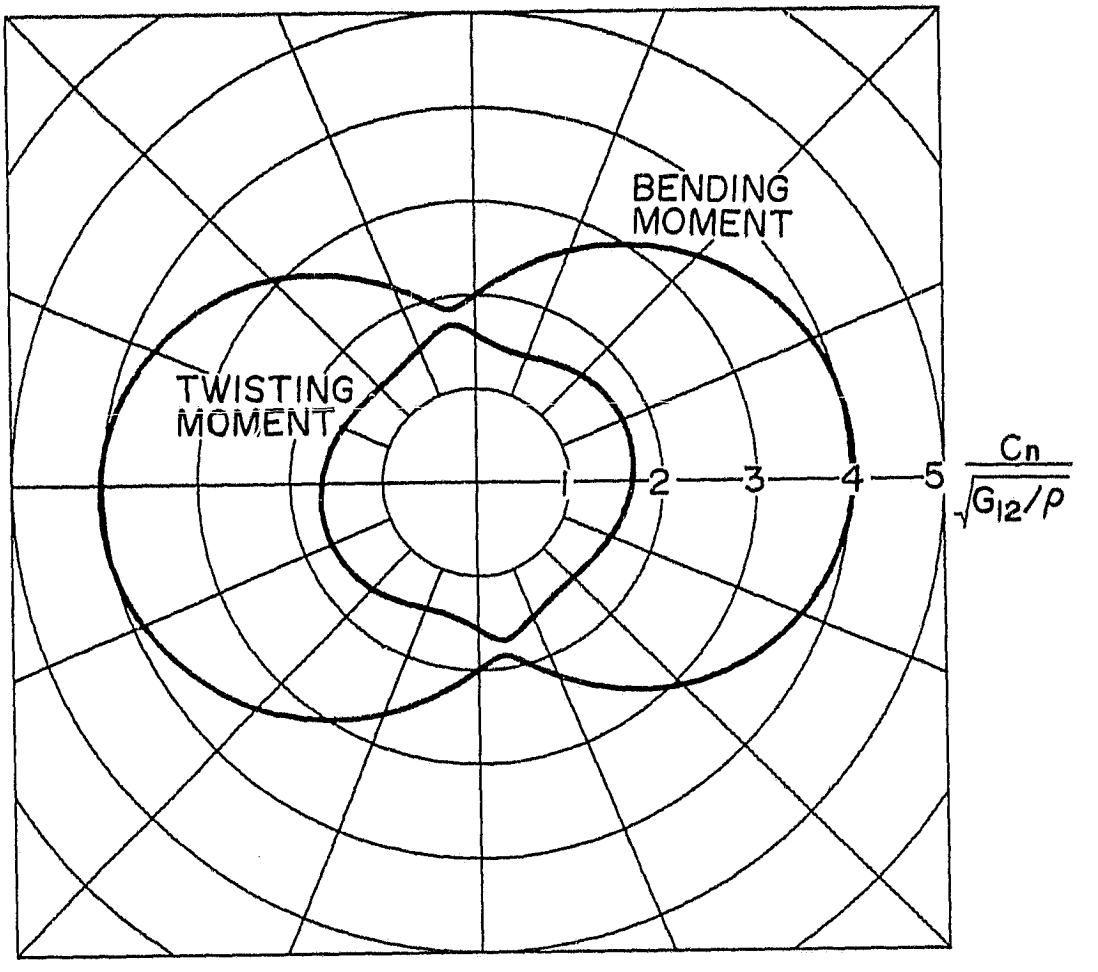

Figure 2.8 Normal velocities of flexural wave fronts

that for any fixed normal direction n_i, c_n is a constant. Connecting the points having the same unit normals to the travelling wave front surface, we obtain a family of lines which are called rays. Thus, along a ray, the normal velocity of wave front remains unchanged. By using the ray theory which has been well established in the field of geometrical optics, we are able to construct the wave front surface.

Recall Equation (2.37)

$$F(x_i) - t = 0 \quad i = 1,2 \tag{2-37}$$

which represents a family of wave fronts propagating over the plate with t as a parameter. It follows that

$$dF/dt = (\partial F/\partial x_i)(dx_i/dt) = (\partial F/\partial x_i)c_i = 1 \tag{2-71}$$

By putting

$$p_i = \partial F/\partial x_i = \nabla F \tag{2-72}$$

Equation (2-71) becomes

$$p_i c_i = 1 \tag{2-73}$$

Since p_i is normal to the surface F, it can be written as

$$p_i = |p_i|\, n_i \tag{2-74}$$

where $|p_i|$ denotes the length of p_i. Combining (2-73) and (2-74), we obtain

$$|p_l|n_l c_l = |p_l|c_n = 1 \tag{2-75}$$

from which we obtain

$$p_l = n_l/c_n \tag{2-76}$$

In Equation (2-76), p_l is called the slowness vector which has the direction normal to the wave front with the magnitude being equal to the inverse of normal velocity c_n.

Substituting Equation (2-76) in Equation (2-69) and (2-70), we obtain two equations in terms of p_l

$$\begin{vmatrix} p_x^2A_{11} + p_y^2A_{66} - P & p_xp_y(A_{12} + A_{66}) \\ p_xp_y(A_{12} + A_{66}) & p_x^2A_{66} + p_y^2A_{22} - P \end{vmatrix} = 0$$

$$\begin{vmatrix} p_x^2D_{11}+2p_xp_yD_{16}+p_y^2D_{66}-I & D_{16}+p_xp_y(D_{12}+D_{66}) \\ D_{16}+p_xp_y(D_{12}+D_{66}) & p_x^2D_{66}+2p_xp_yD_{16}+p_y^2D_{22}-I \end{vmatrix} = 0$$

which can be written in a general form as

$$g(p_l) = 0 \quad l = 1,2 \tag{2-77}$$

In view of Equation (2-72), we recognize that Equation (2-77) may be regarded as a set of first-order partial differential equation for F. A standard method of solving first-order partial differential equation is by means of characteristics [24], which reduces the equation to a system of first-order ordinary differential equations. In our case, Equation (2-77) then is equivalent to the following

$$dx/ds = \partial g/\partial p_x \quad dy/ds = \partial g/\partial p_y \tag{2-78}$$

$$dp_x/ds = -\partial g/\partial x \quad dp_y/ds = -\partial g/\partial y \tag{2-79}$$

where s is a parameter. These equations, together with Equation (2-77) describe the ray geometry and the normal direction of the wave front propagating along the ray.

From Equation (2-78), we have

$$dy/dx = (\partial g/\partial p_y)/(\partial g/\partial p_x) \tag{2-80}$$

Since the normal direction of wave front along a ray is constant, it can be seen from Equation (2-76) that p_i is also constant along a ray. For laminated composite which is assumed to have homogeneous material properties, Equation (2-77) shows that $g(p_i)$ does not depend on x_i, consequently, $\partial g/\partial p_x$ and $\partial g/\partial p_y$ are all constants along a ray. Thus, the solution of Equation (2-80) is then given by

$$y = \zeta(x - x_0) + y_0 \tag{2-81}$$

where x_0 and y_0 are the initial values of x and y at t = 0, and $\zeta = (\partial g/\partial p_y)/(\partial g/\partial p_x)$. This equation shows that the rays in a homogeneous solid are straight lines.

From Equations (2-73) and (2-77), we have

$$c_i dp_i = 0 \tag{2-82}$$

$$dg = (\partial g/\partial p_i)\, dp_i = 0 \tag{2-83}$$

Eliminating dp_i from these equations yields

$$dx_i/dt = c_i = (\partial g/\partial p_i)/(p_j \partial g/\partial p_j) \tag{2-84}$$

where summation over j is understood.

Equation (2-84) can be solved to obtain the position of wave front at time t. Again, since $\partial g/\partial p_i$ and p_i are all constant along a ray, we obtain the solution of Equation (2-84) as

$$x = (\partial g/\partial p_x)t/(p_j \partial g/\partial p_j) + x_0 \tag{2-85}$$

$$y = (\partial g/\partial p_y)t/(p_j \partial g/\partial p_j) + y_0 \tag{2-86}$$

where x_0 and y_0 denote the initial wave position at t = 0.

Consider at t = 0, a wave front forms a circle given by

$$\begin{aligned} x_0 &= h \cos\alpha \\ y_0 &= h \sin\alpha \end{aligned} \tag{2-87}$$

At this instant, the normal directions to the wave front coincide with the radial directions. Due to the different velocities of propagation in directions, this initial shape would be distorted. By using Equations (2-85) and (2-86), the subsequent positions of the wave front can be determined. Figures 2.9-2.12 show the wave front positions at two consecutive instants after t = 0 for the in-plane extensional, in-plane shear, bending moment and twisting moment modes, respectively, for the $[0^\circ/45^\circ/0^\circ/-45^\circ/0^\circ]_{2s}$

graphite/epoxy laminated plate. It is noted that for symmetrical laminates, the in-plane modes are uncoupled from the bending modes. The rays along which the normal directions to the wave front are 0°, 45° and 90°, respectively, are also shown in the figures. It is seen that the wave fronts of the in-plane extensional and the in-plane shear modes possess symmetry with respect to x-axis and y-axis. The wave fronts of the bending and twisting moments, however, lose their original symmetry with respect to x-axis and y-axis. This is an indication that in performing analysis of flexural deformation of this laminate, one can not take a quadrant for analysis, a practice followed by many authors dealing with homogeneous and isotropic plates.

From Figures 2.9-2.12, it is also interesting to note that ray geometries for these two groups of wave fronts are quite different. For the in-plane extensional and in-plane shear wave fronts, the rays coincide with the normal directions when $\alpha = 0°$ and 90°. Along other directions, the direction of the ray deviates from the normal direction of the wave front. It was discussed in [2] that the degree of spreading of rays is proportional to the decay of the stress amplitude at the wave front. Thus, from Figures 2.9 and 2.11, one can conclude that the strength of the in-plane extensional and bending moment wave fronts decay more rapidly in the y-direction than in the x-direction.

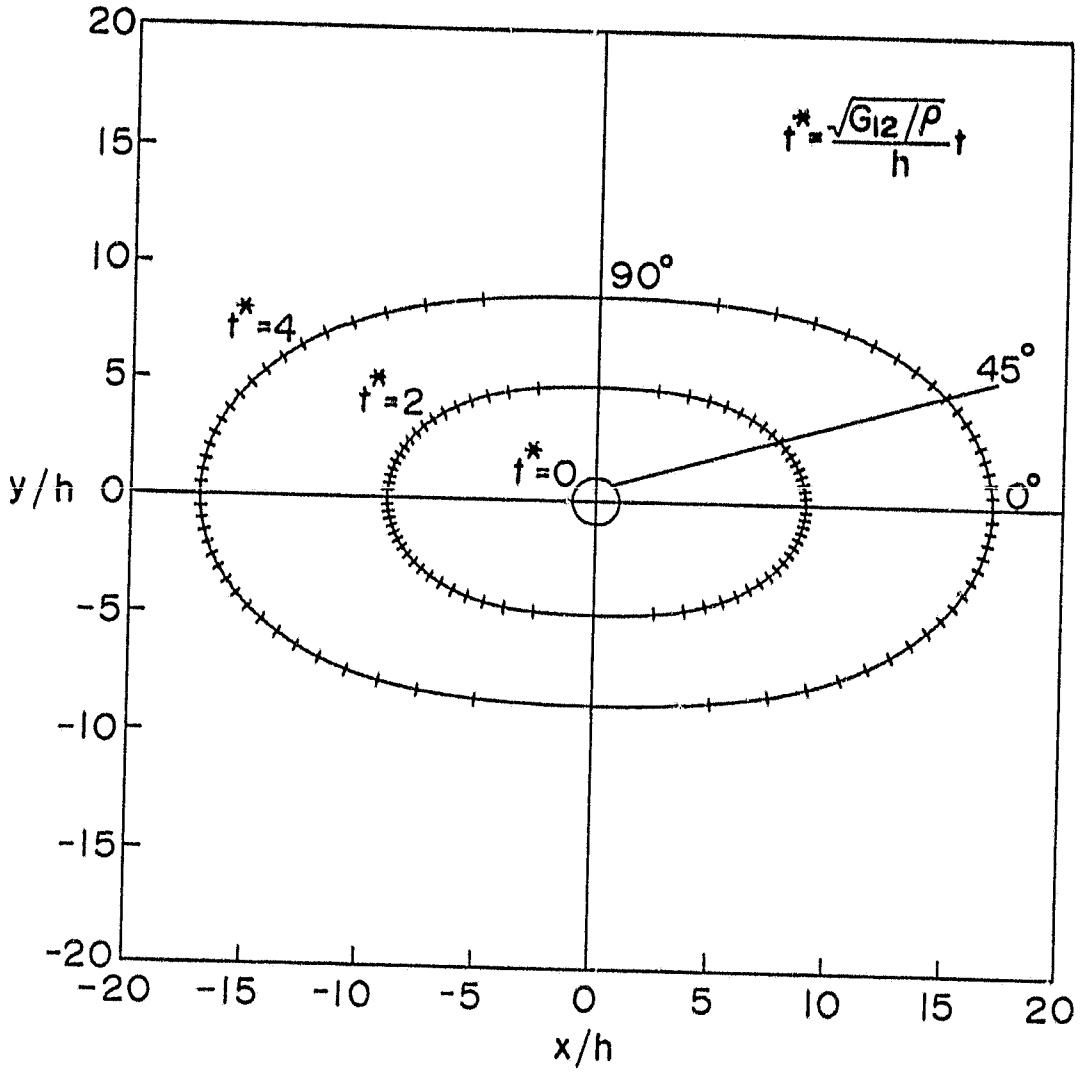

Figure 2.9 Wave front positions at different times and rays for in-plane extensional mode

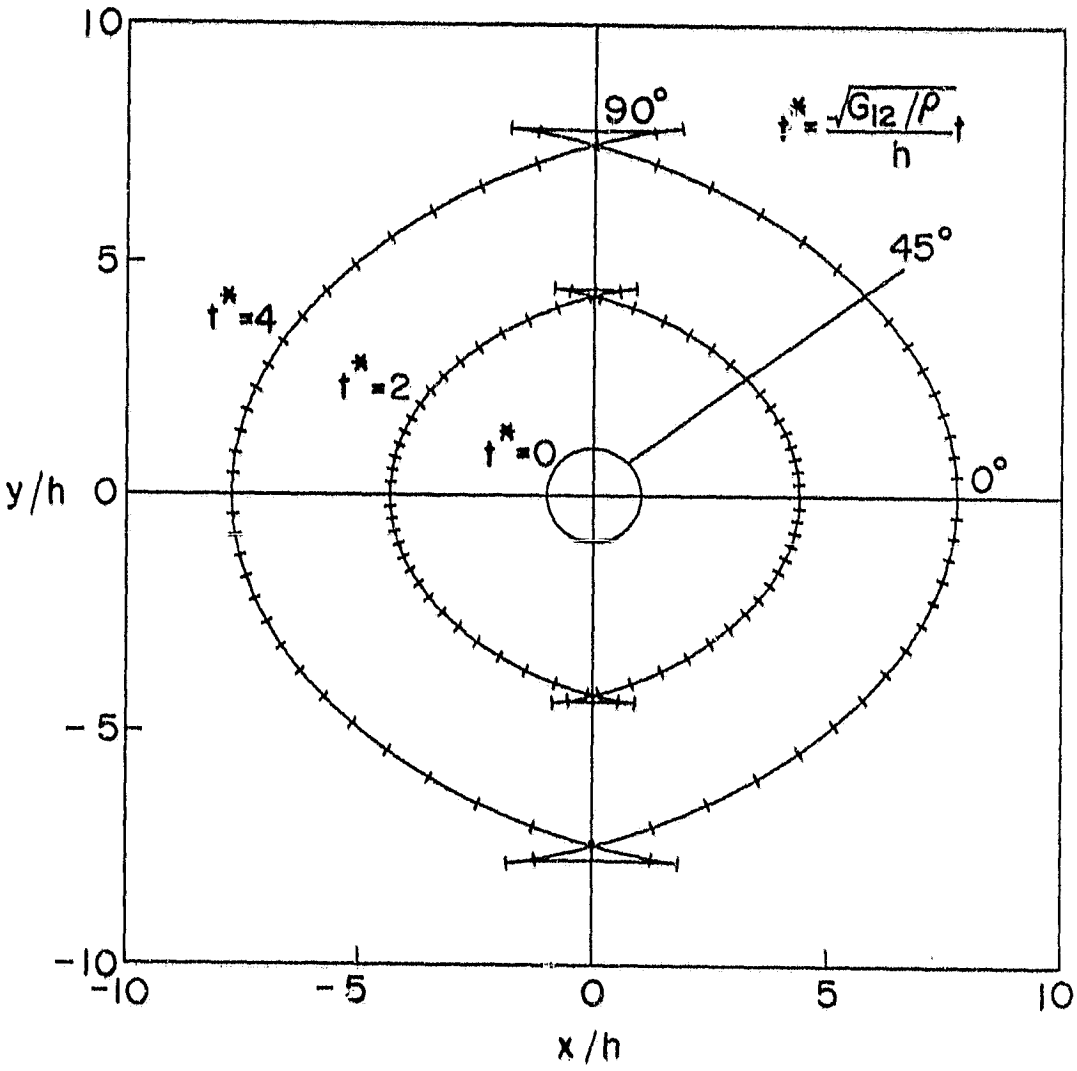

Figure 2.10 Wave front positions at different times and rays for in-plane shear mode

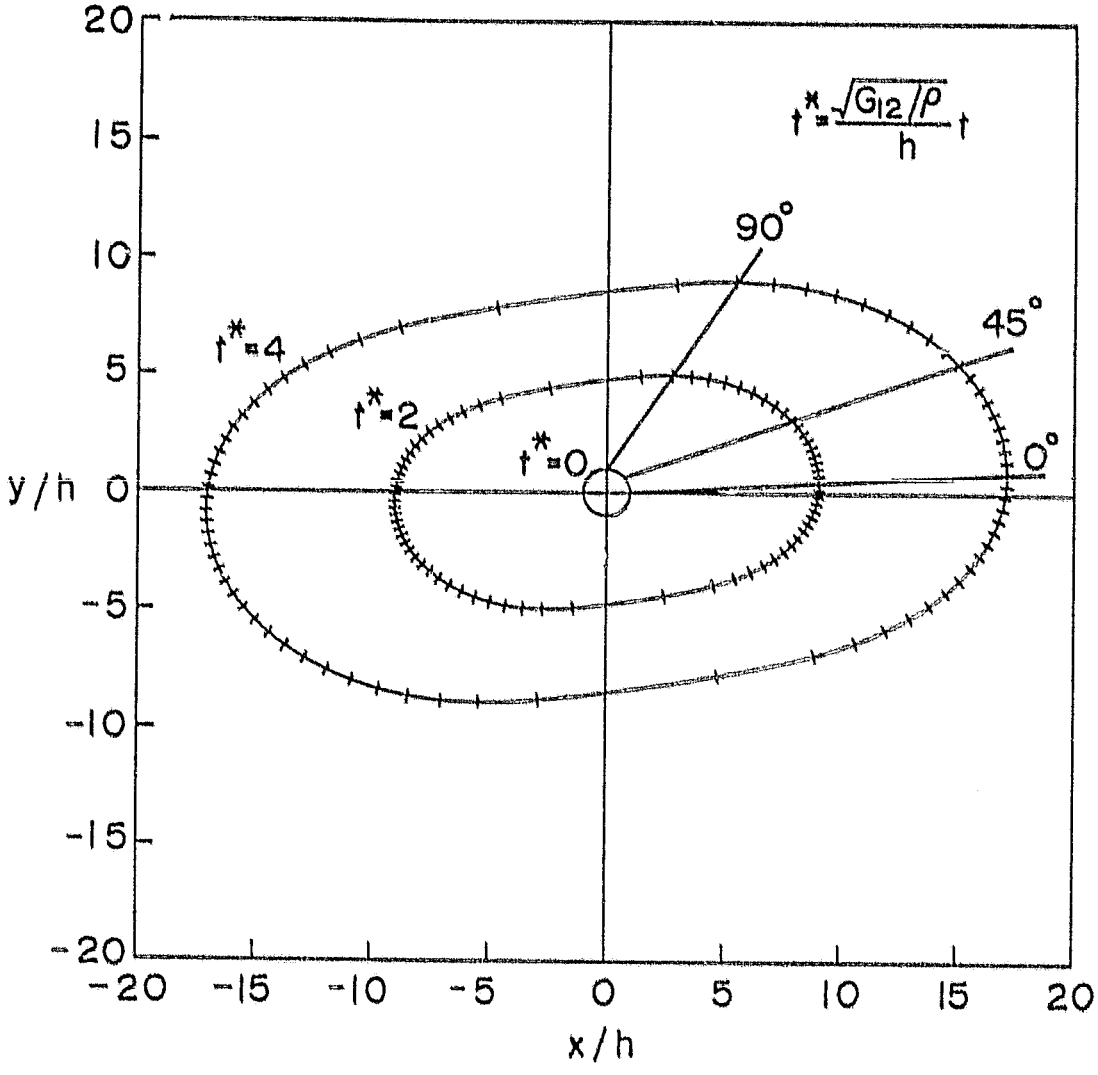

Figure 2.11 Wave front positions at different times and rays for bending mode

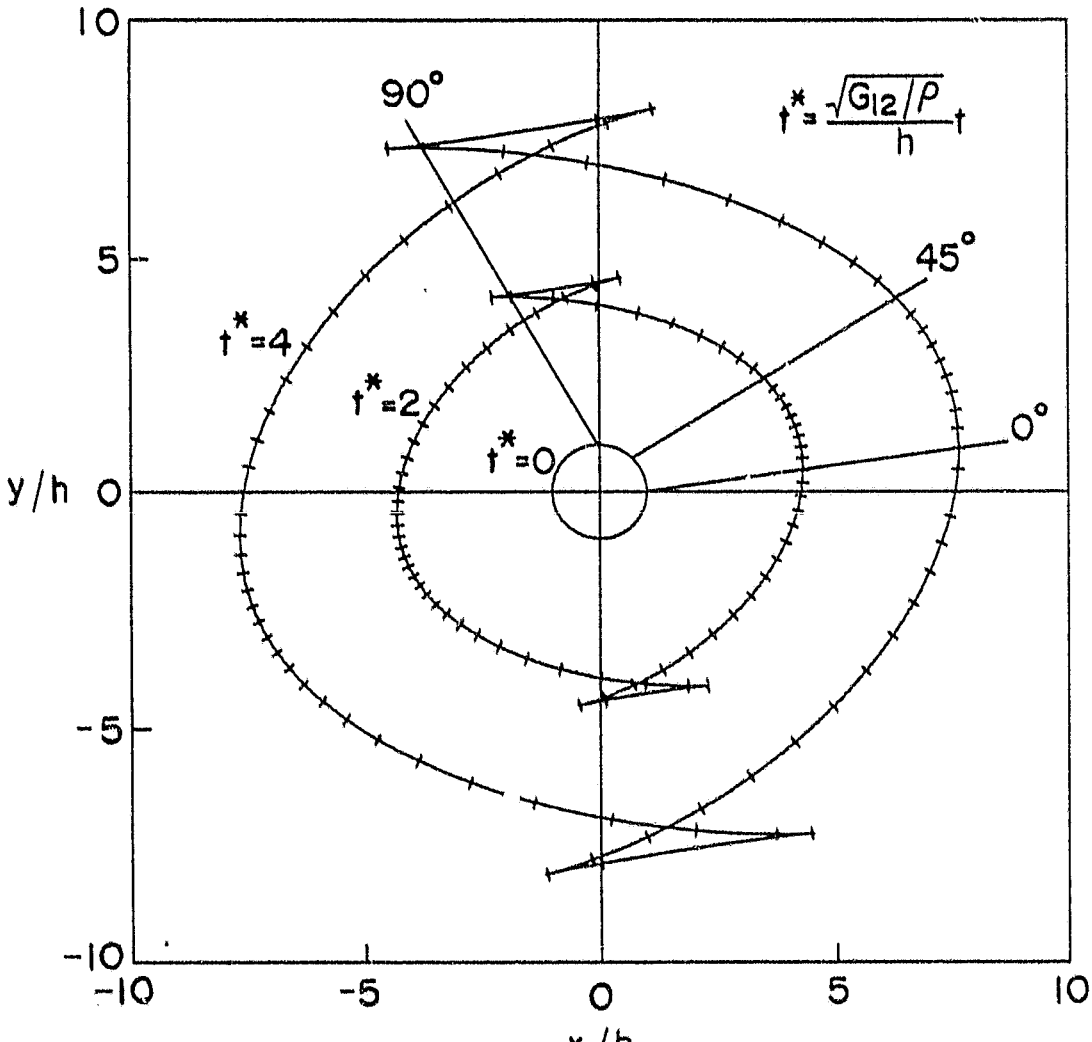

Figure 2.12 Wave front positions at different times and rays for twisting mode

A photoelastic study of anisotropic waves in a fiber reinforced composite has been done by Dally et al. [9]. The waves was produced by a explosive charge in a small hole on the plate. The result showed clearly an elliptic-like stress wave front pattern. This indicates that stress waves in anisotropic materials propagate with different velocities in different directions.

CHAPTER 3

STATICAL INDENTATION LAWS

A brief introduction of the historical development on impact problem involving homogeneous isotropic materials was given by Goldsmith [12]. Hertz [11] was the first to obtain a satisfactory solution on contact law for two isotropic elastic spherical bodies. When letting the radius of one of the spheres go to infinity, this law then describes the contact behavior between a sphere and an elastic half-space. The Hertzian law, in spite of being static and elastic in nature, has been widely applied to impact analyses where permanent deformations were produced. The use of this law beyond the elastic limit has been justified on the basis that it appears to predict accurately most of the impact parameters that can be experimentally verified.

In studying impact responses of laminated composites, the problem becomes extremely complicated. One may easily realize that the Hertzian contact law which was derived based on homogeneous isotropic materials may not be adequate in describing the contact behavior of laminated composites due to their anisotropic and nonhomogeneous properties. Moreover, most of the laminated composites have finite thickness which can not be represented by a half-space. In

many existing analytical works [25], loadings to the laminates were assumed known, and the responses of the laminates were assumed elastic.

Willis [26] obtained explicit formulas for Hertzian contact law for transversely isotropic half-space pressed by a rigid sphere, and extended it to the application of impact problems. It was shown that

$$F = k\alpha^n \tag{3-1}$$

with $n = 3/2$ is valid for the contact force F and the indentation α, where k is a contact coefficient whose value depends on the material properties of the target and the sphere, and the radius of sphere.

A modified contact law with

$$k = (4/3)\frac{R_s^{1/2}}{\frac{1-\nu_s^2}{E_s} + \frac{1}{E_t}} \tag{3-2}$$

was used [13] in an analytical study on impact of laminated composites. In Equation (3-2), R_s, ν_s and E_s are the radius, Poisson's ratio and Young's modulus of the sphere, respectively, and E_t is the Young's modulus of the laminates in thickness direction. It was also suggested by Sun et al. [27] that the value of k can be experimentally determined.

Recently Yang and Sun [14] have conducted static indentation tests on the $[0°/45°/0°/-45°/0°]_{2s}$ graphite/epoxy laminates using spherical steel indenters of 0.25 in. and 0.5 in. diameters. The results were fitted into Equation (3-1) and were found that the 3/2 power is valid. In addition, it was also observed that even for small amounts of load there were significant permanent indentations. This implies that the unloading curve has to be different from the loading curves. In order to account for the permanent deformation, the equation

$$F = F_m \left(\frac{\alpha - \alpha_0}{\alpha_m - \alpha_0} \right)^q \tag{3-3}$$

proposed by Crook [28] was used to model the unloading path where F_m is the contact force at which unloading begins, α_m is the indentation corresponding to F_m, and α_0 denotes the permanent indentation in an unloading cycle. Equation (3-3) can be rewritten as

$$F = s(\alpha - \alpha_0)^q \tag{3-4}$$

in which

$$s = F_m/(\alpha_m - \alpha_0)^q \tag{3-5}$$

is called unloading rigidity. In order to simplify the modeling of the unloading law, it was assumed [14] that the value of s for all the unloading curves remains the same.

Consequently, a constant α_{cr} given by

$$\alpha_{cr} = k/s \tag{3-6}$$

was introduced. It was also shown that q=5/2 fitted the unloading path very well, and the permanent indentation α_0 was then related to α_m by

$$\begin{aligned} &\alpha_0/\alpha_m = 1 - (\alpha_{cr}/\alpha_m)^{2/5} && \text{as } \alpha_m > \alpha_{cr} \\ &\alpha_0 = 0 && \text{as } \alpha_m \leq \alpha_{cr} \end{aligned} \tag{3-7}$$

The value of α_{cr} was found to be independent of the size of the indenter and hence can be regarded as a material constant.

It was also mentioned in [14] and [29] that there were some practical difficulties in performing the tests. Since the indentation was measured step by step using a dial gage and readings on the gage were taken about 10 to 20 seconds after the load was increased by one step, the creep effect may cause an appreciable error to the results. Another important problem was that it was almost impossible to measure the permanent indentation accurately using the dial gage. In order to overcome these problems, a Linear Variable Differential Transformer (LVDT) was used in this study to measure the indentation.

The LVDT is an electromechanical transducer that produces an electrical output proportional to the displacement.

Connecting this output and the one from the strain indicator which is used to measure the applied loading to a X-Y plotter, one can obtain a continuous loading-unloading curve. By changing the loading rate which can be applied as fast as 50 lb./sec., it is possible to examine the significance of creep effect on the contact law. The starting point and final point of a loading-unloading cycle, which represent respectively the instants of contact and separation of the indenter and the specimen, can be easily determined from the curve. Thus, the measurements of permanent indentations are much more accurate than those using the dial gage.

3.1 Specimens and Experimental Procedure

Two groups of test specimens were prepared from a $[0^\circ/45^\circ/0^\circ/-45^\circ/0^\circ]_{2s}$ graphite/epoxy laminate. They were cut in the way such that the longitudinal axis of the beam specimen of the first group was parallel to the 0° fiber direction while the second one was perpendicular to it. The latter then becomes $[90^\circ/45^\circ/90^\circ/-45^\circ/90^\circ]_{2s}$ laminated beams. The thickness of the beam was 0.106 in. and the width was approximately 1.25 in.. In all tests, the specimens were clamped at both ends. It was shown in [14] that the span of the specimen in the range of 2 in. to 6 in. has little effect on the contact law. Hence, only one span, i.e. 2 in., was used in the test.

The experimental set-up is shown schematically in Figure 3.1. LVDT was mounted on a 'C' bracket fixed to the loading piston so that only the relative movement between the indenter and the specimen was recorded. The load was applied pneumatically by a plunger and it was measured using a load cell and a strain indicator. Outputs from LVDT and strain indicator were fed into an X-Y plotter so that a continuous force-indentation curve can be obtained. Two spherical steel indenters of diameters 0.5 in. and 0.75 in. were used.

3.2 Experimental Results

3.2.1 Loading Curves

The experimental curves were first digitized into some discrete data points and then fitted into Equation (3-1) using least-squares method. Figures 3.2 and 3.3 show the test data and the fitted curves for 0.5 in. diameter indenter. It can be seen from these figures that the 3/2 power index gives very good results. However, the contact coefficient k of $[0^\circ/45^\circ/0^\circ/-45^\circ/0^\circ]_{2s}$ specimen is less than the one of $[90^\circ/45^\circ/90^\circ/-45^\circ/90^\circ]_{2s}$ specimen by about 7 %. During the test, larger deflections were observed for the second group of specimen due to their lower flexural rigidity. This means that the contact area is also larger and the indentation under same amount of loading should be

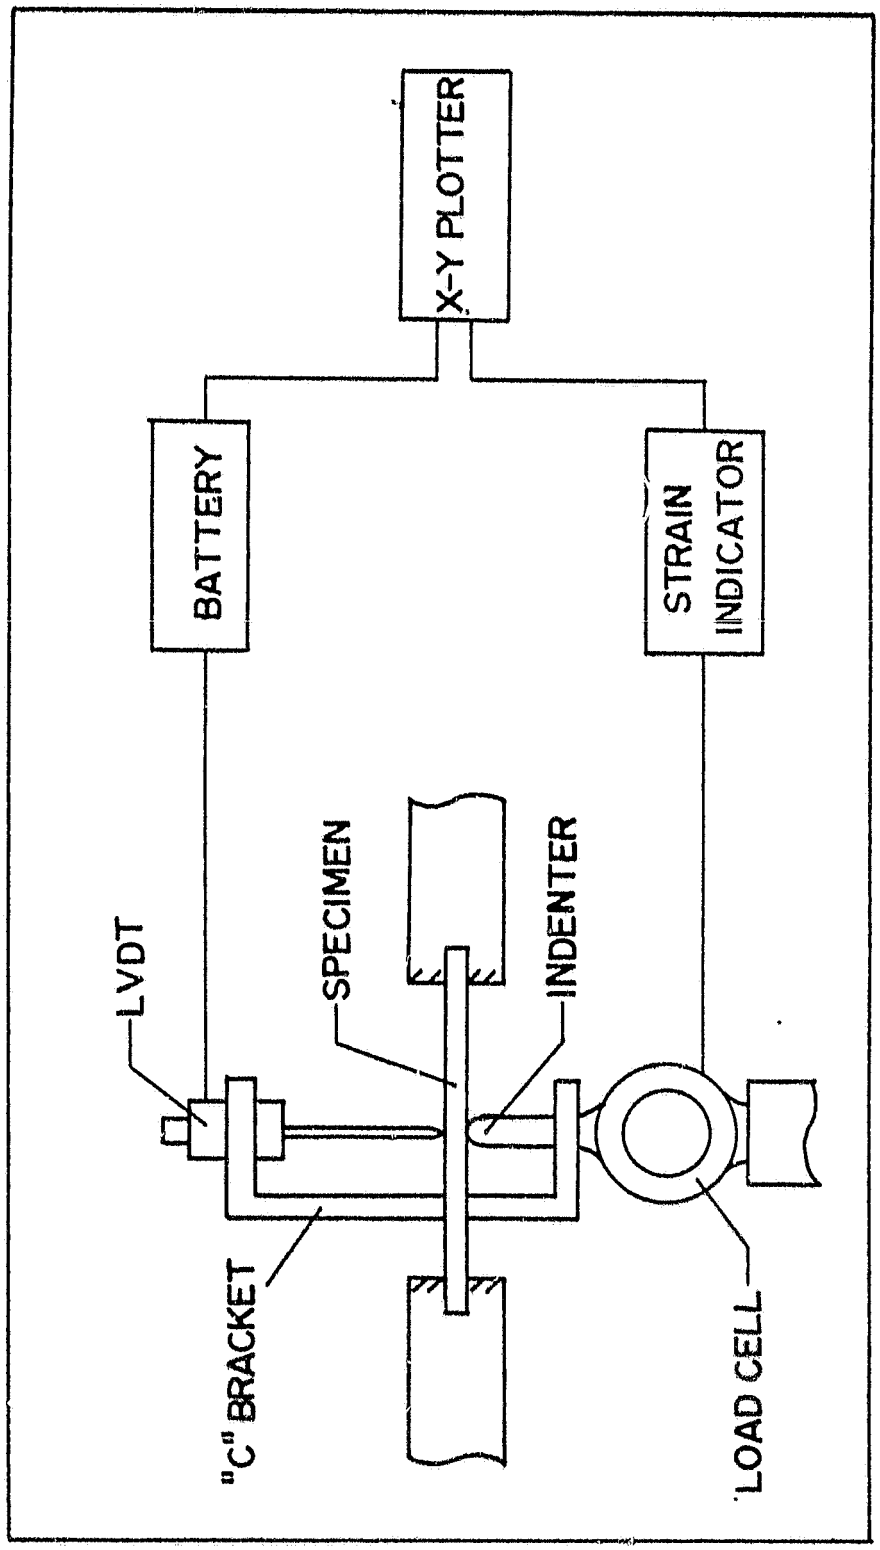

Figure 3.1 Schematical diagram for the indentation test set-up

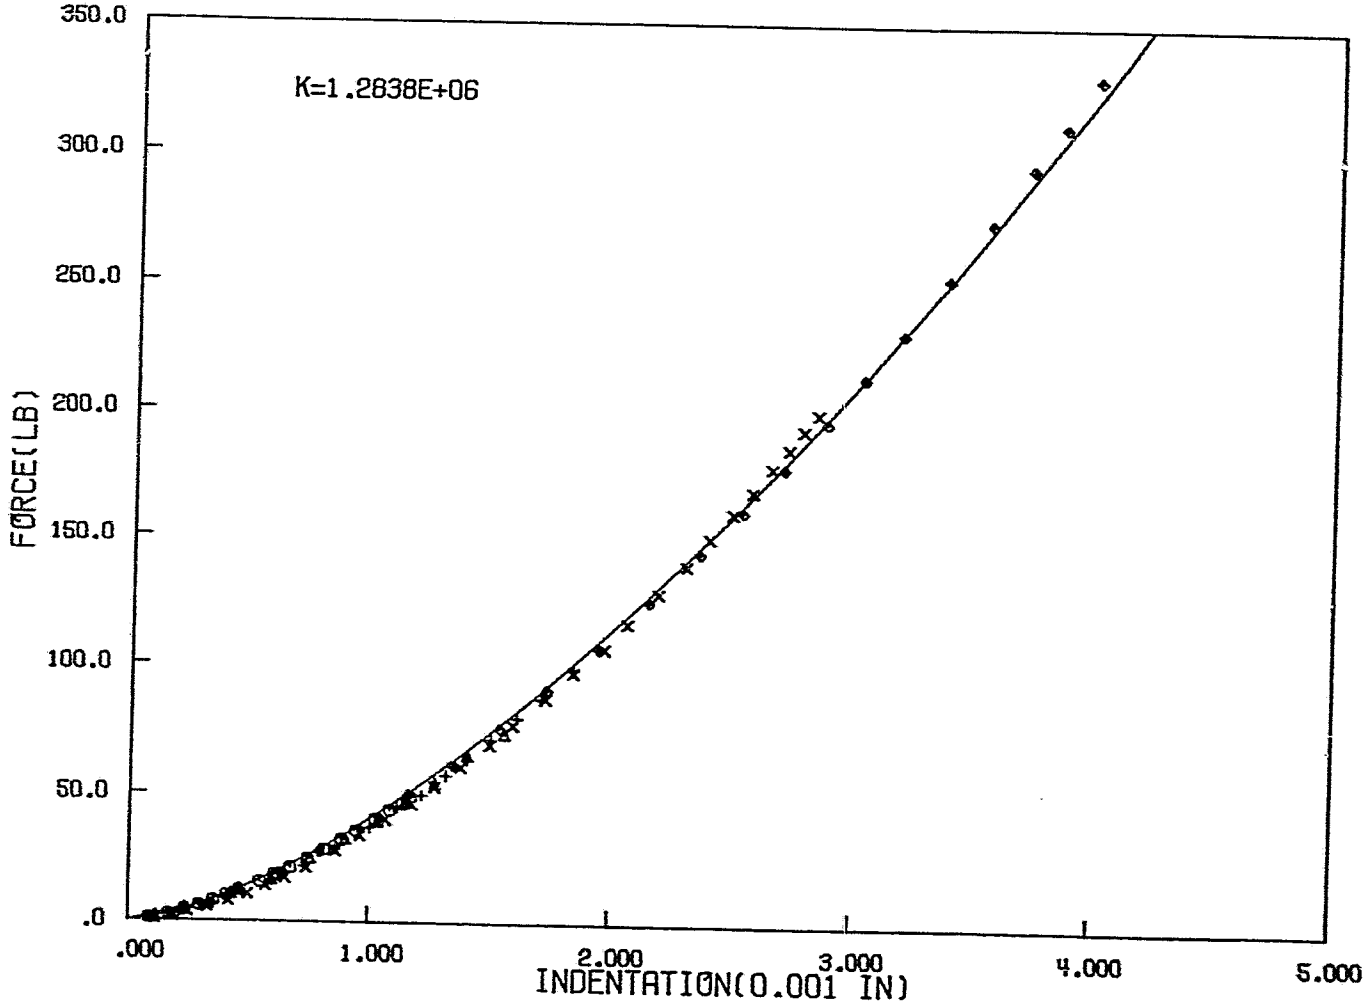

Figure 3.2 Loading curve of $[0°/45°/0°/-45°/0°]_{2s}$ specimens with 0.5 inch indenter (n=3/2)

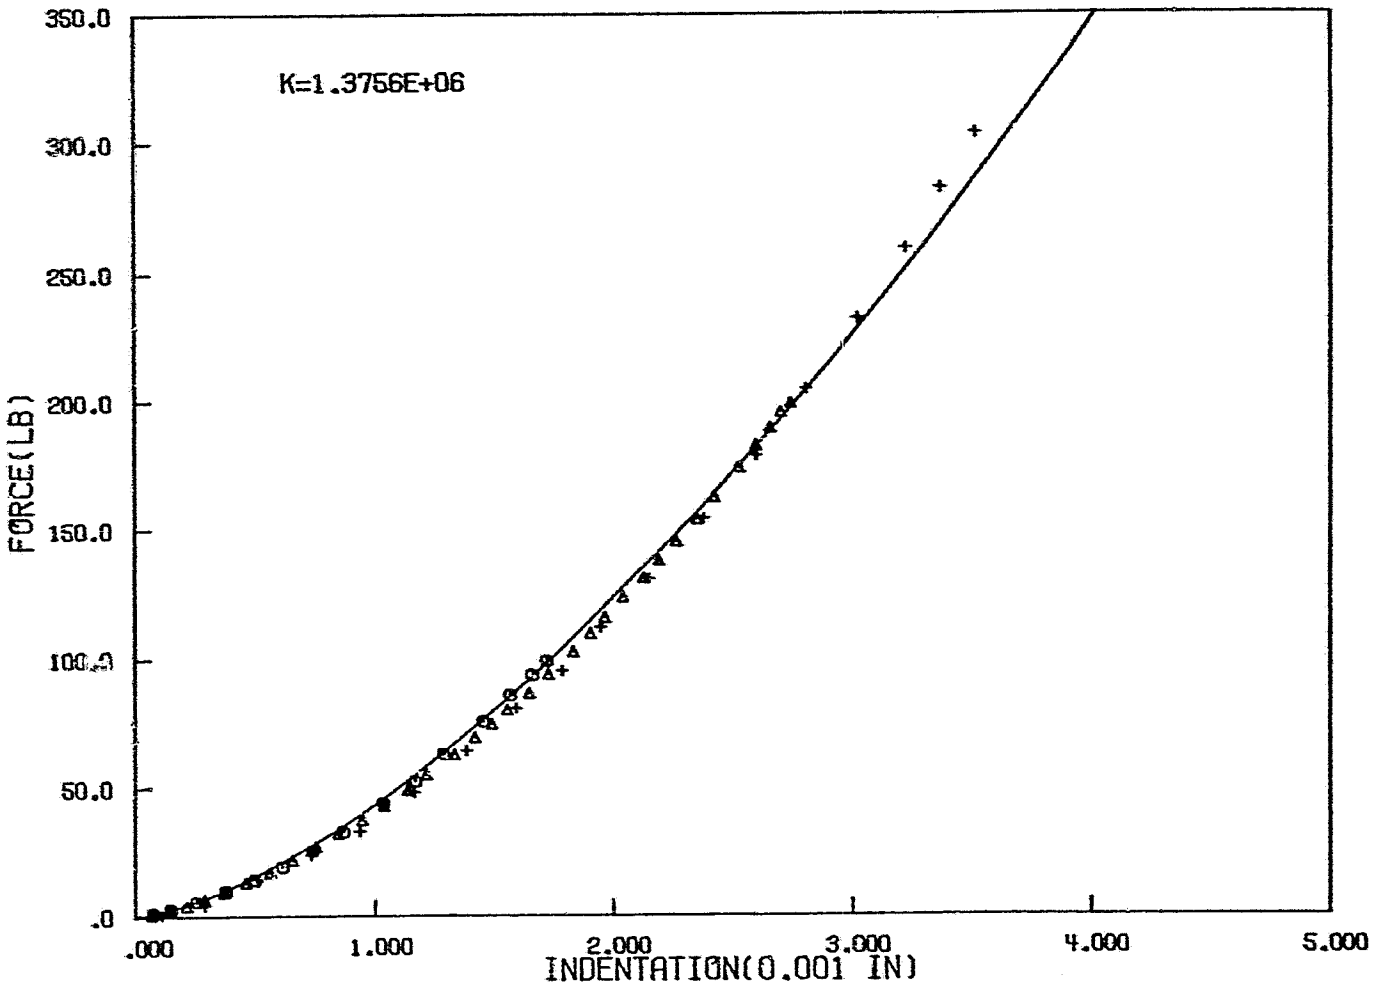

Figure 3.3 Loading curve of $[90°/45°/90°/-45°/90°]_{2s}$ specimens with 0.5 inch indenter (n=3/2)

smaller comparing with the first group of specimens. Consequently, the higher value of k for the $[90^0/45^0/90^0/-45^0/90^0]_{2s}$ specimens is reasonable.

The results for 0.75 in. diameter indenter are presented in Figures 3.4 and 3.5. Again, good agreement between the experimental data and fitted curves indicates that the 3/2 power index for loading law is valid. The values of k for both indenters are summarized in Table 3.1. It should be noted that the average value of k obtained from the two groups of specimens was used later in a finite element analysis of impact responses.

3.2.2 Unloading Curves

By choosing a suitable value for q, it can be seen from Equation (3-5) that once the relation between α_0 and α_m is established, the unloading rigidity s is then determined. Test results show that the permanent indentations α_0 and the corresponding maximum indentations α_m exhibit a rather linear relationship. The equation given by

$$\alpha_0 = s_p \ (\alpha_m - \alpha_p) \qquad (3\text{-}8)$$

is obtained from the test data for both 0.5 in. and 0.75 in. indenters using least-squares fitting method, and are plotted in Figure 3.6. In Equation (3-8), α_p can be considered as a critical value of indentation. Once the amount of indentation exceeds α_p, permanent deformation will occur.

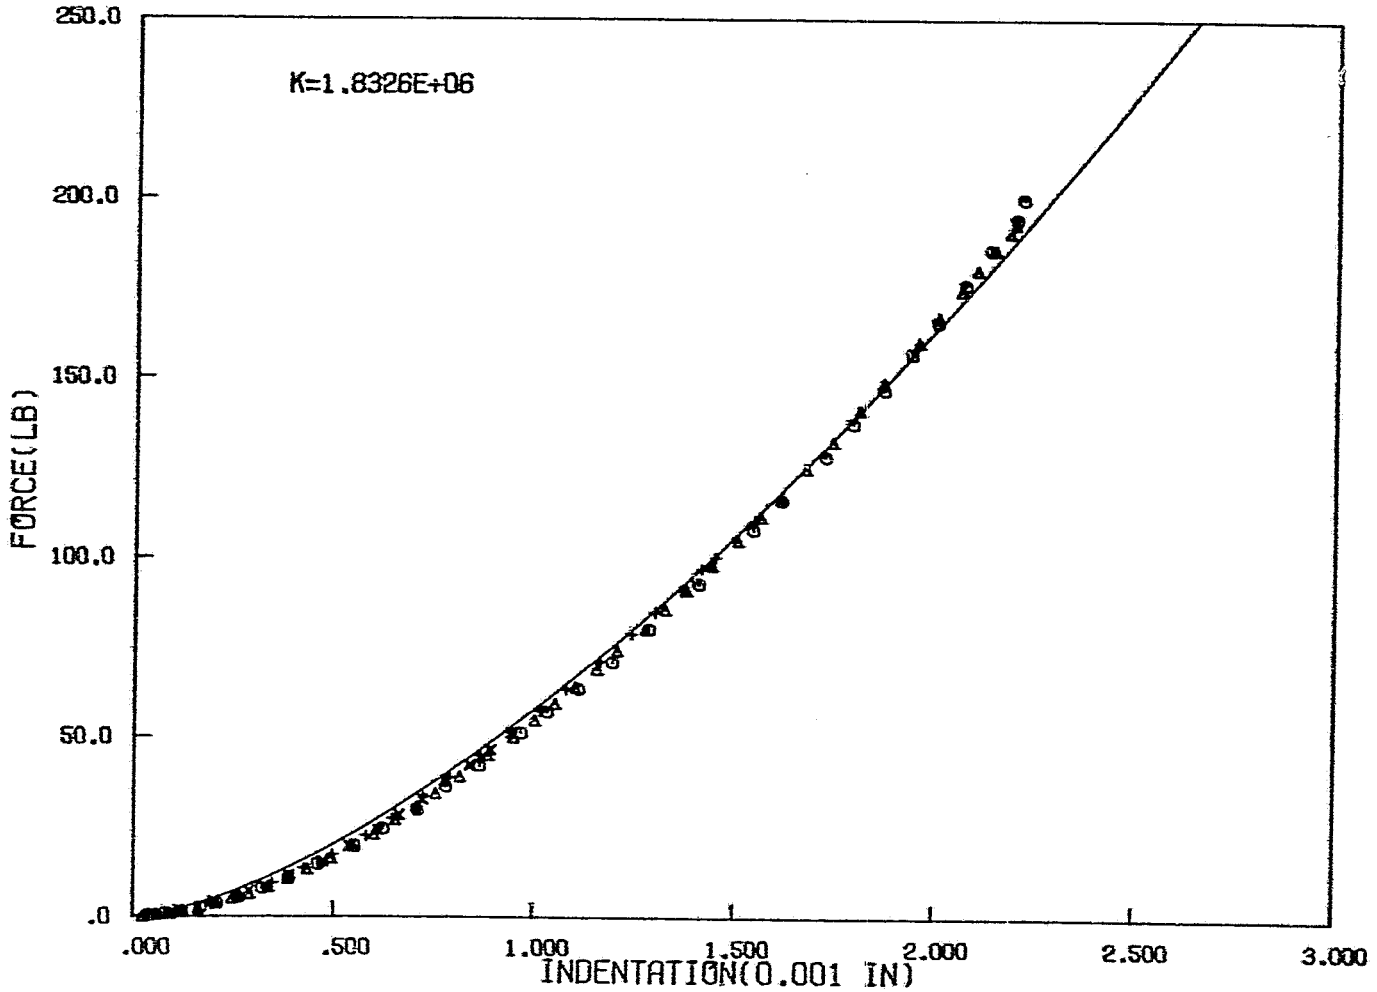

Figure 3.4 Loading curve of $[0°/45°/0°/-45°/0°]_{2s}$ specimens with 0.75 inch indenter (n=3/2)

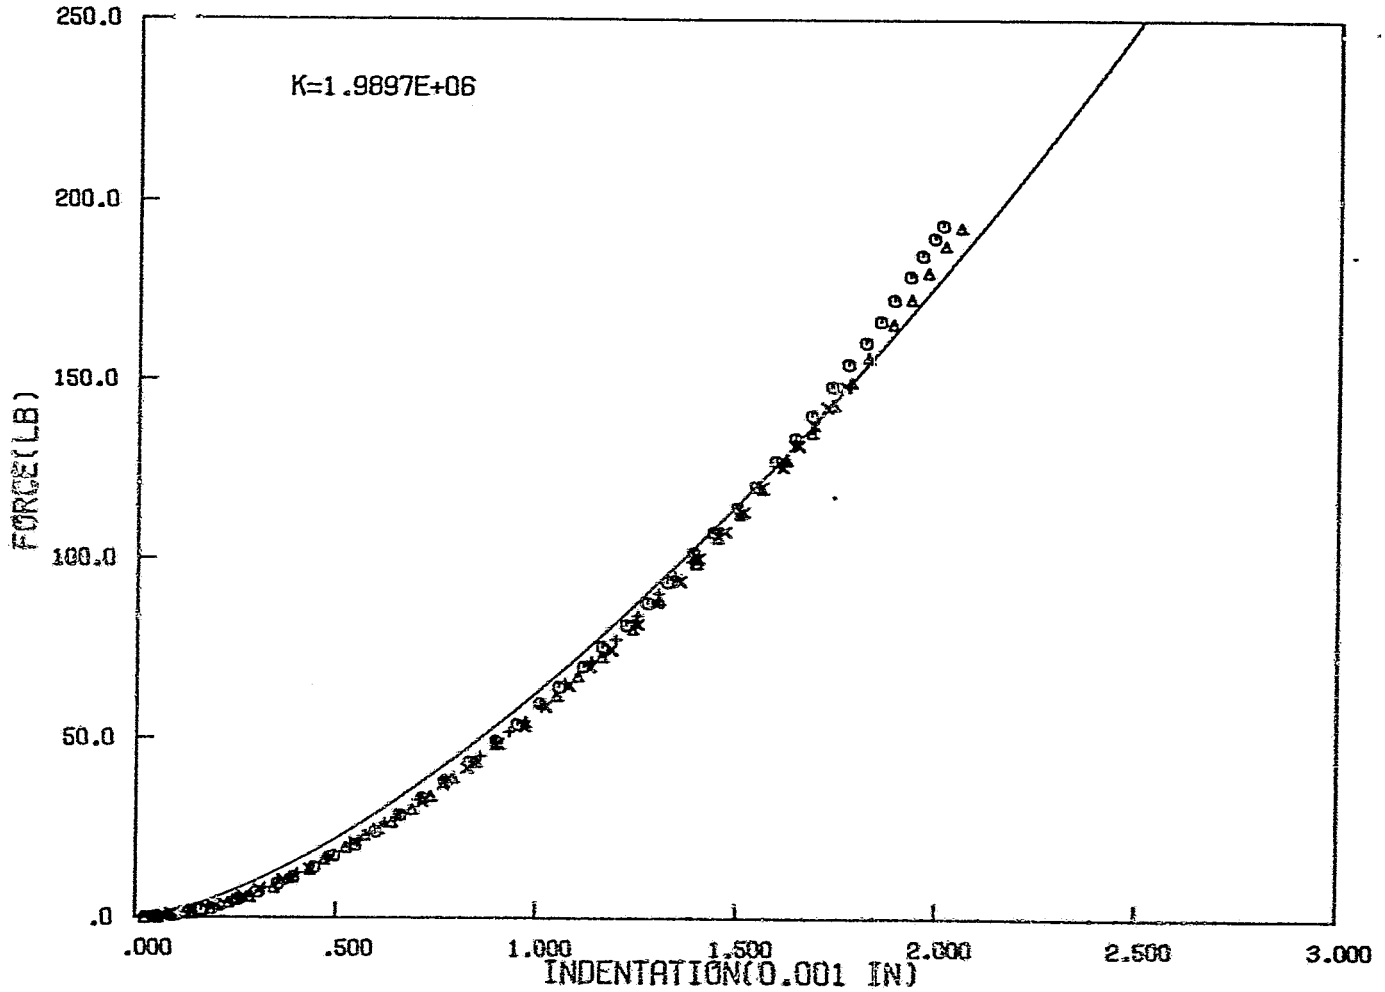

Figure 3.5 Loading curve of $[90°/45°/90°/-45°/90°]_{2s}$ specimens with 0.75 inch indenter (n=3/2)

Table 3.1
Contact coefficient k of loading law $F = k\alpha^{1.5}$

Size of Indenter(in)	0.5		0.75	
Specimen	Group 1+	Group 2‡	Group 1+	Group 2‡
k(lb/in$^{1.5}$)	1.284×10^{6}	1.376×10^{6}	1.833×10^{6}	1.990×10^{6}
Average k	1.330×10^{6}		1.912×10^{6}	
Ref.[14]	9.694×10^{5}			

+ $[0^{\circ}/45^{\circ}/0^{\circ}/-45^{\circ}/0^{\circ}]_{2s}$ specimens
‡ $[90^{\circ}/45^{\circ}/90^{\circ}/-45^{\circ}/90^{\circ}]_{2s}$ specimens

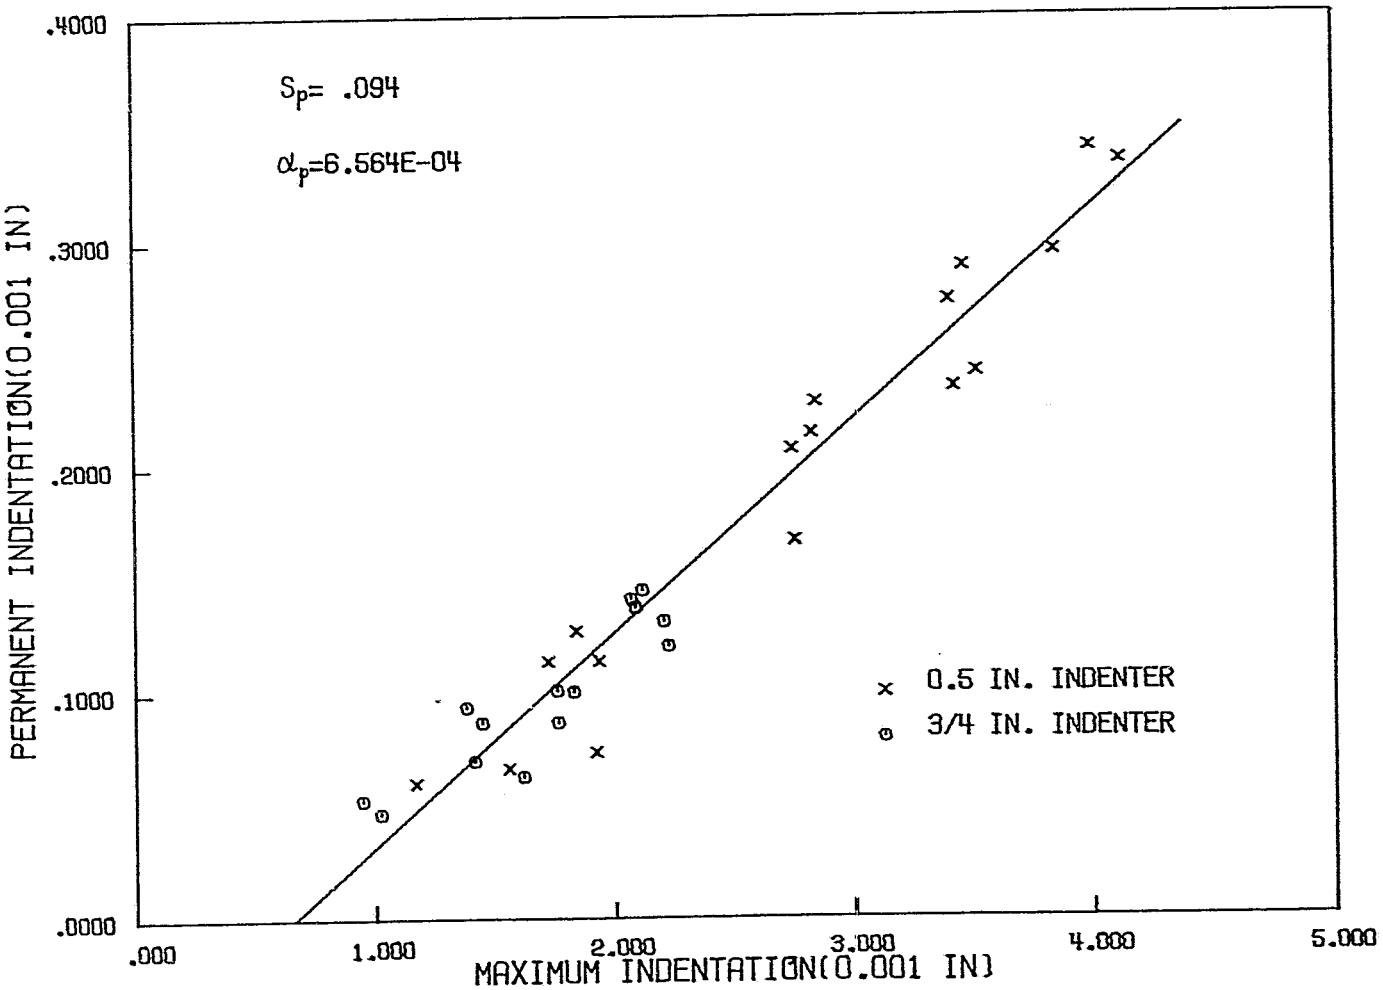

Figure 3.6 Relation between permanent indentation and maximum indentation

Substitution of Equation (3-8) and (3-1) into Equation (3-5) yields

$$s = \frac{k\alpha_m^{3/2}}{[(1 - s_p)\alpha_m + s_p\alpha_p]^q} \qquad \text{If } \alpha_m \geq \alpha_p \qquad (3\text{-}9)$$

$$s = \frac{k\alpha_m^{3/2}}{\alpha_m^q} \qquad \text{If } \alpha_m < \alpha_p \qquad (3\text{-}10)$$

These two equations along with Equation (3-4) are then used to fit the experimental unloading curves in finding the value of q.

Yang [14] has shown that q = 2.5 fits the test results for both 0.25 in. and 0.5 in. indenters quite well. In this study, however, the values of 2.2 and 1.8 were found to give the best fitting for 0.5 in. and 0.75 in. indenters, respectively using the aforementioned method (Figures 3.7-3.10). For convenience, q = 2.5 was used for 0.5 in. indenter while q = 2.0 was chosen for 3/4 in. indenter. The results of the curve-fitting are presented in Figures 3.11-3.14. Further discussions on the unloading law will be given in Section 3.3.

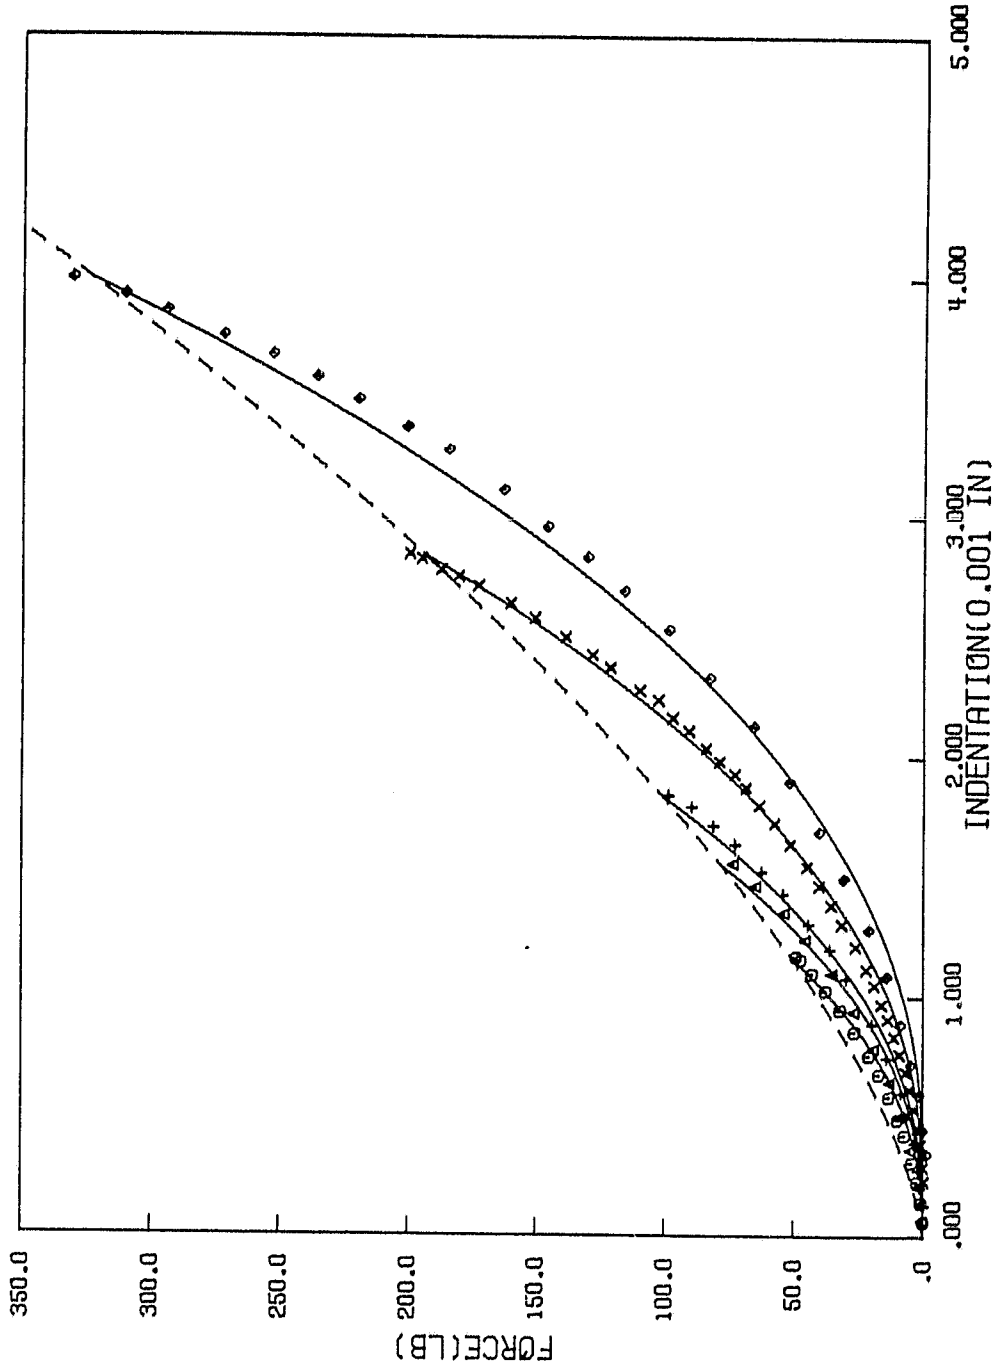

Figure 3.7 Unloading curves of $[0°/45°/0°/-45°/0°]_{2s}$ specimens with 0.5 inch indenter (q=2.2)

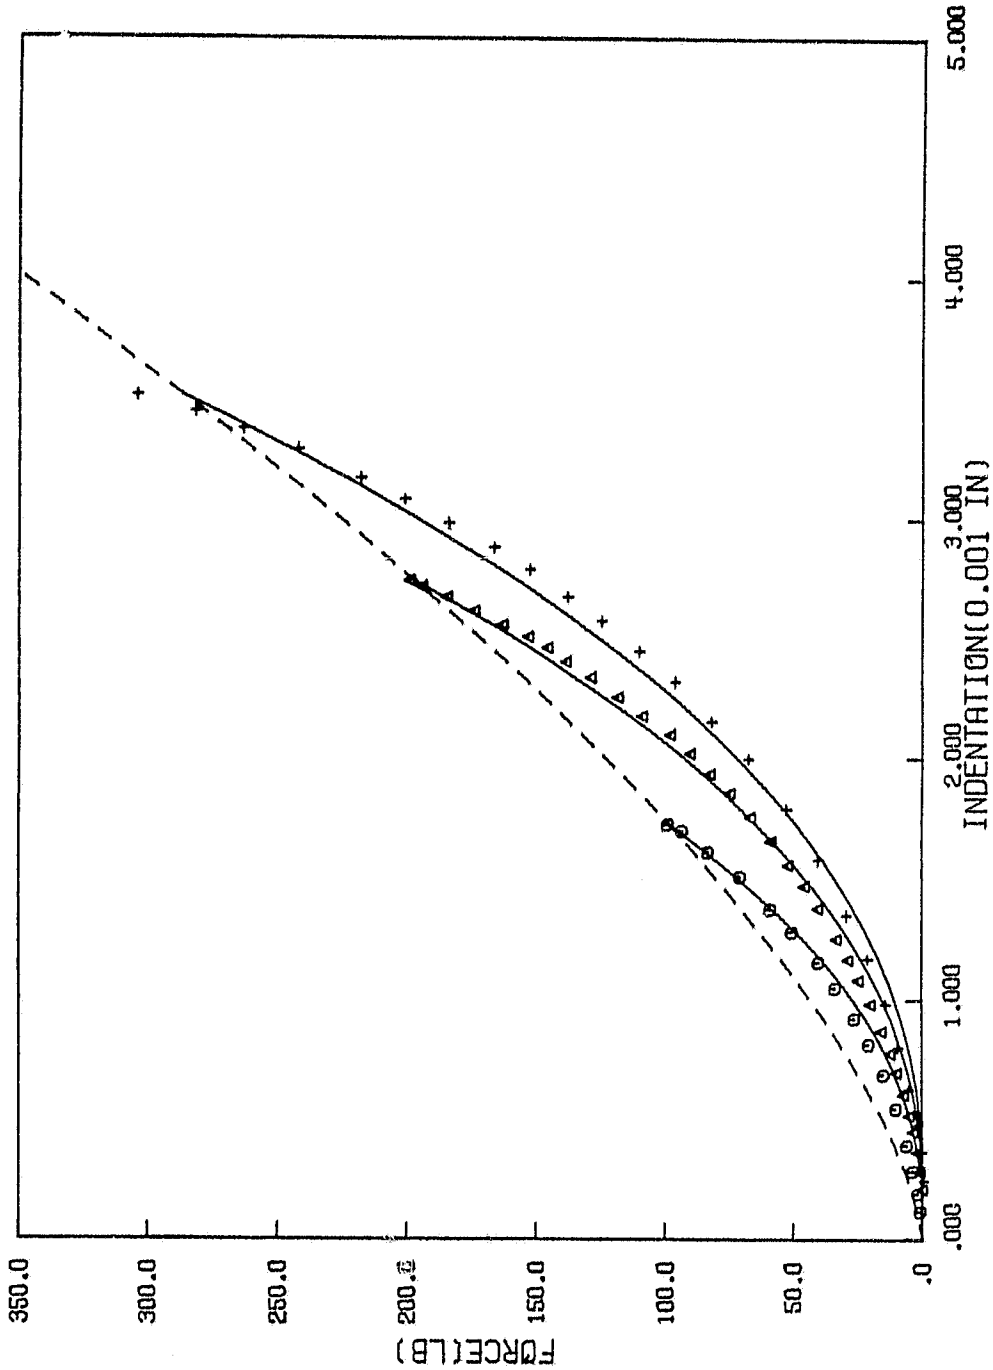

Figure 3.8 Unloading curves of $[90°/45°/90°/-45°/90°]_{2s}$ specimens with 0.5 inch indenter (q=2.2)

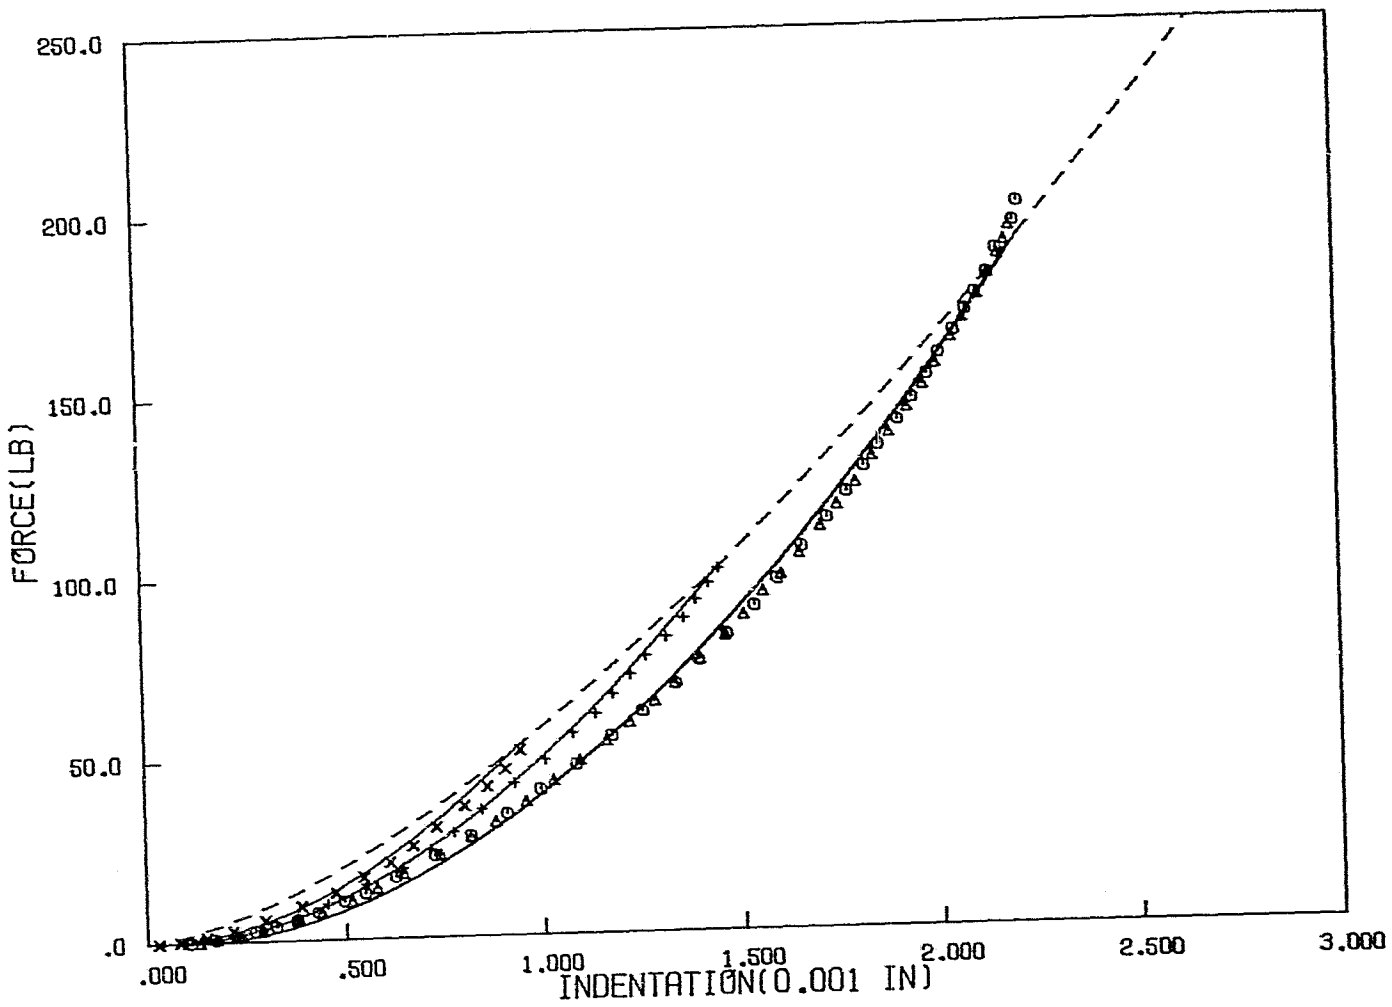

Figure 3.9 Unloading curves of $[0°/45°/0°/-45°/0°]_{2s}$ specimens with 0.75 inch indenter (q=1.8)

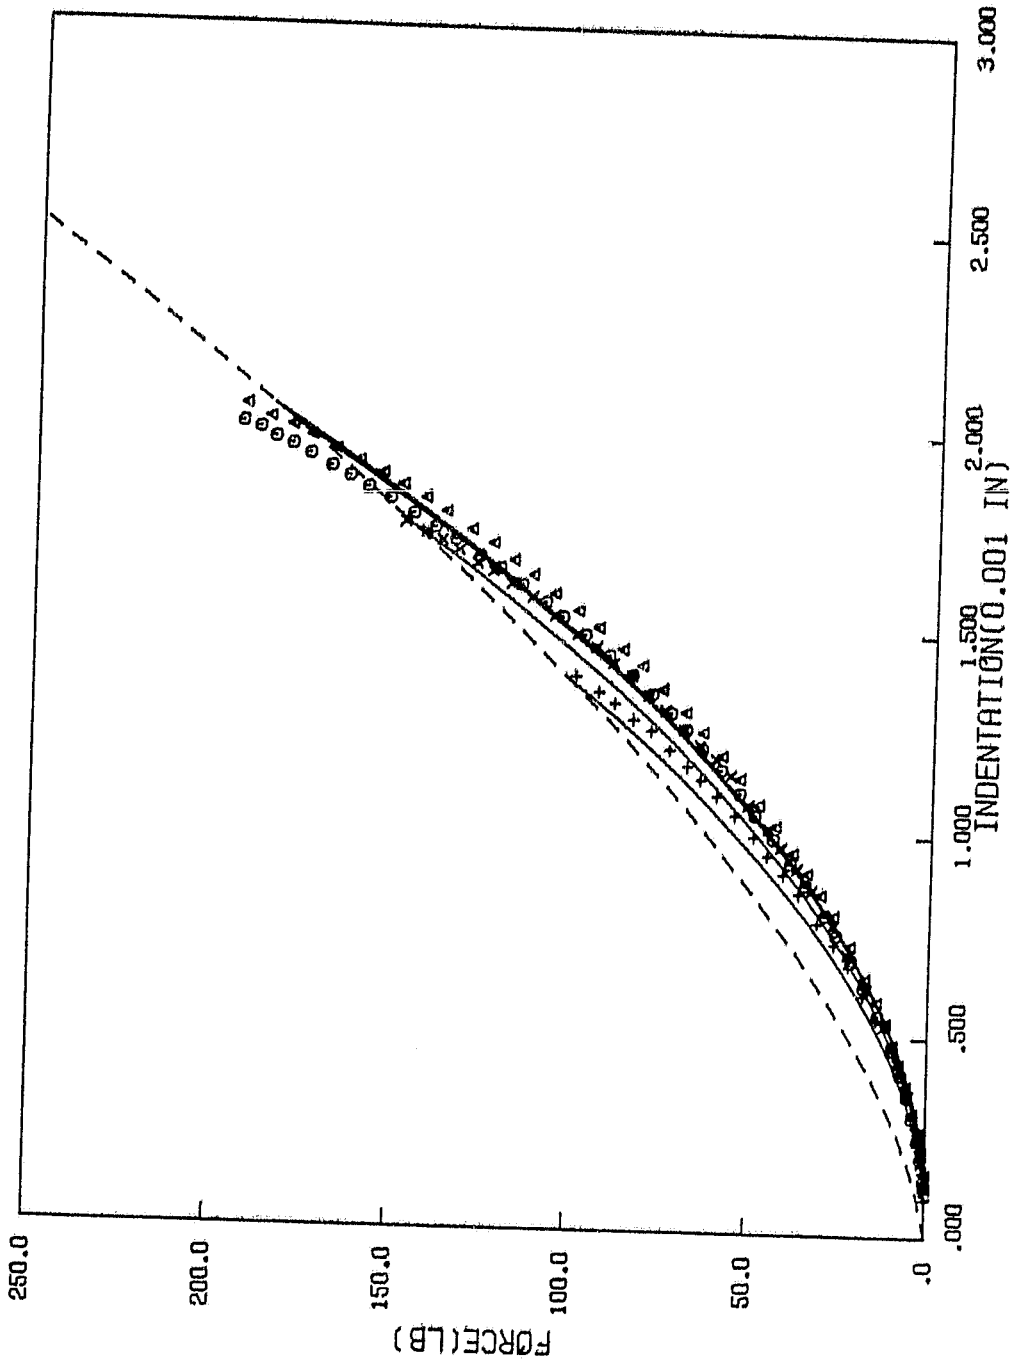

Figure 3.10 Unloading curves of $[90°/45°/90°/-45°/90°]_{2s}$ specimens with 0.75 inch indenter (q=1.8)

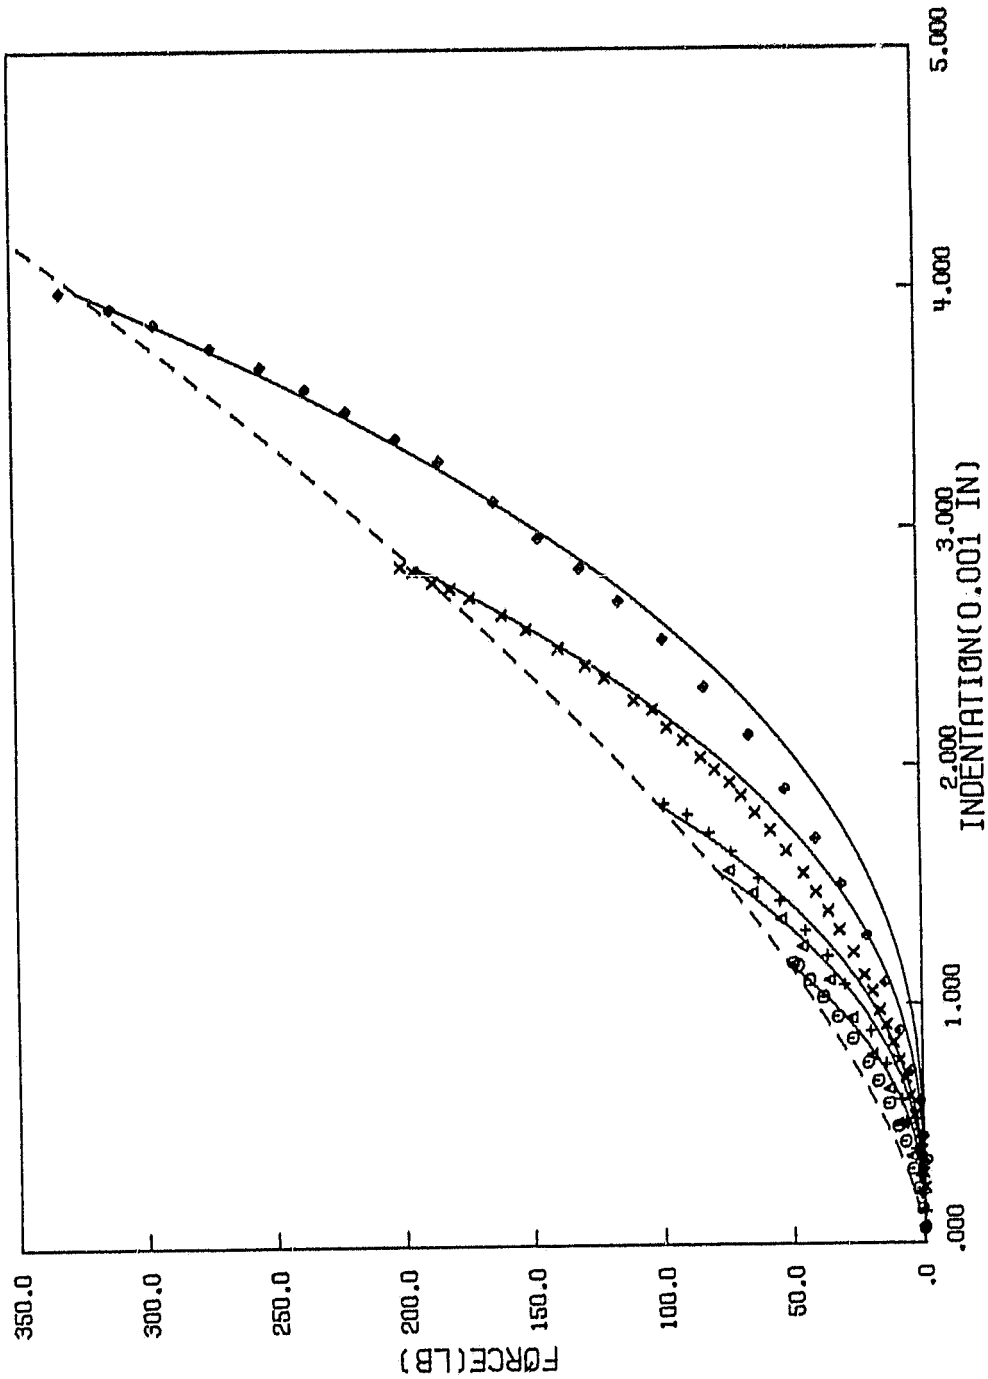

Figure 3.11 Unloading curves of $[0°/45°/0°/-45°/0°]_{2s}$ specimens with 0.5 inch indenter (q=2.5)

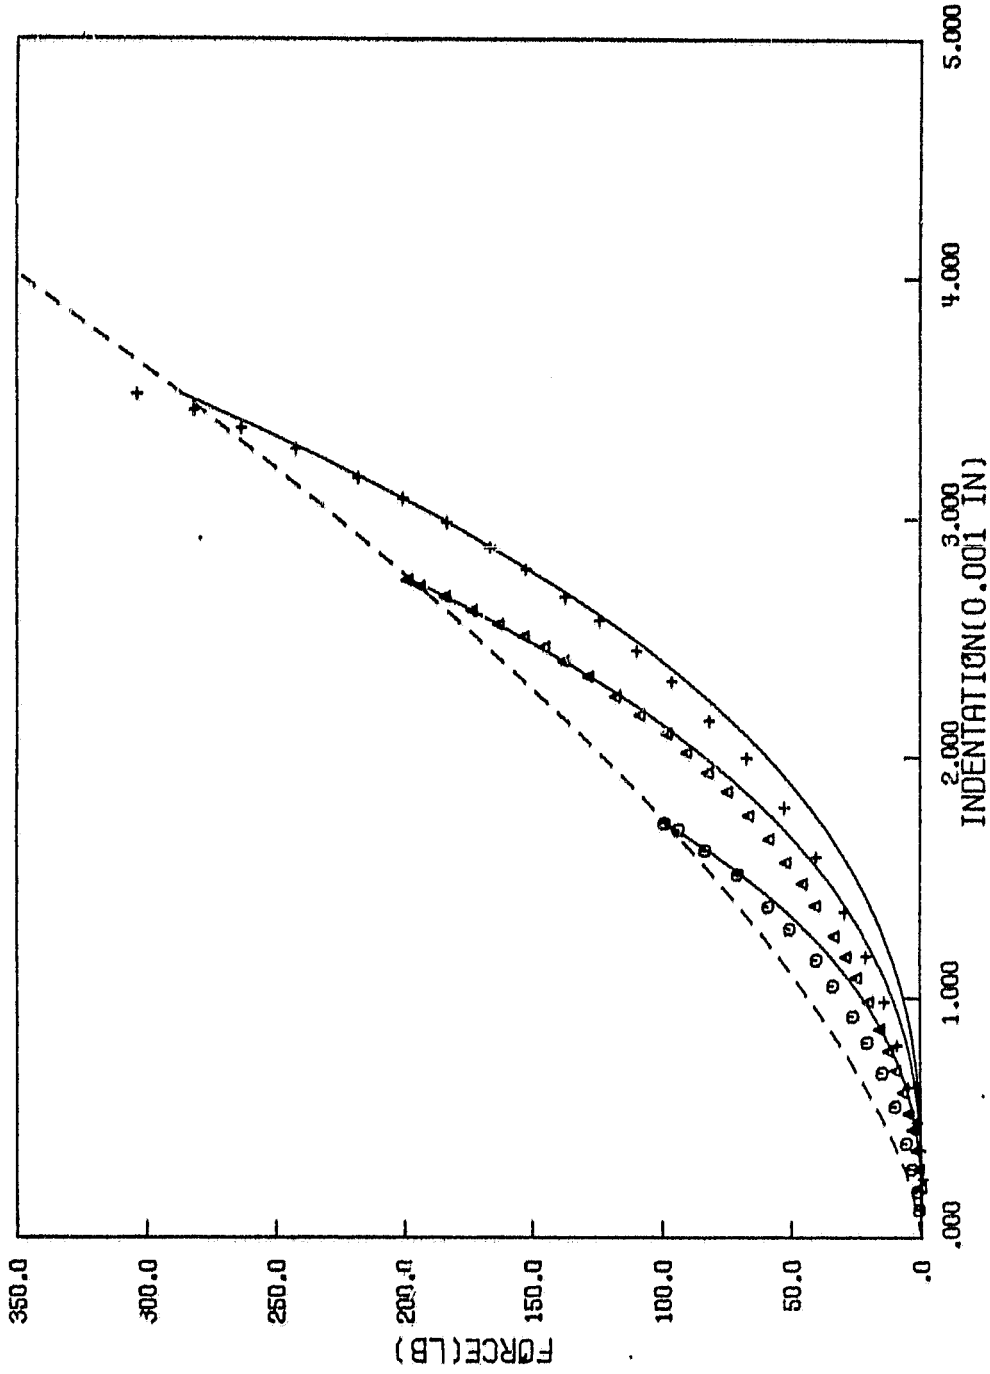

Figure 3.12 Unloading curves of $[90°/45°/90°/-45°/90°]_{2s}$ specimens with 0.5 inch indenter (q=2.5)

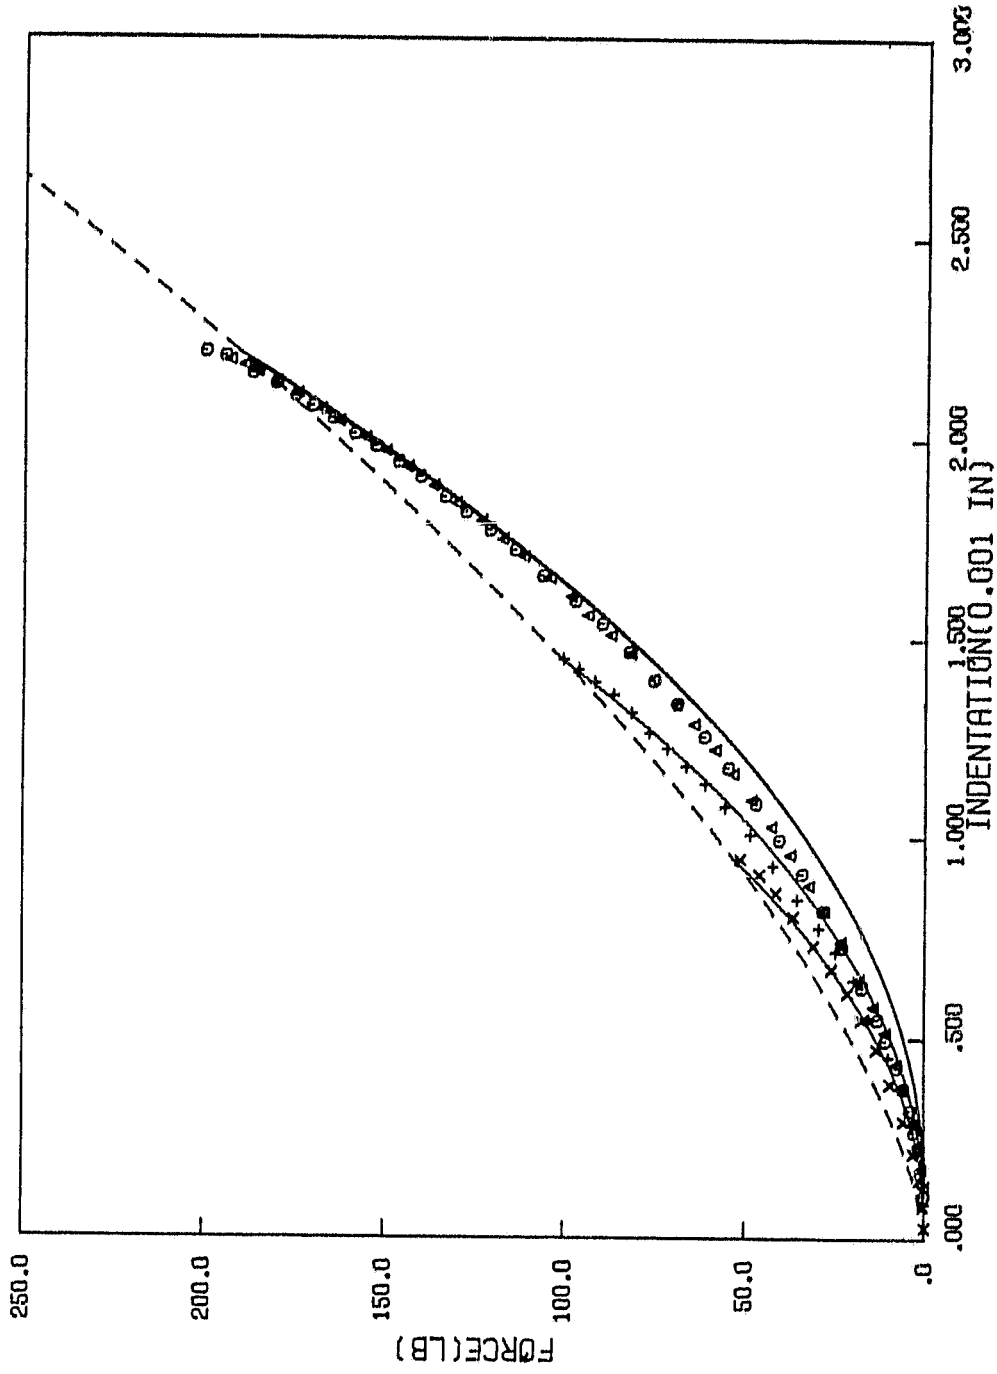

Figure 3.13 Unloading curves of $[0°/45°/0°/-45°/0°]_{2s}$ specimens with 0.75 inch indenter (q=2.0)

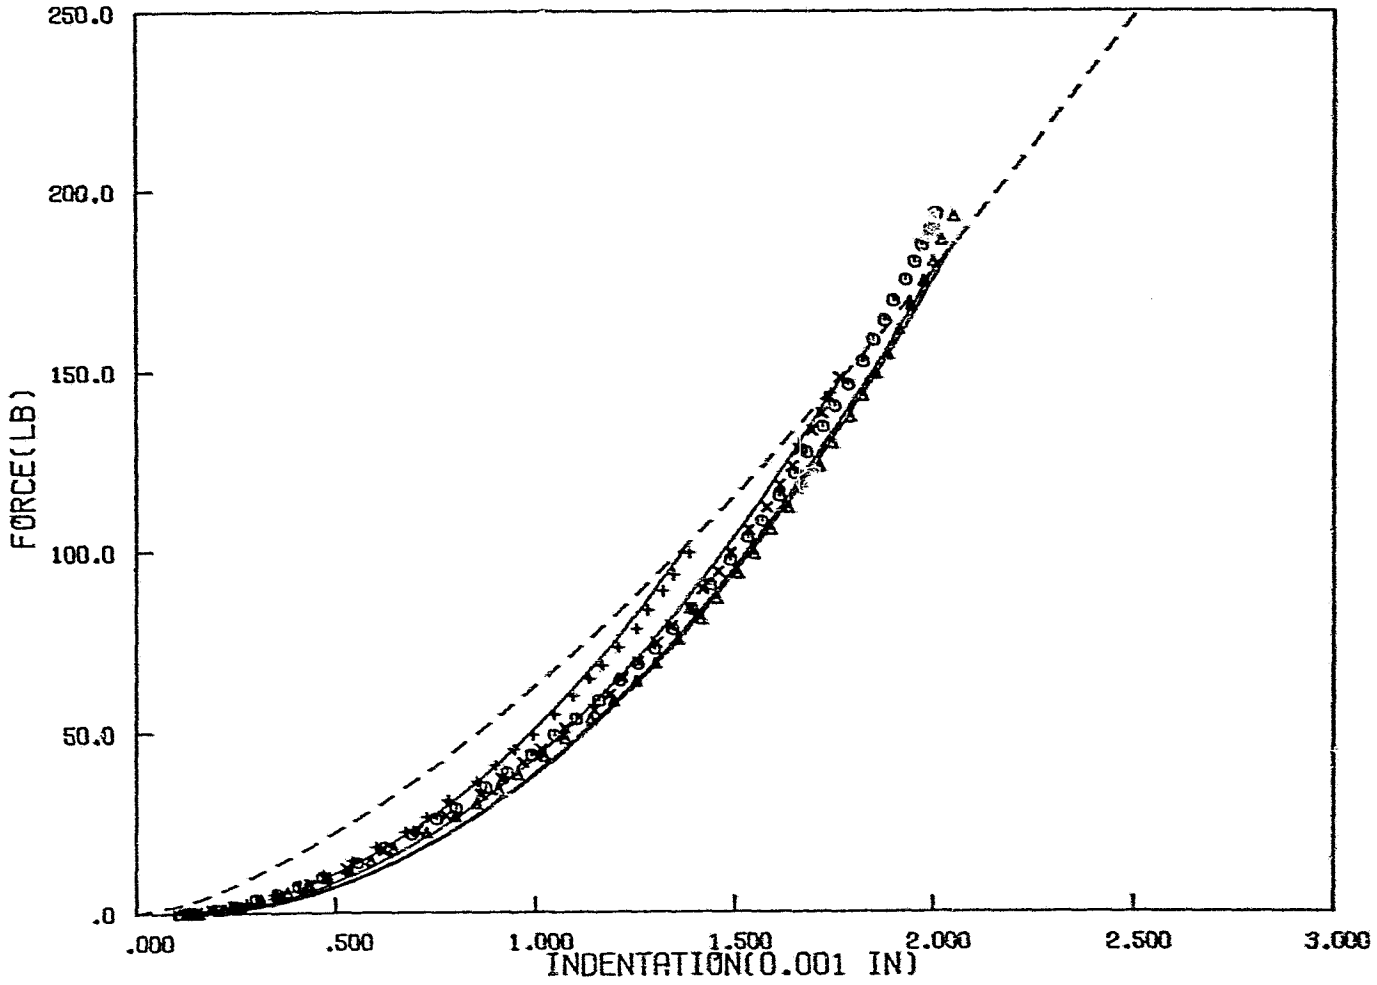

Figure 3.14 Unloading curves of $[90°/45°/90°/-45°/90°]_{2s}$ specimens with 0.75 inch indenter (q=2.0)

3.2.3 Reloading Curves

The equation

$$F = k_1 (\alpha - \alpha_0)^p \qquad (3\text{-}11)$$

suggested by Yang [14] was used to model the reloading curve, where k_1 is called reloading rigidity and $p = 3/2$ was found to fit the experimental data quite well. It was also observed that the reloading curve always returns to where the unloading began, and hence the reloading rigidity can be determined by

$$k_1 = F_m/(\alpha_m - \alpha_0)^{3/2} \qquad (3\text{-}12)$$

In other words, the reloading test is not necessary provided the unloading condition is specified. Some reloading curves obtained following Equations (3-11) and (3-12), and the experimental data are presented in Figures 3.15-3.18.

3.3 Discussion

As mentioned before, due to creep the loading rate may affect the contact law (i.e. the value of k). A series of tests with different loading rates was performed to examine this point. The maximum loading rate the test equipment can apply without exceeding it's capacity is about 50 lb/sec.. It was found that in the range of 5 lb/sec. to 50 lb/sec., the values of k showed very little scatter, and the effect

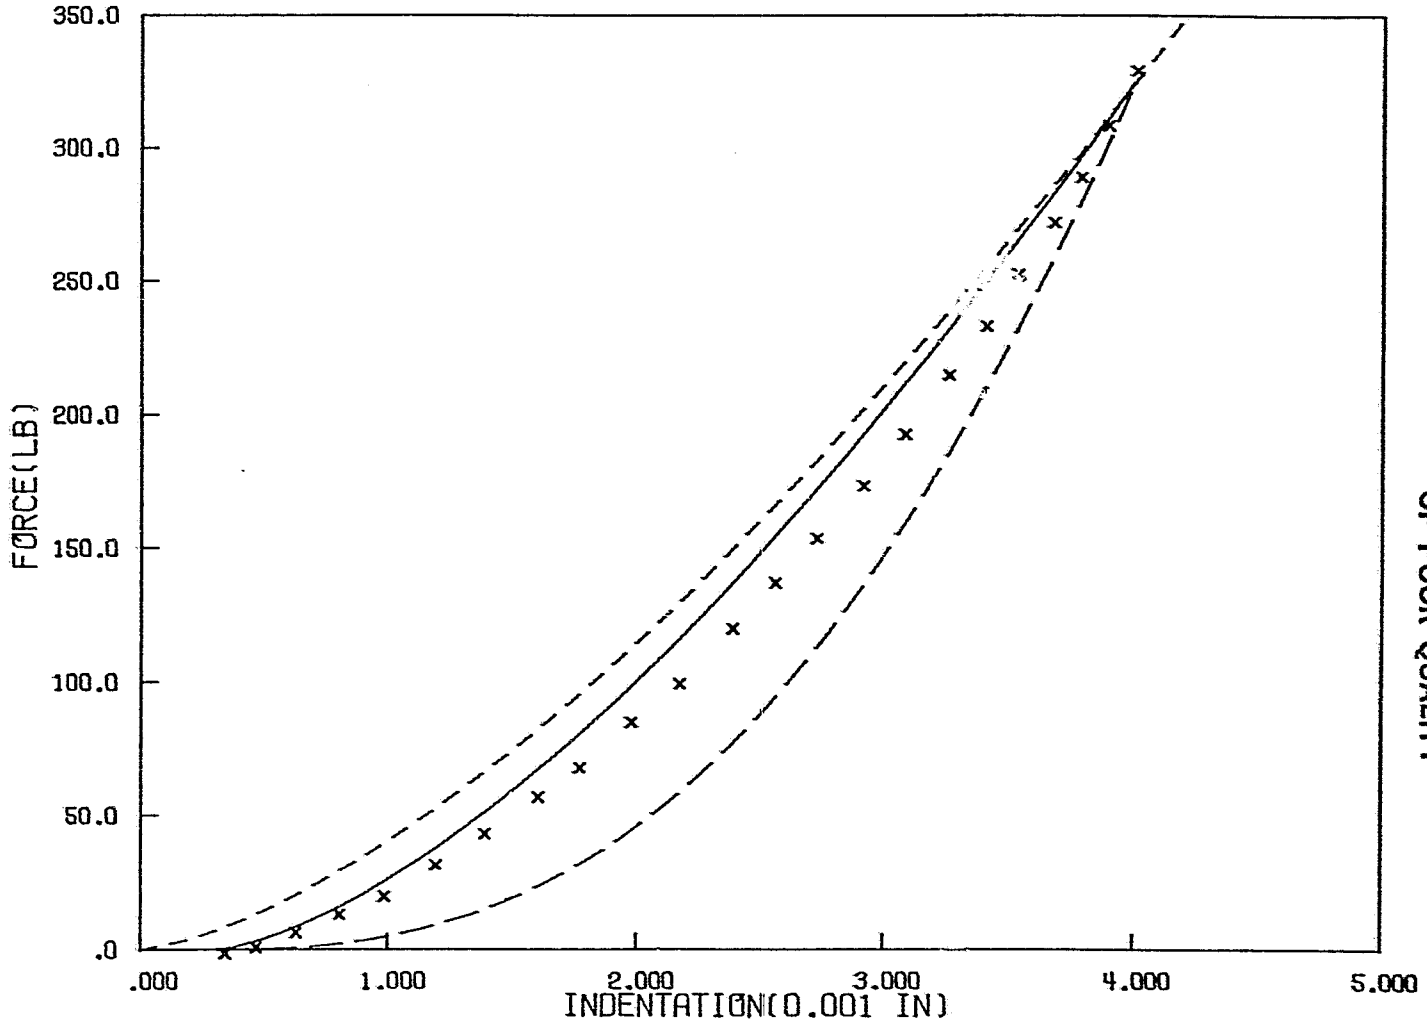

Figure 3.15 Reloading curve of $[0°/45°/0°/-45°/0°]_{2s}$ specimens with 0.5 inch indenter (p=1.5)

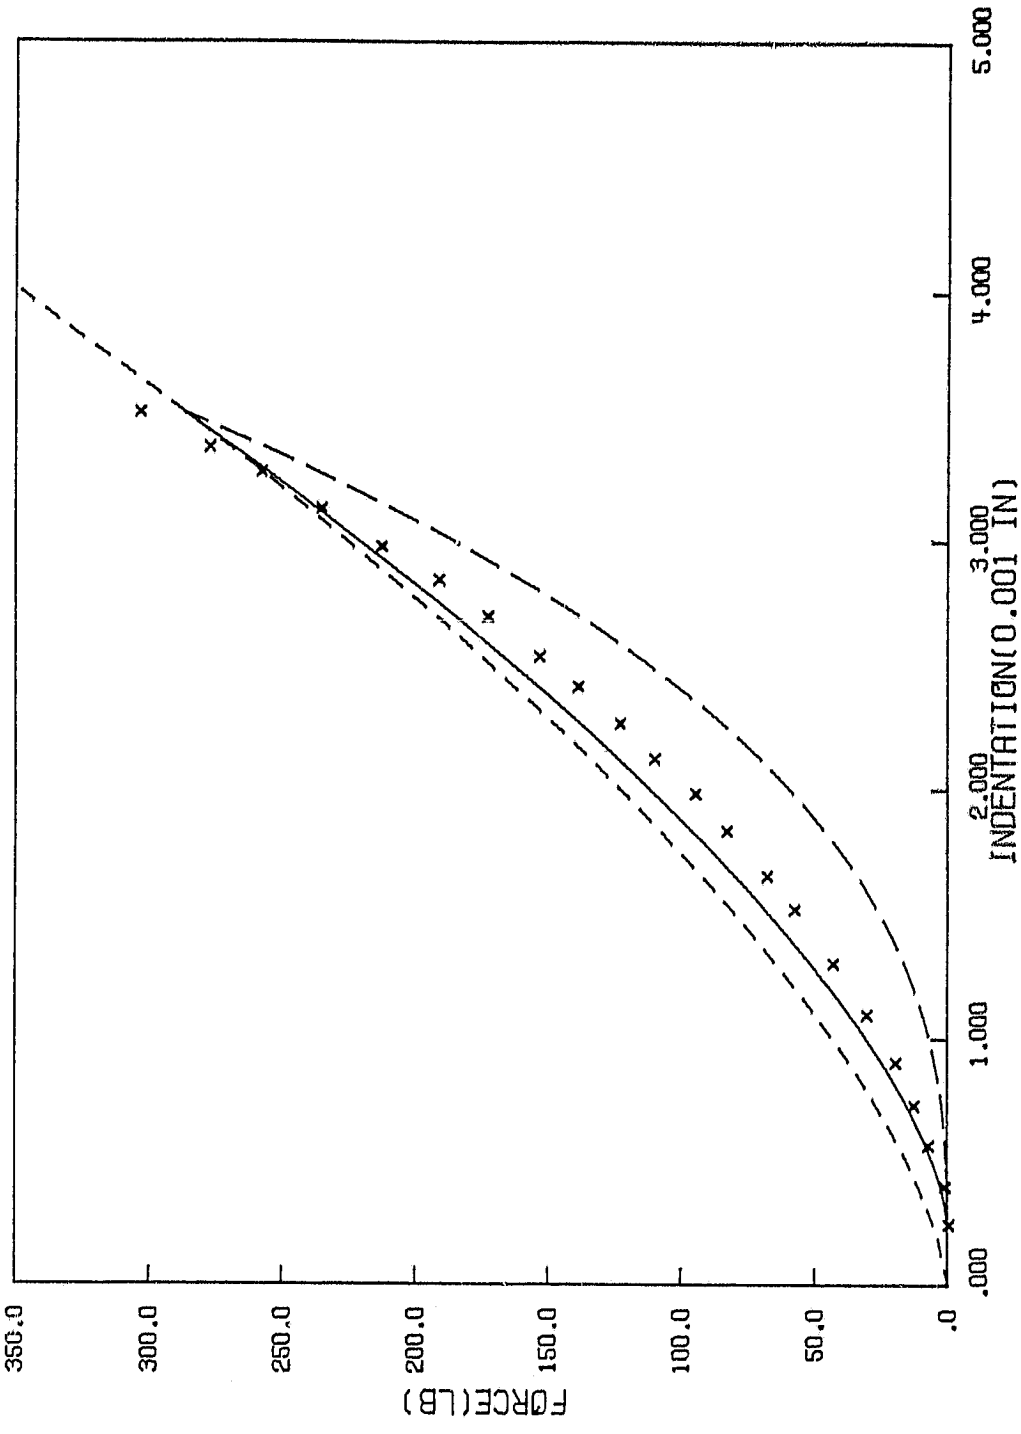

Figure 3.16 Reloading curve of $[90°/45°/90°/-45°/90°]_{2s}$ specimens with 0.5 inch indenter (p=1.5)

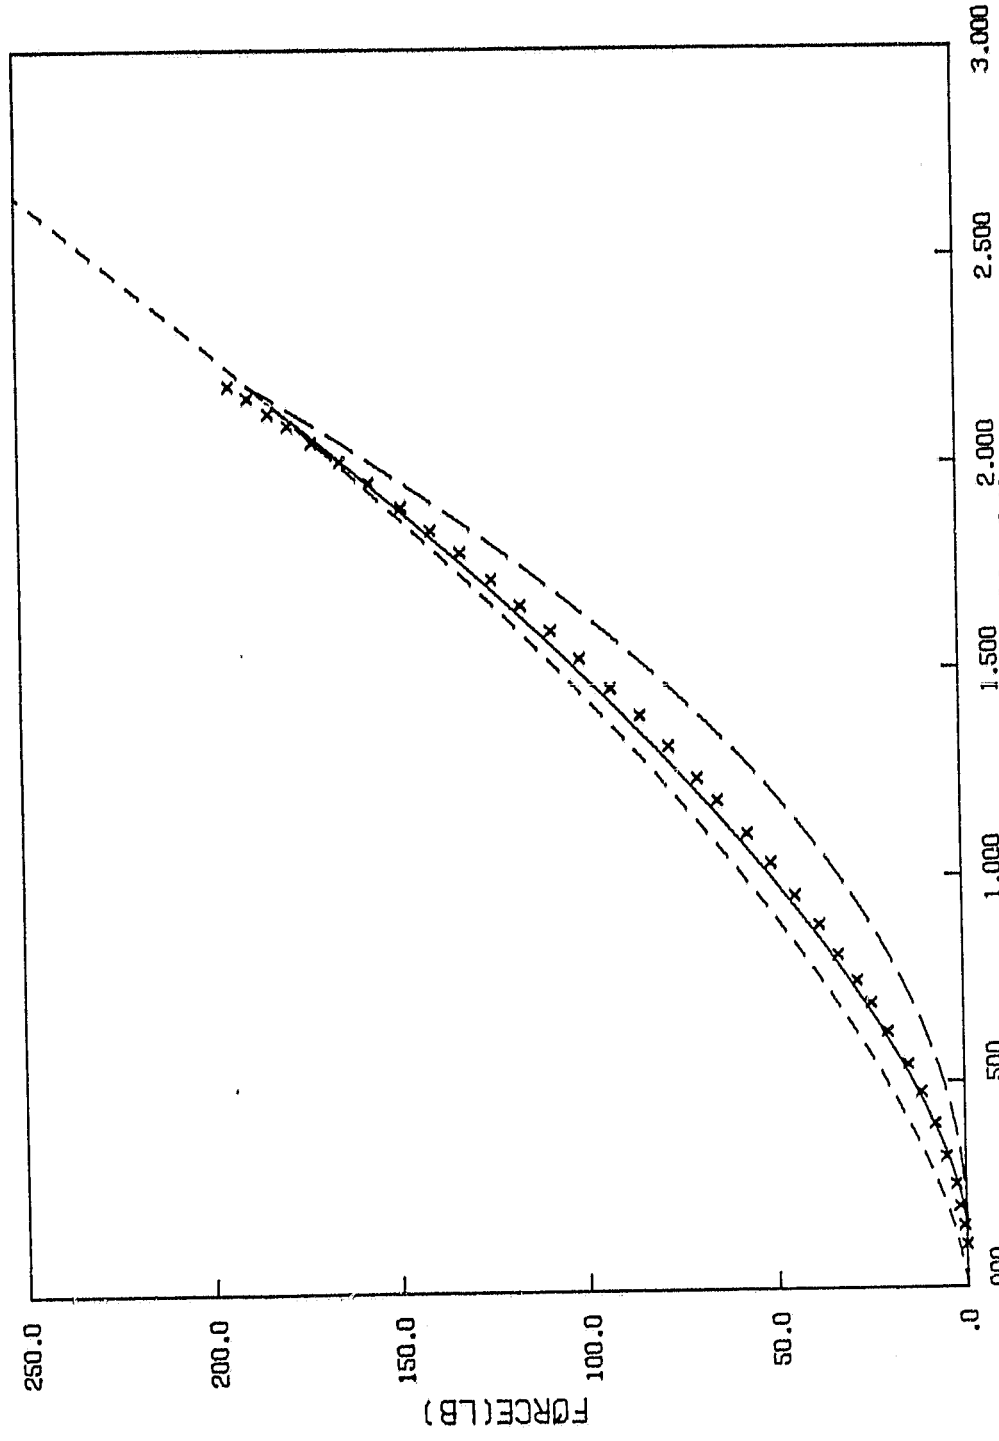

Figure 3.17 Reloading curve of $[0°/45°/0°/-45°/0°]_{2s}$ specimens with 0.75 inch indenter (p=1.5)

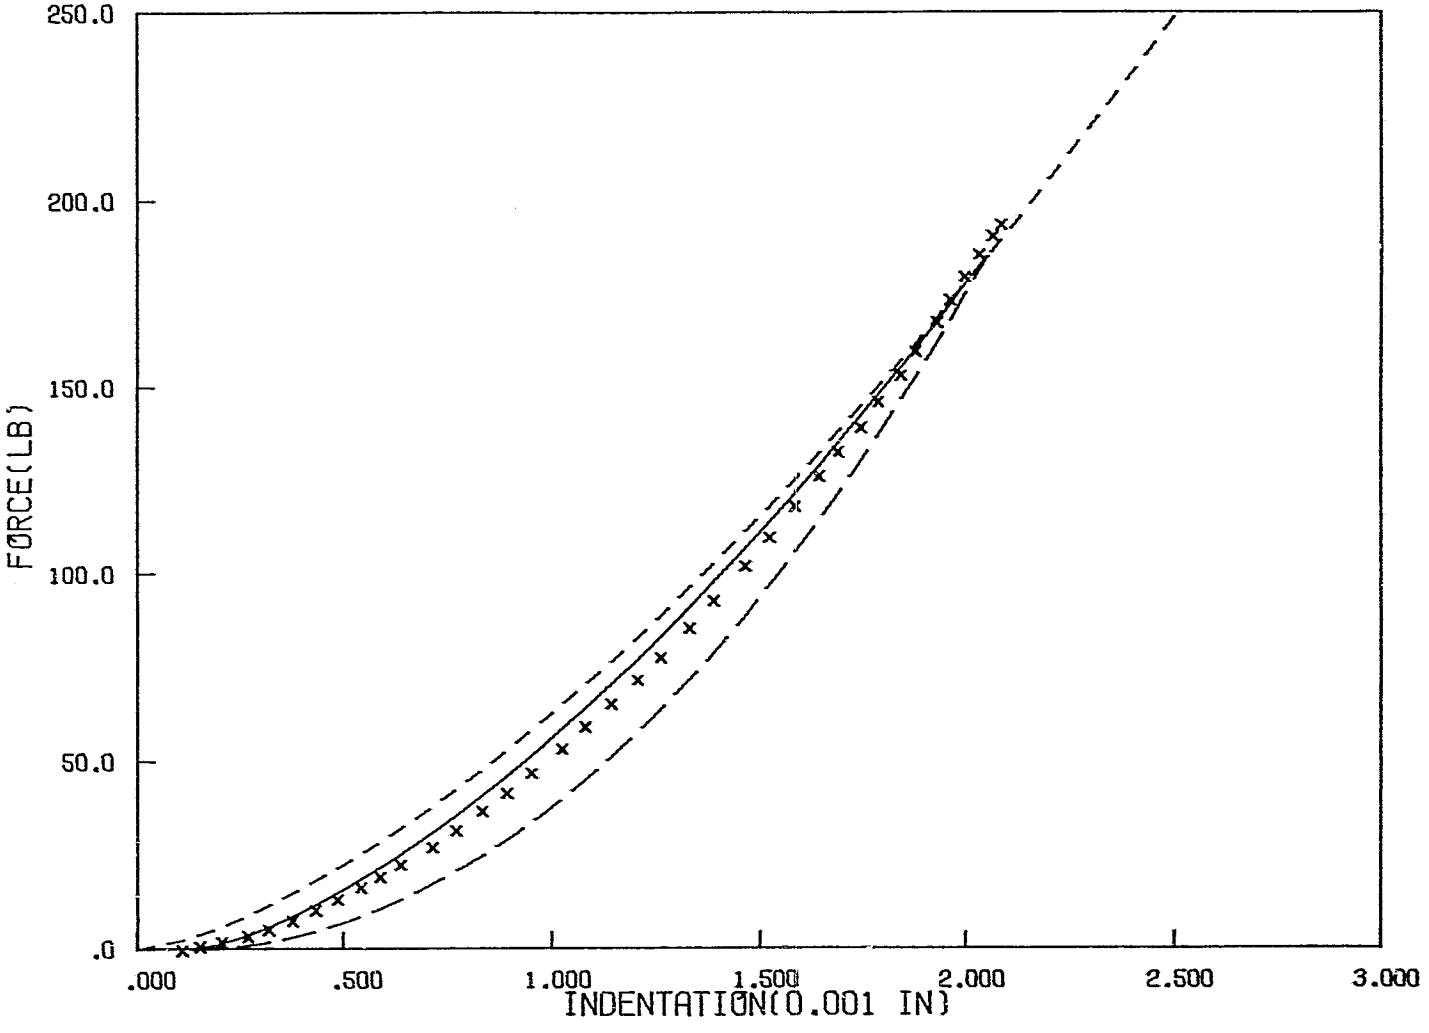

Figure 3.18 Reloading curve of $[90^{\circ}/45^{\circ}/90^{\circ}/-45^{\circ}/90^{\circ}]_{2s}$ specimens with 0.75 inch indenter (p=1.5)

due to local material nonhomogeneity in the composite may be even greater than the one due to the loading rate. However, an appreciable decrease of the value k was observed when the loading rate was lower than 1 lb/sec.. In some extreme cases where loadings were applied as slow as 10 lb/min., the average value of k for 0.5 in. indenter was very close to the one obtained previously by Yang [14] using dial gage to measure the indentation. In this study, the loading rates for all tests were approximately equal to 10 lb/sec..

Unlike the exponent n of the loading law for which the value of 3/2 seems to yield good agreement with all experimental data, the exponent q of the unloading law (Equation 3-3 or 3-4) reveals much wider deviation for different sizes of indenter. Value of q = 3/2 corresponding to an elastic recovery according to the Hertzian theory was previously used by Crook [28] in a study of impacts between metal bodies. The experimental results from [14] and present study show that the value of q varies from 1.5 to 2.5. Local plastic deformation, anisotropic properties of composite material and unloading rate are all possible causes for this deviation. Obviously, an analytical study to determine the value of q as function of aforementioned factors is impracticable. Since the purpose of this study is to establish a contact law that can be used in the analysis of impact, the validity of this law must be verified from impact experiment. This will be investigated

in the next chapter.

From Equation (3-3) or (3-4), it can be seen that α_0 plays an essential role in the unloading law and hence the value of it must be estimated accurately. Both of Equation (3-7) used by Yang [14] and Equation (3-8) used in this study for calculating α_0 were obtained experimentally, in which α_{cr} and α_p are considered to be material constants and were determined using α_0 and α_m from test data. However, it was pointed out in [14] that the values of α_0 might not be the true permanent indentations. They were the values which could make the power law given by Equation (3-4) fit the total data under the unloading path. In fact, the load corresponding to the value of $\alpha_{cr} = 3.16\times10^{-3}$ in. obtained in [14] is about 200 lb. for 0.5 in. indenter, which is apparently too high. The value of $\alpha_p = 6.564\times10^{-4}$ in. obtained in this study, which corresponds to about 20 lb of loading, seems more reasonable as a critical value in indentation. For comparison, the relations between unloading rigidity s and maximum indentation α_m using Equation (3-7) with $\alpha_{cr} = 3.16\times10^{-3}$ in. and Equation (3-8) with $\alpha_p = 6.564\times10^{-4}$ in., respectively, are plotted in Figure 3.19. It is interesting to see that these two equations give almost the same values of s up to $\alpha_m = 4\times10^{-3}$ in. which is approximately the maximum indentation before failure could occur to the specimen. The advantage of using Equation (3-7) for the formulation of the unloading law is

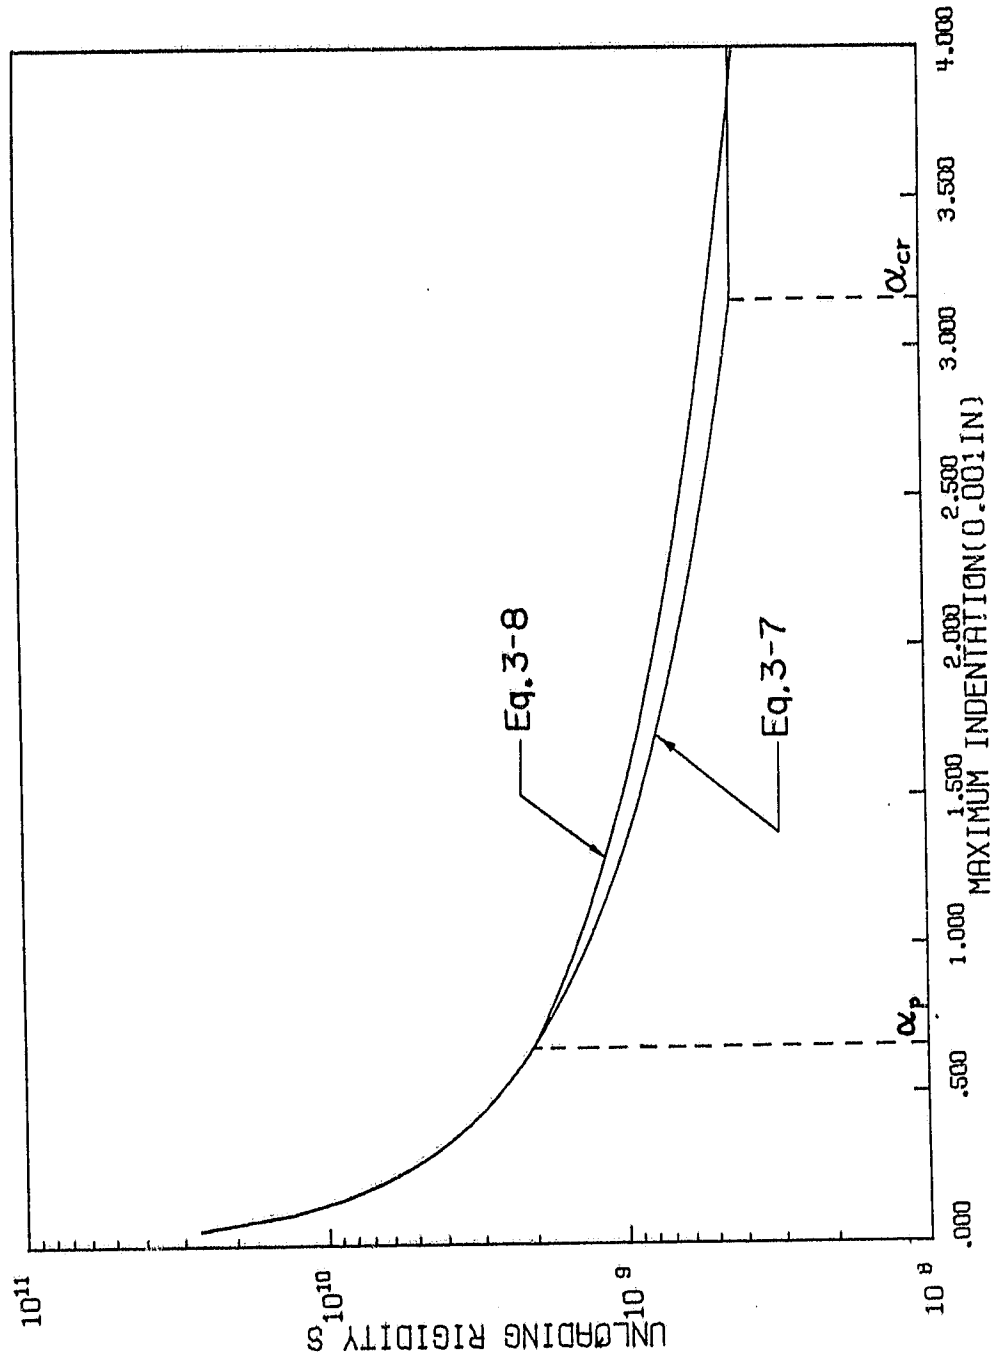

Figure 3.19 Unloading rigidity s as function of maximum indentation

that the value of s is constant for any α_m once the the indentation passes α_{cr}, and only one unloading test is necessary to determine α_{cr} provided the load is high enough to produce permanent indentations. The use of Equation (3-9) needs performing many tests to obtain a proper relation between α_0 and α_m according to Equation (3-8). However, it should be noted that Equation (3-7) is valid only if q = 5/2 is used in the unloading equation (3-4), while Equation (3-8) has no such restriction.

CHAPTER 4

IMPACT EXPERIMENTS

High velocity impacts usually result in very small contact time and the material under impact loadings may behave differently from static contact due to the strain rate effect. The statically determined contact laws presented in the previous chapter thus must be verified experimentally before it can be applied to the impact analysis. Wang [15] has conducted many impact experiments on laminated composite beams and plates using spherical steel balls as impacters. The strain response histories at various points on the specimens were recorded and compared with the finite element analysis with which the contact laws obtained by Yang [14] was incorporated. The results showed that the test data agreed with the predictions using the statical indentation laws quite well. In this chapter, an attempt was made to measure the contact force directly so that the applicability of statical contact laws in impact analysis can be further evaluated.

4.1 Experimental Procedure

A 6 in. by 4 in. laminated plate cut from a $[0^0/45^0/0^0/-45^0/0^0]_{2s}$ graphite/epoxy panel was used as the impact target. The 0^0-direction was arranged to parallel the long side of the plate. Seven strain gages (Micro Measurement Company TYPE EA-13-062 AQ 350) were placed at different locations as shown in Figure 4.1 to record the dynamic strain histories. One of the gages was placed on the surface directly opposite to the impact point to trigger the oscilloscope. This plate was hung with two strings at two corners to achieve the free boundary condition.

The projectile was made of an impact-force transducer with a spherical steel cap of 0.75 inch in diameter glued on the impact side and a steel rod of 5/8 inch in diameter glued on the other side as shown in Figure 4.2. It was then attached to a thin rod to form a pendulum which could produce impact velocities up to 150in/sec. The total mass of the projectile is 0.000181 $lb\text{-}sec^2/in$.

The schematic diagram for this impact experimental set-up is shown in Figure 4.3. Signals from gages and transducer were amplified by a 3A9 Textronix amplifier and displayed on the screen of an oscilloscope.

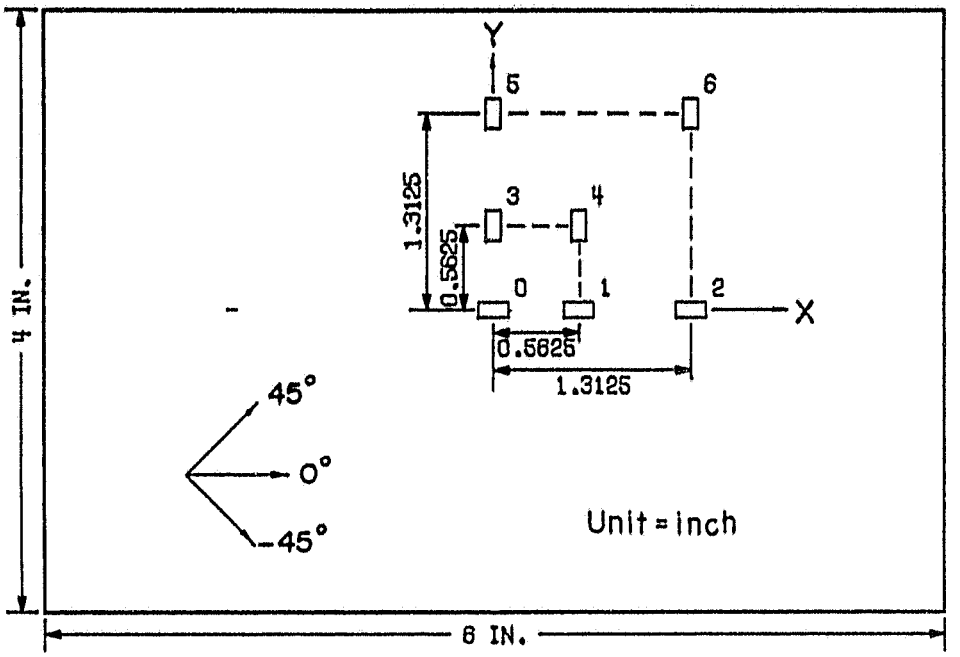

Figure 4.1 Laminate dimension and strain gage locations

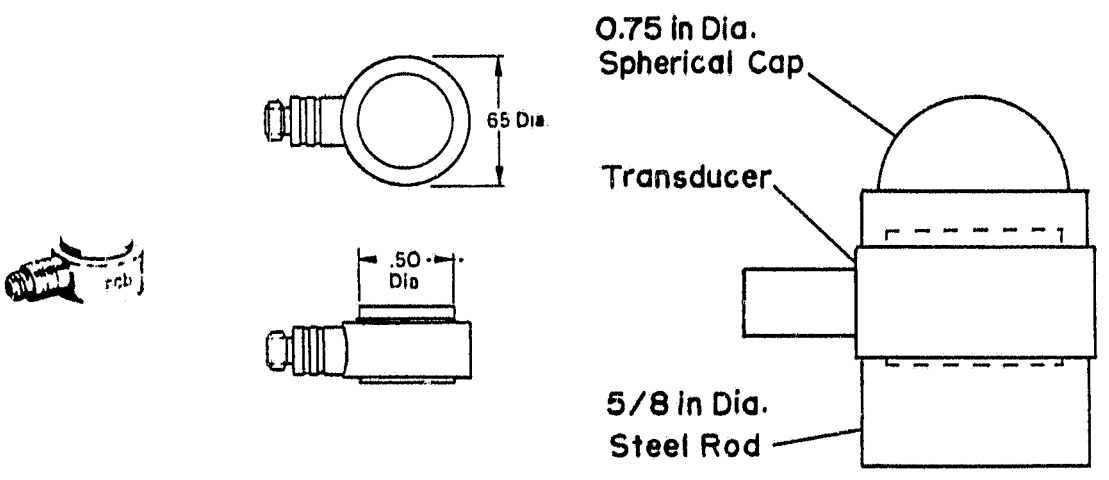

(a) Impact-Force Transducer (b) Projectile

Figure 4.2 Graphical illustration of impact projectile

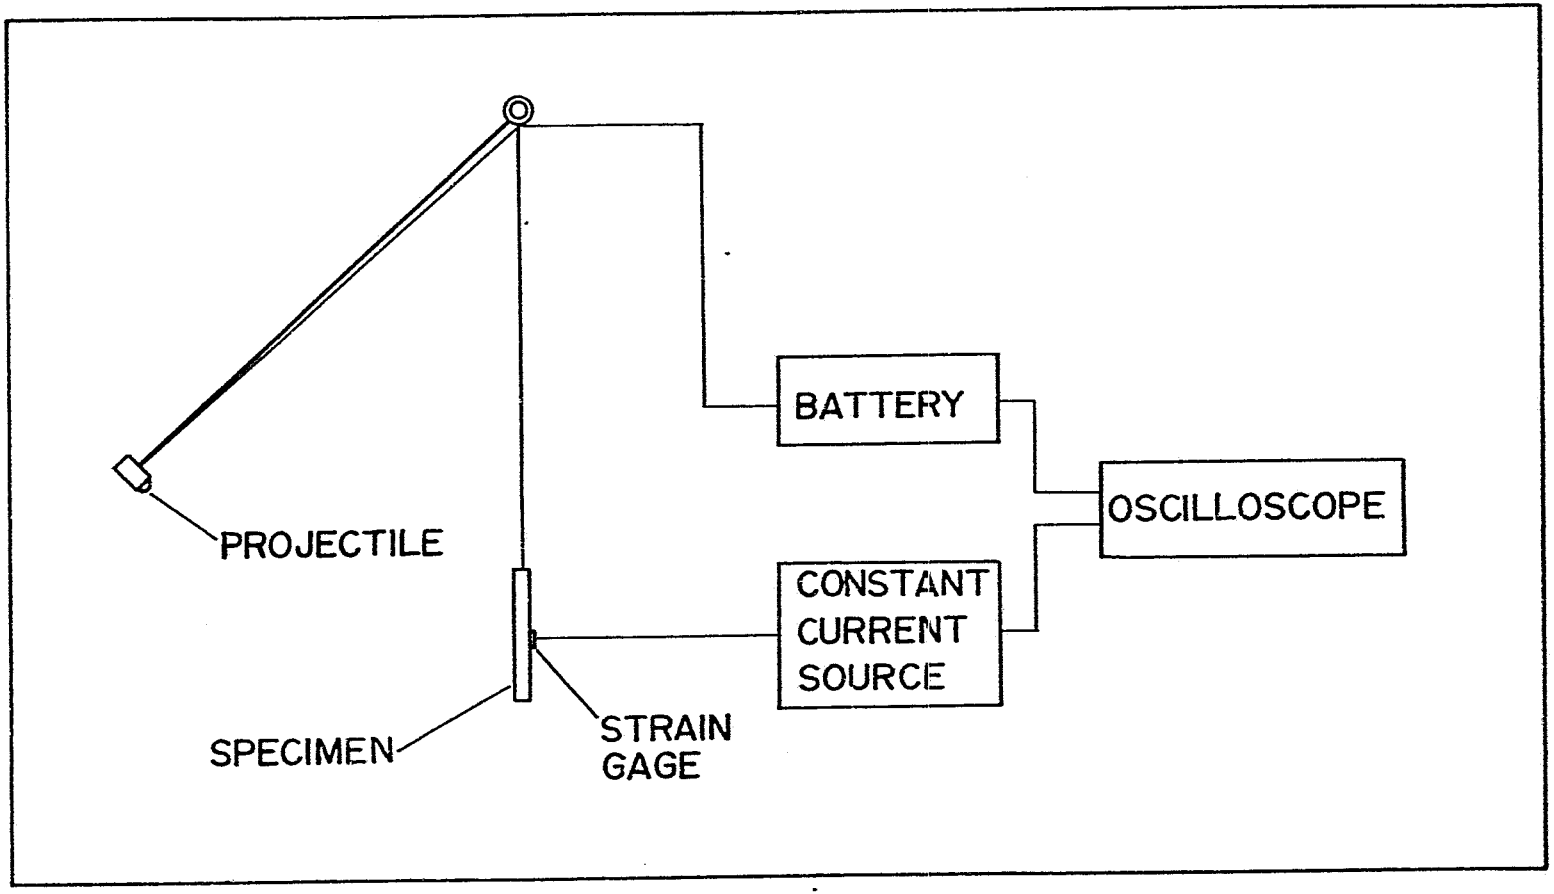

Figure 4.3 Schematical diagram for the impact experimental set-up

4.2 Calibration of Impact-Force Transducer

The Impact-force transducer used was Modal 200A05 marketed by PCB Piezotronics Inc. Some of it's specifications are shown in Table 4.1 [30]. The structure of this transducer contains two thin quartz disks operating in a thickness compression mode and sandwiched between hardened steel cylindrical members. A built-in amplifier can reduce the high impedance of the voltage from the quartz element and provides an output voltage which can be read out on oscilloscope, recorder, etc.. The impact force is then computed using the equation,

$$F = V_F / c_F \qquad (4\text{-}1)$$

where V_F is the output voltage and c_F is the sensitivity of the transducer. Since the value of c_F in Table 4.1 was obtained under quasi-static condition [30], it must be verified under impact condition first so that later the results from impact experiment can be correctly interpreted.

A circular cylindrical steel rod of 2 inch in diameter and 1.19 inch long hung on strings was used as the impact target to calibrate the transducer. The acceleration of the rod was measured by using a Model 302A accelerometer which was mounted on the end of the rod opposite to the impacted end as shown in Figure 4.4. The total weight of the target is 1.105 lb.

Table 4.1
Specifications for Model 200A05 Impact-Force Transducer

Range, Compression (5V output)	lb.	5,000
Maximum Compression	lb.	10,000
Resolution (200 μV p-p noise)	lb.	0.2
Stiffness	lb/μin	100
Sensitivity	mV/lb	1.0
Resonant Frequency (no load)	Hz	70,000
Rise Time	μsec	10
Discharge Time Constant (T.C.)	sec	[illegible],000
Low-Frequency (-5%)	Hz	0.0003
Linearity,B.F.S.L.	%	1
Output Impedance	ohms	100
Excitation (thru C.C.diode)	VDC/mA	+18 to 24/2 to 20
Temperature Coefficient	%/°F	0.03
Temperature Range	°F	-100 to +250
Shock (no load)	g	10,000

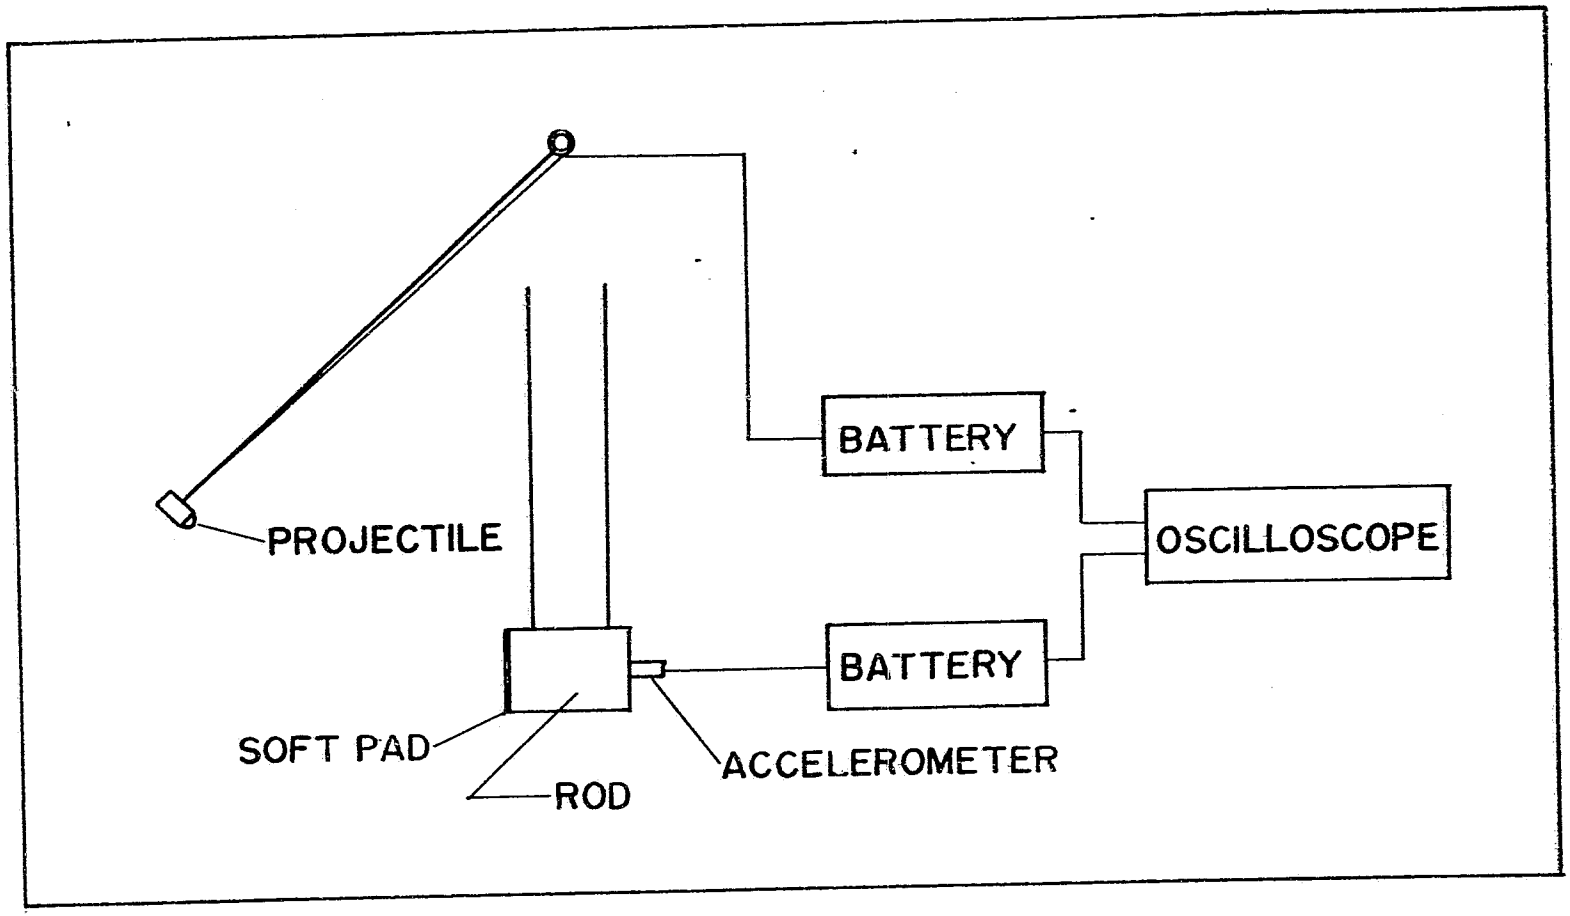

Figure 4.4 Experimental set-up for the calibration of impact-force transducer

Using Equation (4-1) and

$$a = V_a/c_a \tag{4-2}$$

$$F = ma \tag{4-3}$$

we obtain

$$c_F = (c_a/m)(V_F/V_a) \tag{4-4}$$

where V_a and c_a are the output voltage and the sensitivity of the accelerometer, respectively, a is acceleration of the target, and m is the mass of the target.

When impacting a metal projectile on a metal target with no pad on the impact surface, a high frequency ringing can be seen at the output of the transducer. In order to obtain smooth output curves, a soft pad was placed on the impact region of the target to eliminate the high frequency ringing. The cause of this ringing phenomenon will be discussed later. Typical output voltages of transducer and accelerometer read from the oscilloscope are shown in Figure 4.5. Values of V_F were plotted vs the corresponding values of V_a taken from these two curves at several discrete points in time and then fitted into a straight line as shown in Figure 4.6. The slope of this line represents the ratio of V_F/V_a which is then substituted in Equation (4-4) to calculate the sensitivity c_F.

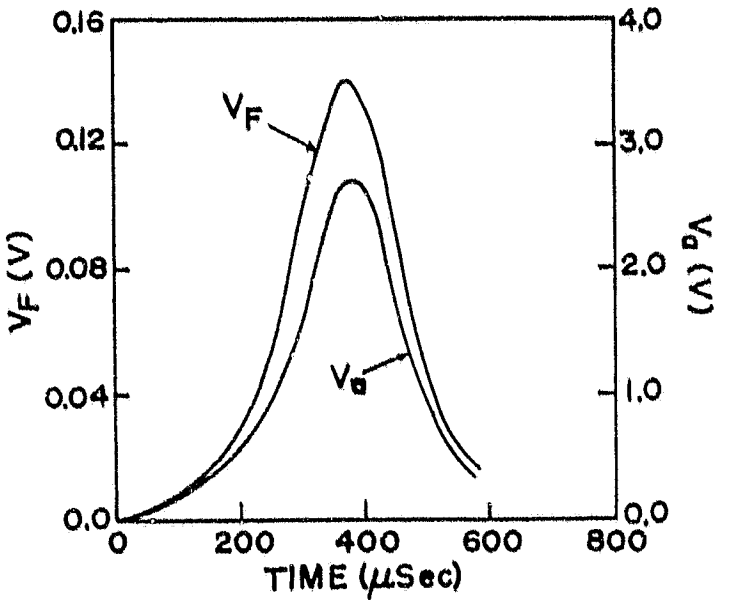

Figure 4.5 Typical output voltages from transducer and accelerometer

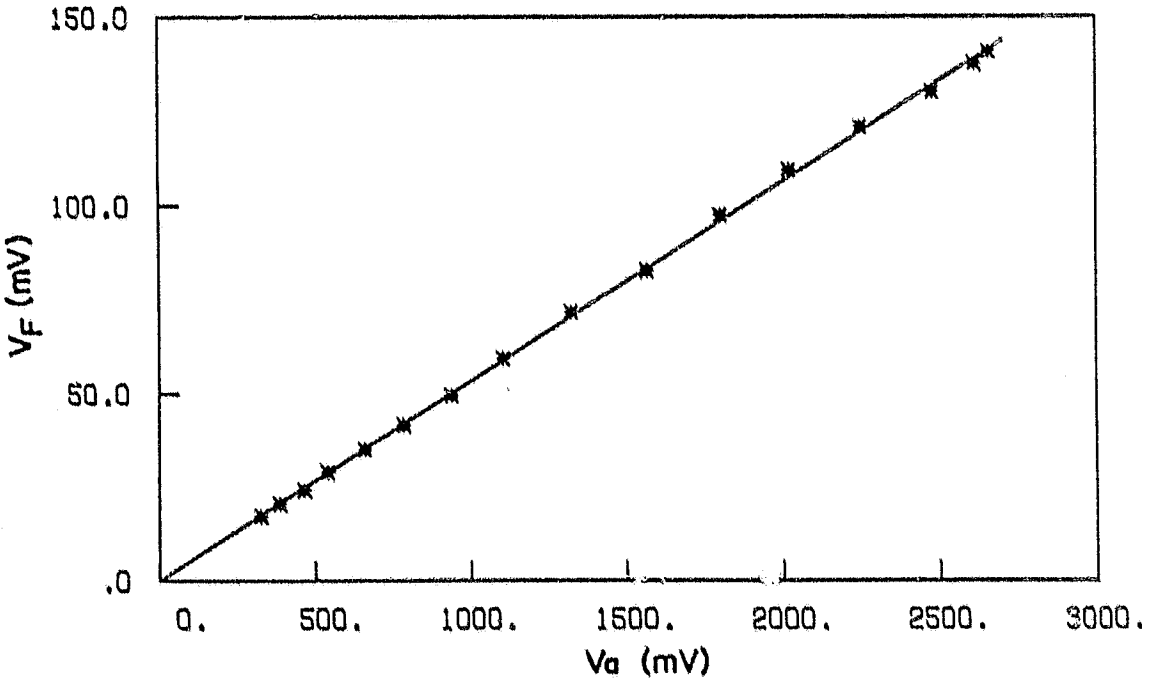

Figure 4.6 Relation between V_F and V_a

Assuming the sensitivity of the accelerometer c_a is correct, and using Equation (4-4) and the test data, the average value of c_F calculated was 0.494 mV/lb.. A comparison with the value of 1.0 mV/lb from Table 4.1 shows that the test result has more than 50% error. However, since the quartz elements are located at the center of the projectile while the impact force is applied at the end, we were not certain that the force history picked up by the quartz elements did represent the real history of the impact force. The following simple analysis was performed to examine this uncertainty.

Consider a 1 in. long steel rod with free-free boundary conditions. For a impulse loading given by

$$F(t) = F_0 \, EXP[-(t-\tau)^2/4b^2)] \qquad (4-5)$$

at one end, the force history at the midpoint of the rod, $F_m(t)$, was computed and plotted in Figure 4.7 together with the applied force history. It should be noted that the values of F_0 = 1000 lb., τ = 200x10^{-6} sec. and b = 40x10^{-6} sec. were chosen in Equation (4-5) so that the applied force history is similar to the experimental loading histroy. From Figure 4.7, it can be seen that $F_m(t)$ is only about half of the applied force F(t). The average ratio of $F_m(t)/F(t)$ was obtained to be 0.498, which is very close to the value of c_F obtained previously. The accelerations at the two ends and the midpoint of the rod were also

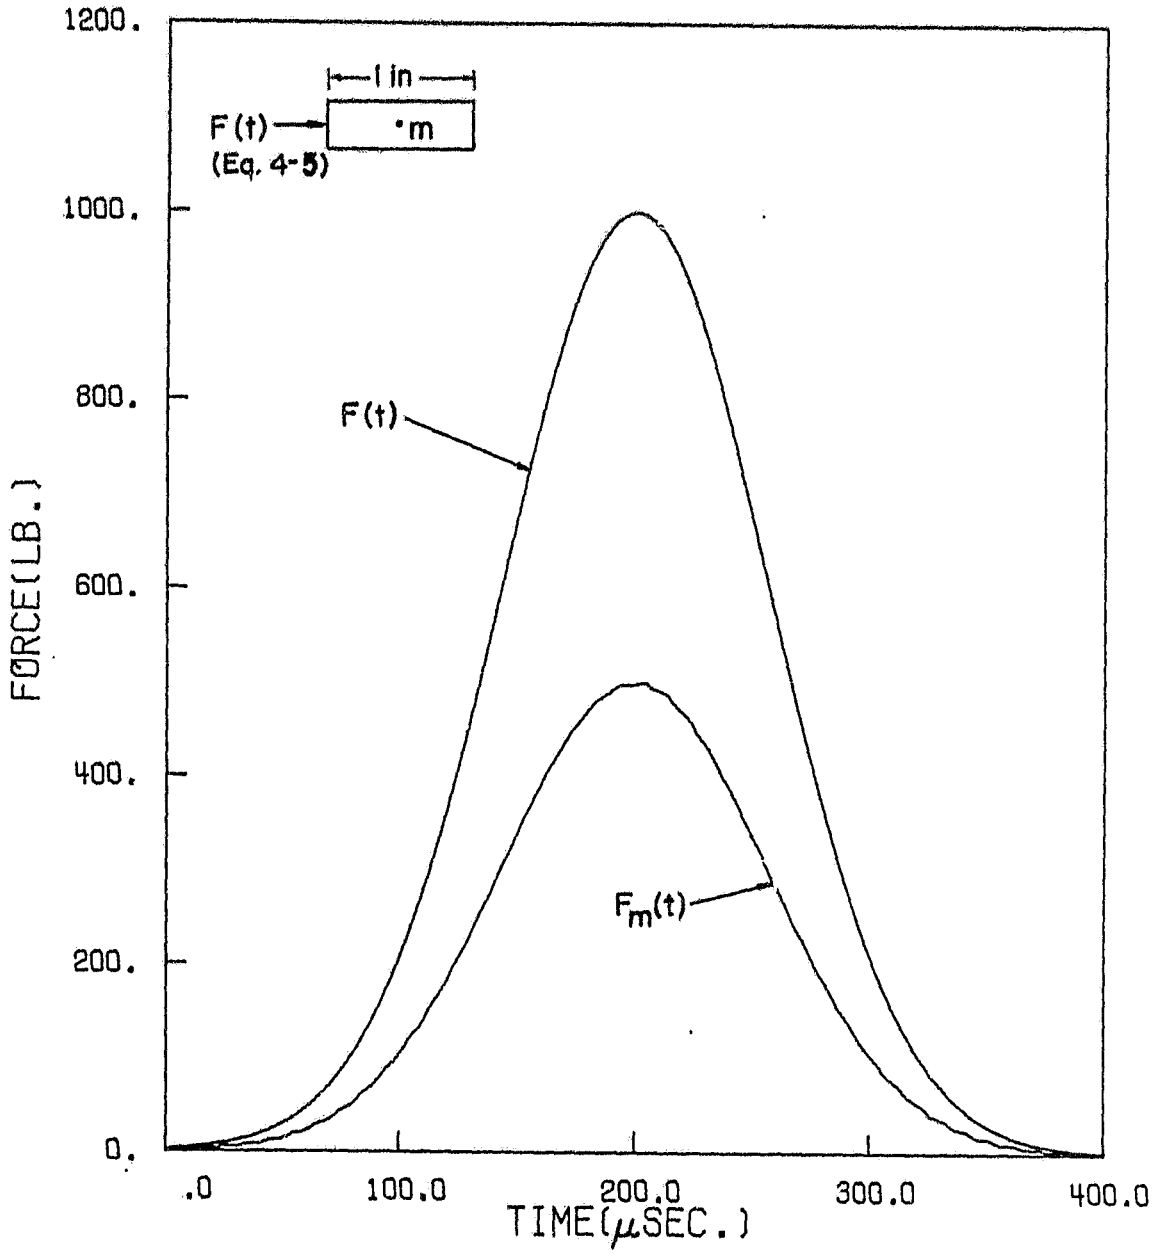

Figure 4.7 Assumed exponential impulsive loading and the response history at the midpoint of the rod

calculated and plotted in Figure 4.8. It shows that the magnitudes of acceleration at any position of the rod have virtually no difference. This indicates that the accelerometer did measure the real acceleration of the target while the impact-force transducer only picked up the force history at the point of it's own position. In other words, the wave motion in the projectile can not be neglected, hence it must be treated as an elastic body.

Repeating the previous analysis by changing the impulse loading of Equation (4-5) to

$$F(t) = F_0 \sin(\pi t/b) \qquad (4\text{-}6)$$

and letting F_0 = 1000 lb. and b = 400×10^{-6} sec., we obtain the force history at the midpoint of the rod as shown in Figure 4.9. Comparing Figure 4.9 with Figure 4.8, it is clear that the initial slope of the impulse forcing function would affect the amplitude of ringing. The steeper the initial slope is, the higher the amplitude of ringing will be. When impacting the steel projectile on graphite/epoxy surface, this ringing phenomenon was also observed.

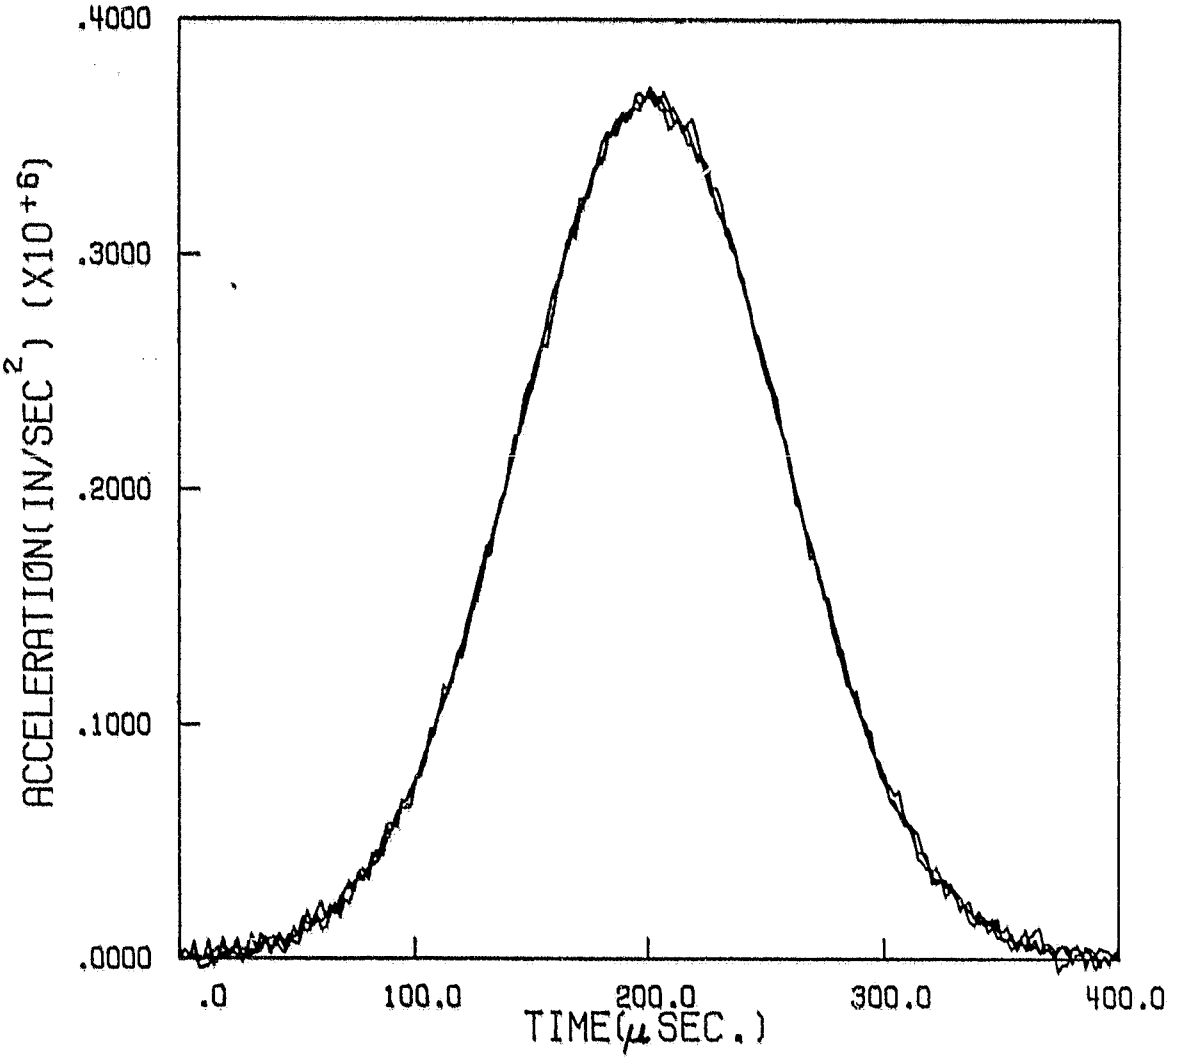

Figure 4.8 Accelerations of rod for assumed exponential impulsive loading

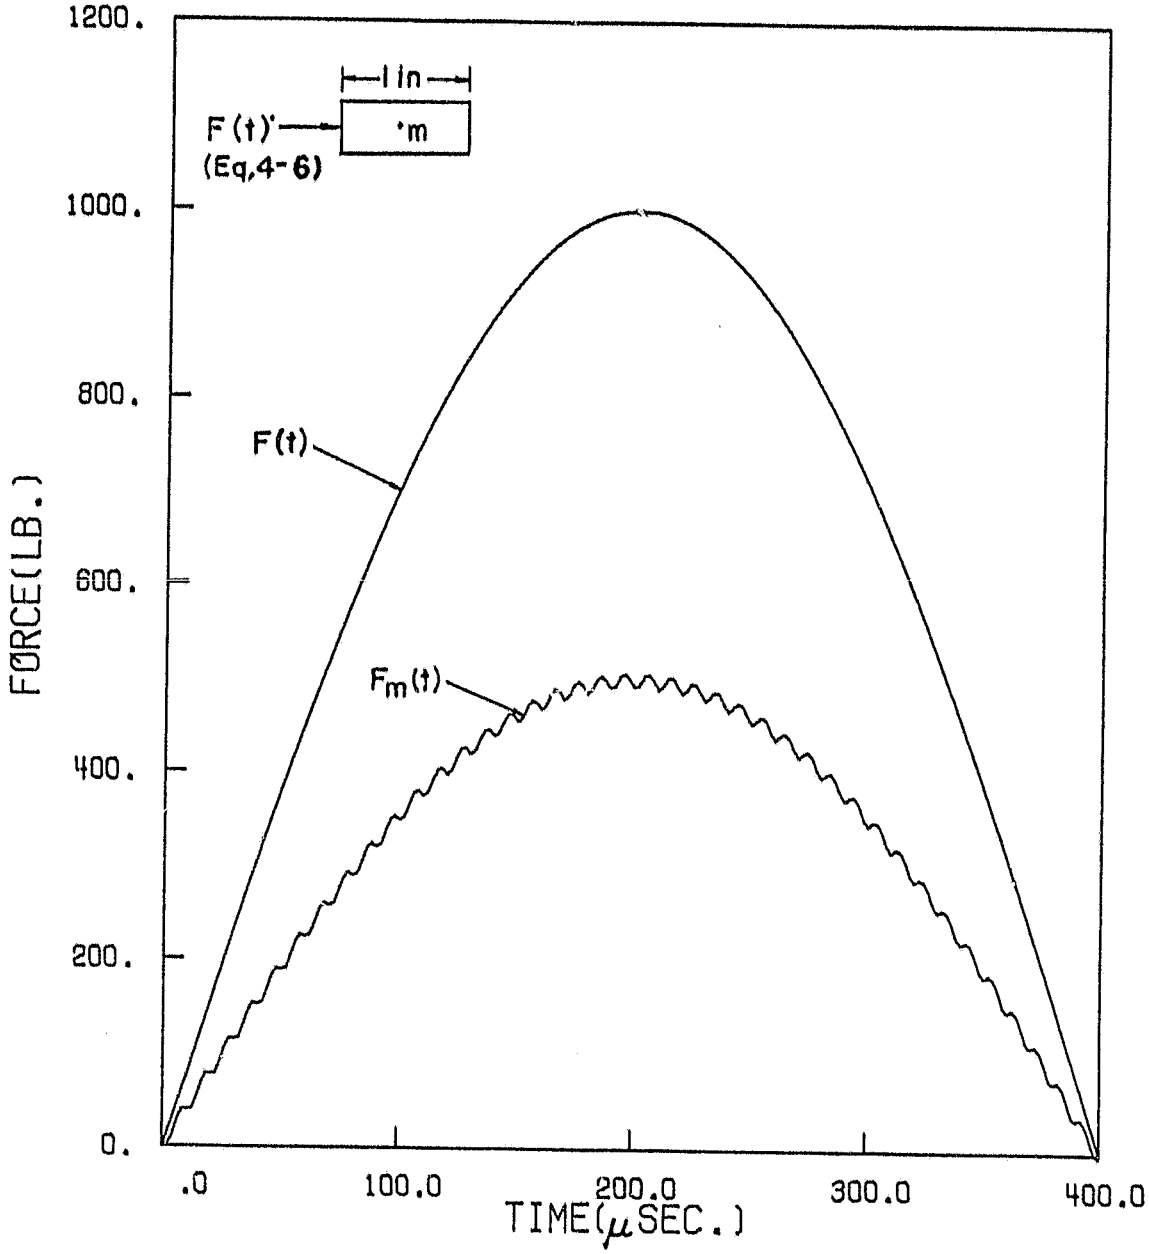

Figure 4.9 Assumed sine-function impulsive loading and the response history at the midpoint of the rod

4.3 Finite Element Analysis

4.3.1 Plate Finite Element

A 9-node isoparametric plate finite element (see Figure 4.10) developed by Yang [31] based upon the laminate theory of Whitney and Pagano [18] was used to model the dynamic motion of the laminated plate. At each node there are five degrees of freedom. Among them, u^0, v^0 and w are displacement components of mid-plane in the x-,y- and z-direction, respectively, and ϕ_x and ϕ_y are rotations of the cross-sections perpendicular to the x- and y-axis, respectively. For symmetric laminates, the flexural deformation is uncoupled from the in-plane extensional and shear deformations, and hence, the degrees of freedom corresponding to u^0 and v^0 can be neglected in the transverse impact problem.

The isoparametric plate finite element is developed using the following shape functions:

For corner nodes:

$$S_i=(1/4)(1+\xi_0)(1+\eta_0)(\xi_0+\eta_0-1)+(1/4)(1-\xi^2)(1-\eta^2) \qquad (4\text{-}7)$$

For nodes at $\xi = 0$ and $\eta = \pm 1$:

$$S_i=(1/2)(1-\xi^2)(\eta_0+\eta^2) \qquad (4\text{-}8)$$

For nodes at $\xi = \pm 1$ and $\eta = 0$:

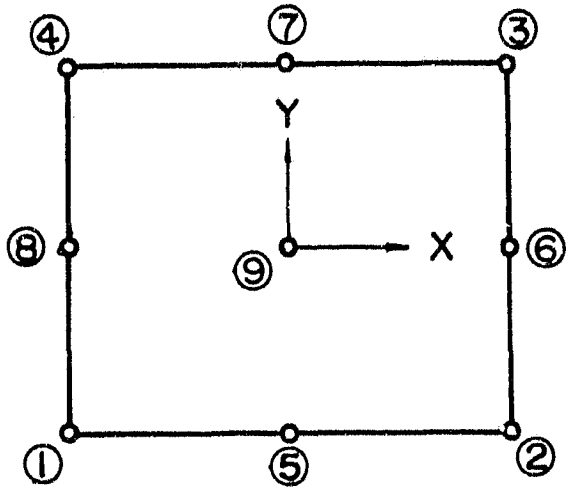

(a) PARENT ELEMENT

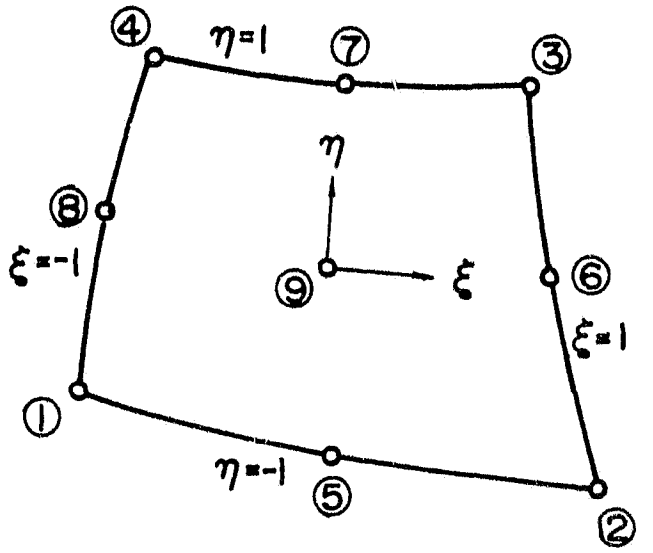

(b) DISTORTED ELEMENT

Figure 4.10 9-node isoparametric plate element

$$S_I=(1/2)(\xi_0+\xi^2)(1-\eta^2) \qquad (4\text{-}9)$$

For the center node:

$$S_I=(1/2)(1-\xi^2)(1-\eta^2) \qquad (4\text{-}10)$$

In the above shape functions, ξ and η are normalized local coordinates, and

$$\xi_0 = \xi\xi_I, \quad \eta_0 = \eta\eta_I \qquad (4\text{-}11)$$

where ξ_I and η_I are the natural coordinates of node I (Figure 4.10).

Using the shape functions, the plate displacements w, ϕ_x and ϕ_y are approximated by

$$\begin{Bmatrix} w \\ \phi_x \\ \phi_y \end{Bmatrix} = \sum_{I=1}^{9} [S_I]\{q_p\}_I \qquad (4\text{-}12)$$

where $\{q_p\}_I$ is the nodal displacement vector at node I and

$$[S]_I = S_I[I]^{3x3} \qquad (4\text{-}13)$$

The stiffness and mass matrices are obtained by numerical integration using Gauss quadrature. Following standard finite element procedures, the system stiffness matrix $[K_p]$ and mass matrix $[M_p]$ are assembled from the element matrices. The equations of motion are expressed in matrix

form as

$$[M_p]\{\ddot{q}_p\} + [K_p]\{q_p\} = \{P_p\} \tag{4-14}$$

where

$$\{P_p\}^T = \{0,\cdots,F,\cdots,,0\} \tag{4-15}$$

is the force vector in which F is the contact force associated with the degree of freedom corresponding to the w-displacement at the impact point. The subscript p in Equations (4-12) through (4-15) denotes those are quantities corresponding to laminated plate.

4.3.2 Modeling of Projectile

In Section 4.2 we showed that in order to interpret the experimental transducer response, it is necessary to treat the projectile as an elastic body. A higher order rod finite element developed by Yang and Sun [32] was used to model the projectile. This element has two degrees of freedom at each node, namely the axial displacement u and it's first derivative $\partial u/\partial x$. It has been shown that this higher order element is far more superior than the elements with less degrees of freedom in the analysis of dynamic problems. The displacement function is taken as

$$u = a_1 + a_2x + a_3x^2 + a_4x^3 \tag{4-16}$$

where a_i are constant coefficients. Solving these coefficients in terms of the nodal degrees of freedom and substituting into Equation (4-16), we obtain

$$u = \{N\}^T\{q_r\}_e \tag{4-17}$$

where

$$\{q_r\}_e^T = \{(u)_1, (\partial u/\partial x)_1, (u)_2, (\partial u/\partial x)_2\} \tag{4-18}$$

is the vector of element nodal degrees of freedom, and

$$\{N\}^T = \{f_1(x), f_2(x), f_3(x), f_4(x)\} \tag{4-19}$$

in which

$$f_1(x) = (1 - x/L)^2(1 + 2x/L)$$
$$f_2(x) = x(1 - x/L)^2$$
$$f_3(x) = x^2/L^2(3 - 2x/L)$$
$$f_4(x) = x^2/L(x/L - 1)$$

are shape functions. The subscript r in Equation (4-17) denotes quantities corresponding to the rod.

Using variational principle, the equations of motion for one element are obtained as

$$[m_r]\{\ddot{q}_r\}_e + [k_r]\{q_r\}_e = \{p_r\}_e \tag{4-20}$$

where $\{p_r\}_e$ is the vector of the generalized forces associated with the nodal degrees of freedom $\{q_r\}_e$, $[m_r]$ is the element mass matrix whose entries are given by

$$(m_r)_{ij} = \rho A \int_0^L f_i f_j dx \quad i,j = 1,2,3,4 \tag{4-21}$$

and $[k_r]$ is the element stiffness matrix whose entries are given by

$$(k_r)_{ij} = EA \int_0^L f_i' f_j' dx \quad i,j = 1,2,3,4 \tag{4-22}$$

In Equations (4-21) and (4-22), ρ, E and A are mass density, Young's modulus and cross-sectional area of the projectile, respectively, and L is the length of the element. The explicit forms of $[k_r]$ and $[m_r]$ are given by

$$[k_r] = \frac{EA}{30L} \begin{bmatrix} 36 & 3L & -36 & 3L \\ 3L & 4L^2 & -3L & -L^2 \\ -36 & -3L & 36 & -3L \\ 3L & -L^2 & -3L & 4L^2 \end{bmatrix} \tag{4-23}$$

and

$$[m_r] = \frac{\rho AL}{420} \begin{bmatrix} 156 & 22L & 54 & -13L \\ 22L & 4L^2 & 13L & -3L^2 \\ 54 & 13L & 156 & -22L \\ -13L & -3L^2 & -22L & 4L^2 \end{bmatrix} \tag{4-24}$$

Following the usual manner, the system stiffness and mass matrices are assembled from the element stiffness and mass matrices, and the system equations of motion are expressed as

$$[M_r]\{\ddot{q}_r\} + [K_r]\{q_r\} = \{P_r\} \qquad (4\text{-}25)$$

where

$$\{P_r\}^T = \{F,0,\cdots,0\} \qquad (4\text{-}26)$$

In which F is the contact force applied at the impacting end of the projectile.

4.4. Results and Discussion

The 6 in. by 4 in. graphite/epoxy laminate was modeled by 140 (14 x 10 mesh) plate elements while the projectile was modeled by 20 rod elements (see Figure 4.11). The two sets of equations (4-14) and (4-25) along with the contact laws given by Equations (3-1), (3-3) and (3-11) were solved simultaneously. The finite difference method with Δt = 0.2 μsec. was used to integrate the time variable. A coarser finite element mesh for plate was used and it was found that the present mesh yielded converged solutions. A 3-Dimensional analysis using 112 axisymmetric finite elements to model the projectile was also performed, and the results showed the the response at the midpoint of the projectile to have no significant difference comparing with the one obtained by using rod elements.

An impact velocity of 115 in/sec was used in the experiment. Figures 4.12-4.17 show the strain response histories at the six locations picked up by the strain

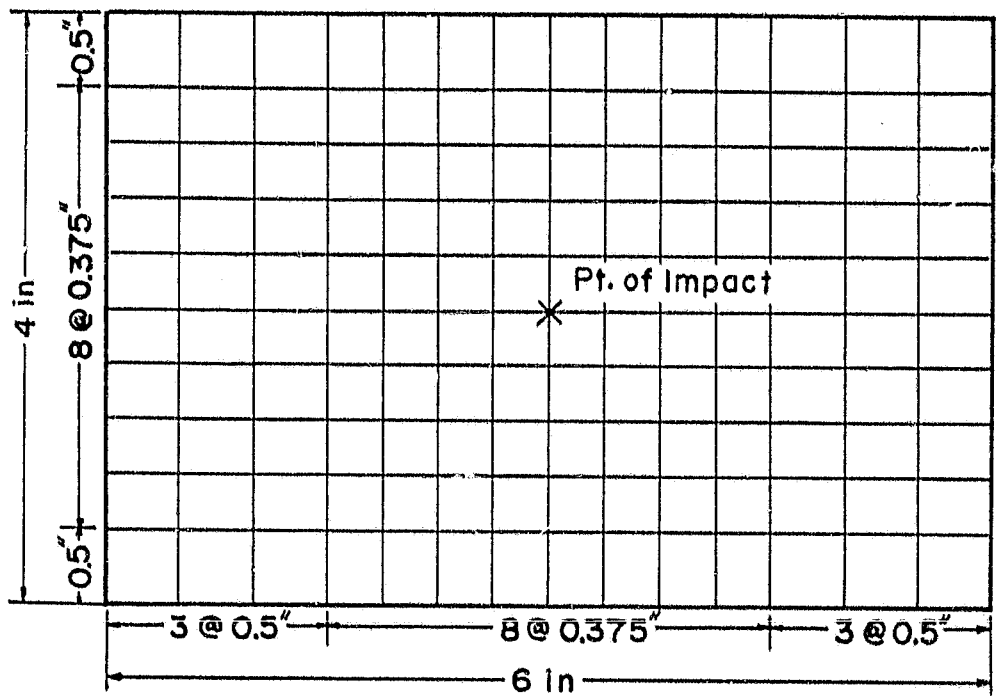

(a) Plate

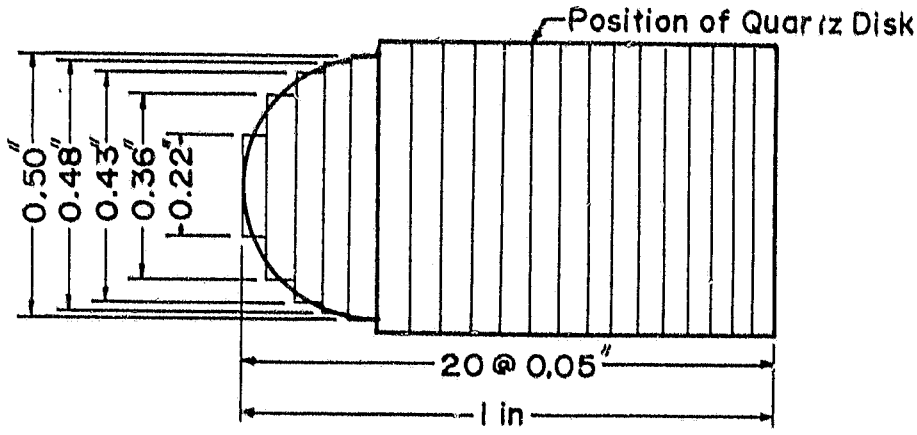

(b) Projectile

Figure 4.11 Finite element mesh for laminated plate and projectile

gages. The results obtained using the finite element methods and the contact laws are also shown in these figures. It is evident that the finite element solutions agree with the experimental data very well.

In Figure 4.18, the experimental transducer responses and the computed transducer responses using finite element are plotted against time as curve I and curve II, respectively. The computed contact force history is also plotted as curve III. It can be seen that the magnitudes of curve I and curve II agree fairly well. The frequencies of ringing for these two curves, however, are quite different. For the finite element results, the time interval between two consecutive peaks of ringing is approximately equal to the time that the longitudinal stress wave needed to travel the distance between two ends of the projectile. This indicates that the ringing is simply caused by the transient wave travelling back and forth in the projectile.

From Figure 4.18 we can see that curve I has exact 9 peaks in 180 microseconds, and the time interval between two consecutive peaks is about 20 microseconds. It is noted that this transducer has a rise time of 10 microseconds (see Table 4.1), which is the time it needs to reach the maximum response. Any input signal with period smaller than twice of this value will be smoothed out by the transducer, and the output signal may appear to have lower frequency. In other words, the period of the output signal will be at

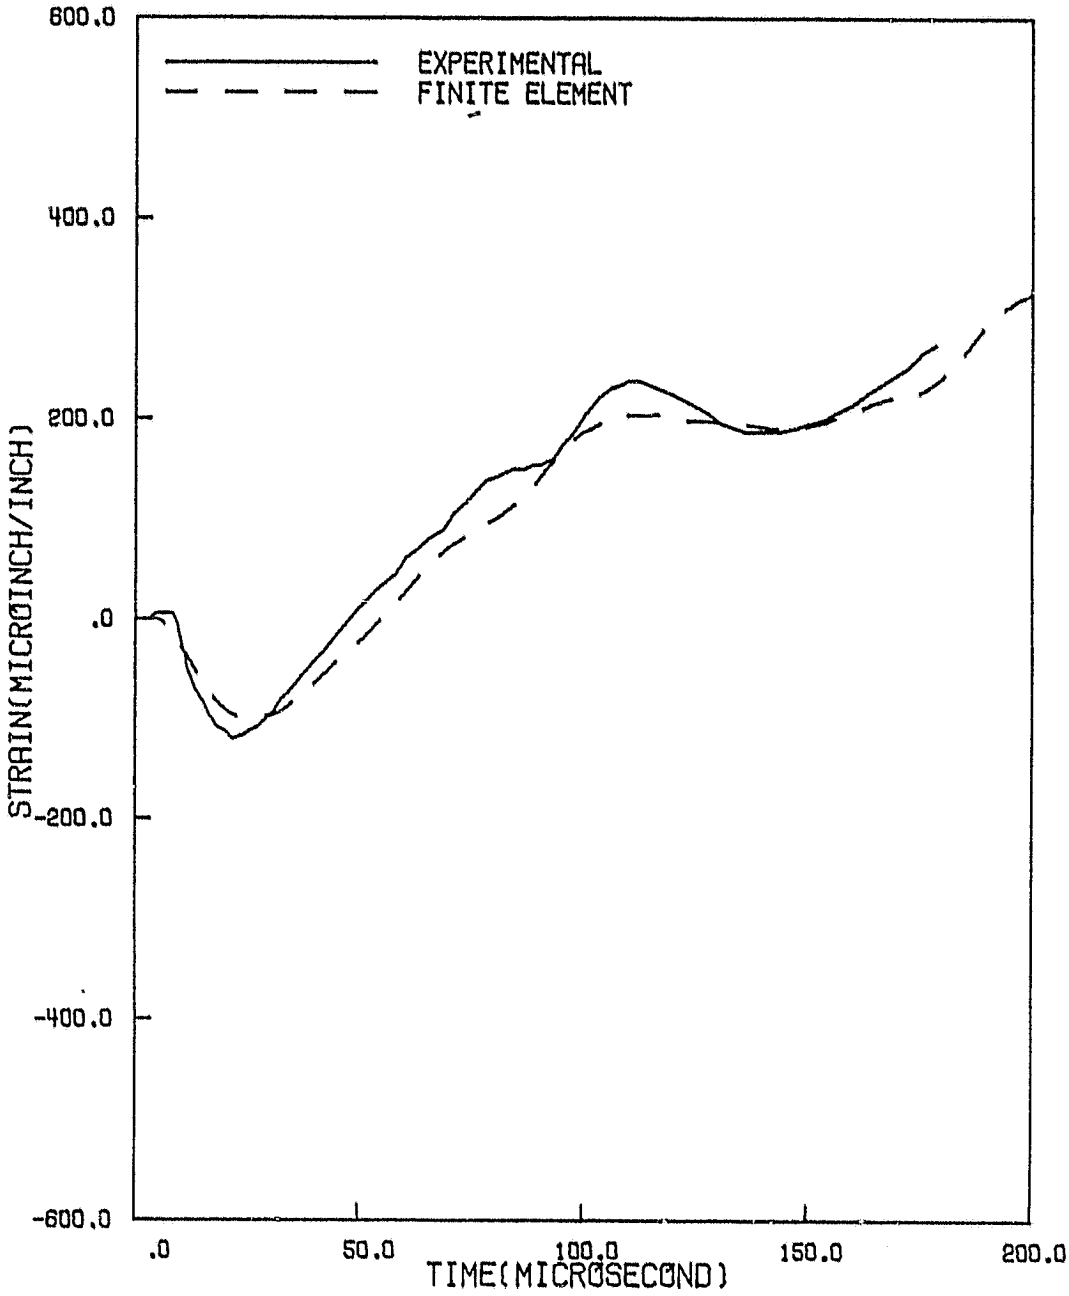

Figure 4.12 Strain response history at gage No.1

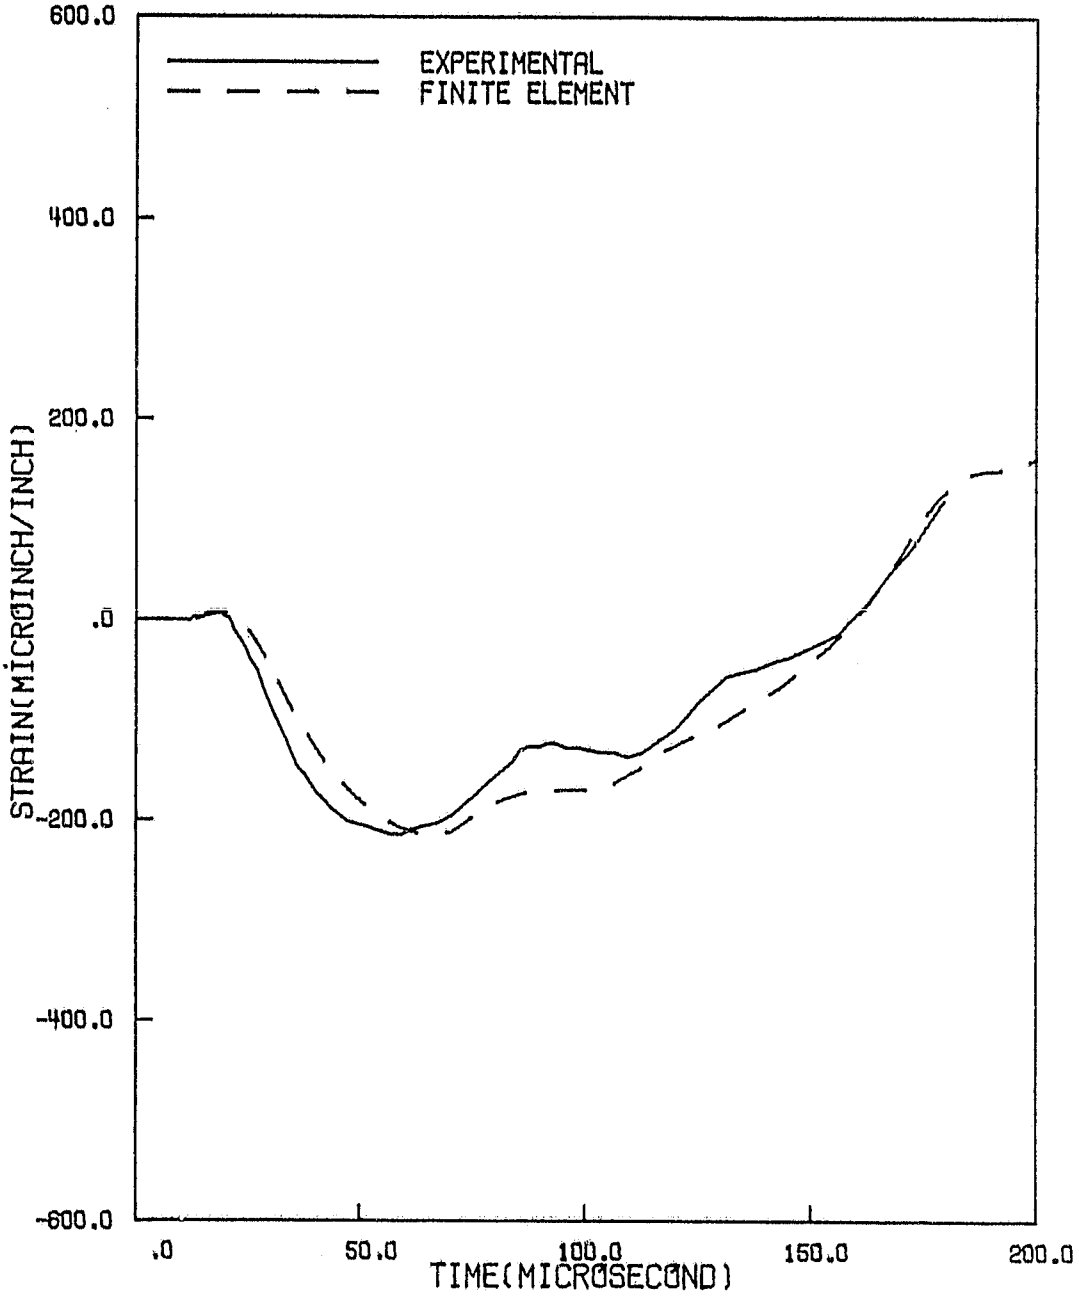

Figure 4.13 Strain response history at gage No.2

ORIGINAL PAGE IS
OF POOR QUALITY

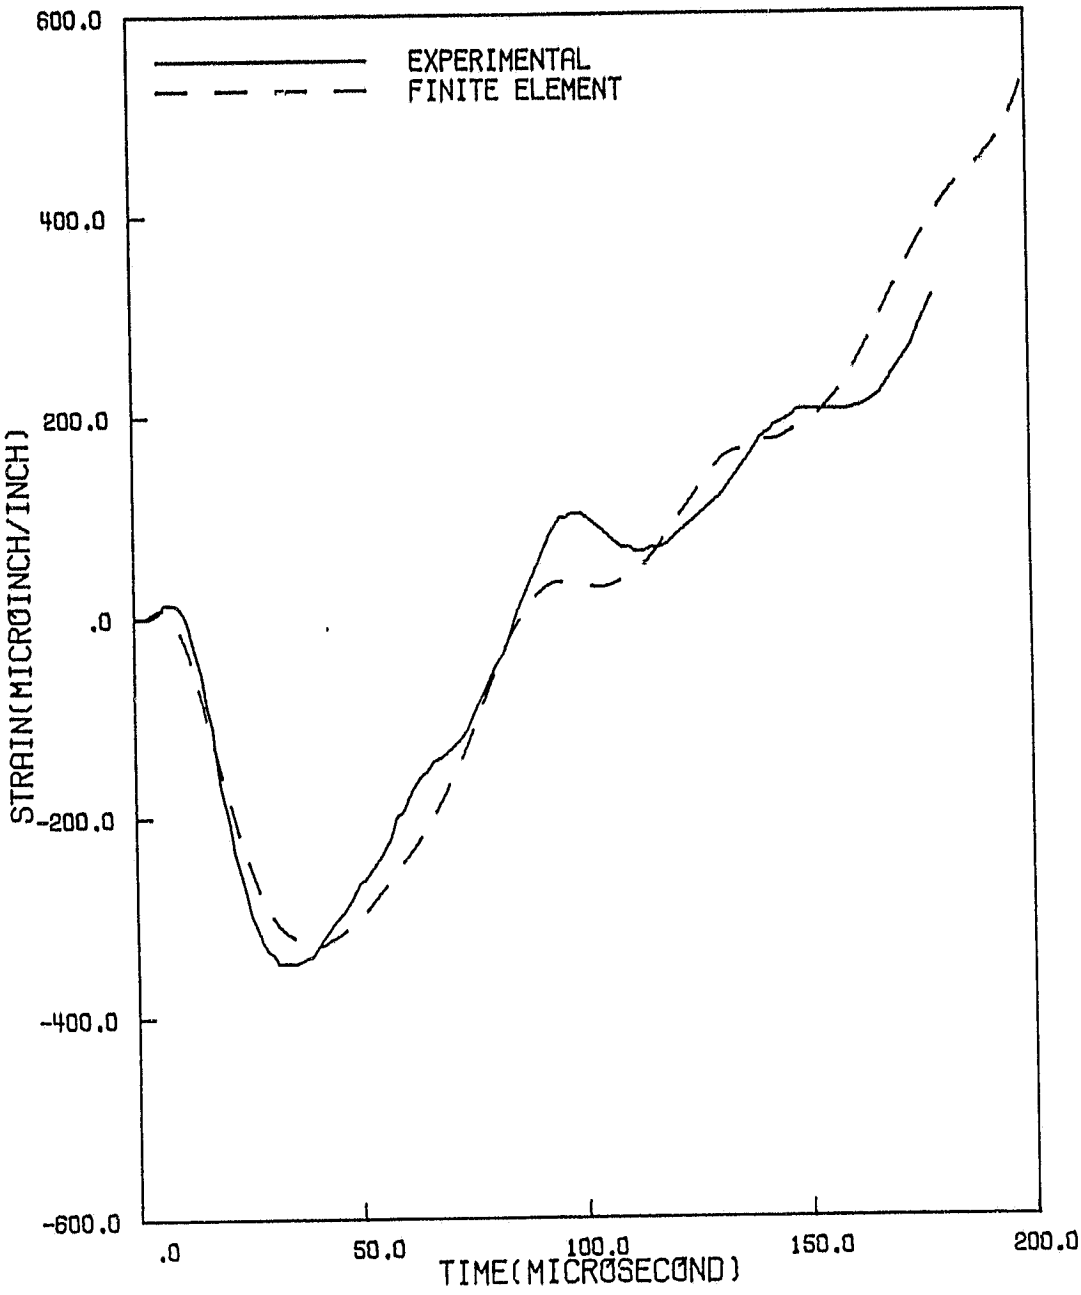

Figure 4.14 Strain response history at gage No.3

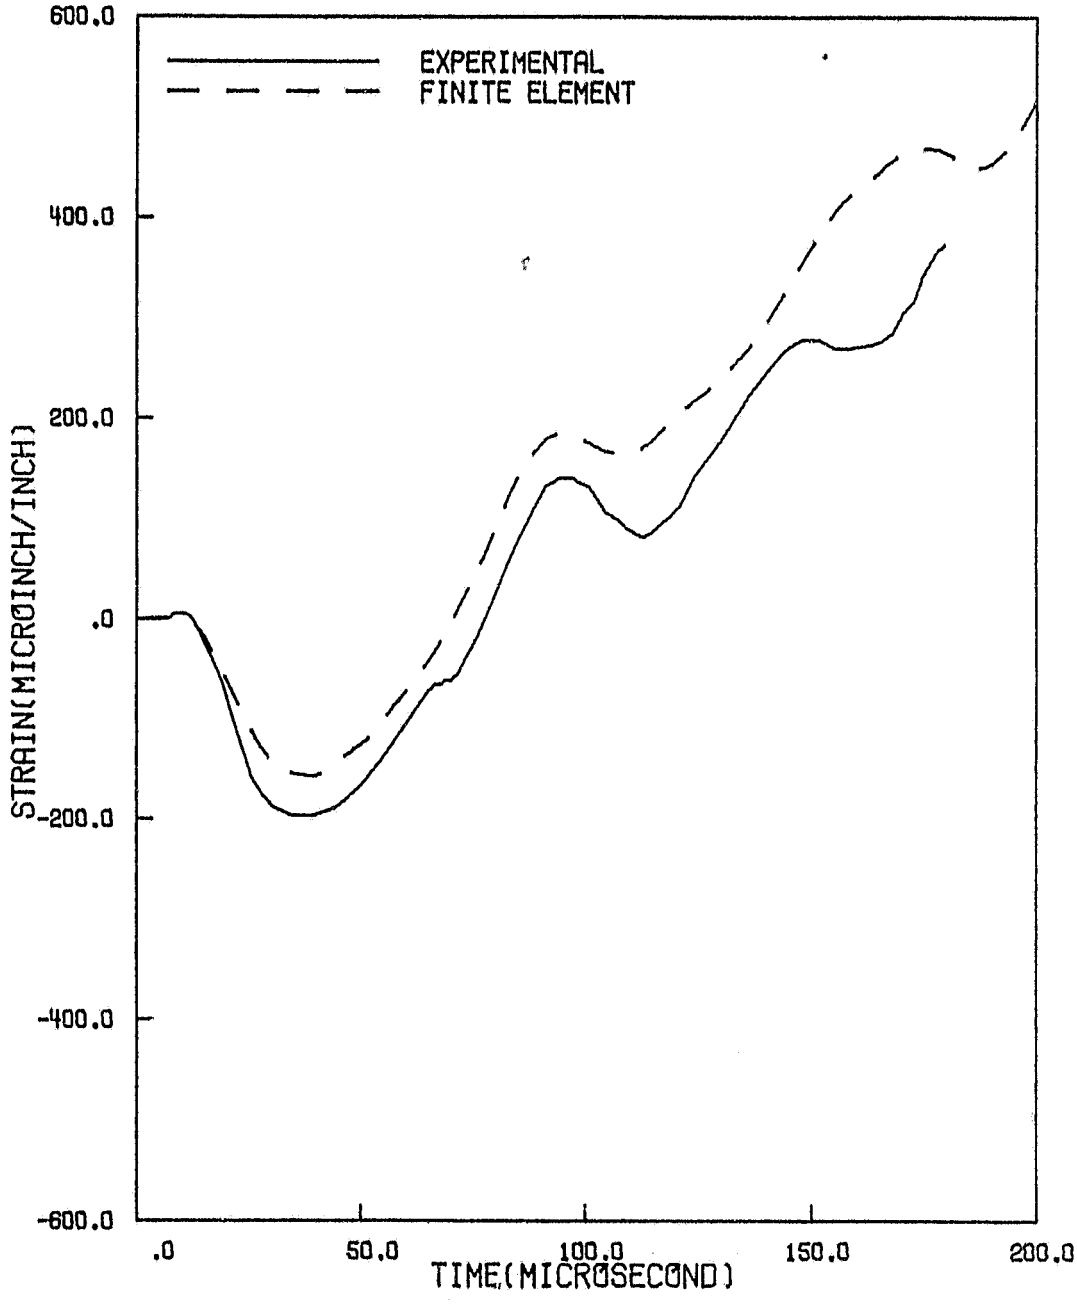

Figure 4.15 Strain response history at gage No.4

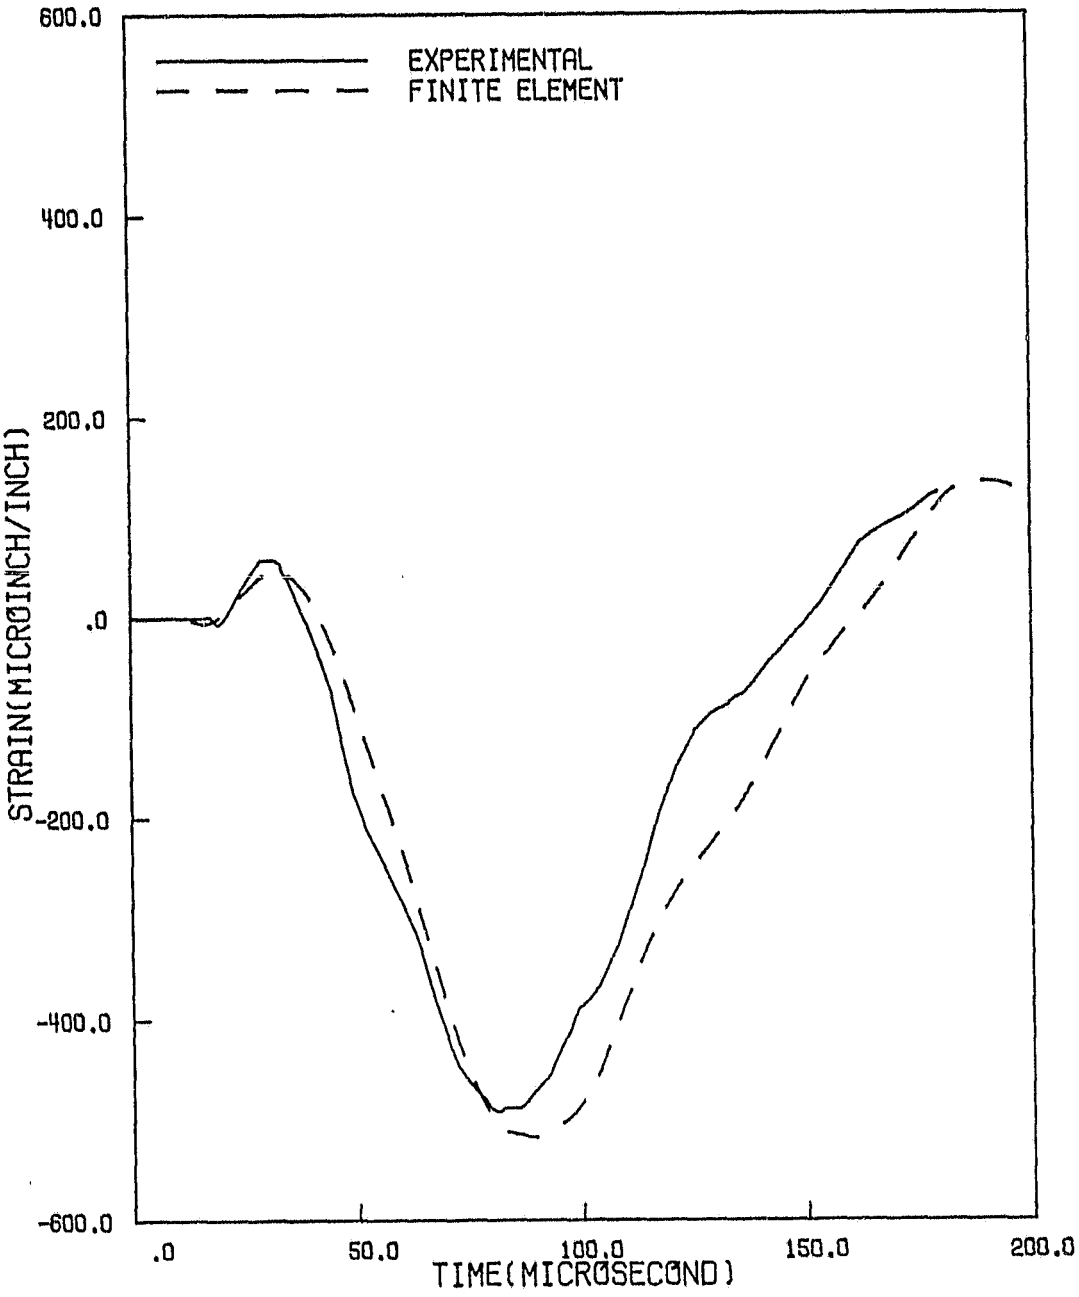

Figure 4.16 Strain response history at gage No.5

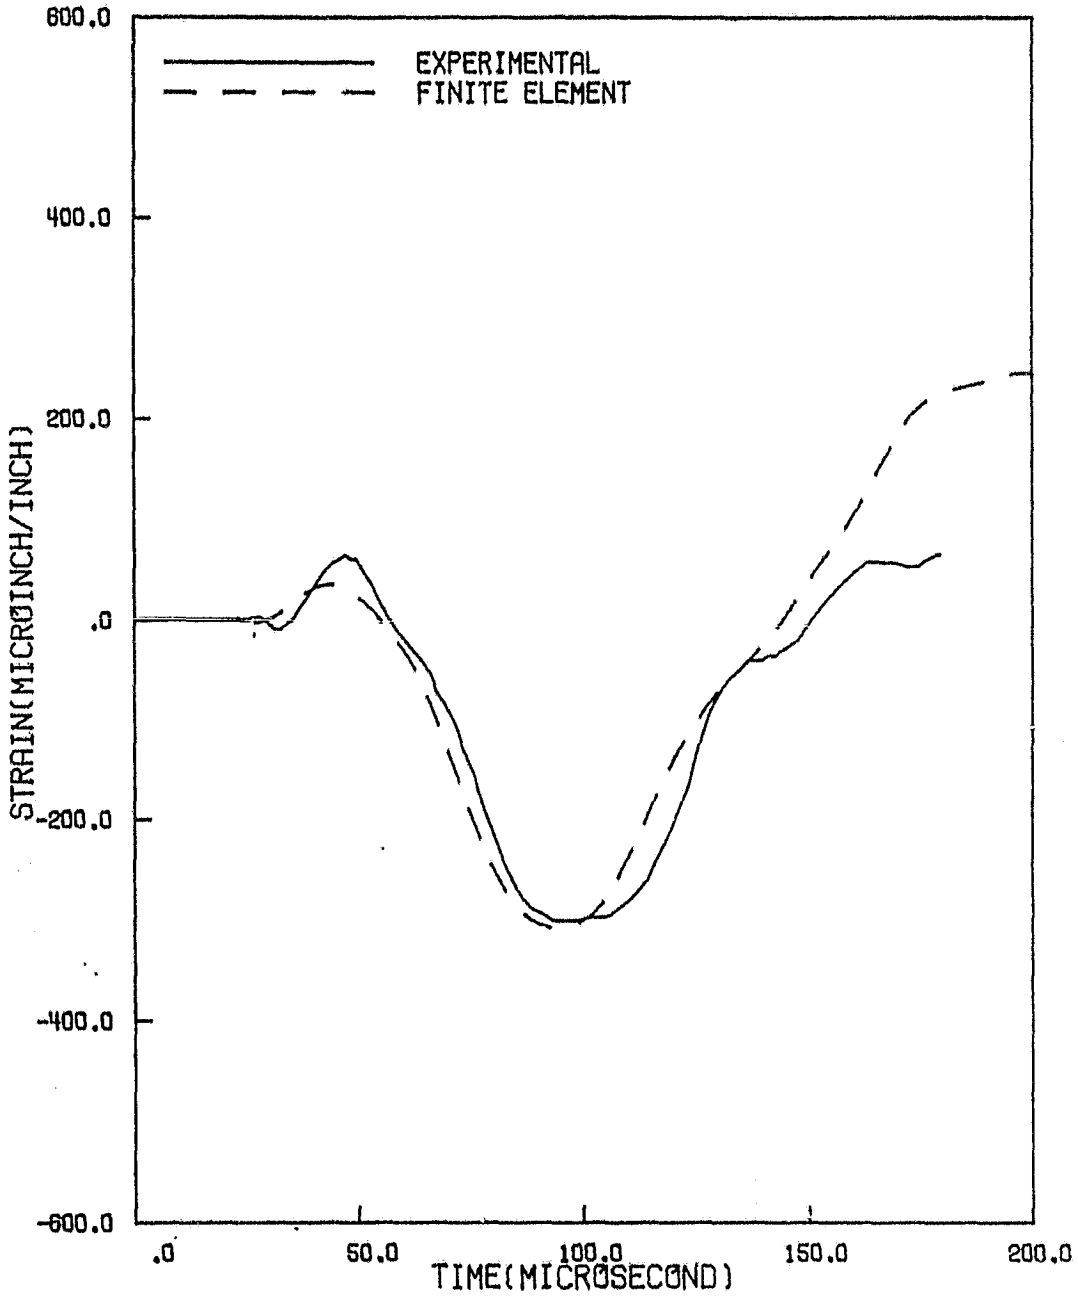

Figure 4.17 Strain response history at gage No.6

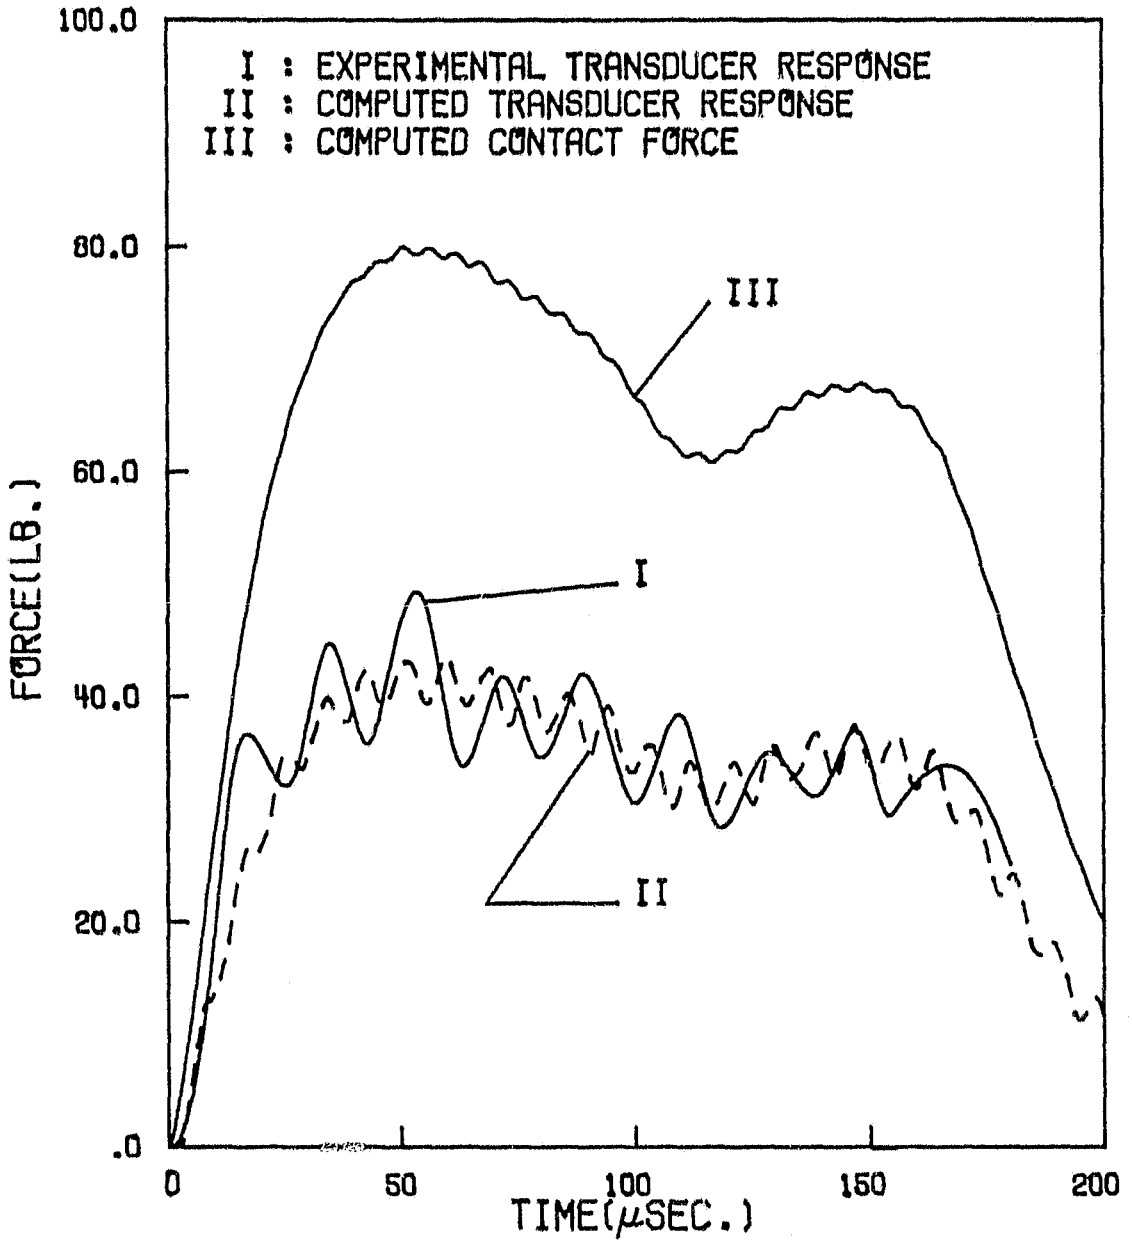

Figure 4.18 Transducer response and contact force histories from experimental and finite element results

least 20 microseconds. This might explain the lower frequency of ringing in the output voltage from the transducer.

The total duration of contact for this impact test is about 800 microseconds, and multiple contact is also observed from the test data. Figure 4.19 shows the experimental transducer responses and the computed transducer responses up to 800 microseconds. Although these two results do not matched very well after the end of the first contact, it is evident that the finite element analysis does predict the multiple contact phenomenon, and the calculated total duration of contact is also approximately the same as the test result.

Figure 4.20 presents a number of deformed configurations of the laminated plate after impact. It is seen that at the point of impact, there is a strong discontinuity in slope of the transverse displacement indicating the presence of a significant transverse shear deformation.

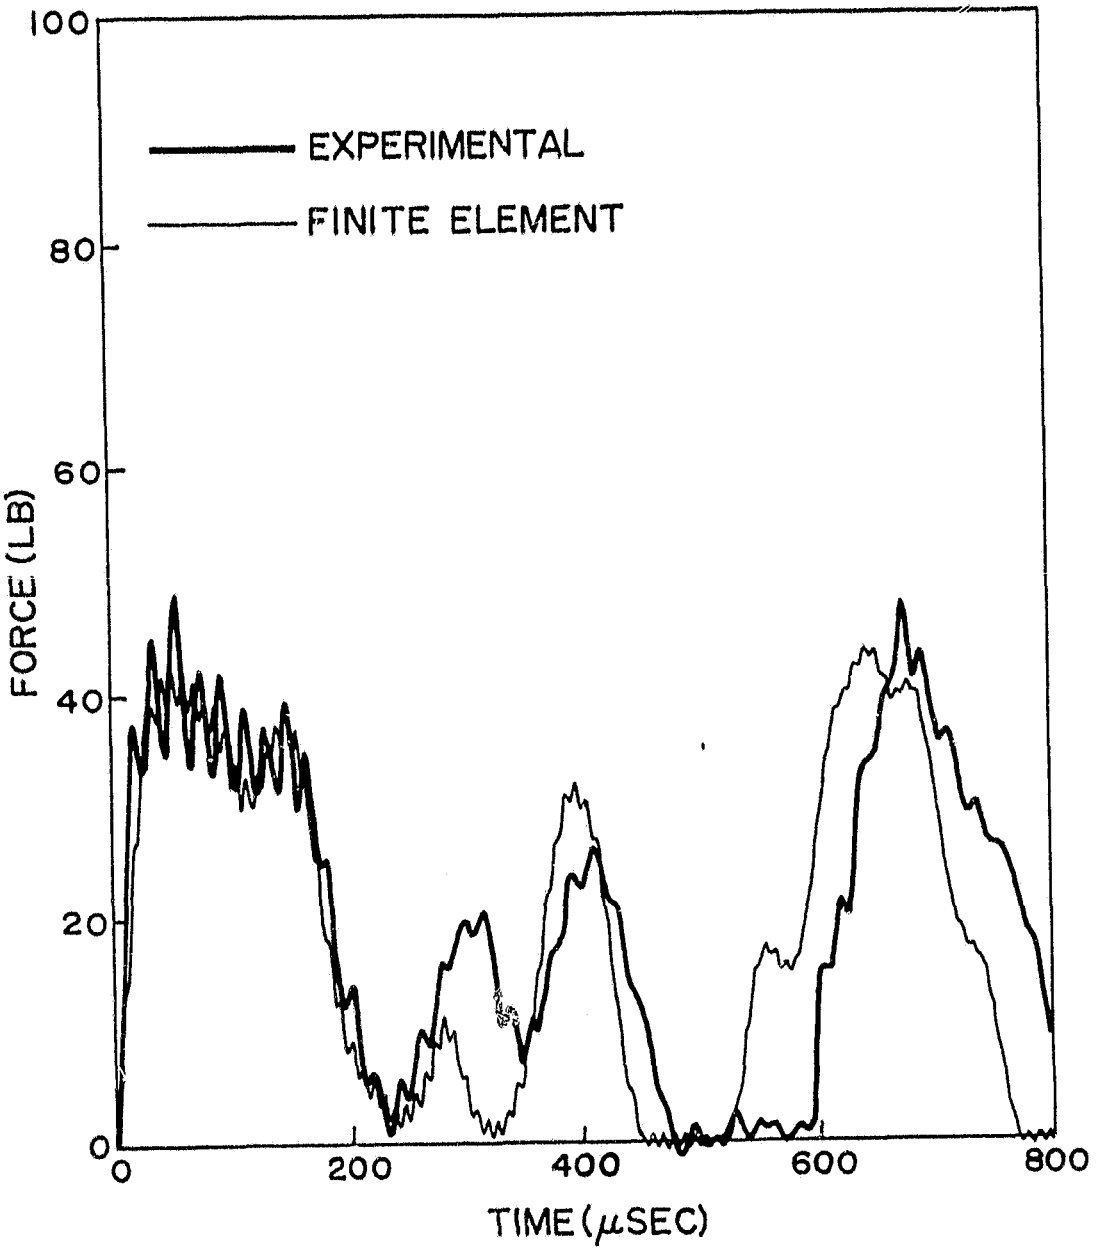

Figure 4.19 Transducer response histories from experimental and finite element results up to 800 microseconds

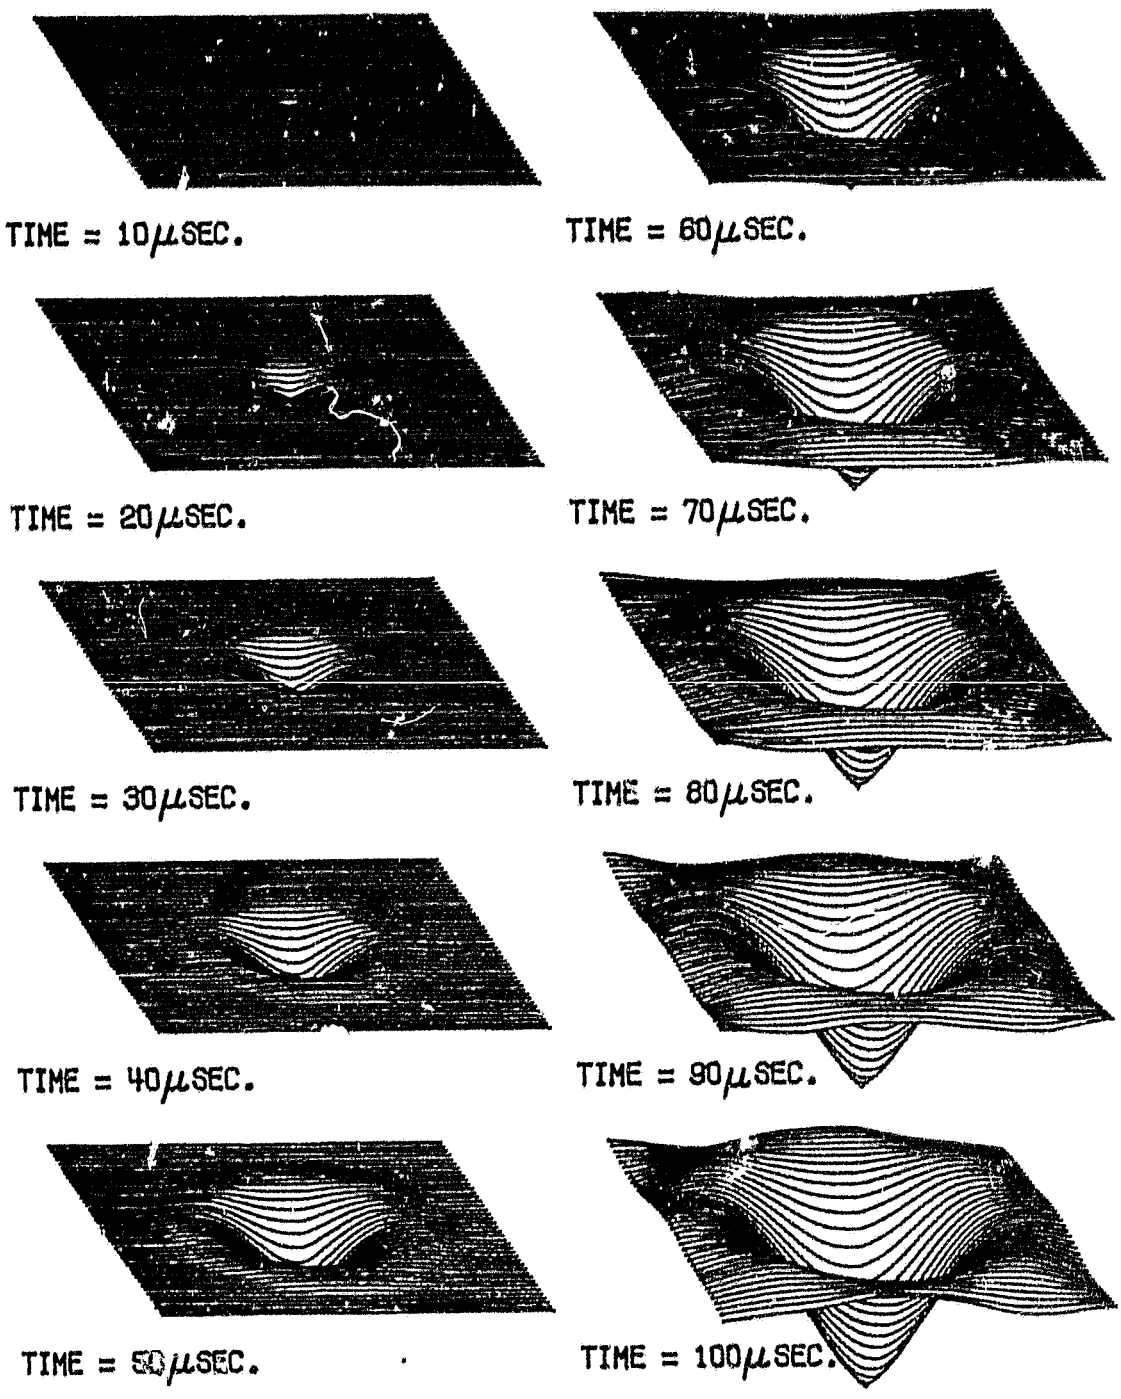

Figure 4.20 Deformed configurations of laminated plate after impact

CHAPTER 5

SUMMARY AND CONCLUSION

The laminate theory developed by Whitney and Pagano was employed for studies of harmonic wave and propagation of wave front in a $[0^{\circ}/45^{\circ}/0^{\circ}/-45^{\circ}/0^{\circ}]_{2S}$ graphite/epoxy laminate. The dispersion properties of flexural waves were investigated. The wave front surface was constructed using ray theory. It was shown that due to the anisotropic properties of composite laminate, the transient wave would propagate with different velocities in different directions. The growth and decay of the wave front strength were also discussed.

The contact laws between 0.5 inch and 0.75 inch spherical steel indenters and the graphite/epoxy laminate were determined experimentally by means of a statical indentation test. Loading, unloading and reloading curves were fitted into power equations. Linear relation was found between the permanent indentation and the maximum indentation at unloading, which is seen to be independent of the size of indenters. This relation was then used to determine the coefficient of the unloading law. It was demonstrated that there was no need to perform reloading experiments once the loading and unloading laws were established. Test results

showed loading and reloading curves followed the power laws with power indices of 1.5 very well, while the power indices for unloading curves varied from 1.5 to 2.5.

The statically determined contact laws were incorporated into an existing 9-node isoparametric plate finite element program to study the dynamic response of a graphite/epoxy laminated plate subjected to impact of a hard object. An impact experiment was conducted to verify the validity of statical contact laws in the dynamical impact analysis. It was shown that the strain responses predicted using the finite element method agreed with the test results very well. The contact force history of the impact test was measured by an impact-force transducer, which was also seen to match the finite element result in magnitude as well as contact duration.

The indentation tests have been used ever since the beginning of the century to determine the static and dynamic hardnesses of metals in terms of the applied loading, the size of the indenter, and the chordal diameter of the permanent indentation [33]. If similar systematic indentation tests are performed on the laminated composite materials, then the relations between contact coefficients and the sizes of the indenters could be determined more rigorously, and the usefulness of the contact laws could be further extended.

As the verification of the contact laws has been limited to low velocity impacts in this study, their accuracy under high velocity impact conditions is not clear. Besides the contact behavior which may be significantly different from the static one, the damage induced by waves could be quite extensive which needs to be included in the analysis. While the present study tried to establish experimentally contact laws which can be used in the analysis of low velocity impact, the damage of laminate due to impact loading has not been discussed. It is apparent that more work needs to be done so that the failure mechanism in laminated composites due to impact can be better understood. Stress waves propagating in thickness direction, which may be responsible for the delamination of laminates, is one of the important subjects that should be investigated. Strength and fatigue life degradations of laminates after impact, which have been examined briefly by Wang [15], also need more extensive study.

LIST OF REFERENCES

[1] Moon, F.C., "A Critical Survey of Wave Propagation and Impact in Composite Material", NASA CR-121226, 1973.

[2] Sun, C.T., "Propagation of Shock Waves in Anisotropic Composite Plates", Journal of Composite Materials, Vol.7, 1973, pp.366-382.

[3] Moon, F.C., "Wave Surfaces Due to Impact on Anisotropic Plates", Journal of Composite Materials, Vol.6, 1972, pp.62-79.

[4] Chow, T.S., "On the Propagation of Flexural Waves in an Orthotropic Laminated Plate and Its Response to an Impulsive Load", Journal of Composite Materials, Vol.5, 1971, pp.306-319.

[5] Greszczuk, L.B., "Response of Isotropic and Composite to Particle Impact", Foreign Object Impact Damage to Composite, ASTM STP 568, American Society for Testing and Materials, 1975, pp.183-211.

[6] Sun, C.T. and Huang, S.N., "Transverse Impact Problems by Higher Order Beam Finite Element", Computers & Structures, Vol.5, 1975, pp.297-303.

[7] Kim, B.S. and Moon, F.C., "Impact Induced Stress Waves in an Anisotropic Plate", AIAA Journal, Vol.17, No.10, 1979, pp.1126-1133.

[8] Daniel, I.M., Liber, T. and LaBedz, R.H., "Wave Propagation in Transversely Impacted Composite Laminates", Experimental Mechanics, January 1979, pp.9-16.

[9] Dally, J.W., Link, J.A. and Prabhakaran, R., "A Photoelastic Study of Stress Waves in Fiber Reinforced Composites", Developments in Mechanics, Vol.6, Proceedings of the 12th Midwestern Mechanics Conference, 1971, pp.937-949.

[10] Takeda, N. Sierakowski, R.L. and Malvern, L.E., "Wave Propagation Experiments On Ballistically Impacted Composite Laminates", Journal of Composite Materials, Vol.15, 1981, pp.157-174.

[11] Hertz, H., "Uber die Beruhrung fester elastischer Korper", Journal Reine Angle Math, (Crelle), Vol.92, 1881, p.155.

[12] Goldsmith, W., Impact, Edward Arnold, London, 1960.

[13] Sun, C.T., "An Analytical Method for Evaluation of Impact Damage Energy of Laminated Composites", ASTM STP 617, American Society for Testing and Materials, 1977, pp.427-440.

[14] Yang, S.H. and Sun, C.T., "Indentation Law for Composite Laminates", NASA CR-165460, July 1981, also to appear in ASTM STP series, American Society for Testing and Materials.

[15] Wang, T., "Dynamic Response and Damage of Hard Object Impact on a Graphite/Epoxy Laminate", Ph.D. Dissertation, Purdue University, 1982.

[16] Yang, P.C., Norris, C.H. and Stavsky, Y., "Elastic Wave Propagation In Heterogeneous Plates", International Journal of Solids and Structures, Vol.2, 1966, pp.665-683.

[17] Mindlin, R.D., "Influence of Rotatory Inertia and Shear on Flexural Motions of Isotropic, Elastic Plates", Journal of Applied Mechanics, Vol.18, 1951, pp.31-38.

[18] Whitney, J.M. and Pagano, N.J., "Shear Deformation In Heterogeneous Anisotropic Plates", Journal of Applied Mechanics, Vol.37, 1970, pp.1031-1036.

[19] Sun, C.T. and Whitney, J.M., "On Theories for the Dynamic Response of Laminated Plates", Proceedings AIAA/ASME/SAE 13th Structures, Structural Dynamics, and Materials Conference, 1972, AIAA Paper No.72-398.

[20] Kraut, E., "Advances in the Theory of Anisotropic Elastic Wave Propagation", Review of Geophysics, Vol.1, No.3, 1963, pp.401-448.

[21] Keller, H.B., "Propagation of Stress Discontinuities In Inhomogeneous Elastic Media", SIAM Review, Vol.6, No.4, 1964, pp.356-382.

[22] Vlaar, N.J., "Ray Theory for an Anisotropic Inhomogeneous Elastic Medium", Bulletin of the Seismological Society of America, Vol.58, No.6, 1968, pp.2053-2072.

[23] Thomas, T.Y., Plastic Flow and Fracture in Solids, Academic Press, 1961, p.10.

[24] Courant, R. and Hilbert, D., Methods of Mathematical Physics, Vol.II, Interscience Publishers, 1962.

[25] Foreign Object Impact Damage to Composite, ASTM STP 568, American Society for Testing and Materials, 1973.

[26] Willis, J.R., "Hertzian Contact of Anisotropic Bodies", Journal of Mechanics and Physics of Solids, Vol.14, 1966, pp.163-176.

[27] Sun, C.T. and Chattopadhyay, S., "Dynamic Response of Anisotropic Laminated Plates Under Initial Stress to Impact of a Mass", Journal of Applied Mechanics, Vol.42, 1975, pp.693-698.

[28] Crook, A.W., "A Study of Some Impacts Between Metal Bodies by a Piezoelectric Method", Proceedings of Royal Society, London, A 212, 1952, p.377.

[29] Sun, C.T., Sankar, B.V. and Tan, T.M., "Dynamic Response of SMC to Impact of a Steel Ball", Advances in Aerospace Structures and Materials, The Winter Annual Meeting of the American Society of Mechanical Engineers, Washington,D.C., 1981.

[30] Operating Instructions, Model No. 200A05 Transducer, PCB Piezotronics, INC.

[31] Yang, S.H., "Static and Dynamic Contact Behavior of Composite Laminates", Ph.D. Dissertation, Purdue University, 1981.

[32] Yang, T.Y. and Sun, C.T., "Finite Elements for the Vibration of Framed Shear Walls", Journal of Sound and Vibration, Vol.27, No.3, 1973, pp.297-311.

[33] Tabor, D., The Hardness of Metal, Oxford University Press, 1951.

[34] Zienkiewicz, O.C., The Finite Element Method, 3rd edition, McGraw-Hill, 1977, Chapter 24, pp.677-757

APPENDIX

COMPUTER PROGRAM AND USER INSTRUCTIONS

The computer program used in this research was written following the program by Professor R. L. Taylor [34] with some necessary modification in order to solve the impact problems of laminated plates. A brief instruction of the input data for solving the impact problem specified in Chapter 4 of this report is given in this apppendix. The detailed descriptions of data input as well as the macro instructions for solving various types of problems can be found in [34]. The listing of input is shown at the end of this appendix, followed by the listing of program.

I. Title and control information:

1. Title card-Format(20A4)

Columns	Description
1-4	Must contain FECM
5-80	Alphanumeric information to be printed with output as page header.

2. Control information card-Format(6I5)

Columns	Description
1-5	Number of nodes (NUMNP)
6-10	Number of elements (NUMEL)

11-15	Number of layers (LAYER)
16-20	Spatial dimension (NDM)
21-25	Number of unknowns per node (NDF)
26-30	Number of nodes per element (NEN)

II. Mesh and Initial Information:

The input of each segment in this part of data is controlled by the alphanumeric value of macros, which must be followed immediately by the appropriate data. Except for the END card which must be the last card of this part, the data segemnts can be in any order. Each segment is terminated with blank card(s). The meaning of each macro is given by the following:

Macro	Data to be Input
COOR	Coordinate data
ELEM	Element data
BOUN	Boundary condition data
MATE	Material data
ROD	Initial condition of the projectile
EXPE	Experimental indentation laws data
END	Must be the last card of this part, terminates mesh and initial information input.

1. Coordinate data-Format(2I5,2F10.0)

Columns	Description
1-5	Nodal number
6-10	Generation increment

11-20	X-coordinate
21-30	Y-coordinate

2. Element data-Format(11I5)

Columns	Description
1-5	Element number
6-10	Node 1 number
11-15	Node 2 number
etc.	.
46-50	Node 9 number
51-55	Generation increment

3. Boundary condition data-Format(7I5)

Columns	Description
1-5	Node number
6-10	Generation increment
11-15	DOF 1 boundary code
16-20	DOF 2 boundary code
21-25	DOF 3 boundary code
26-30	DOF 4 boundary code
31-35	DOF 5 boundary code

4. Initial condition of the projectile-Format(2I5,F10.0)

Columns	Description
1-5	The node at which the projectile hits
6-10	DOF corresponding to the direction of impact
11-20	Initial impact velocity

5. Experimental indentation laws data-Format(4F10.0)

Columns	Description
1-10	Contact coefficient k
11-20	Critical indentation α_p
21-30	Constant s_p of Equation 3-9
31-40	Power index q of the unloading law

6. Material data

Card 1-format(3I5,F10.0)

Columns	Description
1-5	Order of Gauss quadrature for the numerical integration of the bending energy
6-10	Order of Gauss quadrature for the numerical integration of the transverse shear energy
11-15	Order of Gauss quadrature for strain outputs at Gauss points if >0 at nodal points if <0
16-25	Total thickness of the laminate

Card 2-Format(7F10.0)

Columns	Description
1-10	Mass density
11-20	Poisson's ratio ν_{12}
21-30	Longitudinal Young's modulus E_1
31-40	Transverse Young's modulus E_2
41-50	Shear modulus G_{12}
11-20	Shear modulus G_{13}
11-20	Shear modulus G_{23}

Card 3,4,··· Format(I5,F5.0,F10.0)

Columns	Description
1-5	Layer number
6-10	Fiber angle
11-20	Thickness of the layer

III. Macro Instructions:

The first instruction must be a card with MACR in columns 1 to 4. The macro instructions needed to solve the problem specified in Chepter 4 of this report are shown in the listing of input. Cards must be input in the precise order. The following is the explanation of each macro:

Columns 1-4	Columns 5-10	Columns 11-15	Description
LMAS			Lumped mass formulation
DT		V	Set time increment to value V
LOOP		N	Execute N times the instructions between this macro and macro NEXT
TIME			Advance time by DT value
RODP		N	Integration of the equations of motion using the finite difference method. Contact force, indentation and element strain will be stored stored every N steps in loop
DISP		N	Nodal displacements will be stored every N steps in loop
NEXT			End of loop instructions

END End of macro program instructions

IV. Termination of program execution

A card with STOP in columns 1 to 4 must be supplied at the end of the input data in order to properly terminate the execution.

The values of contact force, indentation, element strain, nodal displacement and the response of the projectile at each requested output time step are stored in program files which can be saved (say, copy to a magnetic tape) at the end of execution. Three program files, i.e.; tape3, tape8 and tape9 are used for data saving:

Tape3: Nodal displacement - Format(6E12.4)

Nodal displacements, from node 1 to node NUMNP, are saved on tape3 at each requested output time step according to the format.

Tape8: Element strain - Format(2I6,5E12.4)

Element strains, from element 1 to element NUMEL, and then from node 1 to node NEN of each element, are saved on on tape8 at each requested output time step.

Columns	Data saved
1-6	Element number
7-12	Node number of element
13-24	Bending strain κ_x
25-36	Bending strain κ_y

37-48 Bending strain κ_{xy}

49-60 Transverse shearing strain γ_{yz}

49-60 Transverse shearing strain γ_{xz}

Tape9: Contact force, indentation and the response of the projectile - Format(6E12.4)

The following information is saved on tape9 at each requested output time step:

Columns	Data saved
1-12	Contact force
13-24	Indentation
25-36	'Transducer' response (see Chapter 4)
37-48	Displacement of the projectile at the impacted end
37-48	Velocity of the projectile at the impacted end
37-48	Acceleration of the projectile at the impacted end

LISTING OF INPUT DATA

```
FECM **LOW VELOCITY IMPACT OF LAMINATED PLATE**
  609  140   20    2    5    9
COOR
    1    1        0.0    0.0000
    7    1        1.5    0.0000
   23    1        4.5    0.0000
   29    0        6.0    0.0000
   30    1        0.0    0.2500
   36    1        1.5    0.2500
   52    1        4.5    0.2500
   58    0        6.0    0.2500
   59    1        0.0    0.5000
   65    1        1.5    0.5000
   81    1        4.5    0.5000
   87    0        6.0    0.5000
   88    1        0.0    0.6875
   94    1        1.5    0.6875
  110    1        4.5    0.6875
  116    0        6.0    0.6875
  117    1        0.0    0.8750
  123    1        1.5    0.8750
  139    1        4.5    0.8750
  145    0        6.0    0.8750
  146    1        0.0    1.0625
  152    1        1.5    1.0625
  168    1        4.5    1.0625
  174    0        6.0    1.0625
  175    1        0.0    1.2500
  181    1        1.5    1.2500
  197    1        4.5    1.2500
  203    0        6.0    1.2500
  204    1        0.0    1.4375
  210    1        1.5    1.4375
  226    1        4.5    1.4375
  232    0        6.0    1.4375
  233    1        0.0    1.6250
  239    1        1.5    1.6250
  255    1        4.5    1.6250
  261    0        6.0    1.6250
  262    1        0.0    1.8125
  268    1        1.5    1.8125
  284    1        4.5    1.8125
  290    0        6.0    1.8125
  291    1        0.0    2.0000
  297    1        1.5    2.0000
  313    1        4.5    2.0000
  319    0        6.0    2.0000
  320    1        0.0    2.1875
  326    1        1.5    2.1875
  342    1        4.5    2.1875
  348    0        6.0    2.1875
  349    1        0.0    2.3750
  355    1        1.5    2.3750
  371    1        4.5    2.3750
  377    0        6.0    2.3750
  378    1        0.0    2.5625
  384    1        1.5    2.5625
  400    1        4.5    2.5625
  406    0        6.0    2.5625
  407    1        0.0    2.7500
  413    1        1.5    2.7500
  429    1        4.5    2.7500
  435    0        6.0    2.7500
  436    1        0.0    2.9375
  442    1        1.5    2.9375
```

```
  458     1         4.5     2.9375
  464     0         6.0     2.9375
  465     1         0.0     3.1250
  471     1         1.5     3.1250
  487     1         4.5     3.1250
  493     0         6.0     3.1250
  494     1         0.0     3.3125
  500     1         1.5     3.3125
  516     1         4.5     3.3125
  522     0         6.0     3.3125
  523     1         0.0     3.5000
  529     1         1.5     3.5000
  545     1         4.5     3.5000
  551     0         6.0     3.5000
  552     1         0.0     3.7500
  558     1         1.5     3.7500
  574     1         4.5     3.7500
  580     0         6.0     3.7500
  581     1         0.0     4.0000
  587     1         1.5     4.0000
  603     1         4.5     4.0000
  609     0         6.0     4.0000

ELEM
    1    1    3   61   59    2   32   60   30   31    2
   15   59   61  119  117   60   90  118   88   89    2
   29  117  119  177  175  118  148  176  146  147    2
   43  175  177  235  233  176  206  234  204  205    2
   57  233  235  293  291  234  264  292  262  263    2
   71  291  293  351  349  292  322  350  320  321    2
   85  349  351  409  407  350  380  408  378  379    2
   99  407  409  467  465  408  438  466  436  437    2
  113  465  467  525  523  466  496  524  494  495    2
  127  523  525  583  581  524  554  582  552  553    2

BOUN
    1    1   -1   -1    0    0    0
  609    0    1    1    0    0    0

ROD
  305    3      115.0

EXPE
  1912000. 0.0006564      0.094        2.0

MATE
    3    3   -3       .106
 0.000148        0.3 17500000.  1150000.   800000.   800000.   800000.
    1   0.    0.0053
    2  45.    0.0053
    3   0.    0.0053
    4 -45.    0.0053
    5   0.    0.0053
    6   0.    0.0053
    7  45.    0.0053
    8   0.    0.0053
    9 -45.    0.0053
   10   0.    0.0053
   11   0.    0.0053
   12 -45.    0.0053
   13   0.    0.0053
   14  45.    0.0053
   15   0.    0.0053
   16   0.    0.0053
   17 -45.    0.0053
   18   0.    0.0053
   19  45.    0.0053
   20   0.    0.0053

END
```

```
MACR
LMAS
DT          .2E-6
LOOP          10
TIME
RODP           5
DISP           5
NEXT
END
STOP
```

LISTING OF PROGRAM

```
      PROGRAM MAIN(INPUT,OUTPUT,TAPE5=INPUT,TAPE6=OUTPUT,TAPE2,TAPE3,     MAIN  1
     1            TAPE8,TAPE9)                                            MAIN  2
C****    MAIN PROGRAM                                                     MAIN  3
      LOGICAL PCOMP                                                       MAIN  4
      COMMON /PRSIZE/ MAX                                                 MAIN  5
      COMMON /CTDATA/ O,HEAD(20),NUMNP,NUMEL,LAYER,NEQ,IPR                MAIN  6
      COMMON /LABELS/ PDIS(6),A(6),BC(2),DI(6),CD(3),FD(3)                MAIN  7
      COMMON /LODATA/ NDF,NDM,NEN,NST,NKM                                 MAIN  8
      COMMON /PARATS/ NPAR(14),NEND                                       MAIN  9
      DIMENSION TITL(20),WD(3)                                            MAIN 10
      COMMON G(39000)                                                     MAIN 11
      DIMENSION M(39000)                                                  MAIN 12
      EQUIVALENCE (G(1),M(1))                                             MAIN 13
      MAX=39000                                                           MAIN 14
      WD(1)=4HFECM                                                        MAIN 15
      WD(2)=4HMACR                                                        MAIN 16
      WD(3)=4HSTOP                                                        MAIN 17
  999 READ(5,1000) TITL                                                   MAIN 18
      IF(PCOMP(TITL(1),WD(1))) GO TO 100                                  MAIN 19
      IF(PCOMP(TITL(1),WD(2))) GO TO 200                                  MAIN 20
      IF(PCOMP(TITL(1),WD(3))) STOP                                       MAIN 21
      GO TO 999                                                           MAIN 22
  100 DO 101 I=1,20                                                       MAIN 23
  101 HEAD(I)=TITL(I)                                                     MAIN 24
      READ(5,1001) NUMNP,NUMEL,LAYER,NDM,NDF,NEN                          MAIN 25
      WRITE(6,2000) HEAD,NUMNP,NUMEL,LAYER,NDM,NDF,NEN                    MAIN 26
      PDIS(2)=A(NDM)                                                      MAIN 27
      NST=NEN*NDF                                                         MAIN 28
      DO 110 I=1,14                                                       MAIN 29
  110 NPAR(I)=1                                                           MAIN 30
      NPAR(1)=1                                                           MAIN 31
      NPAR(2)=NPAR(1)+3*NST*IPR                                           MAIN 32
      NPAR(3)=NPAR(2)+NDM*NEN*IPR                                         MAIN 33
      NPAR(4)=NPAR(3)+NST                                                 MAIN 34
      NPAR(5)=NPAR(4)+NST*IPR                                             MAIN 35
      NPAR(6)=NPAR(5)+NEN*NUMEL                                           MAIN 36
      NPAR(7)=NPAR(6)+NDF*NUMNP                                           MAIN 37
      NPAR(8)=NPAR(7)+NDM*NUMNP*IPR                                       MAIN 38
      NPAR(9)=NPAR(8)+NDF*NUMNP*IPR                                       MAIN 39
      NPAR(10)=NPAR(9)+NDF*NUMNP                                          MAIN 40
      CALL SETMEM(NPAR(9))                                                MAIN 41
      CALL PZERO(G(1),NPAR(9))                                            MAIN 42
      CALL PMESH(M(NPAR(3)),G(NPAR(2)),M(NPAR(5)),M(NPAR(6)),             MAIN 43
     1   G(NPAR(7)),G(NPAR(8)),M(NPAR(9)),NDF,NDM,NEN,NKM)                MAIN 44
      NPAR(10)=NPAR(9)+NEQ                                                MAIN 45
      NPAR(11)=NPAR(10)+NDF*NUMNP*IPR                                     MAIN 46
      NEND=NPAR(11)+NEQ*IPR                                               MAIN 47
      NE=NEND                                                             MAIN 48
      CALL SETMEM(NE)                                                     MAIN 49
      CALL PZERO(G(NPAR(10)),NE-NPAR(10))                                 MAIN 50
      GO TO 999                                                           MAIN 51
  200 CALL PMACR(G(NPAR(1)),G(NPAR(2)),M(NPAR(3)),G(NPAR(4)),             MAIN 52
     1   M(NPAR(5)),M(NPAR(6)),G(NPAR(7)),G(NPAR(8)),M(NPAR(9)),          MAIN 53
     2   G(NPAR(10)),G(NPAR(11)),G(NE),NDF,NDM,NEN,NST)                   MAIN 54
      CALL PZERO(G,MAX)                                                   MAIN 55
      GO TO 999                                                           MAIN 56
 1000 FORMAT(20A4)                                                        MAIN 57
 1001 FORMAT(16I5)                                                        MAIN 58
 2000 FORMAT(1H1,20A4//                                                   MAIN 59
     1   5X,#C O N T R O L   I N F O R M A T I O N S#//                   MAIN 60
     2   10X,35HNUMBER OF NODAL POINTS                =,I6/               MAIN 61
     3   10X,35HNUMBER OF ELEMENTS                    =,I6/               MAIN 62
     4   10X,35HNUMBER OF MATERIAL LAYERS             =,I6/               MAIN 63
     5   10X,35HDIMENSION OF COORDINATE SPACE         =,I6/               MAIN 64
     6   10X,35HDEGREES OF FREEDOM FOR EACH NODE      =,I6/               MAIN 65
     7   10X,35HNODES PER ELEMENT (MAXIMUM)           =,IC)               MAIN 66
      END                                                                 MAIN 67
```

```
C
      BLOCK DATA                                                        BLOC  1
C****    BLOCK DATA                                                     BLOC  2
      COMMON /CTDATA/ O,HEAD(20),NUMNP,NUMEL,LAYER,NEQ,IPR              BLOC  3
      COMMON /LABELS/ PDIS(6),A(6),BC(2),DI(6),CD(3),FD(3)              BLOC  4
      DATA O/1H1/,IPR/1/                                                BLOC  5
      DATA PDIS/4H(I10,2H, ,4HF13.,4H4,  ,4HGE13,4H.4) /                BLOC  6
      DATA A/2H,1,2H,2,2H,3,2H,4,2H,5,2H,6/                             BLOC  7
      DATA BC/4H B.C,2H. /                                              BLOC  8
      DATA DI/4H DIS,2HPL,4H VEL,2HOC,4H ACC,2HEL/                      BLOC  9
      DATA CD/4H COD,4HRDIN,4HATES/                                     BLOC 10
      DATA FD/4H FOR,4HCE/D,4HISPL/                                     BLOC 11
      END                                                               BLOC 12
C
      SUBROUTINE PMACR(UL,XL,LD,P,IX,ID,X,F,JDIAG,DR,B,CT,NDF,NDM,      PMAC  1
     ^                 NEN,NST)                                         PMAC  2
C****    MACRO INSTRUCTION ROUTINE                                      PMAC  3
      LOGICAL PCOMP                                                     PMAC  4
      COMMON G(1)                                                       PMAC  5
      DIMENSION M(1)                                                    PMAC  6
      EQUIVALENCE (G(1),M(1))                                           PMAC  7
      COMMON /CTDATA/ O,HEAD(20),NUMNP,NUMEL,LAYER,NEQ,IPR              PMAC  8
      COMMON /PROLOD/ PROP                                              PMAC  9
      COMMON /TMDATA/ TIME,DT,DDT,FORCE,ALPHA                           PMAC 10
      COMMON /ISWIDX/ ISW                                               PMAC 11
      COMMON /PARATS/ NPAR(14),NEND                                     PMAC 12
      COMMON /RODATA/ VR,IQ,NDS                                         PMAC 13
      DIMENSION UL(1),XL(1),LD(1),P(1),IX(1),ID(1),X(1),F(1),           PMAC 14
     ^   JDIAG(1),DR(1),B(1)                                            PMAC 15
      DIMENSION WD(9),CT(4,16),LVE(9)                                   PMAC 16
      DATA WD/4HLOOP,4HNEXT,4HDT  ,4HPROP,4HLMAS,4HRODP,                PMAC 17
     1        4HSTRE,4HDISP,4HCHEC/                                     PMAC 18
      DATA NWD/9/,ENDM/4HEND /                                          PMAC 19
C....    INITIALIZATION                                                 PMAC 20
      DT   = 0.0                                                        PMAC 21
      PROP = 1.0                                                        PMAC 22
      TIME = 0.0                                                        PMAC 23
      NNEQ = NDF*NUMNP                                                  PMAC 24
      NPLD = 0                                                          PMAC 25
      FORCE= 0.                                                         PMAC 26
      ALPHA= 0.                                                         PMAC 27
      WRITE(6,2001) O,HEAD                                              PMAC 28
      LL = 1                                                            PMAC 29
      LMAX = 16                                                         PMAC 30
      CALL SETMEM(NEND+LMAX*4*IPR)                                      PMAC 31
      CT(1,1) = WD(1)                                                   PMAC 32
      CT(3,1) = 1.0                                                     PMAC 33
  100 LL = LL + 1                                                       PMAC 34
      IF(LL.LT.LMAX) GO TO 110                                          PMAC 35
      LMAX = LMAX + 16                                                  PMAC 36
      CALL SETMEM(NEND+LMAX*4*IPR)                                      PMAC 37
  110 READ(5,1000) (CT(J,LL),J=1,4)                                     PMAC 38
      WRITE(6,2000) (CT(J,LL),J=1,4)                                    PMAC 39
      IF(.NOT.PCOMP(CT(1,LL),ENDM)) GO TO 100                           PMAC 40
      CT(1,LL) = WD(2)                                                  PMAC 41
      NEND = NEND +LMAX*4*IPR                                           PMAC 42
      LX = LL - 1                                                       PMAC 43
      DO 230 L=1,LX                                                     PMAC 44
      IF(.NOT.PCOMP(CT(1,L),WD(1))) GO TO 230                           PMAC 45
      J = 1                                                             PMAC 46
      K = L + 1                                                         PMAC 47
      DO 210 I=K,LL                                                     PMAC 48
      IF(PCOMP(CT(1,I),WD(1))) J = J + 1                                PMAC 49
      IF(J .GT. 9) GO TO 401                                            PMAC 50
      IF(PCOMP(CT(1,I),WD(2))) J = J - 1                                PMAC 51
  210 IF(J.EQ.0) GO TO 220                                              PMAC 52
      GO TO 400                                                         PMAC 53
  220 CT(4,I) = L                                                       PMAC 54
      CT(4,L) = I                                                       PMAC 55
  230 CONTINUE                                                          PMAC 56
```

```
      J = 0                                                                 PMAC 57
      DO 240 L=1,LL                                                         PMAC 58
      IF(PCOMP(CT(1,L),WD(1))) J = J + 1                                    PMAC 59
  240 IF(PCOMP(CT(1,L),WD(2))) J = J - 1                                    PMAC 60
      IF(J.NE.0) GO TO 400                                                  PMAC 61
      LV = 0                                                                PMAC 62
      L = 1                                                                 PMAC 63
  299 DO 300 J=1,NWD                                                        PMAC 64
  300 IF(PCOMP(CT(1,L),WD(J))) GO TO 310                                    PMAC 65
      GO TO 330                                                             PMAC 66
  310 I = L - 1                                                             PMAC 67
      GO TO (1,2,3,4,5,6,7,8,9),J                                           PMAC 68
C.... SET LOOP START INDICATORS                                             PMAC 69
    1 LV = LV + 1                                                           PMAC 70
      LX = CT(4,L)                                                          PMAC 71
      LVE(LV) = LX                                                          PMAC 72
      CT(3,LX) = 1.                                                         PMAC 73
      GO TO 330                                                             PMAC 74
C.... LOOP TERMINATOR CONTROL                                               PMAC 75
    2 N = CT(4,L)                                                           PMAC 76
      CT(3,L) = CT(3,L) + 1.0                                               PMAC 77
      IF(CT(3,L).GT.CT(3,N)) LV = LV - 1                                    PMAC 78
      IF(CT(3,L).LE.CT(3,N)) L = N                                          PMAC 79
      GO TO 330                                                             PMAC 80
C.... SET TIME INCREMENT                                                    PMAC 81
    3 DT = CT(3,L)                                                          PMAC 82
      DDT= DT*DT                                                            PMAC 83
      GO TO 330                                                             PMAC 84
C.... INPUT PROPORTIONAL LOAD TABLE                                         PMAC 85
    4 NPLD = CT(3,L)                                                        PMAC 86
      PROP = PROPLD(0.,NPLD)                                                PMAC 87
      GO TO 330                                                             PMAC 88
C.... FORM LUMPED MASS MATRIX                                               PMAC 89
    5 ISW=3                                                                 PMAC 90
      CALL KMLIB                                                            PMAC 91
      GO TO 330                                                             PMAC 92
C.... IMPACT                                                                PMAC 93
    6 NDS=CT(3,L)                                                           PMAC 94
      IF(NDS.EQ.0) NDS=1                                                    PMAC 95
      CALL RODIPCT                                                          PMAC 96
      GO TO 330                                                             PMAC 97
C.... PRINT STRESS/STRAIN VALUE                                             PMAC 98
    7 ISW=4                                                                 PMAC 99
      LX = LVE(LV)                                                          PMAC100
      IF(AMOD(CT(3,LX),AMAX1(CT(3,L),1.))) 330,71,330                       PMAC101
   71 CALL FSTRLA(UL,XL,LD,P,IX,ID,X,F,JDIAG,DR,B,NDF,NDM,NEN,NST,NNEQ)     PMAC102
      GO TO 330                                                             PMAC103
C.... PRINT DISPLACEMENTS                                                   PMAC104
    8 LX = LVE(LV)                                                          PMAC105
      IF(AMOD(CT(3,LX),AMAX1(CT(3,L),1.))) 330,81,330                       PMAC106
   81 CALL FRTDIS(UL,ID,X,B,F,DR,NDM,NDF)                                   PMAC107
      GO TO 330                                                             PMAC108
C.... CHECK                                                                 PMAC109
    9 WRITE(6,5001) NEND,JDIAG(NEQ)                                         PMAC110
      RETURN                                                                PMAC111
  330 L=L+1                                                                 PMAC112
      IF(L.GT.LL) RETURN                                                    PMAC113
      GO TO 299                                                             PMAC114
C.... PRINT ERROR FORMATS                                                   PMAC115
  400 WRITE(6,4000)                                                         PMAC116
      RETURN                                                                PMAC117
  401 WRITE(6,4001)                                                         PMAC118
      RETURN                                                                PMAC119
C.... INPUT/OUTPUT FORMATS                                                  PMAC120
 1000 FORMAT(A4,1X,A4,1X,2F5.0)                                             PMAC121
 2000 FORMAT(10X,A4,1X,A4,1X,2G15.5)                                        PMAC122
 2001 FORMAT(A1,20A4//,5X,18HMACRO INSTRUCTIONS//5X,15HMACRO STATEMENT      PMAC123
     ^   ,5X,10HVARIABLE 1,5X,10HVARIABLE 2)                                PMAC124
 4000 FORMAT(5X,46H**PMACR ERROR 01** UNBALANCED LOOP/NEXT MACROS )         PMAC125
 4001 FORMAT(5X,45H**PMACR ERROE 02** LOOPS NESTED DEEPER THAN 8)           PMAC126
```

```
 5001 FORMAT(1H1,////5X,32HCHECK MESH DATA AND MEMORY SPACE//                PMAC127
     ^   10X,12H      NEND =,I10//10X,12HJDIAG(NEQ) =,I10)                  PMAC128
      END                                                                   PMAC129
C
      SUBROUTINE PZERO(V,NN)                                                PZER  1
C****    ZERO REAL ARRAY                                                    PZER  2
      DIMENSION V(NN)                                                       PZER  3
      DO 100 N=1,NN                                                         PZER  4
  100 V(N) = 0.0                                                            PZER  5
      RETURN                                                                PZER  6
      END                                                                   PZER  7
C
      SUBROUTINE SETMEM(J)                                                  SETM  1
C****    MONITOR AVAIABLE MEMORY IN BLANK COMMON                            SETM  2
      COMMON /PRSIZE/ MAX                                                   SETM  3
      K = J                                                                 SETM  4
      IF(K.LE.MAX) RETURN                                                   SETM  5
      WRITE(6,1000) K,MAX                                                   SETM  6
      STOP                                                                  SETM  7
 1000 FORMAT(5X,49H**SETMEM ERROR 01** INSUFFICIENT STORAGE IN BLANK,       SETM  8
     ^   8H COMMON //17X,11HREQUIRED  =,I8/17X,11HAVAILABLE =,I8)          SETM  9
      END                                                                   SETM 10
C
      LOGICAL FUNCTION PCOMP(A,B)                                           PCOM  1
C****    LOGICAL COMPARISON                                                 PCOM  2
      IF(A-B) 10,20,10                                                      PCOM  3
   10 PCOMP = .FALSE.                                                       PCOM  4
      RETURN                                                                PCOM  5
   20 PCOMP = .TRUE.                                                        PCOM  6
      RETURN                                                                PCOM  7
      END                                                                   PCOM  8
C
      SUBROUTINE ACTCOL(A,B,JDIAG,NEQ,AFAC,BACK,ISS)                        ACTC  1
C****    ACTIVE COLUMN PROFILE SYMMETRIC EQUATION SOLVER                    ACTC  2
      LOGICAL AFAC,BACK,FLAG                                                ACTC  3
      DIMENSION A(1),B(1),JDIAG(1)                                          ACTC  4
C....    FACTOR A TO UT*D*U, REDUCE B                                       ACTC  5
      FLAG=.FALSE.                                                          ACTC  6
      JR = 0                                                                ACTC  7
      DO 600 J=1,NEQ                                                        ACTC  8
      JD = JDIAG(J)                                                         ACTC  9
      JH = JD - JR                                                          ACTC 10
      IS = J - JH + 2                                                       ACTC 11
      IF(JH-2) 600,300,100                                                  ACTC 12
  100 IF(.NOT.AFAC) GO TO 500                                               ACTC 13
      IE = J - 1                                                            ACTC 14
      K = JR + 2                                                            ACTC 15
      ID = JDIAG(IS-1)                                                      ACTC 16
C....    REDUCE ALL EQUATIONS EXCEPT DIAGONAL                               ACTC 17
      DO 200 I=IS,IE                                                        ACTC 18
      IR = ID                                                               ACTC 19
      ID = JDIAG(I)                                                         ACTC 20
      IH = MIN0(ID-IR-1,I-IS+1)                                             ACTC 21
      IF(IH.GT.0) A(K)=A(K)-DOT(A(K-IH),A(ID-IH),IH)                        ACTC 22
  200 K = K + 1                                                             ACTC 23
C....    REDUCE DIGONAL TERM                                                ACTC 24
  300 IF(.NOT.AFAC) GO TO 500                                               ACTC 25
      IR = JR + 1                                                           ACTC 26
      IE = JD - 1                                                           ACTC 27
      K = J - JD                                                            ACTC 28
      DO 400 I=IR,IE                                                        ACTC 29
      ID = JDIAG(K+I)                                                       ACTC 30
      IF(A(ID)) 301,400,301                                                 ACTC 31
  301 D = A(I)                                                              ACTC 32
      A(I) = A(I)/A(ID)                                                     ACTC 33
      A(JD) = A(JD) - D*A(I)                                                ACTC 34
  400 CONTINUE                                                              ACTC 35
      IF(A(JD))450,450,500                                                  ACTC 36
  450 IF(ISS.NE.0) GO TO 500                                                ACTC 37
      IF(FLAG) GO TO 465                                                    ACTC 38
```

```
      WRITE(6,460)                                                    ACTC 39
 460  FORMAT(//50H**ACTCOL ERROR 01** STIFFNESS MATRIX NOT POSITIVE ,  ACTC 40
     1   8HDEFINITE)                                                  ACTC 41
      FLAG=.TRUE.                                                     ACTC 42
  465 WRITE(6,466) J,A(JD)                                            ACTC 43
  466 FORMAT(32H NONPOSITIVE PIVOT FOR EQUATION ,I4,5X,7HPOVIT =,     ACTC 44
     ^   E20.10)                                                      ACTC 45
C.... REDUCE RHS                                                      ACTC 46
  500 IF(BACK) B(J) = B(J) - DOT(A(JR+1),B(IS-1),JH-1)                ACTC 47
  600 JR = JD                                                         ACTC 48
      IF(FLAG) STOP                                                   ACTC 49
      IF(.NOT.BACK) RETURN                                            ACTC 50
C.... DIVIDED BY DIAGONAL PIVOTS                                      ACTC 51
      DO 700 I=1,NEQ                                                  ACTC 52
      ID = JDIAG(I)                                                   ACTC 53
      IF(A(ID)) 650,700,650                                           ACTC 54
  650 B(I) = B(I)/A(ID)                                               ACTC 55
  700 CONTINUE                                                        ACTC 56
C.... BACK SUBSTITUTE                                                 ACTC 57
      J = NEQ                                                         ACTC 58
      JD = JDIAG(J)                                                   ACTC 59
  800 D = B(J)                                                        ACTC 60
      J = J - 1                                                       ACTC 61
      IF(J.LE.0) RETURN                                               ACTC 62
      JR = JDIAG(J)                                                   ACTC 63
      IF(JD-JR.LE.1) GO TO 1000                                       ACTC 64
      IS = J - JD + JR + 2                                            ACTC 65
      K = JR - IS + 1                                                 ACTC 66
      DO 900 I=IS,J                                                   ACTC 67
  900 B(I) = B(I) - A(I+K)*D                                          ACTC 68
 1000 JD = JR                                                         ACTC 69
      GO TO 800                                                       ACTC 70
      END                                                             ACTC 71
C
      SUBROUTINE ADDSTF(A,S,P,JDIAG,LD,NST,NEL,FLG)                   ADDS  1
C**** ASSEMBLE GLOBAL ARRAYS                                          ADDS  2
      LOGICAL FLG                                                     ADDS  3
      DIMENSION A(1),S(NST,1),P(1),JDIAG(1),LD(1)                     ADDS  4
      DO 200 J=1,NEL                                                  ADDS  5
      K = LD(J)                                                       ADDS  6
      IF(K.EQ.0) GO TO 200                                            ADDS  7
      IF(FLG) GO TO 50                                                ADDS  8
      A(K)=A(K)+P(J)                                                  ADDS  9
      GO TO 200                                                       ADDS 10
   50 L = JDIAG(K) - K                                                ADDS 11
      DO 100 I=1,NEL                                                  ADDS 12
      M = LD(I)                                                       ADDS 13
      IF(M.GT.K .OR. M.EQ.0) GO TO 100                                ADDS 14
      M = L + M                                                       ADDS 15
      A(M)=A(M)+S(I,J)                                                ADDS 16
  100 CONTINUE                                                        ADDS 17
  200 CONTINUE                                                        ADDS 18
      RETURN                                                          ADDS 19
      END                                                             ADDS 20
C
      FUNCTION DOT(A,B,N)                                             DOT   1
C**** VECTOR DOT PRODUCT                                              DOT   2
      DIMENSION A(1),B(1)                                             DOT   3
      DOT = 0.0                                                       DOT   4
      DO 100 I=1,N                                                    DOT   5
  100 DOT = DOT + A(I)*B(I)                                           DOT   6
      RETURN                                                          DOT   7
      END                                                             DOT   8
C
      SUBROUTINE PLOAD(ID,F,B,NN,P)                                   PLOA  1
C**** FORM LOAD VECTOR IN COMPACT FORM                                PLOA  2
      DIMENSION ID(1),F(1),B(1)                                       PLOA  3
      DO 100 N=1,NN                                                   PLOA  4
      J=ID(N)                                                         PLOA  5
  100 IF(J.GT.0) B(J)=F(N)*P                                          PLOA  6
```

ORIGINAL PAGE IS
OF POOR QUALITY

```
      RETURN                                                            PLOA  7
      END                                                               PLOA  8
C
      FUNCTION PROPLD(T,J)                                              PROP  1
C****    PROPORTIONAL LOAD TABLE (ONE LOAD CARD ONLY)                   PROP  2
      COMMON /CTDATA/ O,HEAD(20),NUMNP,NUMEL,LAYER,NEQ,IPR              PROP  3
      DIMENSION A(5)                                                    PROP  4
      IF (J .LE. 0) GO TO 200                                           PROP  5
C....    INPUT TABLE OF PROPORTIONAL LOADS                              PROP  6
      I=1                                                               PROP  7
      READ(5,1000)    K,L,TMIN,TMAX,(A(KKK),KKK=1,5)                    PROP  8
      WRITE(6,2000) O,HEAD,I,K,L,TMIN,TMAX,(A(KKK),KKK=1,5)             PROP  9
      RETURN                                                            PROP 10
C....    COMPUTE VALUE AT TIME T                                        PROP 11
  200 PROPLD = 0.0                                                      PROP 12
      IF(T.LT.TMIN ,OR. T.GT.TMAX) RETURN                               PROP 13
      L = MAX0(L,1)                                                     PROP 14
      PROPLD = A(1)+A(2)*T+A(3)*(SIN(A(4)*T+A(5)))**L                   PROP 15
      RETURN                                                            PROP 16
 1000 FORMAT(2I5,7F10.0)                                                PROP 17
 2000 FORMAT(A1,20A4//5X,23HPROPORTIONAL LOAD TABLE//11H  NUMBER   ,    PROP 18
     1   43H TYPE    EXP.   MINIMUM TIME   MAXIMUM TIME,13X,2HA1,13X,  PROP 19
     2   2HA2,13X,2HA3,13X,2HA4,13X,2HA5/(3I8,7G15.5))                  PROP 20
      END                                                               PROP 21
C
      SUBROUTINE PRTDIS(UL,ID,X,B,F,T,NDM,NDF)                          PRTD  1
C****    OUTPUT NODAL VALUES                                            PRTD  2
      LOGICAL PCOMP                                                     PRTD  3
      COMMON /PROLOD/ PROP                                              PRTD  4
      COMMON /CTDATA/ O,HEAD(20),NUMNP,NUMEL,LAYER,NEQ,IPR              PRTD  5
      COMMON /LABELS/ PDIS(6),A(6),BC(2),DI(6),CD(3),FD(3)              PRTD  6
      COMMON /TMDATA/ TIME,DT,DDT,FORCE,ALPHA                           PRTD  7
      DIMENSION X(NDM,1),B(1),UL(6),ID(NDF,1),F(NDF,1),T(1)             PRTD  8
      DATA BL/4HBLAN/                                                   PRTD  9
      DO 102 N=1,NUMNP                                                  PRTD 10
      IF(PCOMP(X(1,N),BL)) GO TO 101                                    PRTD 11
      DO 100 I=1,NDF                                                    PRTD 12
      UL(I) = F(I,N)*PROP                                               PRTD 13
      K = IABS(ID(I,N))                                                 PRTD 14
  100 IF(K.GT.0) UL(I)=B(K)                                             PRTD 15
      T(N)=UL(3)                                                        PRTD 16
  101 CONTINUE                                                          PRTD 17
  102 CONTINUE                                                          PRTD 18
      WRITE(3,2001) (T(I),I=1,NUMNP)                                    PRTD 19
      RETURN                                                            PRTD 20
 2001 FORMAT(6E12.4)                                                    PRTD 21
      END                                                               PRTD 22
C
      SUBROUTINE FSTREA(UL,XL,LD,P,IX,ID,X,F,JDIAG,DR,B,NDF,NDM,NEN,    FSTR  1
     ^                  NST,NNEQ)                                       FSTR  2
C****    ELEMENT ROUTINE                                                FSTR  3
      COMMON /CTDATA/ O,HEAD(20),NUMNP,NUMEL,LAYER,NEQ,IPR              FSTR  4
      COMMON /ELDATA/ N,NEL,MCT                                         FSTR  5
      COMMON /ISWIDX/ ISW                                               FSTR  6
      COMMON /PROLOD/ PROP                                              FSTR  7
      DIMENSION UL(NDF,1),XL(NDM,1),LD(NDF,1),P(1),IX(NEN,1),           FSTR  8
     1   ID(NDF,1),X(NDM,1),F(NDF,1),JDIAG(1),DR(1),B(1),S(1)          FSTR  9
      IF(ISW.EQ.5) CALL PLOAD(ID,F,DR,NNEQ,PROP)                        FSTR 10
      MCT=0                                                             FSTR 11
      DO 110 N=1,NUMEL                                                  FSTR 12
      CALL PFORM(UL,XL,LD,IX,ID,X,F,B,NDF,NDM,NEN,ISW)                  FSTR 13
      CALL ELMT01(UL,XL,IX(1,N),P,NDF,NDM,NST,ISW)                      FSTR 14
      IF(ISW.NE.4) CALL ADDSTF(DR,S,P,JDIAG,LD,1,NEL*NDF,.FALSE.)       FSTR 15
  110 CONTINUE                                                          FSTR 16
      RETURN                                                            FSTR 17
      END                                                               FSTR 18
C
      SUBROUTINE PFORM(UL,XL,LD,IX,ID,X,F,U,NDF,NDM,NEN,ISW)            PFOR  1
C****    FORM LOCAL ARRAYS                                              PFOR  2
      COMMON /ELDATA/ N,NEL,MCT                                         PFOR  3
```

```
      COMMON /PROLOD/ PROP                                                    PFOR  4
      DIMENSION UL(NDF,1),XL(NDM,1),LD(NDF,1),IX(NEN,1),ID(NDF,1),            PFOR  5
     ^   X(NDM,1),F(NDF,1),U(1)                                              PFOR  6
      DO 108 I=1,NEN                                                          PFOR  7
      II = IX(I,N)                                                            PFOR  8
      IF(II .NE. 0) GO TO 105                                                 PFOR  9
      DO 103 J=1,NDM                                                          PFOR 10
  103 XL(J,I) = 0.                                                            PFOR 11
      DO 104 J=1,NDF                                                          PFOR 12
      UL(J,I) = 0.                                                            PFOR 13
  104 LD(J,I) = 0                                                             PFOR 14
      GO TO 108                                                               PFOR 15
  105 IID = II*NDF - NDF                                                      PFOR 16
      NEL = I                                                                 PFOR 17
      DO 106 J=1,NDM                                                          PFOR 18
  106 XL(J,I) = X(J,II)                                                       PFOR 19
      DO 107 J=1,NDF                                                          PFOR 20
      K = IABS(ID(J,II))                                                      PFOR 21
      UL(J,I) = F(J,II)*PROP                                                  PFOR 22
      IF(K.GT.0) UL(J,I)=U(K)                                                 PFOR 23
      IF(ISW.EQ.6) K=IID+J                                                    PFOR 24
  107 LD(J,I) = K                                                             PFOR 25
  108 CONTINUE                                                                PFOR 26
      RETURN                                                                  PFOR 27
      END                                                                     PFOR 28
C
      SUBROUTINE ELMT01(UL,XL,IX,P,NDF,NDM,NST,ISW)                           ELMT  1
C****    LINEAR ELASTIC IN-PLANE ^ BENDING ELEMENT ROUTINE                    ELMT  2
      LOGICAL TAN                                                             ELMT  3
      COMMON /ELDATA/ N,NEL,MCT                                               ELMT  4
      COMMON /MTDATA/ RHO,UU12,E1,E2,G12,G13,G23,THK,WIDTH                    ELMT  5
      COMMON /COMPST/ ABD(6,6),DS(2,2),QBR(3,3,25),QBS(2,2,25),               ELMT  6
     ^                TH(25),ZK(25)                                          ELMT  7
      COMMON /DMATIX/ D(10),DB(6,6),LINT                                      ELMT  8
      COMMON /TMDATA/ TIME,DT,DDT,FORCE,ALPHA                                 ELMT  9
      COMMON /GAUSSP/ SG(16),TG(16),WG(16)                                    ELMT 10
      COMMON /EXTRAS/ TAN                                                     ELMT 11
      DIMENSION UL(NDF,1),XL(NDM,1),IX(1),P(1),SHP(3,12),                     ELMT 12
     1   SIGT(3),SIGB(3),SIGS(2),EPT(3),EPB(3),EPS(2)                         ELMT 13
C                                                                             ELMT 14
      DO 20 L=1,NST                                                           ELMT 15
   20 P(L) = 0.0                                                              ELMT 16
C....    COMPUTE NEUTRAL STRAINS AND STRESS RESULTANTS                        ELMT 17
      L = D(1)                                                                ELMT 18
      IF(ISW.EQ.4) L=D(3)                                                     ELMT 19
      CALL PGAUSS(L,LINT)                                                     ELMT 20
      DO 600 L=1,LINT                                                         ELMT 21
C  ..    COMPUTE ELEMENT SHAPE FUNCTIONS                                      ELMT 22
      CALL SHAPE(SG(L),TG(L),XL,SHP,XSJ,NDM,NEL,IX,.FALSE.)                   ELMT 23
C  ..    COMPUTE STRAINS AND COORDINATES                                      ELMT 24
      DO 410 I=1,3                                                            ELMT 25
      EPT(I) = 0.0                                                            ELMT 26
  410 EPB(I) = 0.0                                                            ELMT 27
      DO 420 I=1,2                                                            ELMT 28
  420 EPS(I) = 0.0                                                            ELMT 29
      XX = 0.0                                                                ELMT 30
      YY = 0.0                                                                ELMT 31
      DO 430 J=1,NEL                                                          ELMT 32
      XX = XX + SHP(3,J)*XL(1,J)                                              ELMT 33
      YY = YY + SHP(3,J)*XL(2,J)                                              ELMT 34
C  ..    IN-PLANE STRAINS                                                     ELMT 35
      EPT(1) = EPT(1) + SHP(1,J)*UL(1,J)                                      ELMT 36
      EPT(2) = EPT(2) + SHP(2,J)*UL(2,J)                                      ELMT 37
      EPT(3) = EPT(3) + SHP(1,J)*UL(2,J) + SHP(2,J)*UL(1,J)                   ELMT 38
C  ..    BENDING CURVATURES                                                   ELMT 39
      EPB(1) = EPB(1) - SHP(1,J)*UL(4,J)                                      ELMT 40
      EPB(2) = EPB(2) - SHP(2,J)*UL(5,J)                                      ELMT 41
      EPB(3) = EPB(3) - SHP(1,J)*UL(5,J) - SHP(2,J)*UL(4,J)                   ELMT 42
C  ..    SHEARING STRAINS                                                     ELMT 43
      EPS(1) = EPS(1) + SHP(1,J)*UL(3,J) - SHP(3,J)*UL(4,J)                   ELMT 44
```

```
  430 EPS(2) = EPS(2) + SHP(2,J)*UL(3,J) - SHP(3,J)*UL(5,J)                ELMT 45
      IF(ISW.EQ.5.AND.TAN)                                                 ELMT 46
     ^  WRITE(9,9001) N,L,(EPB(II),II=1,3),(EPS(II),I=1,2)                 ELMT 47
 9001 FORMAT(2I6,5E12.4)                                                   ELMT 48
C  ..    COMPUTE STRESS RESULTANTS                                        ELMT 49
      DO 440 I=1,3                                                         ELMT 50
      SIGT(I) = 0.                                                         ELMT 51
      SIGB(I) = 0.                                                         ELMT 52
      DO 440 J=1,3                                                         ELMT 53
      SIGT(I) = SIGT(I) + ABD(I,J)*EPT(J) + ABD(I,J+3)*EPB(J)              ELMT 54
  440 SIGB(I) = SIGB(I) + ABD(I+3,J)*EPT(J) + ABD(I+3,J+3)*EPB(J)          ELMT 55
      DO 450 I=1,2                                                         ELMT 56
      SIGS(I) = 0.                                                         ELMT 57
      DO 450 J=1,2                                                         ELMT 58
  450 SIGS(I) = SIGS(I) + DS(I,J)*EPS(J)                                   ELMT 59
      IF(ISW.GT.4) GO TO 620                                               ELMT 60
C  ..    OUTPUT STRESS RESULTANTS AND STRAINS                             ELMT 61
      MCT = MCT - 2                                                        ELMT 62
      IF(MCT.GT.0) GO TO 470                                               ELMT 63
      WRITE(6,2001) TIME                                                   ELMT 64
      MCT = 50                                                             ELMT 65
  470 WRITE(6,2002) N,XX,YY,EPT,EPB,EPS,SIGT,SIGB,SIGS                     ELMT 66
      GO TO 600                                                            ELMT 67
C....    COMPUTE INTERAL FORCES                                           ELMT 68
  620 DV = XSJ*WG(L)                                                       ELMT 69
      J1 = 1                                                               ELMT 70
      DO 610 J=1,NEL                                                       ELMT 71
      P(J1  ) = P(J1  ) - (SHP(1,J)*SIGT(1)+SHP(2,J)*SIGT(3))*DV           ELMT 72
      P(J1+1) = P(J1+1) - (SHP(2,J)*SIGT(2)+SHP(1,J)*SIGT(3))*DV           ELMT 73
      P(J1+2) = P(J1+2) - (SHP(1,J)*SIGS(1)+SHP(2,J)*SIGS(2))*DV           ELMT 74
      P(J1+3) = P(J1+3) + (SHP(1,J)*SIGB(1)+SHP(2,J)*SIGB(3)+SHP(3,J)      ELMT 75
     ^                    *SIGS(1))*DV                                     ELMT 76
      P(J1+4) = P(J1+4) + (SHP(2,J)*SIGB(2)+SHP(1,J)*SIGB(3)+SHP(3,J)      ELMT 77
     ^                    *SIGS(2))*DV                                     ELMT 78
  610 J1 = J1 + NDF                                                        ELMT 79
  600 CONTINUE                                                             ELMT 80
      RETURN                                                               ELMT 81
C                                                                          ELMT 82
 2001 FORMAT(1H1//                                                         ELMT 83
     ^   5X,6HTIME =,E12.3//5X,33HELEMENT STRAINS/STRESS RESULTANTS//      ELMT 84
     1   8H ELEMENT,3X,7H1-COORD,3X,7H2-COORD,4X,9HXX-STRAIN,4X,           ELMT 85
     2   9HYY-STRAIN,4X,9HXY-STRAIN,3X,10HKXX-STRAIN,3X,                   ELMT 86
     3   10HKYY-STRAIN,3X,10HKXY-STRAIN,4X,9HSX-STRAIN,4X,                 ELMT 87
     4   9HSY-STRAIN/28X,8(6X,7H-STRESS)/)                                 ELMT 88
 2002 FORMAT(I8,2F10.4,8E13.4/28X,8E13.4)                                  ELMT 89
      END                                                                  ELMT 90
C
      SUBROUTINE PGAUSS(LL,LINT)                                           PGAU  1
C****    GAUSSIAN POINTS AND WEIGHTS FOR TWO DIMENSIONS                   PGAU  2
      COMMON /GAUSSP/ SG(16),TG(16),WG(16)                                 PGAU  3
      DIMENSION LR(9),LZ(9),LW(9),WR(2),GR(2),GC(2)                        PGAU  4
      DATA LR/-1,1,1,-1,0,1,0,-1,0/,LZ/-1,-1,1,1,-1,0,1,0,0/               PGAU  5
      DATA LW/4*25,4*40,64/                                                PGAU  6
      DATA GR/0.861136311594053,0.339981043584856/                         PGAU  7
      DATA GC/1.0,0.3333333333/                                            PGAU  8
      DATA WR/0.347854845137454,0.652145154862546/                         PGAU  9
      LINT = LL*LL                                                         PGAU 10
      L=IABS(LL)                                                           PGAU 11
      GO TO (1,2,3,4),L                                                    PGAU 12
C....    1X1 INTEGRATION                                                  PGAU 13
    1 SG(1) = 0.                                                           PGAU 14
      TG(1) = 0.                                                           PGAU 15
      WG(1) = 4.                                                           PGAU 16
      RETURN                                                               PGAU 17
C....    2X2 INTEGRATION                                                  PGAU 18
    2 G = 1./SQRT(3.)                                                      PGAU 19
      IF(LL.LT.0) G=1.                                                     PGAU 20
      DO 21 I=1,4                                                          PGAU 21
      SG(I) = G*LR(I)                                                      PGAU 22
      TG(I) = G*LZ(I)                                                      PGAU 23
```

```
   21 WG(I) = 1.                                                        PGAU 24
      RETURN                                                            PGAU 25
C....    3X3 INTEGRATION                                               PGAU 26
    3 G = SQRT(0.6)                                                     PGAU 27
      IF(LL..LT.0) G=1.                                                 PGAU 28
      H = 1./81.                                                        PGAU 29
      DO 31 I=1,9                                                       PGAU 30
      SG(I) = G*LR(I)                                                   PGAU 31
      TG(I) = G*LZ(I)                                                   PGAU 32
   31 WG(I) = H*LW(I)                                                   PGAU 33
      RETURN                                                            PGAU 34
C....    4X4 INTEGRATION                                               PGAU 35
    4 DO 41 I=1,4                                                       PGAU 36
      I1 = 1+MOD(I+1,2)                                                 PGAU 37
      I2 = 1                                                            PGAU 38
      IF(I.GT.2) I2 = 2                                                 PGAU 39
      DO 41 J=1,4                                                       PGAU 40
      JJ = (I-1)*4+J                                                    PGAU 41
      SG(JJ) = LR(J)*GR(I1)                                             PGAU 42
      IF(LL.LT.0) SG(JJ) = LR(J)*GC(I1)                                 PGAU 43
      TG(JJ) = LZ(J)*GR(I2)                                             PGAU 44
      IF(LL.LT.0) TG(JJ) = LZ(J)*GC(I2)                                 PGAU 45
   41 WG(JJ) = WR(I1)*WR(I2)                                            PGAU 46
      RETURN                                                            PGAU 47
      END                                                               PGAU 48
C
      SUBROUTINE SHAPE(SS,TT,X,SHP,XSJ,NDM,NEL,IX,FLG)                  SHAP  1
C****    SHAPE FUNCTION ROUTINE FOR TWO DIMENSIONAL ELEMENTS           SHAP  2
      LOGICAL FLG                                                       SHAP  3
      DIMENSION SHP(3,4),X(NDM,1),S(4),T(4),XS(2,2),SX(2,2),IX(9)       SHAP  4
      DATA S/-0.5,0.5,0.5,-0.5/,T/-0.5,-0.5,0.5,0.5/                    SHAP  5
C....    FORM 4-NODE QUADRILATERIAL SHAPE FUNCTIONS                     SHAP  6
      DO 100 I=1,4                                                      SHAP  7
      SHP(3,I) = (0.5+S(I)*SS)*(0.5+T(I)*TT)                            SHAP  8
      SHP(1,I) = S(I)*(0.5+T(I)*TT)                                     SHAP  9
  100 SHP(2,I) = T(I)*(0.5+S(I)*SS)                                     SHAP 10
      IF(NEL.GE.4) GO TO 120                                            SHAP 11
C....    FORM TRIANGLE BY ADDING THIRD AND FOURTH TOGETHER              SHAP 12
      DO 110 I=1,3                                                      SHAP 13
  110 SHP(I,3) = SHP(I,3)+SHP(I,4)                                      SHAP 14
C....    ADD QUADRATIC TERMS IF NECESSARY                               SHAP 15
  120 IF(NEL.GT.4 .AND. NEL.LT.10) CALL SHAP2(SS,TT,SHP,IX,NEL)         SHAP 16
C....    ADD CUBIC TERMS IF NECESSARY                                   SHAP 17
      IF(NEL.GT.9) CALL SHAP3(SS,TT,SHP,IX,NEL)                         SHAP 18
C....    CONSTRUCT JACOBIAN AND ITS INVERSE                             SHAP 19
      DO 130 I=1,NDM                                                    SHAP 20
      DO 130 J=1,2                                                      SHAP 21
      XS(I,J) = 0.0                                                     SHAP 22
      DO 130 K=1,NEL                                                    SHAP 23
  130 XS(I,J) = XS(I,J)+ X(J,K)*SHP(I,K)                                SHAP 24
      XSJ = XS(1,1)*XS(2,2)-XS(1,2)*XS(2,1)                             SHAP 25
      IF(XSJ .GT. 0.00000001) GO TO 135                                 SHAP 26
      WRITE(6,2000) IX                                                  SHAP 27
C     STOP                                                              SHAP 28
  135 IF(FLG) RETURN                                                    SHAP 29
      SX(1,1) = XS(2,2)/XSJ                                             SHAP 30
      SX(2,2) = XS(1,1)/XSJ                                             SHAP 31
      SX(1,2) = -XS(1,2)/XSJ                                            SHAP 32
      SX(2,1) = -XS(2,1)/XSJ                                            SHAP 33
C....    FORM GLOBAL DERIVATIVES                                        SHAP 34
      DO 140 I=1,NEL                                                    SHAP 35
      TP      = SHP(1,I)*SX(1,1)+SHP(2,I)*SX(2,1)                       SHAP 36
      SHP(2,I) = SHP(1,I)*SX(1,2)+SHP(2,I)*SX(2,2)                      SHAP 37
  140 SHP(1,I) = TP                                                     SHAP 38
      RETURN                                                            SHAP 39
 2000 FORMAT(5X,67H**SHAPE ERROR 01** ZERO OR NEGATIVE JACOBIAN DET. FOR SHAP 40
     ^ELEMENT NODES:/20X,12I4)                                          SHAP 41
      END                                                               SHAP 42
C
      SUBROUTINE SHAP2(S,T,SHP,IX,NEL)                                  SHAP  1
```

```
C****    ADD QUADRATIC FUNCTIONS AS NECESSARY                          SHAP  2
      DIMENSION IX(9),SHP(3,12)                                        SHAP  3
      S2 = (1.-S*S)/2.                                                 SHAP  4
      T2 = (1.-T*T)/2.                                                 SHAP  5
      DO 100 I=5,NEL                                                   SHAP  6
      DO 100 J=1,3                                                     SHAP  7
  100 SHP(J,I) = 0.0                                                   SHAP  8
C....    MIDSIDE NODES (SERENDIPITY)                                   SHAP  9
      IF(IX(5).EQ.0) GO TO 101                                         SHAP 10
      SHP(1,5) = -S*(1.-T)                                             SHAP 11
      SHP(2,5) =  -S2                                                  SHAP 12
      SHP(3,5) = S2*(1.-T)                                             SHAP 13
  101 IF(NEL.LT.6) GO TO 107                                           SHAP 14
      IF(IX(6).EQ.0) GO TO 102                                         SHAP 15
      SHP(1,6) = T2                                                    SHAP 16
      SHP(2,6) = -T*(1.+S)                                             SHAP 17
      SHP(3,6) = T2*(1.+S)                                             SHAP 18
  102 IF(NEL.LT.7) GO TO 107                                           SHAP 19
      IF(IX(7).EQ.0) GO TO 103                                         SHAP 20
      SHP(1,7) = -S*(1.+T)                                             SHAP 21
      SHP(2,7) = S2                                                    SHAP 22
      SHP(3,7) = S2*(1.+T)                                             SHAP 23
  103 IF(NEL.LT.8) GO TO 107                                           SHAP 24
      IF(IX(8).EQ.0) GO TO 104                                         SHAP 25
      SHP(1,8) = -T2                                                   SHAP 26
      SHP(2,8) = -T*(1.-S)                                             SHAP 27
      SHP(3,8) = T2*(1.-S)                                             SHAP 28
C....    INTERIOR NODE (LAGRANGIAN)                                    SHAP 29
  104 IF(NEL.LT.9) GO TO 107                                           SHAP 30
      IF(IX(9).EQ.0) GO TO 107                                         SHAP 31
      SHP(1,9) = -4.*S*T2                                              SHAP 32
      SHP(2,9) = -4.*T*S2                                              SHAP 33
      SHP(3,9) = 4.*S2*T2                                              SHAP 34
C....    CORRECT EDGE NODES FOR INTERIOR NODE(LAGRANGIAN)              SHAP 35
      DO 106 J=1,3                                                     SHAP 36
      DO 105 I=1,4                                                     SHAP 37
  105 SHP(J,I) = SHP(J,I) - 0.25*SHP(J,9)                              SHAP 38
      DO 106 I=5,8                                                     SHAP 39
  106 IF(IX(I).NE.0) SHP(J,I) = SHP(J,I) -0.5*SHP(J,9)                 SHAP 40
C....    CORRECT CORNER NODES FOR PRESENCE OF MIDSIDE NODES            SHAP 41
  107 K = 8                                                            SHAP 42
      DO 109 I=1,4                                                     SHAP 43
      L = I + 4                                                        SHAP 44
      DO 108 J=1,3                                                     SHAP 45
  108 SHP(J,I) = SHP(J,I) - 0.5*(SHP(J,K)+SHP(J,L))                    SHAP 46
  109 K = L                                                            SHAP 47
      RETURN                                                           SHAP 48
      END                                                              SHAP 49
C
      SUBROUTINE SHAP3(S,T,SHP,IX,NEL)                                 SHAP  1
C****    ADD CUBIC FUNCTION AS NECESSARY (SERENDIPITY)                 SHAP  2
      DIMENSION IX(12),SHP(3,12)                                       SHAP  3
      DO 100 I=5,NEL                                                   SHAP  4
      DO 100 J=1,3                                                     SHAP  5
  100 SHP(J,I)=0.0                                                     SHAP  6
      IF(IX(5).EQ.0) GO TO 101                                         SHAP  7
      S1=-1./3.                                                        SHAP  8
      T1=-1.                                                           SHAP  9
      CALL CSHAPE(S,T,S1,T1,SHP,1,5)                                   SHAP 10
  101 IF(IX(6).EQ.0) GO TO 102                                         SHAP 11
      S1=1.                                                            SHAP 12
      T1=-1./3.                                                        SHAP 13
      CALL CSHAPE(S,T,S1,T1,SHP,2,6)                                   SHAP 14
  102 IF(IX(7).EQ.0) GO TO 103                                         SHAP 15
      S1=1./3.                                                         SHAP 16
      T1=1.                                                            SHAP 17
      CALL CSHAPE(S,T,S1,T1,SHP,1,7)                                   SHAP 18
  103 IF(IX(8).EQ.0) GO TO 104                                         SHAP 19
      S1=-1.                                                           SHAP 20
      T1=1./3.                                                         SHAP 21
```

```
      CALL CSHAPE(S,T,S1,T1,SHP,2,8)                                    SHAP 22
  104 IF(IX(9).EQ.0) GO TO 105                                          SHAP 23
      S1=-1.                                                            SHAP 24
      T1=-1./3.                                                         SHAP 25
      CALL CSHAPE(S,T,S1,T1,SHP,2,9)                                    SHAP 26
  105 IF(NEL.LT.10) GO TO 200                                           SHAP 27
      IF(IX(10).EQ.0) GO TO 106                                         SHAP 28
      S1=1./3.                                                          SHAP 29
      T1=-1.                                                            SHAP 30
      CALL CSHAPE(S,T,S1,T1,SHP,1,10)                                   SHAP 31
  106 IF(NEL.LT.11) GO TO 200                                           SHAP 32
      IF(IX(11).EQ.0) GO TO 107                                         SHAP 33
      S1=1.                                                             SHAP 34
      T1=1./3.                                                          SHAP 35
      CALL CSHAPE(S,T,S1,T1,SHP,2,11)                                   SHAP 36
  107 IF(NEL.LT.12) GO TO 200                                           SHAP 37
      IF(IX(12).EQ.0) GO TO 200                                         SHAP 38
      S1=-1./3.                                                         SHAP 39
      T1=1.                                                             SHAP 40
      CALL CSHAPE(S,T,S1,T1,SHP,1,12)                                   SHAP 41
C....    CORRECT CORNER NODES                                           SHAP 42
  200 DO 210 I=1,4                                                      SHAP 43
      I1=I+4                                                            SHAP 44
      I2=I+8                                                            SHAP 45
      IF(I.EQ.1) I3=I+7                                                 SHAP 46
      IF(I.GT.1) I3=I+3                                                 SHAP 47
      IF(I.LT.4) I4=I+9                                                 SHAP 48
      IF(I.EQ.4) I4=I+5                                                 SHAP 49
      DO 210 J=1,3                                                      SHAP 50
  210 SHP(J,I)=SHP(J,I)-2./3.*(SHP(J,I1)+SHP(J,I2))-1./3.*(SHP(J,I3)    SHAP 51
     ^   +SHP(J,I4))                                                    SHAP 52
      RETURN                                                            SHAP 53
      END                                                               SHAP 54
C
      SUBROUTINE CSHAPE(S,T,S1,T1,SHP,K,L)                              CSHA  1
C****    SUPPLEMENTAL ROUTINE FOR THE SHAPE FUNCTIONS                   CSHA  2
      DIMENSION SHP(3,12)                                               CSHA  3
      C=9./32.                                                          CSHA  4
      GO TO (1,2),K                                                     CSHA  5
    1 SHP(1,L)=C*(1.+T1*T)*(9.*S1-2.*S-27.*S1*S*S)                      CSHA  6
      SHP(2,L)=C*T1*(1.-S*S)*(1.+9.*S1*S)                               CSHA  7
      SHP(3,L)=C*(1.+T1*T)*(1.-S*S)*(1.+9.*S1*S)                        CSHA  8
      RETURN                                                            CSHA  9
    2 SHP(1,L)=C*S1*(1.-T*T)*(1.+9.*T1*T)                               CSHA 10
      SHP(2,L)=C*(1.+S1*S)*(9.*T1-2.*T-27.*T1*T*T)                      CSHA 11
      SHP(3,L)=C*(1.+S1*S)*(1.-T*T)*(1.+9.*T1*T)                        CSHA 12
      RETURN                                                            CSHA 13
      END                                                               CSHA 14
C
      SUBROUTINE PMESH(IDL,XL,IX,ID,X,F,JDIAG,NDF,NDM,NEN,NKM)          PMES  1
C****    I N P U T   M E S H   D A T A                                  PMES  2
      LOGICAL PRT,ERR,PCOMP                                             PMES  3
      COMMON /CTDATA/ O,HEAD(20),NUMNP,NUMEL,LAYER,NEQ,IPR              PMES  4
      COMMON /MTDATA/ RHO,VU12,E1,E2,G12,G13,G23,THK,WIDTH              PMES  5
      COMMON /LABELS/ PDIS(6),A(6),BC(2),DI(6),CD(3),FD(3)              PMES  6
      COMMON /EXDATA/ QLAW(4)                                           PMES  7
      COMMON /RODATA/ VR,IO,NDS                                         PMES  8
      DIMENSION IDL(6),XL(7),IX(NEN,1),ID(NDF,1),X(NDM,1),              PMES  9
     ^          F(NDF,1),DUM(1),WD(13),JDIAG(1)                        PMES 10
      DATA WD/4HCOOR,4HELEM,4HMATE,4HBOUN,4HFORC,4HROD ,                PMES 11
     ^        4HEND ,4HPRIN,4HNOPR,4HPAGE,4HEXPE/                       PMES 12
      DATA BL/4HBLAN/,LIST/11/,PRT/.TRUE./                              PMES 13
C....    INITIALIZE ARRAYS                                              PMES 14
      ERR = .FALSE.                                                     PMES 15
      DO 501 I=1,4                                                      PMES 16
  501 QLAW(I)=0.                                                        PMES 17
      DO 502 N=1,NUMNP                                                  PMES 18
      DO 502 I=1,NDF                                                    PMES 19
      ID(I,N)=0                                                         PMES 20
      F(I,N)=0.                                                         PMES 21
```

```
  502 CONTINUE                                                          PMES 22
C....    READ A CARD AND COMPARE WITH MACRO LIST                        PMES 23
   10 READ(5,1000) CC                                                   PMES 24
      DO 20 I=1,LIST                                                    PMES 25
   20 IF(PCOMP(CC,WD(I))) GO TO 30                                      PMES 26
      GO TO 10                                                          PMES 27
   30 GO TO (1,2,3,4,5,6,7,8,9,11,12),I                                 PMES 28
C....    NODAL COORDINATE DATA INPUT                                    PMES 29
    1 DO 102 N=1,NUMNP                                                  PMES 30
  102 X(1,N)= BL                                                        PMES 31
      CALL GENVEC(NDM,XL,X,CD,PRT,ERR)                                  PMES 32
      GO TO 10                                                          PMES 33
C....    ELEMENT DATA INPUT                                             PMES 34
    2 L=0                                                               PMES 35
      DO 206 I=1,NUMEL,50                                               PMES 36
      IF(PRT) WRITE(6,2001) O,HEAD, (K,K=1,NEN)                         PMES 37
      J = MINO(NUMEL,I+49)                                              PMES 38
      DO 206 N=I,J                                                      PMES 39
      IF(L-N) 200,202,203                                               PMES 40
  200 READ(5,1001) L,(IDL(K),K=1,NEN),LX                                PMES 41
      IF(L.EQ.0) L=NUMEL+1                                              PMES 42
      IF(LX.EQ.0) LX=1                                                  PMES 43
      IF(L-N) 201,202,203                                               PMES 44
  201 WRITE(6,3001) L,N                                                 PMES 45
      ERR = .TRUE.                                                      PMES 46
      GO TO 206                                                         PMES 47
  202 NX = LX                                                           PMES 48
      DO 207 K=1,NEN                                                    PMES 49
  207 IX(K,L) = IDL(K)                                                  PMES 50
      GO TO 205                                                         PMES 51
  203 IX(NEN,N) = IX(NEN,N-1)                                           PMES 52
      DO 204 K=1,NEN                                                    PMES 53
      IX(K,N) = IX(K,N-1) + NX                                          PMES 54
  204 IF(IX(K,N-1).EQ.0) IX(K,N) = 0                                    PMES 55
  205 IF(PRT) WRITE(6,2002) N,(IX(K,N),K=1,NEN)                         PMES 56
  206 CONTINUE                                                          PMES 57
      GO TO 10                                                          PMES 58
C....    MATERIAL DATA INPUT                                            PMES 59
    3 WRITE(6,2004) O,HEAD                                              PMES 60
      CALL MATLIB                                                       PMES 61
      GO TO 10                                                          PMES 62
C....    READ IN THE RESTRAINT CONDITIONS FOR EACH NODE                 PMES 63
    4 IF(PRT) WRITE(6,2000) O,HEAD,(I,BC,I=1,NDF)                       PMES 64
      N = 0                                                             PMES 65
      NG = 0                                                            PMES 66
  420 L = N                                                             PMES 67
      LG = NG                                                           PMES 68
      READ(5,1001) N,NG,IDL                                             PMES 69
      IF(N.LE.0 .OR. N.GT.NUMNP) GO TO 50                               PMES 70
      DO 41 I=1,NDF                                                     PMES 71
      ID(I,N) = IDL(I)                                                  PMES 72
   41 IF(L.NE.0 .AND. IDL(I).EQ.0 .AND. ID(I,L).LT.0) ID(I,N)=-1        PMES 73
      LG = ISIGN(LG,N-L)                                                PMES 74
   42 L = L+LG                                                          PMES 75
      IF((N-L)*LG .LE. 0) GO TO 420                                     PMES 76
      DO 43 I=1,NDF                                                     PMES 77
   43 IF(ID(I,L-LG) .LT. 0)  ID(I,L) = -1                               PMES 78
      GO TO 42                                                          PMES 79
   50 DO 48 N=1,NUMNP                                                   PMES 80
      DO 46 I=1,NDF                                                     PMES 81
   46 IF(ID(I,N) .NE. 0)  GO TO 47                                      PMES 82
      GO TO 48                                                          PMES 83
   47 IF(PRT) WRITE(6,2007) N,(ID(I,N),I=1,NDF)                         PMES 84
   48 CONTINUE                                                          PMES 85
      GO TO 10                                                          PMES 86
C....    FORCE/DISPL DATA INPUT                                         PMES 87
    5 CALL GENVEC(NDF,XL,F,FD,PRT,ERR)                                  PMES 88
      GO TO 10                                                          PMES 89
C....    END OF MESH DATA INPUT                                         PMES 90
C....    COMPUTE THE PROFILE OF GLOBLE ARRAYS                           PMES 91
```

```
    7 IF(ERR) STOP                                                        PMES 92
      CALL PROFIL(JDIAG,ID,IX,NDF,NEN,NKM,PRT)                            PMES 93
      RETURN                                                              PMES 94
C....    PRINT OPTION                                                     PMES 95
    8 PRT = .TRUE.                                                        PMES 96
      GO TO 10                                                            PMES 97
C....    NOPRINT OPTION                                                   PMES 98
    9 PRT = .FALSE.                                                       PMES 99
      GO TO 10                                                            PMES100
C....    READ IN PAPER EJECTION OPTION                                    PMES101
   11 READ(5,1000) O                                                      PMES102
      GO TO 10                                                            PMES103
C....    INPUT EXPERIMENTAL INDENTATION LAW                               PMES104
   12 READ(5,1007) (QLAW(I),I=1,4)                                        PMES105
      WRITE(6,2008) O,HEAD,(QLAW(I),I=1,4)                                PMES106
      GO TO 10                                                            PMES107
C....    INPUT INITIAL IMPACT CONDITION                                   PMES108
    6 WRITE(6,2009) O,HEAD                                                PMES109
      READ(5,1002) NQ,INDF,VR                                             PMES110
      WRITE(6,2010) NQ,INDF,VR                                            PMES111
      F(INDF,NQ)=1.0                                                      PMES112
      IQ=ID(INDF,NQ)                                                      PMES113
      GO TO 10                                                            PMES114
C....    INPUT/OUTPUT FORMATS                                             PMES115
 1000 FORMAT(A4,75X,A1)                                                   PMES116
 1001 FORMAT(16I5)                                                        PMES117
 1002 FORMAT(2I5,F10.0)                                                   PMES118
 1007 FORMAT(4F10.0)                                                      PMES119
 2000 FORMAT(A1,20A4//5X,10HNODAL B.C.,7X//6X,5HNODE ,9(I7,A4,A2)/1X)     PMES120
 2001 FORMAT(A1,20A4//5X,8HELEMENTS//3X,7HELEMENT,                        PMES121
     ^       14(I3,5H NODE)/(20X,14(I3,5H NODE)))                         PMES122
 2002 FORMAT(I10,14I8/(10X,14I8))                                         PMES123
 2004 FORMAT(A1,20A4//5X,19HMATERIAL PROPERTIES)                          PMES124
 2007 FORMAT(I10,9I13)                                                    PMES125
 2008 FORMAT(A1,20A4//5X,*EXPERIMENTAL INDENTATION LAW*//                 PMES126
     1    10X,*CONTACT COEFFICIENT:          *,E12.4/                     PMES127
     2    10X,*CRITICAL INDENTATION:         * E12.4/                     PMES128
     3    10X,*CONSTANT S:                   * E12.4/                     PMES129
     4    10X,*POWER INDEX OF UNLOADING LAW:* F12.3)                      PMES130
 3001 FORMAT(5X,26H**PMESH ERROR 01** ELEMENT,I5,                         PMES131
     ^    22H APPEARS AFTER ELEMENT,I5)                                   PMES132
 2009 FORMAT(A1,20A4,//5X,*IMPACT OF LAMINATED PLATE*)                    PMES133
 2010 FORMAT(//10X,*IMPACT NODAL POINT:      *,I10/                       PMES134
     ^          10X,*IMPACT D.O.F.:          *,I10/                      PMES135
     ^          10X,*INITIAL IMPACT VELOCITY:*,E12.4)                    PMES136
      END                                                                 PMES137
C
      SUBROUTINE GENVEC(NDM,XL,X,CD,PRT,ERR)                              GENV  1
C****    GENERATE REAL DATA ARRAYS BY LINEAR INTERPOLATION                GENV  2
      LOGICAL PRT,ERR,PCOMP                                               GENV  3
      COMMON /CTDATA/ O,HEAD(20),NUMNP,NUMEL,LAYER,NEQ,IPR                GENV  4
      DIMENSION X(NDM,1),XL(7),CD(3)                                      GENV  5
      DATA BL/4HBLAN/                                                     GENV  6
      N=0                                                                 GENV  7
      NG=0                                                                GENV  8
  102 L=N                                                                 GENV  9
      LG=NG                                                               GENV 10
      READ(5,1000) N,NG,XL                                                GENV 11
      IF(N.LE.0 .OR. N.GT.NUMNP) GO TO 108                                GENV 12
      DO 103 I=1,NDM                                                      GENV 13
  103 X(I,N)=XL(I)                                                        GENV 14
      IF(LG) 104,102,104                                                  GENV 15
  104 LG=ISIGN(LG,N-L)                                                    GENV 16
      LI=(IABS(N-L+LG)-1)/IABS(LG)                                        GENV 17
      DO 105 I=1,NDM                                                      GENV 18
  105 XL(I)=(X(I,N)-X(I,L))/LI                                            GENV 19
  106 L=L+LG                                                              GENV 20
      IF((N-L)*LG .LE. 0) GO TO 102                                       GENV 21
      IF(L.LE.0 .OR. L.GT.NUMNP) GO TO 110                                GENV 22
      DO 107 I=1,NDM                                                      GENV 23
```

```
  107 X(I,L)=X(I,L-LG)+XL(I)                                                    GENU 24
      GO TO 106                                                                 GENU 25
  110 WRITE(6,3000) L,(CD(I),I=1,3)                                             GENU 26
      ERR = .TRUE.                                                              GENU 27
      GO TO 102                                                                 GENU 28
  108 DO 109 I=1,NUMNP,50                                                       GENU 29
      IF(PRT) WRITE(6,2000)O,HEAD,(CD(L),L=1,3),(L,CD(1),CD(2),L=1,NDM)         GENU 30
      N = MIN0(NUMNP,I+49)                                                      GENU 31
      DO 109 J=I,N                                                              GENU 32
      IF(PCOMP(X(1,J),BL) .AND. PRT) WRITE(6,2008) N                            GENU 33
  109 IF(.NOT.PCOMP(X(1,J),BL).AND.PRT) WRITE(6,2009) J,(X(L,J),L=1,NDM)        GENU 34
      RETURN                                                                    GENU 35
 1000 FORMAT(2I5,7F10.0)                                                        GENU 36
 2000 FORMAT(A1,20A4//5X, 5HNODAL,3A4//6X,4HNODE,9(I7,A4,A2))                   GENU 37
 2008 FORMAT(5X,21H**GENVEC WARNING 01**,I10,                                   GENU 38
     ^    32H HAS NOT BEEN INPUT OR GENERATED)                                  GENU 39
 2009 FORMAT(I10,9F13.4)                                                        GENU 40
 3000 FORMAT(5X,44H**GENVEC ERROR 01**ATTEMPT TO GENETATE NODE,I5,              GENU 41
     1    3H IN,3A4)                                                           GENU 42
      END                                                                       GENU 43
C
      SUBROUTINE PROFIL(JDIAG,ID,IX,NDF,NEN,NKM,PRT)                            PROF  1
C****    COMPUTE PROFILE OF GLOBAL ARRAYS                                       PROF  2
      LOGICAL PRT                                                               PROF  3
      COMMON /CTDATA/ O,HEAD(20),NUMNP,NUMEL,LAYER,NEQ,IPR                      PROF  4
      DIMENSION JDIAG(1),ID(NDF,1),IX(NEN,1),EQ(2)                              PROF  5
      DATA EQ/4H DOF,2H. /                                                      PROF  6
C....    SET UP THE EQUATION NUMBERS                                            PROF  7
      NEQ = 0                                                                   PROF  8
      DO 50 N=1,NUMNP                                                           PROF  9
      DO 40 I=1,NDF                                                             PROF 10
      J = ID(I,N)                                                               PROF 11
      IF(J) 30,20,30                                                            PROF 12
   20 NEQ = NEQ + 1                                                             PROF 13
      ID(I,N) = NEQ                                                             PROF 14
      JDIAG(NEQ) = 0                                                            PROF 15
      GO TO 40                                                                  PROF 16
   30 ID(I,N) = 0                                                               PROF 17
   40 CONTINUE                                                                  PROF 18
   50 CONTINUE                                                                  PROF 19
      IF(.NOT.PRT) GO TO 70                                                     PROF 20
      WRITE(6,2000) O,HEAD,(I,EQ,I=1,NDF)                                       PROF 21
      DO 60 I=1,NUMNP                                                           PROF 22
   60 WRITE(6,2001) I,(ID(K,I),K=1,NDF)                                         PROF 23
C....    COMPUTE COLUMN HEIGHTS                                                 PROF 24
   70 DO 500 N=1,NUMEL                                                          PROF 25
      DO 400 I=1,NEN                                                            PROF 26
      II = IX(I,N)                                                              PROF 27
      IF(II .EQ. 0) GO TO 400                                                   PROF 28
      DO 300 K=1,NDF                                                            PROF 29
      KK = ID(K,II)                                                             PROF 30
      IF(KK.EQ.0) GO TO 300                                                     PROF 31
      DO 200 J=I,NEN                                                            PROF 32
      JJ = IX(J,N)                                                              PROF 33
      IF(JJ.EQ.0) GO TO 200                                                     PROF 34
      DO 100 L=1,NDF                                                            PROF 35
      LL = ID(L,JJ)                                                             PROF 36
      IF(LL.EQ.0) GO TO 100                                                     PROF 37
      M = MAX0(KK,LL)                                                           PROF 38
      JDIAG(M) = MAX0(JDIAG(M),IABS(KK-LL))                                     PROF 39
  100 CONTINUE                                                                  PROF 40
  200 CONTINUE                                                                  PROF 41
  300 CONTINUE                                                                  PROF 42
  400 CONTINUE                                                                  PROF 43
  500 CONTINUE                                                                  PROF 44
C....    COMPUTE DIAGONAL POINTERS FOR PROFILE                                  PROF 45
      NKM = 1                                                                   PROF 46
      JDIAG(1) = 1                                                              PROF 47
      IF(NEQ.EQ.1) RETURN                                                       PROF 48
      DO 600 N=2,NEQ                                                            PROF 49
```

```
  600 JDIAG(N) = JDIAG(N) + JDIAG(N-1) + 1                                  PROF 50
      NKM = JDIAG(NEQ)                                                      PROF 51
 2000 FORMAT(A1,20A4//5X,16HEQUATION NUMBERS//6X,5HNODE ,                   PROF 52
     ^   9(I5,A4,A2)/1X)                                                    PROF 53
 2001 FORMAT(I10,9I11)                                                      PROF 54
      RETURN                                                                PROF 55
      END                                                                   PROF 56
C
      SUBROUTINE MATLID                                                     MATL  1
C****     MATERIAL PROPERTIES ROUTINE                                      MATL  2
      COMMON /CTDATA/ O,HEAD(20),NUMNP,NUMEL,LAYER,NEQ,IPR                  MATL  3
      COMMON /MTDATA/ RHO,VU12,E1,E2,G12,G13,G23,THK,WIDTH                  MATL  4
      COMMON /COMPST/ ABD(6,6),DS(2,2),QBR(3,3,25),QBS(2,2,25),             MATL  5
     ^                TH(25),ZK(25)                                         MATL  6
      COMMON /DMATIX/ D(10),DB(6,6),LINT                                    MATL  7
      DIMENSION WD(5)                                                       MATL  8
      DATA WD/6H  ISO-,6H ORTHO,6HTROPIC,6H  COMP,6HOSITE /                 MATL  9
C....     INPUT MATERIAL PROPERTIES                                        MATL 10
      READ(5,1000) L1,L2,K,THK,WIDTH                                        MATL 11
      READ(5,1001) RHO,VU12,E1,E2,G12,G13,G23                               MATL 12
      DO 150  J=1,3                                                         MATL 13
      DO 150  I=1,3                                                         MATL 14
      IF(I.EQ.3 .OR. J.EQ.3) GO TO 150                                      MATL 15
      DS(J,I) = 0.                                                          MATL 16
  150 ABD(J,I) = ABD(J+3,I) = ABD(J,I+3) = ABD(J+3,I+3) = 0.                MATL 17
      L1 = MIN0(4,MAX0(1,L1))                                               MATL 18
      D(1) = L1                                                             MATL 19
      L2 = MIN0(4,MAX0(1,L2))                                               MATL 20
      D(2) = L2                                                             MATL 21
      D(3) = K                                                              MATL 22
      LINT=0                                                                MATL 23
      IF(E1-E2) 120,110,120                                                 MATL 24
  110 G12=E1/(2.*(1.+VU12))                                                 MATL 25
      J1=1 $ J2=3                                                           MATL 26
      GO TO 200                                                             MATL 27
  120 J1=4 $ J2=5                                                           MATL 28
      IF(LAYER.EQ.1) J1=2 $ J2=3                                            MATL 29
  200 WRITE(6,2000) LAYER,WD(J1),WD(J2),THK,E1,E2,G12,G13,G23,VU12,         MATL 30
     ^                RHO,L1,L2,'*'                                         MATL 31
      CALL CMPD                                                             MATL 32
      RETURN                                                                MATL 33
C....     FORMAT FOR INPUT-OUTPUT                                          MATL 34
 1000 FORMAT(3I5,2F10.0)                                                    MATL 35
 1001 FORMAT(7F10.0)                                                        MATL 36
 2000 FORMAT(/5X,I2,12H LAYER(S) OF,2A6,21H PLATE WITH THICKNESS,           MATL 37
     1 F10.4//10X,15HYOUNG'S MODULUS,10X,'E1=',E10.4,10X,'E2=',E10.4/       MATL 38
     2 10X,15HSHEAR   MODULUS,9X,'G12=',E10.4,9X,'G13=',E10.4,9X,          MATL 39
     3 'G23=',E10.4/10X,15HPOISSON   RATIO,8X,'VU12=',F5.3/10X,             MATL 40
     4 7HDENSITY,17X,'RHO=',E10.4/10X,13HGAUSS PTS/DIR,12X,'L1=',I5,        MATL 41
     5 5X,'L2=',I5/10X,12HSTRESS POINT,14X,'K=',I5/)                        MATL 42
      END                                                                   MATL 43
C
      SUBROUTINE CMPD                                                       CMPD  1
C****     COMPUTE 'ABD' MATRIX AND 'DS' MATRIX                             CMPD  2
      COMMON /CTDATA/ O,HEAD(20),NUMNP,NUMEL,LAYER,NEQ,IPR                  CMPD  3
      COMMON /MTDATA/ RHO,VU12,E1,E2,G12,G13,G23,THK,WIDTH                  CMPD  4
      COMMON /COMPST/ ABD(6,6),DS(2,2),QBR(3,3,25),QBS(2,2,25),             CMPD  5
     ^                TH(25),ZK(25)                                         CMPD  6
      DIMENSION Q(3,3),QS(2,2),TK(25)                                       CMPD  7
      LL=LAYER                                                              CMPD  8
      MM=LL+1                                                               CMPD  9
      READ(5,1000) (L,TH(L),TK(L),I=1,LL)                                   CMPD 10
      ZK(1)=TTK=0.0                                                         CMPD 11
      DO 15 I=1,LL                                                          CMPD 12
      TTK=TTK+TK(I)                                                         CMPD 13
      ZK(I+1)=TK(I)+ZK(I)                                                   CMPD 14
   15 CONTINUE                                                              CMPD 15
      DO 25 I=1,MM                                                          CMPD 16
      ZK(I)=ZK(I)-TTK/2.                                                    CMPD 17
   25 CONTINUE                                                              CMPD 18
```

```
      DEL=4.*ATAN(1.)/180.                                                      CMPD 19
      DEN = 1. - E2*VU12**2/E1                                                  CMPD 20
      Q(1,1) = E1/DEN                                                           CMPD 21
      Q(2,2) = E2/DEN                                                           CMPD 22
      Q(1,2) = Q(2,1) = VU12*Q(2,2)                                             CMPD 23
      Q(3,3) = G12                                                              CMPD 24
      Q(1,3) = Q(2,3) = Q(3,1) = Q(3,2) = 0.0                                   CMPD 25
      QS(1,1) = G13                                                             CMPD 26
      QS(2,2) = G23                                                             CMPD 27
      QS(1,2) = QS(2,1) = 0.0                                                   CMPD 28
      DO 40 I=1,LL                                                              CMPD 29
      ANGL=TH(I)*DEL                                                            CMPD 30
      C=COS(ANGL)                                                               CMPD 31
      W=SIN(ANGL)                                                               CMPD 32
      QBR(1,1,I)=Q(1,1)*C**4+2.*(Q(1,2)+2.*Q(3,3))*(C*W)**2+Q(2,2)*W**4         CMPD 33
      QBR(1,2,I)=QBR(2,1,I)=(Q(1,1)+Q(2,2)-4.*Q(3,3))*(C*W)**2                  CMPD 34
     $           +Q(1,2)*(W**4 +C**4 )                                          CMPD 35
      QBR(2,2,I)=Q(1,1)*W**4+2.*(Q(1,2)+2.*Q(3,3))*(C*W)**2+Q(2,2)*C**4         CMPD 36
      QBR(1,3,I)=QBR(3,1,I)=(Q(1,1)-Q(1,2)-2.*Q(3,3))*W*C**3 +                  CMPD 37
     $           (Q(1,2)-Q(2,2)+2.*Q(3,3))*C*W**3                               CMPD 38
      QBR(2,3,I)=QBR(3,2,I)=(Q(1,1)-Q(1,2)-2.*Q(3,3))*W**3 *C+                  CMPD 39
     $           (Q(1,2)-Q(2,2)+2.*Q(3,3))*W*C**3                               CMPD 40
      QBR(3,3,I)=(Q(1,1)+Q(2,2)-2.*Q(1,2)-2.*Q(3,3))*(W*C)**2+                  CMPD 41
     $           Q(3,3)*(W**4 +C**4 )                                           CMPD 42
      QBS(1,1,I) = QS(1,1)*C**2 + QS(2,2)*W**2                                  CMPD 43
      QBS(2,2,I) = QS(1,1)*W**2 + QS(2,2)*C**2                                  CMPD 44
      QBS(1,2,I) = QBS(2,1,I) = (QS(1,1)-QS(2,2))*C*W                           CMPD 45
   40 CONTINUE                                                                  CMPD 46
      DO 50 J=1,3                                                               CMPD 47
      DO 50 K=1,3                                                               CMPD 48
      DO 50 I=1,LL                                                              CMPD 49
      ABD(J  ,K  )= ABD(J  ,K  )+QBR(J,K,I)*(ZK(I+1)-ZK(I))                     CMPD 50
      ABD(J+3,K  )= ABD(J  ,K+3)= ABD(J+3,K)+QBR(J,K,I)*                        CMPD 51
     $             (ZK(I+1)**2-ZK(I)**2)/2.                                   CMPD 52
      ABD(J+3,K+3)= ABD(J+3,K+3)+QBR(J,K,I)*(ZK(I+1)**3-ZK(I)**3)/3.            CMPD 53
   50 CONTINUE                                                                  CMPD 54
      DO 55 I=1,6                                                               CMPD 55
      DO 55 J=1,6                                                               CMPD 56
      IF(I.GE.3 .OR. J.GE.3) GO TO 55                                           CMPD 57
      IF(ABS(DS(I,J)) .LT. 1.E-06)  DS(I,J)=0.0                                 CMPD 58
   55 IF(ABS(ABD(I,J)) .LT. 1.E-06) ABD(I,J)=0.0                                CMPD 59
      WRITE(6,2001) ((ABD(I,J),J=1,6),I=1,6)                                    CMPD 60
      DO 60 J=1,2                                                               CMPD 61
      DO 60 K=1,2                                                               CMPD 62
      DO 60 I=1,LL                                                              CMPD 63
   60 DS(J,K) = DS(J,K) + QBS(J,K,I)*(ZK(I+1)-ZK(I))                            CMPD 64
      WRITE(6,2002) ((DS(I,J),J=1,2),I=1,2)                                     CMPD 65
 1000 FORMAT(I5,F5.0,F10.0)                                                     CMPD 66
 2001 FORMAT(//,1X,10HABD MATRIX//6(2X,6E13.4/))                                CMPD 67
 2002 FORMAT(/,1X,9HDS MATRIX//2(2X,2E13.4/))                                   CMPD 68
      RETURN                                                                    CMPD 69
      END                                                                       CMPD 70
C
      SUBROUTINE KMLIB                                                          KMLI  1
C*****    ASSEMBLE GLOBLE ARRAY                                               KMLI  2
      COMMON G(1)                                                               KMLI  3
      DIMENSION M(1)                                                            KMLI  4
      EQUIVALENCE (G(1),M(1))                                                   KMLI  5
      COMMON /ISWIDX/ ISW                                                       KMLI  6
      COMMON /CTDATA/ O,HEAD(20),NUMNP,NUMEL,LAYER,NEQ,IPR                      KMLI  7
      COMMON /LODATA/ NDF,NDM,NEN,NST,NKM                                       KMLI  8
      COMMON /PARATS/ NPAR(14),NEND                                             KMLI  9
      N1=NEND                                                                   KMLI 10
      N2=N1+NST*NST*IPR                                                         KMLI 11
      IF(ISW.LE.2) NE=N2+NKM*IPR                                                KMLI 12
      IF(ISW.GT.2) NE=N2+NEQ*IPR                                                KMLI 13
      CALL SETMEM(NE)                                                           KMLI 14
      CALL PZERO(G(NEND),NE-NEND)                                               KMLI 15
      CALL MASS01(G(NPAR(1)),G(NPAR(2)),M(NPAR(3)),G(NPAR(4)),                  KMLI 16
     1   M(NPAR(5)),M(NPAR(6)),G(NPAR(7)),G(NPAR(8)),M(NPAR(9)),                KMLI 17
```

```
     2   G(NPAR(11)),G(N1),G(N2),NDF,NDM,NEN,NST,NKM)                    KMLI 18
      RETURN                                                            KMLI 19
      END                                                               KMLI 20
C
      SUBROUTINE MASS01(UL,XL,LD,P,IX,ID,X,F,JDIAG,B,S,A,NDF,NDM,NEN,   MASS  1
     ^   NST,NKM)                                                       MASS  2
C****    FORM MASS MATRIX                                               MASS  3
      COMMON /CTDATA/ O,HEAD(20),NUMNP,NUMEL,LAYER,NEQ,IPR              MASS  4
      COMMON /MTDATA/ RHO,VU12,E1,E2,G12,G13,G23,THK,WIDTH               MASS  5
      COMMON /DMATIX/ D(10),DB(6,6),LINT                                MASS  6
      COMMON /ELDATA/ N,NEL,MCT                                         MASS  7
      COMMON /ISWIDX/ ISW                                               MASS  8
      COMMON /GAUSSP/ SG(16),TG(16),WG(16)                              MASS  9
      DIMENSION UL(1),XL(NDM,1),LD(NDF,1),P(1),IX(NEN,1),ID(NDF,1),     MASS 10
     1   X(NDM,1),F(1),JDIAG(1),B(1),S(NST,1),A(1),SHP(3,12)            MASS 11
C....    LOOP ON ELEMENTS                                               MASS 12
      DO 110 N=1,NUMEL                                                  MASS 13
      DO 10 I=1,NST                                                     MASS 14
      DO 10 J=1,NST                                                     MASS 15
   10 S(I,J)=0.                                                         MASS 16
C....    SET UP LOCAL ARRAYS                                            MASS 17
      CALL PFORM(UL,XL,LD,IX,ID,X,F,B,NDF,NDM,NEN,ISW)                  MASS 18
C....    COMPUTE CONSISTENT MASS MATRIX                                 MASS 19
      L = D(1)                                                          MASS 20
      CALL PGAUSS(L,LINT)                                               MASS 21
      DO 500 L=1,LINT                                                   MASS 22
C  ..    COMPUTE SHAPE FUNCTIONS                                        MASS 23
      CALL SHAPE(SG(L),TG(L),XL,SHP,XSJ,NDM,NEL,IX,.FALSE.)             MASS 24
      DV = WG(L)*XSJ*RHO*THK                                            MASS 25
C  ..    FOR EACH NODE J COMPUTE DB=RHO*SHAPE*DV                        MASS 26
      K1 = 1                                                            MASS 27
      DO 500 J=1,NEL                                                    MASS 28
      W11 = SHP(3,J)*DV                                                 MASS 29
      W33 = W11*THK**2/12.                                              MASS 30
C  ..    FOR EACH NODE K COMPUTE MASS MATRIX (UPPER TRIANGULAR PART)    MASS 31
      J1 = K1                                                           MASS 32
      DO 510 K=J,NEL                                                    MASS 33
      S(J1  ,K1  ) = S(J1  ,K1  ) + SHP(3,K)*W11                        MASS 34
      S(J1+3,K1+3) = S(J1+3,K1+3) + SHP(3,K)*W33                        MASS 35
  510 J1 = J1 + NDF                                                     MASS 36
  500 K1 = K1 + NDF                                                     MASS 37
C  .. COMPUTE MISSING PARTS AND LOWER PART BY SYMMETRY                  MASS 38
      NSL = NEL*NDF                                                     MASS 39
      DO 530 K=1,NSL,NDF                                                MASS 40
      DO 520 J=K,NSL,NDF                                                MASS 41
      S(J+2,K+2) = S(J+1,K+1) = S(J  ,K  )                              MASS 42
      S(J+4,K+4) = S(J+3,K+3)                                           MASS 43
      S(K  ,J  ) = S(J  ,K  )                                           MASS 44
      S(K+3,J+3) = S(J+3,K+3)                                           MASS 45
      S(K+2,J+2) = S(K+1,J+1) = S(J  ,K  )                              MASS 46
  520 S(K+4,J+4) = S(J+3,K+3)                                           MASS 47
  530 CONTINUE                                                          MASS 48
      IF(ISW.EQ.2) GO TO 100                                            MASS 49
C....    LUMPED MASS MATRIX                                             MASS 50
      SUM1 = 0.0                                                        MASS 51
      SUM2 = 0.0                                                        MASS 52
      SUMD1 = 0.0                                                       MASS 53
      SUMD2 = 0.0                                                       MASS 54
      DO 540 I=1,NSL,NDF                                                MASS 55
      SUMD1 = SUMD1 + S(I,I)                                            MASS 56
      SUMD2 = SUMD2 + S(I+3,I+3)                                        MASS 57
      DO 540 J=1,NSL,NDF                                                MASS 58
      SUM1 = SUM1 + S(I,J)                                              MASS 59
  540 SUM2 = SUM2 + S(I+3,J+3)                                          MASS 60
      DO 550 I=1,NSL,NDF                                                MASS 61
      P(I) = S(I,I)*SUM1/SUMD1                                          MASS 62
      P(I+2) = P(I+1) = P(I)                                            MASS 63
      P(I+3) = S(I+3,I+3)*SUM2/SUMD2                                    MASS 64
  550 P(I+4) = P(I+3)                                                   MASS 65
C....    ADD TO TOTAL ARRAY                                             MASS 66
```

```
  100 CALL ADDSTF(A,S,P,JDIAG,LD,NST,NEL*NDF,.FALSE.)                    MASS 67
  110 CONTINUE                                                           MASS 68
      REWIND 2                                                           MASS 69
      IF(ISW.EQ.2) WRITE(2) (A(I),I=1,NKM)                               MASS 70
      IF(ISW.EQ.3) WRITE(2) (A(I),I=1,NEQ)                               MASS 71
      RETURN                                                             MASS 72
      END                                                                MASS 73
C
      SUBROUTINE RODIPCT                                                 RODI  1
C****                                                                    RODI  2
      LOGICAL FLAG                                                       RODI  3
      COMMON G(1)                                                        RODI  4
      DIMENSION M(1)                                                     RODI  5
      EQUIVALENCE (G(1),M(1))                                            RODI  6
      COMMON /CTDATA/ O,HEAD(20),NUMNP,NUMEL,LAYER,NEQ,IPR               RODI  7
      COMMON /LODATA/ NDF,NDM,NEN,NST,NKM                                RODI  8
      COMMON /PARATS/ NPAR(14),NEND                                      RODI  9
      COMMON /RODATA/ VR,IQ,NDS                                          RODI 10
      COMMON /ROELEM/ NER,NEQR,ER                                        RODI 11
      DATA FLAG/.FALSE./,NER/20/,ER/30000000./                           RODI 12
      IF(FLAG) GO TO 50                                                  RODI 13
      NEQR=2*(NER+1)                                                     RODI 14
      NKMR=7*NER+3                                                       RODI 15
      N1=NEND                                                            RODI 16
      N2=N1+NEQ*IPR                                                      RODI 17
      N3=N2+NEQ*IPR                                                      RODI 18
      N4=N3+NEQ*IPR                                                      RODI 19
      N5=N4+NKMR*IPR                                                     RODI 20
      N6=N5+NEQR*IPR                                                     RODI 21
      N7=N6+NEQR                                                         RODI 22
      N8=N7+NEQR*IPR                                                     RODI 23
      N9=N8+NEQR*IPR                                                     RODI 24
      N10=N9+NEQR*IPR                                                    RODI 25
      N11=N10+NEQR*IPR                                                   RODI 26
      NE=N11+NEQR*IPR                                                    RODI 27
      CALL SETMEM(NE)                                                    RODI 28
      CALL PZERO(G(NEND),NE-NEND)                                        RODI 29
      FLAG=.TRUE.                                                        RODI 30
   50 CALL WIMPCT(G(NPAR(1)),G(NPAR(2)),M(NPAR(3)),G(NPAR(4)),           RODI 31
     1            M(NPAR(5)),M(NPAR(6)),G(NPAR(7)),G(NPAR(8)),          RODI 32
     2            M(NPAR(9)),G(NPAR(10)),G(NPAR(11)),G(N1),G(N2),       RODI 33
     3            G(N3),G(N4),G(N5),M(N6),G(N7),G(N8),G(N9),G(N10),     RODI 34
     4            G(N11))                                               RODI 35
      RETURN                                                             RODI 36
      END                                                                RODI 37
C
      SUBROUTINE WIMPCT(UL,XL,LD,P,IX,ID,X,F,JDIAG,DR,U,B,V,A,RK,RM,      WIMP  1
     ^                  JDR,RU,RV,RA,RB,FR)                              WIMP  2
C****    SOLVE IMPACT PROBLEM                                           WIMP  3
      LOGICAL FLAG,TAN                                                   WIMP  4
      COMMON G(1)                                                        WIMP  5
      DIMENSION M(1)                                                     WIMP  6
      EQUIVALENCE (G(1),M(1))                                            WIMP  7
      COMMON /CTDATA/ O,HEAD(20),NUMNP,NUMEL,LAYER,NEQ,IPR               WIMP  8
      COMMON /TMDATA/ TIME,DT,DDT,FORCE,ALPHA                            WIMP  9
      COMMON /LODATA/ NDF,NDM,NEN,NST,NKM                                WIMP 10
      COMMON /NITERS/ ITR                                                WIMP 11
      COMMON /PARATS/ NPAR(14),NEND                                      WIMP 12
      COMMON /RODATA/ VR,IQ,NDS                                          WIMP 13
      COMMON /ROELEM/ NER,NEQR,ER                                        WIMP 14
      COMMON /CONSTS/ A0,A2,A4,A5,A6,A7,A8,AREA                          WIMP 15
      COMMON /PROLOD/ PROP                                               WIMP 16
      COMMON /ISWIDX/ ISW                                                WIMP 17
      COMMON /EXTRAS/ TAN                                                WIMP 18
      DIMENSION UL(1),XL(1),LD(1),P(1),IX(1),ID(1),X(1),F(1),JDIAG(1),   WIMP 19
     1          DR(1),U(1),B(1),V(1),A(1),RK(1),RM(1),JDR(1),RU(1),     WIMP 20
     2          RV(1),RA(1),RB(1),FR(1),Q(3),QP(3)                      WIMP 21
      DATA ITR/5/,FLAG/.FALSE./,WIL/1.4/,INTE/24/                        WIMP 22
      IF(FLAG) GO TO 50                                                  WIMP 23
      DO 1 I=1,3                                                         WIMP 24
```

```
      Q(I)=0.0                                                                  WIMP 25
      QP(I)=0.0                                                                 WIMP 26
    1 CONTINUE                                                                  WIMP 27
      IDS=1                                                                     WIMP 28
      TAN=.FALSE.                                                               WIMP 29
      REWIND 2                                                                  WIMP 30
      READ(2) (B(I),I=1,NEQ)                                                    WIMP 31
      FORCE=0.0                                                                 WIMP 32
      ALPHA=0.0                                                                 WIMP 33
      PROP=0.0                                                                  WIMP 34
      NNEQ=NDF*NUMNP                                                            WIMP 35
      A0=6./(WIL*DT)**2                                                         WIMP 36
      A2=6./(WIL*DT)                                                            WIMP 37
      A4=A0/WIL                                                                 WIMP 38
      A5=-A2/WIL                                                                WIMP 39
      A6=1.-3./WIL                                                              WIMP 40
      A7=DT/2.                                                                  WIMP 41
      A8=DDT/6.                                                                 WIMP 42
      CALL FORMROD(RK,RM,JDR)                                                   WIMP 43
      DO 10 I=1,NEQR                                                            WIMP 44
   10 RV(I)=-VR                                                                 WIMP 45
      Q(2)=-VR                                                                  WIMP 46
      FLAG=.TRUE.                                                               WIMP 47
   50 ISW=5                                                                     WIMP 48
      IF(IDS.EQ.NDS) TAN=.TRUE.                                                 WIMP 49
      CALL FSTREA(UL,XL,LD,P,IX,ID,X,F,JDIAG,DR,U,NDF,NDM,NEN,NST,NNEQ)         WIMP 50
      DO 20 I=1,NEQ                                                             WIMP 51
      A(I)=DR(I)/B(I)                                                           WIMP 52
      V(I)=V(I)+DT*A(I)                                                         WIMP 53
      U(I)=U(I)+DT*V(I)                                                         WIMP 54
   20 CONTINUE                                                                  WIMP 55
      QP(1)=U(IQ)                                                               WIMP 56
      QP(2)=V(IQ)                                                               WIMP 57
      QP(3)=A(IQ)                                                               WIMP 58
      DO 30 I=1,NEQR                                                            WIMP 59
      RB(I)=RM(I)*(A0*RU(I)+A2*RV(I)+2.*RA(I))                                  WIMP 60
   30 CONTINUE                                                                  WIMP 61
      RBIQ=RU(1)+DT*RV(1)+DDT/3.*RA(1)                                          WIMP 62
      ROT=0.000001                                                              WIMP 63
      ICOV=0                                                                    WIMP 64
      DO 100 IT=1,ITR                                                           WIMP 65
      RUT=RBIQ+Q(3)*DDT/6.                                                      WIMP 66
      AF=-RUT-QP(1)                                                             WIMP 67
      CALL RODLOAD(FIQ,AF)                                                      WIMP 68
      DO 110 I=1,NEQR                                                           WIMP 69
      FR(I)=RB(I)                                                               WIMP 70
  110 CONTINUE                                                                  WIMP 71
      FR(1)=FR(1)+(1.-WIL)*FORCE+WIL*FIQ                                        WIMP 72
      CALL ACTCOL(RK,FR,JDR,NEQR,.FALSE.,.TRUE.,0)                              WIMP 73
      Q(3)=A4*(FR(1)-RU(1))+A5*RV(1)+A6*RA(1)                                   WIMP 74
      RUTT=RBIQ+Q(3)*DDT/6.                                                     WIMP 75
      ROTR=ABS((RUTT-RUT)/RUTT)                                                 WIMP 76
      IF(ROTR.LT.ROT) ICOV=1                                                    WIMP 77
      IF(ICOV.GT.0) GO TO 200                                                   WIMP 78
  100 CONTINUE                                                                  WIMP 79
  200 DO 210 I=1,NEQR                                                           WIMP 80
      FR(I)=A4*(FR(I)-RU(I))+A5*RV(I)+A6*RA(I)                                  WIMP 81
      RU(I)=RU(I)+DT*RV(I)+A8*(FR(I)+2.*RA(I))                                  WIMP 82
      RV(I)=RV(I)+A7*(FR(I)+RA(I))                                              WIMP 83
      RA(I)=FR(I)                                                               WIMP 84
  210 CONTINUE                                                                  WIMP 85
      Q(1)=RU(1)                                                                WIMP 86
      Q(2)=RV(1)                                                                WIMP 87
      Q(3)=RA(1)                                                                WIMP 88
      FORCE=FIQ                                                                 WIMP 89
      PROP=FORCE                                                                WIMP 90
      ALPHA=-Q(1)-QP(1)                                                         WIMP 91
      RODFR=RU(INTE)*AREA*ER                                                    WIMP 92
      WRITE(8,8001) FORCE,ALPHA,RODFR,(Q(I),I=1,3)                              WIMP 93
 8001 FORMAT(6E12.4)                                                            WIMP 94
```

```
      IDS=IDS+1                                                          WIMP 95
      IF(IDS.GT.NDS) IDS=1                                               WIMP 96
      TAN=.FALSE.                                                        WIMP 97
      RETURN                                                             WIMP 98
      END                                                                WIMP 99
C
      SUBROUTINE FORMROD(RK,RM,JDR)                                      FORM  1
C****    FORM STIFFNESS AND MASS MATRICES OF ROD                         FORM  2
      COMMON /RODATA/ VR,IQ,NDS                                          FORM  3
      COMMON /ROELEM/ NER,NEQR,ER                                        FORM  4
      COMMON /CONSTS/ A0,A2,A4,A5,A6,A7,A8,AREA                          FORM  5
      DIMENSION RK(1),RM(1),JDR(2),D(6)                                  FORM  6
      DATA RHOR/.0003225/,RL/1.0/                                        FORM  7
      DATA D/.22,.36,.43,.48,.50,.625/                                   FORM  8
      EL=RL/NER                                                          FORM  9
      PAI=4.*ATAN(1.)                                                    FORM 10
      JDR(1)=1                                                           FORM 11
      JDR(2)=3                                                           FORM 12
      DO 100 I=1,NER                                                     FORM 13
      IF(I.LT.6) A=PAI*(D(I)/2.)**2                                      FORM 14
      IF(I.GE.6) A=PAI*(D(6)/2.)**2                                      FORM 15
      TT=A*ER/30./EL                                                     FORM 16
      J1=2*(I+1)-1                                                       FORM 17
      J2=J1+1                                                            FORM 18
      J1M1=J1-1                                                          FORM 19
      J1M2=J1-2                                                          FORM 20
      JDR(J1)=JDR(J1M1)+3                                                FORM 21
      JDR(J2)=JDR(J1)+4                                                  FORM 22
      K1=JDR(J1M2)                                                       FORM 23
      K2=JDR(J1M1)-1                                                     FORM 24
      RK(K1  )=RK(K1  )+TT*36.                                           FORM 25
      RK(K2  )=RK(K2  )+TT*3.*EL                                         FORM 26
      RK(K2+1)=RK(K2+1)+TT*4.*EL**2                                      FORM 27
      RK(K2+2)=RK(K2+2)-TT*36.                                           FORM 28
      RK(K2+3)=RK(K2+3)-TT*3.*EL                                         FORM 29
      RK(K2+4)=RK(K2+4)+TT*36.                                           FORM 30
      RK(K2+5)=RK(K2+5)+TT*3.*EL                                         FORM 31
      RK(K2+6)=RK(K2+6)-TT*EL**2                                         FORM 32
      RK(K2+7)=RK(K2+7)-TT*3.*EL                                         FORM 33
      RK(K2+8)=RK(K2+8)+TT*4.*EL**2                                      FORM 34
      TT=RHOR*A*EL                                                       FORM 35
      L1=2*I-1                                                           FORM 36
      RM(L1  )=RM(L1  )+TT/2.                                            FORM 37
      RM(L1+1)=RM(L1+1)+TT*EL**2/420.                                    FORM 38
      RM(L1+2)=RM(L1+2)+TT/2.                                            FORM 39
      RM(L1+3)=RM(L1+3)+TT*EL**2/420.                                    FORM 40
  100 CONTINUE                                                           FORM 41
      AREA=A                                                             FORM 42
      DO 20 I=1,NEQR                                                     FORM 43
      J=JDR(I)                                                           FORM 44
   20 RK(J)=RK(J)+A0*RM(I)                                               FORM 45
      CALL ACTCOL(RK,RM,JDR,NEQR,.TRUE.,.FALSE.,0)                       FORM 46
      RETURN                                                             FORM 47
      END                                                                FORM 48
C
      SUBROUTINE RODLOAD(F,AF)                                           RODL  1
C****    COMPUTE CONTACT LOADING                                         RODL  2
      LOGICAL RELD,UNLD,PIL                                              RODL  3
      COMMON /TMDATA/ TIME,DT,DDT,FORCE,ALPHA                            RODL  4
      COMMON /EXDATA/ Q(4)                                               RODL  5
      DATA UNLD/.FALSE./,PIL/.FALSE./,RELD/.FALSE./                      RODL  6
      IF(PIL) GO TO 10                                                   RODL  7
      AMAX=AMIN=FMAX=0.0                                                 RODL  8
      PIL=.TRUE.                                                         RODL  9
   10 IF(RELD) GO TO 50                                                  RODL 10
      IF(UNLD) GO TO 20                                                  RODL 11
      F=Q(1)*AF**1.5                                                     RODL 12
      IF(F.GE.FORCE) RETURN                                              RODL 13
      UNLD=.TRUE.                                                        RODL 14
      AMAX=ALPHA                                                         RODL 15
```

```
      FMAX=FORCE                                                        RODL 16
      IF(AMAX.GT.Q(2)) UK=FMAX/((1.-Q(3))*AMAX+Q(2)*Q(3))**Q(4)         RODL 17
      IF(AMAX.LE.Q(2)) UK=FMAX/AMAX**Q(4)                               RODL 18
      AMIN=Q(3)*(AMAX-Q(2))                                             RODL 19
      IF(AMIN.LT.0.) AMIN=0.0                                           RODL 20
   20 IF(AF.LE.AMIN) GO TO 30                                           RODL 21
      F=UK*(AF-AMIN)**Q(4)                                              RODL 22
      IF(F.LT.FORCE) RETURN                                             RODL 23
      RELD=.TRUE.                                                       RODL 24
      RK=FMAX/(AMAX-AMIN)**1.5                                          RODL 25
   50 IF(AF.LE.AMIN) GO TO 30                                           RODL 26
      F=RK*(AF-AMIN)**1.5                                               RODL 27
      RETURN                                                            RODL 28
   30 F=0.0                                                             RODL 29
      RETURN                                                            RODL 30
      END                                                               RODL 31
```

INTERIM REPORT

NSG 3185

WAVE PROPAGATION IN GRAPHITE/EPOXY LAMINATES DUE TO IMPACT

NASA CR-168057

Advanced Research Projects Agency
Washington DC 20525
Attn: Library

Advanced Technology Center, Inc.
LTV Aerospace Corporation
P.O. Box 6144
Dallas, TX 75222
Attn: D. H. Petersen
W. J. Renton

Air Force Flight Dynamics Laboratory
Wright-Patterson Air Force Base, OH 45433
Attn: E. E. Baily
G. P. Sendeckyj (FBC)
R. S. Sandhu

Air Force Materials Laboratory
Wright-Patterson Air Force Base, OH 45433
Attn: H. S. Schwartz (LN)
T. J. Reinhart (MBC)
G. P. Peterson (LC)
E. J. Morrisey (LAE)
S. W. Tsai (MBM)
N. J. Pagano
J. M. Whitney (MBM)

Air Force Office of Scientific Research
Washington DC 20333
Attn: J. F. Masi (SREP)

Air Force Office of Scientific Research
1400 Wilson Blvd.
Arlington, VA 22209

AFOSR/NA
Bolling AFB, DC 20332
Attn: A. K. Amos

Air Force Rocket Propulsion Laboratory
Edwards, CA 93523
Attn: Library

Babcock & Wilcox Company
Advanced Composites Department
P.O. Box 419
Alliance, Ohio 44601
Attn: P. M. Leopold

Bell Helicopter Company
P.O. Box 482
Ft. Worth, TX 76101
Attn: H. Zinberg

The Boeing Company
P. O. Box 3999
Seattle, WA 98124
Attn: J. T. Hoggatt, MS. 88-33
T. R. Porter

The Boeing Company
Vertol Division
Morton, PA 19070
Attn: E. C. Durchlaub

Battelle Memorial Institute
Columbus Laboratories
505 King Avenue
Columbus, OH 43201
Attn: L. E. Hulbert

Bendix Advanced Technology Center
9140 Old Annapolis Rd/Md. 108
Columbia, MD 21045
Attn: O. Hayden Griffin

Brunswick Corporation
Defense Products Division
P. O. Box 4594
43000 Industrial Avenue
Lincoln, NE 68504
Attn: R. Morse

Celanese Research Company
86 Morris Ave.
Summit, NJ 07901
Attn: H. S. Kliger

Commander
Natick Laboratories
U. S. Army
Natick, MA 01762
Attn: Library

Commander
Naval Air Systems Command
U. S. Navy Department
Washington DC 20360
Attn: M. Stander, AIR-43032D

Commander
Naval Ordnance Systems Command
U.S. Navy Department
Washington DC 20360
Attn: B. Drimmer, ORD-033
M. Kinna, ORD-033A

Cornell University
Dept. Theoretical & Applied Mech.
Thurston Hall
Ithaca, NY 14853
Attn: S. L. Phoenix

Defense Metals Information Center
Battelle Memorial Institute
Columbus Laboratories
505 King Avenue
Columbus, OH 43201

Department of the Army
U.S. Army Aviation Materials Laboratory
Ft. Eustis, VA 23604
Attn: I. E. Figge, Sr.
Library

Department of the Army
U.S. Army Aviation Systems Command
P.O. Box 209
St. Louis, MO 63166
Attn: R. Vollmer, AMSAV-A-UE

Department of the Army
Plastics Technical Evaluation Center
Picatinny Arsenal
Dover, NJ 07801
Attn: H. E. Pebly, Jr.

Department of the Army
Watervliet Arsenal
Watervliet, NY 12189
Attn: G. D'Andrea

Department of the Army
Watertown Arsenal
Watertown, MA 02172
Attn: A. Thomas

Department of the Army
Redstone Arsenal
Huntsville, AL 35809
Attn: R. J. Thompson, AMSMI-RSS

Department of the Navy
Naval Ordnance Laboratory
White Oak
Silver Spring, MD 20910
Attn: R. Simon

Department of the Navy
U.S. Naval Ship R&D Laboratory
Annapolis, MD 21402
Attn: C. Hersner, Code 2724

Director
Deep Submergence Systems Project
6900 Wisconsin Avenue
Washington DC 20015
Attn: H. Bernstein, DSSP-221

Director
Naval Research Laboratory
Washington DC 20390
Attn: Code 8430
I. Wolock, Code 8433

Drexel University
32nd and Chestnut Streets
Philadelphia, PA 19104
Attn: P. C. Chou

E. I. DuPont DeNemours & Co.
DuPont Experimental Station
Wilmington, DE 19898
Attn: D. L. G. Sturgeon

Fiber Science, Inc.
245 East 157 Street
Gardena, CA 90248
Attn: E. Dunahoo

General Dynamics
P.O. Box 748
Ft. Worth, TX 76100
Attn: D. J. Wilkins
Library

General Dynamics/Convair
P.O. Box 1128
San Diego, CA 92112
Attn: J. L. Christian
R. Adsit

General Electric Co.
Evendale, OH 45215
Attn: C. Stotler
R. Ravenhall

General Motors Corporation
Detroit Diesel-Allison Division
Indianapolis, IN 46244
Attn: M. Herman

Georgia Institute of Technology
School of Aerospace Engineering
Atlanta, GA 30332
Attn: L. W. Rehfield

Grumman Aerospace Corporation
Bethpage, Long Island, NY 11714
Attn: S. Dastin
J. B. Whiteside

Hamilton Standard Division
United Aircraft Corporation
Windsor Locks, CT 06096
Attn: W. A. Percival

Hercules, Inc.
Allegheny Ballistics Laboratory
P. O. Box 210
Cumberland, MD 21053
Attn: A. A. Vicario

Hughes Aircraft Company
Culver City, CA 90230
Attn: A. Knoell

Illinois Institute of Technology
10 West 32 Street
Chicago, IL 60616
Attn: L. J. Broutman
I. M. Daniel

Dr. Joseph Wolf, Engineering Mechanics Dept.
General Motors Research Labs.
256 Research Drive
Warren, MI 48090

Jet Propulsion Laboratory
4800 Oak Grove Drive
Pasadena, CA 91103
Attn: Library

Lawrence Livermore Laboratory
P.O. Box 808, L-421
Livermore, CA 94550
Attn: T. T. Chiao
E. M. Wu

Lehigh University
Institute of Fracture &
Solid Mechanics
Bethlehem, PA 18015
Attn: G. C. Sih

Lockheed-Georgia Co.
Advanced Composites Information Center
Dept. 72-14, Zone 402
Marietta, GA 30060
Attn: T. M. Hsu

Lockheed Missiles and Space Co.
P.O. Box 504
Sunnyvale, CA 94087
Attn: R. W. Fenn

Lockheed-California
Burbank, CA 91503
Attn: J. T. Ryder
K. N. Lauraitis
J. C. Ekvall

McDonnell Douglas Aircraft Corporation
P.O. Box 516
Lambert Field, MS 63166
Attn: J. C. Watson

McDonnell Douglas Aircraft Corporation
3855 Lakewood Blvd.
Long Beach, CA 90810
Attn: L. B. Greszczuk

Material Sciences Corporation
1777 Walton Road
Blue Bell, PA 19422
Attn: B. W. Rosen

Massachusetts Institute of Technology
Cambridge, MA 02139
Attn: F. J. McGarry
J. F. Mandell
J. W. Mar

NASA-Ames Research Center
Moffett Field, CA 94035
Attn: Dr. J. Parker
Library

NASA-Flight Research Center
P.O. Box 273
Edwards, CA 93523
Attn: Library

NASA-George C. Marshall Space Flight Center
Huntsville, AL 35812
Attn: C. E. Cataldo, S&E-ASTN-MX
Library

NASA-Goddard Space Flight Center
Greenbelt, MD 20771
Attn: Library

NASA-Langley Research Center
Hampton, VA 23365
Attn: J. H. Starnes
J. G. Davis, Jr.
M. C. Card
J. R. Davidson

NASA-Lewis Research Center
21000 Brookpark Road, Cleveland, OH 44135

Attn: Contracting Officer, MS 501-11
Tech. Report Control, MS 5-5
Tech. Utilization, MS 3-16
AFSC Liaison, MS 501-3
S&MTD Contract Files, MS 49-6
L. Berke, MS 49-6
N. T. Saunders, MS 49-1
R. F. Lark, MS 49-6
J. A. Ziemianski, MS 49-6
R. H. Johns, MS 49-6
C. C. Chamis, MS 49-6 (4 copies)
R. L. Thompson, MS 49-6
T. T. Serafini, MS 49-1
Library, MS 60-3 (2 copies)

NASA-Lyndon B. Johnson Space Center
Houston, TX 77001
Attn: S. Giorioso, SMD-ES52
Library

NASA Scientific and Tech. Information Facility
P.O. Box 8757
Balt/Wash International Airport, MD 21240
Attn: Acquisitions Branch (10 copies)

National Aeronautics & SpaceAdministration
Office of Advanced Research & Technology
Washington DC 20546
Attn: L. Harris, Code RTM-6
M. Greenfield, Code RTM-6
C. Bersch, Code RTM-6

National Aeronautics & Space Administration
Office of Technology Utilization
Washington DC 20546

National Bureau of Standards
Eng. Mech. Section
Washington DC 20234
Attn: R. Mitchell

National Science Foundation
Engineering Division
1800 G. Street, NW
Washington DC 20540
Attn: Library

Northrop Corporation Aircraft Group
3901 West Broadway
Hawthorne, CA 90250
Attn: R. M. Verette
G. C. Grimes

Pratt & Whitney Aircraft
East Hartford, CT 06108
Attn: J. M. Woodward

Raytheon Co., Missile System Division
Mechanical Systems Laboratory
Bedford, MA
Attn: P. R. Digiovanni

Rensselaer Polytechnic Institute
Troy, NY 12181
Attn: R. Loewy

Rockwell International
Los Angeles Division
International Airport
Los Angles, CA 90009
Attn: L. M. Lackman
D. Y. Konishi

Sikorsky Aircraft Division
United Aircraft Corporation
Stratford, CT 06602
Attn: Library

Southern Methodist University
Dallas, TX 75275
Attn: R. M. Jones

Space & Missile Systems Organization
Air Force Unit Post Office
Los Angeles, CA 90045
Attn: Technical Data Center

Structural Composites Industries, Inc.
6344 N. Irwindale Avenue
Azusa, CA 91702
Attn: R. Gordon

Texas A&M
Mechanics & Materials Research Center
College Station, TX 77843
Attn: R. A. Schapery
Y. Weitsman

TRW, Inc.
23555 Euclid Avenue
Cleveland, OH 44117
Attn: I. J. Toth

Union Carbide Corporation
P. O. Box 6116
Cleveland, OH 44101
Attn: J. C. Bowman

United Technologies Research Center
East Hartford, CT 06108
Attn: R. C. Novak
Dr. A. Dennis

University of Dayton Research Institute
Dayton, OH 45409
Attn: R. W. Kim

University of Delaware
Mechanical & Aerospace Engineering
Newark, DE 19711
Attn: B. R. Pipes

University of Illinois
Department of Theoretical & Applied Mechanics
Urbana, IL 61801
Attn: S. S. Wang

University of Oklahoma
School of Aerospace Mechanical & Nuclear Engineering
Norman, OK 73069
Attn: C. W. Bert

University of Wyoming
College of Engineering
University Station Box 3295
Laramie, WY 82071
Attn: D. F. Adams

U. S. Army Materials & Mechanics Research Center
Watertown Arsenal
Watertown, MA 02172
Attn: E. M. Lenoe
D. W. Oplinger

V.P. I. and S. U.
Dept. of Eng. Mech.
Blacksburg, VA 24061
Attn: R. H. Heller
H. J. Brinson
C. T. Herakovich
K. L. Reifsnider