


NASA CR-72401

N71-23169

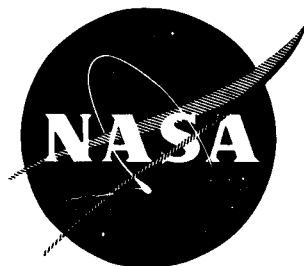

OXYGEN DIFLUORIDE HANDLING MANUAL

by

**CASE FILE
COPY**

Ralph B. Jackson
ALLIED CHEMICAL CORPORATION

prepared for

NATIONAL AERONAUTICS AND SPACE ADMINISTRATION

NASA Lewis Research Center
CONTRACT NAS 3-2564 and NAS 3-6298
Theodore Male, Project Manager

NOTICE

This report was prepared as an account of Government-sponsored work. Neither the United States, nor the National Aeronautics and Space Administration (NASA), nor any person acting on behalf of NASA:

- A.) Makes any warranty or representation, expressed or implied, with respect to the accuracy, completeness, or usefulness of the information contained in this report, or that the use of any information, apparatus, method, or process disclosed in this report may not infringe privately-owned rights; or
- B.) Assumes any liabilities with respect to the use of, or for damages resulting from the use of any information, apparatus, method or process disclosed in this report.

As used above, "person acting on behalf of NASA" includes any employee or contractor of NASA, or employee of such contractor, to the extent that such employee or contractor of NASA, or employee of such contractor prepares, disseminates, or provides access to, any information pursuant to his employment or contract with NASA, or his employment with such contractor.

Requests for copies of this report should be referred to

National Aeronautics and Space Administration
Scientific and Technical Information Facility
P. O. Box 33
College Park, Maryland 20740

FINAL REPORT

OXYGEN DIFLUORIDE HANDLING MANUAL

by

Ralph B. Jackson

ALLIED CHEMICAL CORPORATION
Morristown, New Jersey 07960

prepared for

NATIONAL AERONAUTICS AND SPACE ADMINISTRATION

December 1970

CONTRACT NAS 3-2564 and NAS 3-6298

NASA Lewis Research Center
Cleveland, Ohio
Theodore Male, Project Manager
Chemical Rocket Division

FOREWORD

This report was prepared by Allied Chemical Corporation under NASA Contract No. NAS 3-2564 and NAS 3-6298. The program was initiated and administered by Lewis Research Center, Liquid Rocket Technology Branch, Chemical Rocket Division. The project manager for the contract was Mr. Theodore Male.

The work was performed by the Industrial Chemicals Division of Allied Chemical Corporation at Morristown, New Jersey.

TABLE OF CONTENTS

<u>Section</u>		<u>Page</u>
1.	Introduction	1
2.	General Properties	2
	2.1 Chemical Properties	4
3.	Materials	
	3.1 Metals	5
	3.2 Non-Metallic	6
	3.2.1 Plastics	6
	3.2.2 Miscellaneous	11
	3.3 Cleaning	12
	3.3.1 Metals	12
	3.3.2 Non-Metals	14
	3.4 Passivation	15
4.	Hazards	
	4.1 Health	17
	4.1.1 Inhalation-Toxicity	17
	4.1.2 Skin Contact-Burns	18
	4.1.3 Treatment	19
	4.2 Fire and Explosions	21
5.	Safety	
	5.1 Personnel Protection	23
	5.2 Facility Protection	24
	5.3 Safety Equipment	24
6.	Decontamination and Disposal	
	6.1 Spills	26
	6.2 Controlled Disposal	26
	6.3 Equipment	28

TABLE OF CONTENTS

continued

<u>Section</u>		<u>Page</u>
7.	Transfer and Storage	
7.1	Materials of Construction	28
7.2	Equipment	29
7.2.1	Valves-Liquid OF ₂	29
7.2.2	Valves-Gaseous OF ₂	31
7.2.3	Connections, Lines and Fittings	32
7.2.4	Metering	34
7.2.5	Pressure Gauges	34
7.2.6	Cryogenic Storage Vessels	35
7.3	Procedures for Transfer	35
7.3.1	Liquid OF ₂	35
7.3.2	Gaseous OF ₂	36
8.	Packing and Shipping	37
9.	References	39

LIST OF TABLES

<u>Number</u>		
1	Properties of OF ₂	3
2	Compatibility of Metals with OF ₂	7
3	Materials of Construction-OF ₂ Service ..	30

ABSTRACT

General information covering chemical and physical properties as well as appearance, solubility, and stability of OF₂ are reviewed. Compatible and non-compatible materials, and proper cleaning and passivation techniques are discussed.

Health and fire hazards, OF₂ toxicity and physiological effects as well as first aid are included together with methods for reducing hazards. Safety measures include protective clothing in addition to facility and personal safety equipment.

Decontamination methods to be used to neutralize spills and leaks, and the disposal of surplus OF₂ are discussed.

The transfer and storage section includes materials, equipment, and procedures to be used for OF₂. The applicable laws, marking and packaging procedures are also listed. Adequate references are provided throughout the report.

1. INTRODUCTION

Oxygen difluoride is a highly energetic, space storable oxidizer which possesses great merit as a rocket propellant. To utilize its great potential it is first important to acquire the knowledge which will permit it to be used effectively and safely. It is therefore essential that a manual be available as a reference for all phases of OF₂ handling.

This oxygen difluoride handling manual incorporates all pertinent available information so that it can serve as a convenient guide for OF₂ handling procedures. This report is based on a review of the literature, discussions with persons experienced in this field, and also draws upon Allied Chemical Corporation's own vast experience as a manufacturer and supplier of this material. The similarity between OF₂ and fluorine has led to a review of acceptable practices for fluorine handling. Pertinent information from this source has been included.

2.

GENERAL PROPERTIES

Oxygen difluoride, OF_2 , is a powerful oxidizing agent which has been given serious consideration as a component of high-energy rocket propellant systems. It is a colorless gas at ambient conditions which condenses to a pale yellow liquid at -145.3°C . It reacts readily with a majority of inorganic and organic compounds with high heats of reaction. Such reactions are often sufficiently energetic to cause ignition. Oxygen difluoride is hypergolic with many fuels and should be treated with appropriate precautions. Some physical properties of OF_2 are shown in Table 1.

Oxygen difluoride is the simplest and most stable binary compound of oxygen and fluorine. Its behavior is quite similar to that of fluorine and the halogen fluorides. Although oxygen difluoride is considerably more toxic than fluorine, chemically it is less reactive. Compatibility studies have found OF_2 to be less corrosive than fluorine. Therefore materials, equipment and handling procedures that are satisfactory for fluorine are generally equally applicable for oxygen difluoride.

TABLE 1
PROPERTIES OF OF₂

<u>Physical Properties</u>		<u>Reference</u>
Molecular Formula	OF ₂	
Molecular Weight	54.00	
Freezing Point	-223.8°C (-371°F)	1
Boiling Point	-145.3°C (-230°F)	2
Critical Temperature	-58.0°C (-72°F)	3
Critical Pressure	48.9 atm. (719 psia)	3
Critical Density	0.533 g/cc	
Vapor Pressure	$\log P_{\text{mm}} = 7.2242 - \frac{555.42}{T^{\circ}\text{K}}$ Range: -195°C to -145°C	2
Density of Liquid	1.521 g/cc at its normal boiling point Density = $2.190 - 0.00523 T^{\circ}\text{K}$ Range: -145 to -153°C	3 3
Density of Gas	0.0021 g/cc at 21°C 0.0023 g/cc at 0°C	4
Viscosity, liquid	0.2826 centipoises at -145.3°C $\log \eta = \frac{131.5}{T^{\circ}\text{K}} - 1.5768$ Range: -146° to -153°C	3
Heat of Vaporization	2.650 kcal/mol at -144.8°C	5
Trouton's Constant	20.65	5
Solubility in Water	6.8 cc gas per 100 cc of water at 0°C, 11 atm.	5
Heat of Formation, gas	$\Delta H_{f298}^{\circ} = +5.86 \pm .17 \text{ kcal/mole}$	6

2.1

Chemical Properties

Oxygen difluoride is almost as powerful an oxidizer as fluorine but generally requires a higher activation energy to initiate its reactions. Reactions between OF_2 and oxidizable materials often have high heats of reaction and many such reactions reach ignition. Pure oxygen difluoride is quite stable at ambient temperature and can be stored in proper containers for long periods without noticeable decomposition. In the presence of water, OF_2 will hydrolyze slowly forming oxygen and HF. OF_2 is unstable at elevated temperatures, the decomposition rate is appreciable at approximately 250°C . The OF_2 dissociates into its constituent elements, oxygen and fluorine. Ice has been found to be shock sensitive in liquid OF_2 and moisture therefore must be excluded from OF_2 systems.

Oxygen difluoride is not shock sensitive. Sensitivity tests using Trauzl block techniques indicated OF_2 to be insensitive to shock at -196°C . (Ref. 7). A cylinder of liquid OF_2 was subjected to gunfire which ruptured the cylinder but failed to detonate the OF_2 (Ref. 8). Investigations conducted under this contract indicated that gaseous OF_2 did not detonate or damage its container when it was instantly decomposed by thermal shock (Ref. 14).

3. MATERIALS

3.1 Metals

Many common metals and alloys have been found to be compatible with oxygen difluoride. The most widely acceptable materials are Monel, nickel, stainless steels (300 series), copper, and aluminum. These materials have proven to be satisfactory for both liquid and gaseous oxygen difluoride service. The actual choice of material should be governed by design requirements such as temperature, pressure, duration of exposure and flow velocity. Considerations should also be given to weight requirements and economic feasibility before selecting a material for a given situation.

Table 2 lists all metals which have been used or tested for OF₂ service. For simplicity, the materials have been divided into three broad categories: compatible, not suitable, and those with insufficient background data to make a firm classification.

It should be noted that several materials have been placed into two categories. For example, aluminum alloys and nickel are so listed for dynamic service in liquid OF₂. They are compatible inasmuch as they will not ignite or have a significant corrosion rate under these conditions. However, under very high

flow velocities (300 ft./sec.), test orifices have shown some enlargement. The use of aluminum under dynamic conditions should therefore be limited to either low velocity applications, as in pipe lines, and to situations where a very slight dimensional change can be tolerated. These materials would therefore not be recommended as orifices, or valve stems and seats. On the other hand, materials that are rated as suitable under static conditions can also be used under mildly dynamic conditions.

It must be emphasized that the compatibility or suitability of any material with OF_2 is contingent upon its being properly cleaned and passivated prior to OF_2 exposure.

3.2 Non-Metallic

3.2.1 Plastics

The performance of plastic materials in oxygen difluoride service has been erratic. Plastic materials should therefore be used only for limited applications since these materials are readily affected by OF_2 under dynamic conditions. Additionally, all of the chemically inert plastic materials which have been tested have been impact sensitive in liquid OF_2 .

TABLE 2

COMPATIBILITY OF METALS WITH OF₂ (REF. 7 to 13)

Code: X = Compatible; NS = Not Suitable; - = Insufficient Information

<u>Material</u>	<u>Liquid</u>		<u>Gas</u>	
	<u>Static</u>	<u>Dynamic</u> ^(a)	<u>Static</u>	<u>Dynamic</u> ^(a)
<u>Aluminum Alloys</u>				
A1 1100	X	X,NS	X	-
A1 2014	X	X,NS	X	-
A1 2020	X	X,NS	X	-
A1 2024	X	X,NS	X	X
A1 2219	X	X,NS	X	-
A1 3003	X	X,NS	X	-
A1 5052	X	X,NS	X	-
A1 5154	X	X,NS	X	-
A1 5456	X	X,NS	X	-
A1 6061	X	X,NS	X	X
A1 7075	X	X,NS	X	-
A1 7079	X	X,NS	X	-
A1 7178	NS	NS	-	-
<u>Stainless Steels</u>				
SS 301 (FH)	X	X	X	X
SS 304 (FH)	X	X	X	X
SS 309 Cb	X	X	X	X
SS 310	X	X	X	X
SS 316 (A & FH)	X	X	X	X
SS 347 (A & FH)	X	X	X	X
SS 410	X(1)	-	X(1)	-
PH-15-7 Mo	X	-	X	X
<u>Maraging Steels</u>				
AM 350	X	-	X	-
AM 355	X	-	X	-
AM 367	X	-	X	-

TABLE 2 (continued)

<u>Material</u>	<u>Liquid</u>		<u>Gas</u>	
	<u>Static</u>	<u>Dynamic</u> ^(a)	<u>Static</u>	<u>Dynamic</u> ^(a)
<u>Nickel Alloys</u>				
Nickel 200, 201, & 211	X	X, NS	X	X
Monel 400	X	X	X	X
Monel K-500	X	X	X	X
Monel, Cast	X	X	X	X
Inconel X	X	X	X	X
Inconel 600	X	X	X	X
Rene 41	X	-	X	X
Hastelloy D	X	-	X	-
<u>Copper Alloys</u>				
Copper	X	X	X	X
Cu-Fe alloy 10	X	-	X	-
Cu-Fe alloy 40	X	(2)	X	-
Brass (70 - 30)	X	-	X	-
Phosphor Bronze	X	X	X	X
Beryllium Copper (2% Be)	X	-	X	-
Chromium Copper (1% Cr)	X	X	X	X
<u>Magnesium Alloys</u> (3)				
Mg H-24	X	-	X	-
Mg HM 21A-T8	X(2)	-	X	-
Mg A231B	X	-	X	-
Mg FS-1A	X	-	X	-
Mg HK-31A	X	-	X	-
<u>Titanium Alloys</u> (3)				
Ti A-110AT	X(2)	X(2)	X	X
Ti 6 Al-4V	X(2)	-(2)	X	-
Ti A-55	-	-	X	-
Ti B120-VCA	-	-	X	-
Ti 16U-2.5 Al	-	-	X	-
Kentanium	X	-	X	-

TABLE 2 (continued)

<u>Material</u>	<u>Liquid</u>		<u>Gas</u>	
	<u>Static</u>	<u>Dynamic(a)</u>	<u>Static</u>	<u>Dynamic(a)</u>
<u>Miscellaneous</u>				
Tantalum	X(2)	-(2)	X	-
Tin	NS	NS	NS	NS
Lead	NS(2)	NS(2)	X	NS
Mild Steel	(1)	(1)	X(1)	-
Columbium	X	NS	X	-
Brazed Monel (b)	X	X	X	X
Silvered Soldered Monel (c)	X	X	X	X
Welded Monel (d)	X	X	X	X
Platinum	-	-	X	-

(1) Not suitable for cryogenic service.

(2) Impact sensitive in liquid OF₂.

(3) Not all the listed materials have been tested for impact sensitivity. Those that have been tested and found not to be sensitive are aluminum alloys, stainless steels, copper alloys, nickel alloys and columbium. In view of the exhibited sensitivity of those titanium and magnesium alloys that were tested, similar alloys are suspect.

(a) In excess of 150 ft./sec.

(b) Brazing Rod, Oxxweld #25, Linde Corp.

(c) Silver Solder, Rod #1801, Eutectic Welding Alloys Corp.

(d) Monel Filler Metal 40, International Nickel.

The three classes of plastics that appear to be most resistant to OF₂ are listed below in order of preference: (Ref. 14)

(a) tetrafluoroethylene (Halon TFE, Teflon TFE)

(b) chlorotrifluoroethylene (Plaskon 2200, Kel F)

(c) fluorinated ethylene propylene (Teflon FEP)

Specimens of these materials have been tested in liquid OF₂ under both static and dynamic conditions

and were not chemically affected. However, these materials require a relatively low initiating energy to start a reaction which could result in the ignition and destruction of hardware. The reaction with slight surface contamination could provide this necessary energy. The margin of safety when using plastics is unknown but obviously small. This fact alone would indicate that plastics should be avoided, especially under dynamic conditions. In actual field service there have been numerous failures of gaskets, valve seats and O-rings fabricated of TFE, the best of the plastics. In many instances the plastic has simply disappeared. There are some applications, however, in which TFE has shown great merit. It is the only acceptable valve packing for OF_2 service. Extensive use as a pipe thread compound has shown TFE pipe tape to be satisfactory for this application. One layer of tape should be wrapped tightly around all but the first two male threads of the member which is to be connected. When TFE is used as a valve packing, care must be taken that there are no leaks across the packing. TFE cold flows and packing glands require constant attention to prevent leaks, especially if the valve is cycled frequently.

While several other plastics have appeared to be resistant to OF_2 on the basis of short term static tests, the use of plastics other than the three recommended classes is to be avoided. For example, Kynar which appeared to be unaffected by liquid OF_2 is so severely embrittled at cryogenic temperatures as to be worthless. Viton 7250, as another example, was relatively unaffected by liquid OF_2 , but showed a very significant attack in OF_2 gas at room temperature (Ref.14). As a further precaution, it should be remembered that a plastic to be used in OF_2 systems must also have resistance to fluorine since it will be in contact with this gas when the system is passivated. This fact alone precludes the use of many plastics which might otherwise have been given additional consideration.

3.2.2 Miscellaneous

There are a few other non-metallic materials that appear to be resistant to OF_2 . Again, the particular properties of these materials restrict their use to limited applications.

- (a) Pyrex glass - resistant to both liquid and gaseous OF_2 up to 200°C .
- (b) Sintered alumina (Al_2O_3) - This includes materials such as alundum and sapphire.
- (c) Fused SiO_2 - Quartz.
- (d) Fused metal oxides and fluorides - cermets.

(e) Ceramics

(f) Permatex #2 - Pipe thread compound for gaseous service at ambient temperatures.

(g) Fused carbides - Norton's Norbide (B_4C) and Titanium Carbide cermet.

Other non-plastics should not be used without testing. Graphite, for example, is shock sensitive in liquid OF_2 and explodes violently.

3.3 Cleaning

3.3.1 Metals

It is extremely important that all materials to be used in OF_2 service must be carefully and thoroughly cleaned, and free of surface contamination. Many system failures and ignitions have been caused by inadequate cleaning. The cleaning procedure which follows is generally applicable to all metal components: (additional cleaning information may be found in References 7, 15 and 16)

- (1) All components should be as completely disassembled as is practical. Materials that are non-metallic such as valve packings should be removed and cleaned separately.
- (2) Gross contaminants such as grease, oil, burrs, scale, weld slag, fluxes, dyes, and other foreign matter should be removed by the most appropriate cleaning technique. Acid soaks for removal of scale and oxides, alkaline washes or soaps for the removal

of oils and greases, and abrasive treatment for surface stains are suggested treatments. The choice of the cleaning ingredients should depend on its compatibility with the particular material. Cleaning should be continued until the metal attains a bright surface. The cleaned components must then be thoroughly rinsed with water to remove any trace of the contamination and cleaning agents.

- (3) All components should be cleaned by vapor degreasing or by sonic washing in a detergent solution. The parts should then be carefully rinsed several times with hot water, followed by rinses with distilled or ionized water.
- (4) The water can be removed by washing with a solvent such as Genesolv DI, a mixture of 65% Genesolv D and 35% isopropanol. Final rinsing in Genesolv D or similar solvents is followed by drying in a vacuum oven at approximately 150°C. If the size of the component precludes drying in a vacuum oven, drying with heated dry nitrogen may be substituted.
- (5) Unless the components are to be used immediately, the cleaned and dried parts are to be packaged in clean plastics such as Aclar or polyethylene. Be sure that the packaging materials are equally as clean as the components to avoid contamination. If aluminum foil is used as a wrapping be certain that it too is clean and oil free.

(6) It is highly advisable that assembled systems be cleaned even though cleaned components have been used. Particulate matter generated in the process of assembly may both contaminate the assembly and cause mechanical problems (Ref.10). The cleaning of the assembled equipment can be accomplished by flushing with a halocarbon solvent such as Genesolv D until the spent solvent indicates the system is free of particulate matter. The flushing is then followed by dry nitrogen or helium purging to remove the solvent. The final step is the evacuation of the system (to at least 1 mm) and sealing it off. Should the vacuum remain, it indicates that the removal of solvents has been complete, and of course, that the system is leak tight. A rise in pressure is a contrary indication. If the system is such that the solvent cannot be completely removed by purging or evacuation, it is better to omit the flushing. In this event, even more care should be given to the cleaning of the components and the succeeding assembly steps to avoid contamination.

3.3.2 Non-Metals

Plastic materials are not cleaned in the manner that is acceptable for metals. Plastics such as TFE are slightly porous and have a tendency to absorb and hold cleaning solvents. These retained solvents may later become

sources of ignition. Therefore, it is generally preferred to wash plastics in soap and water. If solvents such as acetone are used it is best to provide a final rinse or a sonic wash in a Genesolv D or similar high purity solvent.

Drying should be done in a vacuum oven to make certain that all solvents have been desorbed.

Nitric acid washing of specimens of TFE, CTFE, and FEP, followed by water washes and solvent rinse may also be used. The specimens are then vacuum oven dried for several hours. Specimens thus cleaned were used successfully in dynamic tests with liquid OF_2 at 500 psig (Ref. 10).

Plastics require careful handling to avoid surface scratches and contamination. A fingerprint on an otherwise clean plastic surface may initiate ignition.

3.4 Passivation

After a system has been thoroughly cleaned and dried it is passivated with fluorine. This produces an inert fluoride film which inhibits further attack. Passivation should be considered a necessary and final step in the cleaning procedure since it tends to destroy or inert any minute contamination that may have escaped the previous cleaning steps. Under no circumstances can passivation be used as a substitute for good cleaning.

Passivation should always be performed with fluorine even though the system will be used for OF₂ service. Fluorine, being more energetic, will react readily with both contaminants and hardware whereas OF₂ may not. Before introducing the fluorine the system must be clean and dry. If possible, the system should be evacuated to remove moisture. If evacuation is not possible, thorough purging with dry nitrogen to remove all traces of moisture and solvents is indicated. Fluorine gas is then slowly admitted to the system to either relieve the vacuum or displace the nitrogen until the fluorine is quite concentrated. At this point, the fluorine pressure is slowly increased in several increments until system pressure or a minimum of 50 psig is reached. The actual pressure and the holding time is somewhat dependent on the system design. An intricate system with dead ends should be given a longer passivation period to assure the diffusion of the fluorine to all units of the system. Thirty minutes is a minimum period for passivation. Longer periods and higher pressures are suggested if the system is to be used for severe service. The optimum procedure is to passivate at the working pressure of the assembly. After the system has been passivated, the fluorine is vented and purged with dry nitrogen. Positive pressure should be kept on the system until it is to be used to

prevent the inadvertent entrance of moisture. Moisture can destroy the passive film and in fact may greatly increase corrosion by the formation of HF (Ref. 15). Remember that passivation of individual components is neither necessary or satisfactory. Passivation is practical only when performed on the completely assembled system.

4. HAZARDS

4.1 Health

4.1.1 Inhalation - Toxicity

Oxygen difluoride is extremely toxic and the inhalation of this gas is to be avoided at all times. The tentative threshold limit value of 0.05 ppm has been established by the National Academy of Science - National Research Council Committee on Toxicology. It should be noted that this concentration cannot be detected by smell. The lower odor threshold is approximately 0.1 ppm although 0.5 ppm can be detected readily. The odor of very dilute concentrations of OF₂ is not too unpleasant and is somewhat like fluorine. In greater concentration the odor becomes foul and disagreeable. It has been reported that accommodation to the odor occurs rather rapidly. This again emphasizes the importance of leaving the contaminated area when the odor is first detected.

The recommended emergency limits for OF₂ exposure are: (Ref. 17)

60 minutes	-	0.1 ppm
30 minutes	-	0.2 ppm
10 minutes	-	0.5 ppm

Unfortunately the OF₂ concentration cannot be determined by odor and therefore these numbers are merely significant in that they emphasize the hazard of OF₂ inhalation.

Toxicity studies (Ref. 18) conducted with rats indicate that a 50% mortality can result from a 5 minute exposure to 17 ppm or 15 minutes at 8 ppm of OF₂ in air. These exposures produced widespread lung damage. Respiratory distress and death occurred within several hours and up to two days after exposure. It should be noted the test animals displayed no evidence of irritation during the period of exposure. It is therefore imperative that all inhalations or exposures to OF₂ should be reported and the victim should remain under competent medical supervision for at least 24 hours since the respiratory effects may often be delayed.

4.1.2

Skin Contact-Burns

Contact with either liquid OF₂ or a jet of gaseous OF₂ may produce serious burns which resemble thermal burns. However, since the reaction of OF₂ with skin and tissue produces hydrogen fluoride (HF), treatment

of burns must consider the corrosive effect of the HF.

Burns caused by lower concentrations of OF₂ more closely resemble HF burns and are treated as such. It must be remembered that HF, like OF₂, is insidious; symptoms may not develop for several hours. However, such burns are extremely painful and heal slowly.

4.1.3 Treatment

4.1.3.1 Inhalation

Any person who has been exposed to OF₂ fumes should leave the contaminated area immediately. There is no specific prophylactic treatment for OF₂ exposure. If there is difficulty in breathing or any respiratory distress, oxygen should be administered. The victim should be taken to a medical facility where accurate diagnosis can be made of any damage. It is important that the patient should be observed for 24 hours since lung damage or other symptoms may not develop for many hours after exposure. The medical treatment is then taken as the symptoms indicate.

A study of eighteen OF₂ inhalation incidents involving perhaps 25 persons indicated that almost as many "symptoms" were reported. In addition to respiratory distress, which covers irritation and breathing difficulties, other reported symptoms were headache, sleepiness, coughing, weakness, sore throat, shortness of breath, dizziness and the lingering slight odor of

OF₂ for many hours. In one case, the chemist developed pneumonia within 24 hours after exposure. He was hospitalized for an extended period before he fully recovered. A review of the reported symptoms does not indicate any set pattern or correlation of symptoms with one exception. Only two people reported headaches and each of these also stated they could smell OF₂ faintly for several hours after exposure. Since these two incidents were well isolated from each other, it would appear that these may also be legitimate symptoms of OF₂ inhalation.

4.1.3.2 Contact

All areas of the body that have been contacted by OF₂ should be copiously washed with water to remove all of the contaminant. Flushing should be maintained for a minimum of 15 minutes. Contaminated clothing should be removed during this period. The treatment used for HF burns should be followed. This consists of the application of iced alcohol or iced aqueous quaternary ammonium compounds, such as Hyamine, used as soaks or compresses. These treatments have been especially effective for the treatment of second degree HF burns (Ref. 19).

The Hyamine solution should be prepared in advance as a standard precaution when working with OF₂. The solution is formulated as follows: Dissolve 2 grams of Hyamine 1622 in a liter of Formula 46 alcohol or in a liter

of distilled water. The patient should receive competent medical assistance as soon as possible after he has been burned. Subsequent treatment should be administered or recommended by a physician. Early treatment may prevent serious consequences and alleviate the extreme pain associated with HF burns.

4.1.3.3 Eyes

Special attention is required for any actual or suspected OF₂ contact with the eyes. Liquid OF₂ or vapors may produce irreparable damage unless prompt attention is given. The eyes should be flushed copiously for 30 minutes with clean water. The pain of such injuries may cause the patient to close his eyes. It is imperative that the eyelids be held apart so that the eyes and adjacent tissues will be properly flushed. No medication should be applied to the eye. Hyamine soaks which are recommended for burns on other parts of the body must not be used on or about the eye. An ophthalmologist should be contacted immediately and any subsequent treatment should be performed as he directs.

4.2 Fire and Explosions

Oxygen difluoride is an extremely powerful oxidizer. Therefore contact with combustible materials will cause fires and possibly explosions. OF₂ is not shock sensitive and explosions therefore must be the result of the reaction of OF₂ and some highly oxidizable materials.

In the event that a fire occurs, an attempt should be made to shut off the source of OF_2 . It is advisable to have remotely operated valves in the system so that this can be accomplished quickly and safely. If the spill or leak can be shut off, the fire can be safely controlled with conventional extinguishants. Water spray deluge or fog can be safely applied to OF_2 spills and fires. The resultant HF formation as well as the toxicity of the OF_2 must, however, be considered. Therefore, personnel engaged in fire fighting must be equipped with suitable protective clothing and adequate breathing apparatus.

To minimize fire hazards, the facilities should be free of combustible materials. Construction should be of fireproof materials and combustible materials must be avoided. Good housekeeping should be practiced. The immediate areas should be free of debris and should not be used to store combustible materials or supplies.

Facility construction should be aimed at containing or restricting the OF_2 in the event of a leak or spill. To this purpose, barricades of concrete, cinder block, or metal should surround storage tanks and test facilities. Spray heads or fog nozzles within the barricades should be capable of remote activation. The area could then be safely deluged in the event of a spill with minimal danger to personnel.

5. SAFETY

5.1 Personnel Protection

All personnel working with OF_2 should be required to wear safety glasses and neoprene gloves which provide minimal protection. When working on or about the facilities containing liquid or gaseous OF_2 at elevated pressures, a standard face shield should be worn. For repairing leaks or breaking into any system that contains or has contained OF_2 , a clean neoprene protective outfit consisting of boots, gloves, face shield, jacket and trousers is required. This outfit, together with a supplied air breathing apparatus is required when entering an atmosphere which contains detectable concentrations of OF_2 fumes. Protective clothing should be loose fitting and quick opening so that it can be shed rapidly in the event it becomes contaminated or ignited. Protective clothing must be clean and dry to minimize the possibility of its reacting with OF_2 . No clothing can be considered completely satisfactory against a jet of liquid OF_2 . Safety clothing should be considered only as short term protection under emergency conditions. The philosophy of protective clothing has been well stated (Ref. 16): "The use of protective clothing should be limited to those conditions where it affords protection. Extravagant use of protective clothing may provide a false sense of security, while in fact being only a physical hindrance."

5.2 Facility Protection

The protection of personnel starts with the proper facility design. Facilities should use fireproof construction, and the elaborate use of barricades and similar devices to control and minimize the effects of any accidental releases of OF_2 . Enclosed areas should be provided with extensive exhaust facilities with sufficient capacity to prevent the buildup of toxic concentrations of OF_2 in the event of a minor leak. Consideration should be given to the location of exhaust exits. Vents which cannot be decontaminated should be well elevated to permit diffusion and dilution of toxic fumes. The location of vent exits should also consider the affects of possible contamination of adjacent areas. Facilities should also be equipped with remotely controlled spray deluge systems so that resultant fires can be rapidly and safely controlled. It is very important that all facilities be provided with several alternate methods of exit so that the entrapment of personnel is avoided.

5.3 Safety Equipment

In addition to the convenient location of lockers containing protective clothing and breathing apparatus, safety showers and eye wash stations must be provided. Such facilities should be located near enough to the work areas to be conveniently accessible to personnel working in the area. However, they must also be

beyond the reach of contamination in the event a gross equipment malfunction occurs. Shower facilities should also consider climatic conditions. The shock of a frigid shower may put an additional strain on an already injured person. Therefore tempered showers should be installed whenever possible. First aid facilities should be conveniently placed. First aid kits should contain the necessary supplies for HF burn treatment in addition to their normal materials. Emergency breathing oxygen should be available for treatment of OF₂ inhalations. It is important that all personnel working with OF₂ be aware of its toxicity and other hazards and be well trained in emergency procedures and the fundamentals of first aid for OF₂ exposure. Personnel should not work alone in OF₂ facilities and should always obey all safety rules and regulations.

Facilities should be equipped with alarm systems such as bells, horns, or lights so that personnel may receive adequate notice of any emergency. Hazardous test areas should be properly posted to prevent the entry of unauthorized personnel. Fume detectors may be used to monitor remote locations to give warning of leaks and spills. Particularly hazardous operations may be monitored by closed circuit television.

6. DECONTAMINATION AND DISPOSAL

6.1 Spills

The most effective decontaminant for liquid OF_2 spills is a dilute aqueous solution of ammonia. A 5% solution applied as a spray deluge is quite effective in neutralizing the OF_2 vapors above the spill and does not react violently with the liquid OF_2 . The OF_2 is converted to a relatively innocuous NH_4F . Although water deluge can be safely applied to a spill, it is relatively ineffective as a decontaminant (Ref. 14).

Shower heads or spray nozzles should be strategically placed so that the entire spill area can be deluged. The spray discharge deluge should be remotely operated manually or by automatic devices activated by OF_2 spills or fires. The spray equipment should be regularly and routinely tested by actual discharge to determine its operational effectiveness.

6.2 Controlled Disposal

Excess OF_2 should be decomposed and converted to innocuous compounds before release to the atmosphere. Several techniques have been developed for this purpose. Large quantities of OF_2 gas can be vented into a charcoal burner.

The toxicity of oxygen difluoride precludes direct venting into the atmosphere whenever it can be avoided. There are several techniques whereby waste OF_2 can be decomposed and converted to relatively innocuous compounds which can then be vented. The reaction between OF_2 and charcoal converts most of the fluorine values to CF_4 which is inert and non-toxic. A refractory lined drum provided with a water-cooled inlet makes a satisfactory charcoal burner (Ref. 14). A 500 cubic foot reactor has been used to decompose fluorine (Ref. 16). The unit could probably be used equally well for the decomposition of OF_2 .

Large quantities of OF_2 can also be decomposed by venting it into an air deficient flame fed with natural gas, methane or propane. Although HF is one of the resultant by-products, the use of an exhaust stack permits the hot gases to rise and rapidly disperse in the atmosphere. The danger of HF contamination is negligible compared to the danger of venting toxic OF_2 .

Oxygen difluoride can also be destroyed by burning it with ammonia. One hundred pounds of OF_2 can be consumed per hour in this manner. The user of this novel disposal technique considered it to be very effective, efficient and economical. The method was found to be equally suitable for fluorine disposal. The combustion of OF_2 or F_2 with ammonia at high feed rates is reported to be quite noisy. This disposal technique therefore may not be suitable at all locations.

6.3 Equipment

Equipment that has been used in OF₂ service or exposed to OF₂ vapors will be coated with fluoride films. Such films react with moisture and form HF. To avoid HF burns such equipment should be handled with rubber gloves. Water washing will safely and completely decontaminate the equipment so that it can be safely handled.

7. TRANSFER AND STORAGE

7.1 Materials of Construction

Although a great many materials are compatible with OF₂ (Ref. Section 3), from a practical standpoint, construction materials are generally limited to a few classes of alloys. Nickel alloys have shown the greatest resistance to attack by OF₂. Monel is the best alloy in this class and is acceptable for all OF₂ applications. Stainless steels, however, are the most widely used alloys for OF₂ service and have generally been found to be as satisfactory as Monel. Stainless steel alloys are chosen for OF₂ service because they are more readily available and more economical than Monel. Aluminum alloys are used where service requirements are not severe. The weight advantage of aluminum is, of course, a strong factor in its selection. Other materials that may be used for OF₂ facilities include copper, copper alloys, titanium and magnesium. Since titanium

and magnesium alloys do show slight impact sensitivity in liquid OF_2 , their use in static applications such as storage tanks is not encouraged. Table 3 lists various components of an OF_2 system together with satisfactory materials of construction for both cryogenic conditions (liquid and gas) and ambient conditions (gas only).

7.2 Equipment

7.2.1 Valves - Liquid OF_2

Annin valves have been widely used for liquid OF_2 service and their performance has been excellent. Generally, 1" valves with stainless steel bodies and copper seats are used, although Monel bodies have been selected when the need for additional safety factors can justify the extra cost. Teflon seats have been investigated but their performance has been erratic. The seats have often burned or simply disappeared. Copper seats on the other hand have given excellent service under very high pressures and velocities. The model to be selected is, of course, dependent upon the service requirements. For all models, however, a bellows type seal is preferred. Bellows of Monel or stainless steel are satisfactory. By back pressurization of the bellows the working pressure of the valve can be extended. Bellow valves have been used successfully at 1500 psi by this expedient (Ref. 10).

TABLE 3
MATERIALS OF CONSTRUCTION (Ref. 11 & 16)
OF₂ SERVICE

Usage	Cryogenic Temperature		Ambient Temperature	
	Stainless steel (300 series)		Stainless steel (300 series), Monel, aluminum, mild steel	
Storage tanks	aluminum, Monel, titanium, magnesium		Stainless steel, copper, Monel, aluminum, mild steel	
Lines & fittings	Stainless steel, Monel; flared and compression fittings		Halon TFE or Teflon TFE if recessed and out of line of flow, copper & aluminum preferred	
Gaskets	Soft copper, aluminum or nickel		Standard pyrex rotameters; S.S., aluminum or sapphire floats	
Regulators, flow meters	Standard metal orifices; turbine meters		All welded metal Bourdon tubes; stainless steel diaphragm and transducer (Barksdale type)	
Pressure gauges				
Injectors	Stainless steel (300 series); copper; nickel			
Valve bodies	Nickel, stainless steel (300 series) Monel, aluminum, Inconel, copper (low pressure)		Nickel, stainless steel (300 series), Monel, aluminum, Inconel, brass	
Valve plugs	Stainless steel (300 series), Monel		Stainless steel (300 series), Monel, brass	
Valve seats	Nickel, copper, aluminum, brass		Nickel, copper, aluminum, brass	
Valve packing	Not recommended		TFE (Halon or Teflon)	
Valve gaskets	Soft aluminum or copper		Soft aluminum, soft copper, TFE, lead	
Bellows	Monel and stainless steel 347		Monel and stainless steel 347	
Diaphragms	Stainless steel 347		Stainless steel 347	
Thread sealants	Brazing, welding, silver solder		Brazing, welding, silver solder, TFE pipe tape	
Bolts, nuts & screws	Stainless steel (300 series), Inconel X, Monel		Stainless steel (300 series), Inconel X, Monel	
Bearings	Aluminum 6061, hard anodized copper		Aluminum 6061, hard anodized copper	
Springs	K-Monel, Inconel X, stainless steel (300 series)		K-Monel, Inconel X, stainless steel (300 series)	
Electrical Insulation	Al ₂ O ₃		Al ₂ O ₃ , Pyrex	

Valves suitable for cryogenic service other than Annin can, of course, be used provided that they too follow certain principles:

- a) The valve must have no plastics or elastomers that can be contacted by OF_2 .
- b) Seals are effected by metal gaskets and bellows.
- c) Valve construction should be such that it can be disassembled and thoroughly cleaned.
- d) All valves must be capable of remote controlled operation.

Some other valves that have given satisfactory service in liquid OF_2 are Futurecraft No. 30354, and Marotta Valve, Model MV510X.

7.2.2 Valves - Gaseous OF_2

For gas phase service many other valves, in addition to those suitable for cryogenic service, have been satisfactory. Gas phase service is herein construed as handling OF_2 at approximately ambient conditions. Typical valves used in such service are Hoke 343 and 344 which employ a TFE packing. Valve bodies of Monel or stainless steel are both satisfactory. It should be noted that these Hoke valves have the packing beneath the stem threads. Valves with threads below the packing are not suitable since the valves must be cleaned and free of lubricant before going into OF_2 service. The unlubricated threads gall and seize and the valves become unusable. Other valves recommended for OF_2 gas

service include Matheson type 940F, and Whittaker Valve No. 230105. Packless valves such as Nupro SS-BW, with a welded bellows, as well as Hoke 440 and 470 series bellows valves have also proven satisfactory. Comparable valves employing the principles cited above would also be acceptable provided that they too were completely cleaned and passivated before going into service. Lastly, it should not be overlooked that bronze Chlorine Institute valves have been standard equipment on OF_2 cylinders since Allied Chemical Corporation first packaged this gas.

7.2.3 Connections, Lines and Fittings

Welded connections are to be preferred whenever practical but are especially important for liquid OF_2 dynamic service. The necessity of welding increases directly with the severity of the operating conditions. Flange closures using copper or aluminum gaskets may be used where frequent and easy disassembly is required. Copper gaskets up to 10" diameter have been used with complete satisfaction. However, gaskets have a tendency to leak when the system is cycled between ambient and cryogenic temperatures. Constant pressure checking is therefore required. Welded closures eliminate this problem. Heliarc or inert gas welding is preferred. Welding techniques should be used which will prevent the formation of oxides that may subsequently react vigorously when exposed to OF_2 .

Brazing, and to a lesser extent silver solder, are also suitable methods for effecting leak tight connections. Fluxes used in these processes, however, may produce hazardous residues which must be carefully removed.

Other closures and connections have been used successfully in liquid OF₂ service. Monel Swagelok fittings up to 1/2" have been satisfactory at 1500 psi. Copper Swagelok fittings have been used at 1500 psig for OF₂ gas service. Copper Flare fittings (45°) have been used to a lesser extent in gas handling service generally at 400 psi and less. Parker AN fittings have been satisfactory for gas phase service up to 1000 psi. Successful service from these various fittings depends upon exercising the proper care in assembly. When tubing must be flared it must be done properly. The tubing must be free of burrs and die marks. Dell seals over smooth flares provide improved performance.

Lines and fittings are generally fabricated from stainless steel (300 series), Monel, nickel, copper and aluminum. The choice of material is dictated by the design conditions. All five materials have been satisfactory for both liquid and gaseous OF₂. It cannot be over-emphasized that satisfactory performance depends on proper cleaning and passivation prior to actual use.

7.2.4 Metering

The preferred devices for the metering of liquid OF_2 are 400 or 300 series Fischer-Porter turbine type flowmeters with stainless steel vanes and bearings. Potter flowmeters, type P7D or P3D with stainless steel vanes and sapphire bearings have also been satisfactory.

Pressure differential cells have been used in conjunction with orifices to measure flow. Oil filled transducers have been used as pressure pickups but the potential hazard from an oil leak argues against their use. For metering OF_2 gas at ambient temperature a pyrex rotameter is quite satisfactory. Gross transfer of gas from cylinders can be accurately measured from cylinder pressure drop since OF_2 closely follows ideal gas laws.

7.2.5 Pressure Gauges

Pressure gauges constructed with welded Monel, stainless steel or bronze Bourdon tubes have all given satisfactory service with OF_2 gas. It is imperative that the Bourdon tubes are LOX clean and passivated with fluorine before being placed in OF_2 service. A gauge with a Monel Bourdon tube has been used at 7000 psig with OF_2 . Gauges with stainless steel tubes have been used at 2000 psig.

7.2.6 Cryogenic Storage Vessels

Storage vessels for liquid OF_2 must, of course, be fabricated from materials that are serviceable at cryogenic temperatures. Monel, stainless steel (300 series), and aluminum are the best materials for this service. Although several methods can be used to maintain the OF_2 as a liquid, the preferred vessel consists of three concentric shells. The innermost shell contains the OF_2 and the middle shell contains a refrigerant such as liquid nitrogen (LN_2). The outer shell, which can be mild steel, is filled with an insulating material and evacuated. By replenishing the LN_2 as required, OF_2 can be maintained as a liquid indefinitely.

Well insulated containers equipped with an internal refrigeration coil or an external condenser can also be used for cryogenic OF_2 storage.

7.3 Procedures for Transfer

7.3.1 Liquid OF_2

The transfer of liquid OF_2 can be readily accomplished by pressurizing the storage tank with helium. Provided that the transfer lines are properly insulated and the proper cryogenic type valves are employed, transfer is then simply a matter of valve manipulation. As a precaution it is good practice to provide double valving for all operations involving the transfer of liquid OF_2 .

Thus, in the event one valve leaks or fails, a leak or catastrophic spill can be prevented. In transfer operations, it is necessary to evacuate the receiver before admitting OF_2 . Air will condense in liquid nitrogen cooled receivers. Liquid air is completely miscible with OF_2 and will therefore act as a diluent. To prevent this, only helium, which is neither condensable at LN_2 temperature nor soluble in OF_2 , should be used as a pressurizing agent for liquid OF_2 .

7.3.2 Gaseous OF_2

The transfer of OF_2 from cylinders or storage vessels is very simple. Cylinders can be manifolded in large numbers to supply large amounts of OF_2 . Each cylinder contains OF_2 at 400 psig. Therefore transfer can be readily accomplished as long as a pressure differential exists between cylinder and receiver. If the OF_2 is being condensed care must be exercised to prevent forming a vacuum in the cylinder which could cause the suck-back of air or material from the system into the cylinder. Moist air in a cylinder or system would destroy the passivating film and cause corrosion, and must be avoided at all times. Cylinders should be double valved and the main cylinder valve fitted with a device which will permit remote operations.

8. PACKAGING AND SHIPPING

Oxygen difluoride is packaged as a compressed gas in seamless steel cylinders. The largest cylinders in current use are 10 5/8" outside diameter and 55 1/2" long, with a tare weight of approximately 195 pounds. This cylinder has a capacity of 9 pounds of oxygen difluoride gas at 400 psig. A similar cylinder of slightly smaller diameter has a capacity of 6 3/4 pounds of OF₂ at 400 psig. The tare weight of this smaller cylinder is approximately 145 pounds. Both cylinders have a single outlet, valved with a Chlorine Institute valve having a nominal 1.030" diameter left hand external threaded outlet. A suitable adapter, designated as F 70M, is available from the Matheson Co., Inc., East Rutherford, New Jersey. This unit, made of Monel, can be used with lead gaskets where it seats onto the valve outlet. Soft copper and soft aluminum gaskets are also suitable.

Oxygen difluoride is shipped in DOT 3AA 1800 steel cylinders as a "Flammable Gas-N.O.S." Cylinders bear the DOT red label as well as the manufacturer's (Allied Chemical Corporation) label which provides adequate pertinent precautionary information. Interstate shipments of cylinders are permitted via truck, rail and ship. However, trucks are the usual form of transportation. Cylinders must be firmly secured during shipment to prevent falling or rolling.

There are no restrictions on shipment other than meeting the necessary requirements for transporting a red labeled cylinder.

Oxygen difluoride can also be packaged and transported as a liquid in refrigerated tanks if large quantities are required.

Additional information as to cost and availability should be obtained from the Industrial Chemicals Division, Allied Chemical Corporation, the only large producer and supplier of oxygen difluoride.

9.

REFERENCES

1. Ruff, O. and Clusius, K., Z.anorg.Chem., 1930, 190, 267-9.
2. Schnitzlein, J. G., et al, J.Phys.Chem., 1952, 56, 233-4.
3. Anderson, R., et al, J.Phys.Chem., 1952, 56, 473-4.
4. Ruff, O. and Menzel, W., Z.anorg.Chem., 1930, 190, 257-266.
5. Ruff, O. and Menzel, W., Z.anorg.Chem., 1930, 190, 267-9.
6. King, R. C. and Armstrong, G. T., National Bureau of Standards Report 9500, Chapter 8, Jan.1, 1967.
7. Sekits, D. F., "Design Handbook for Oxygen Difluoride", Thiokol Chemical Corp., Reaction Motors Division, RTD-TDR-63-1084, Contract No. AF04(611)-8400, Nov.1963.
8. Smith, D. S., "Oxygen Difluoride The High Energy, Space Storable Propellant", Thiokol Chemical Corp., Reaction Motors Division, TPR 97, Aug. 1961.
9. Tiner, N. A., English, W. D., and Toy, S.M., "Compatibility of Structural Materials with High Performance O-F Liquid Oxidizers", Contract No. AF33(657)-9162, Douglas Aircraft Co., Inc., Tech. Doc. Rept. No. AFML-TR-65-414, Nov. 1965.

10. Jackson, R. B., "Oxygen Difluoride Research Study", Final Report, Contract No. NAS 3-6298, Allied Chemical Corporation, Morristown, N. J., Rept.No. NASA CR 72357, 1970.
11. Anon., "Oxygen Difluoride", Unit 25, Liquid Propellant Manual, Chemical Propulsion Information Agency, December 1967.
12. Shyne, J. J., "Compatibility of Various Materials with Oxygen Difluoride", Reaction Motors Division, Thiokol Chemical Corp., EML-1837, 1961.
13. Tiner, N. A. & English, W. D., "Explosive Sensitivity of Fluorinated Liquid Oxidizers in Contact with Certain Substances", Douglas Aircraft Co., Inc. Paper presented at 6th Liquid Propulsion Symposium, Los Angeles, Calif. Sept. 1964.
14. Jackson, R. B., "Oxygen Difluoride Research Study:", Final Report Contract No. NAS 3-2564, Allied Chemical Corporation, Morristown, N. J., Rept. No. NASA CR 72380, 1970.
15. Cannon, W. A. et al, "Halogen Passivation Procedural Guide", McDonnell Douglas Corp., Final Tech. Rept. AFRPL-TR-67-309, Contract No. FO4611-67-C-0033, December 1967.
16. Schmidt, H. W., "Fluorine and Fluorine-Oxygen Mixtures in Rocket Systems", NASA, Lewis Research Center, NASA SP-3037, 1967.

17. Smyth, H. F., Jr., "Military and Space Short-Term Inhalation Standards", AMA Archives of Environmental Health, Vol. 12 (1966), p. 488-490.
18. Lester, D. and Adams, W.R., "The Inhalation Toxicity of Oxygen Difluoride", American Industrial Hygiene Association Journal, Vol. 26, Nov.-Dec. 1965.
19. Reinhardt, C. F., et al, "Hydrofluoric Acid Burn Treatment", American Industrial Hygiene Association Journal, March-April 1966.

REPORT DISTRIBUTION LIST

NASA Lewis Research Center (1)
21000 Brookpark Road
Cleveland, Ohio 44135
Attention: Contracting Officer
MS 500-313

NASA Lewis Research Center (5)
21000 Brookpark Road
Cleveland, Ohio 44135
Attention: Liquid Rocket Technology
Branch, MS 500-209

NASA Lewis Research Center (1)
21000 Brookpark Road
Cleveland, Ohio 44135
Attention: Technical Report
Control Office, MS 5-5

NASA Lewis Research Center (1)
21000 Brookpark Road
Cleveland, Ohio 44135
Attention: Technology Utilization
Office, MS 3-16

NASA Lewis Research Center (2)
21000 Brookpark Road
Cleveland, Ohio 44135
Attention: AFSC Liaison Office, 501-3

NASA Lewis Research Center (2)
21000 Brookpark Road
Cleveland, Ohio 44135
Attention: Library

NASA Lewis Research Center (1)
21000 Brookpark Road
Cleveland, Ohio 44135
Attention: Office of Reliability &
Quality Assurance,
MS 500-111

NASA Lewis Research Center (1)
21000 Brookpark Road
Cleveland, Ohio 44135
Attention: D.L. Nored, Chief, LRTB,
MS 500-209

NASA Lewis Research Center (3)
21000 Brookpark Road
Cleveland, Ohio 44135
Attention: S. Cohen, Project Manager
MS 500-209

NASA Lewis Research Center (1)
21000 Brookpark Road
Cleveland, Ohio 44135
Attention: E.W. Conrad, MS 500-204

NASA Lewis Research Center (1)
21000 Brookpark Road
Cleveland, Ohio 44135
Attention: R. H. Kemp, MS 49-1

NASA Lewis Research Center (1)
21000 Brookpark Road
Cleveland, Ohio 44135
Attention: R. H. Knoll, MS 501-2

NASA Lewis Research Center (1)
21000 Brookpark Road
Cleveland, Ohio 44135
Attention: J. W. Gregory
MS 500-209

Chief, Liquid Experimental
Engineering, RPX (2)
Office of Advances Research
& Technology
NASA Headquarters
Washington, D. C. 20546

Chief, Liquid Propulsion
Technology, RPL (2)
Office of Advanced Research
& Technology
NASA Headquarters
Washington, D. C. 20546

Director, Launch Vehicles
& Propulsion, SV (1)
Office of Space Science &
Applications
NASA Headquarters
Washington, D. C. 20546

Chief, Environmental Factors
& Aerodynamics (1)
Code RV-1
Office of Advanced Research &
Technology
NASA Headquarters
Washington, D. C. 20546

Chief, Space Vehicles Structures (1)
Office of Advanced Research &
Technology
NASA Headquarters
Washington, D. C. 20546

Director, Advanced Manned
Missions, MT (1)
Office of Manned Space Flight
NASA Headquarters
Washington, D. C. 20546

NASA Scientific & Technical
Information Facility (6)
P. O. Box 33
College Park, Maryland 20740

Director, Technology Utilization
Division (1)
Office of Technology Utilization
NASA Headquarters
Washington, D. C. 20546

NASA Ames Research Center (1)
Moffett Field, California 94035
Attention: Library

NASA Ames Research Center
Moffett Field, California 94035
Attention: Hans M. Mark
Mission Analysis Div.

NASA Flight Research Center (1)
P. O. Box 273
Edwards, California 93523
Attention: Library

NASA Goddard Space Flight Center (1)
Greenbelt, Maryland 20771
Attention: Library

NASA Goddard Space Flight Center
Greenbelt, Maryland 20771
Attention: Merland L. Moseson Code 620

NASA John F. Kennedy Space Center (1)
Cocoa Beach, Florida 32931
Attention: Library

NASA John F. Kennedy Space Center
Cocoa Beach, Florida 32931
Attention: Dr. Kurt H. Debus

NASA Langley Research Center (1)
Langley Station
Hampton, Virginia 23365
Attention: Library

NASA Langley Research Center
Langley Station
Hampton, Virginia 23365
Attention: E. Cortwright, Director

NASA Manned Spacecraft Center (1)
Houston, Texas 77001
Attention: Library

NASA Manned Spacecraft Center
Houston, Texas 77001
Attention: J. G. Thiobodaux, Jr.
Chief, Propulsion &
Power Division

NASA George C. Marshall Space (1)
Flight Center
Huntsville, Alabama 35812
Attention: Library

NASA George C. Marshall Space
Flight Center
Huntsville, Alabama 35812
Attention: Hans G. Paul

NASA George C. Marshall Space
Flight Center
Huntsville, Alabama 35812
Attention: Leon J. Hastings

NASA George C. Marshall Space
Flight Center
Huntsville, Alabama 35812
Attention: James Thomas

NASA George C. Marshall Space
Flight Center
Huntsville, Alabama 35812
Attention: Dale Burrows

NASA George C. Marshall Space
Flight Center
Huntsville, Alabama 35812
Attention: I. G. Yates

NASA George C. Marshall Space
Flight Center
Huntsville, Alabama 35812
Attention: Clyde Nevins

NASA George C. Marshall Space
Flight Center
Huntsville, Alabama 35812
Attention: J. Blumrich

Jet Propulsion Laboratory (1)
4800 Oak Grove Drive
Pasadena, California 91103
Attention: Library

Jet Propulsion Laboratory
4800 Oak Grove Drive
Pasadena, California 31103
Attention: Henry Burlage, Jr.

Jet Propulsion Laboratory
4800 Oak Grove Drive
Pasadena, California 91103
Attention: Duane Dipprey

Defense Documentation Center (1)
Cameron Station
Building 5
5010 Duke Street
Alexandria, Virginia 22314
Attention: TISIA

Office of the Director of
Defense Research &
Engineering (1)
Washington, D. C. 20301
Attention: Office of Asst. Dir.
(Chem. Technology)

RTD (RTNP) (1)
Bolling Air Force Base
Washington, D. C. 20332

Arnold Engineering Development
Center (1)
Air Force Systems Command
Tullahoma, Tennessee 37389
Attention: Library

Arnold Engineering Development Center
Air Force Systems Command
Tullahoma, Tennessee 37389
Attention: Dr. H. K. Doetsch

Advanced Research Projects Agency(1)
Washington, D. C. 20525
Attention: Library

Aeronautical Systems Division (1)
Air Force Systems Command
Wright-Patterson Air Force Base,
Dayton, Ohio 45433
Attention: Library

Aeronautical Systems Division
Air Force Systems Command
Wright-Patterson Air Force Base,
Dayton, Ohio 45433
Attention: D. L. Schmidt
Code ARSCNC-2

Air Force Missile Test Center (1)
Patrick Air Force Base, Florida 32925
Attention: Library

Air Force Missile Test Center
Patrick Air Force Base, Florida 32925
Attention: L. J. Ullian

Air Force Systems Command (1)
Andrews Air Force Base
Washington, D. C. 20332
Attention: Library

Air Force Systems Command
Andrews Air Force Base
Washington, D. C. 20332
Attention: Capt. S. W. Bowen SCLT

Air Force Rocket Propulsion Laboratory (1)
(RPM)
Edwards, California 93523
Attention: Library

Air Force FTC (FTAT-2) (1)
Edwards Air Force Base,
California 93523
Attention: Library

Air Force FTC (FTAT-2)
Edwards Air Force Base
California 93523
Attention: Donald Ross

Air Force Office of Scientific Research (1)
Washington, D. C. 20333
Attention: Library

Air Force Office of Scientific Research
Washington, D. C. 20333
Attention: SREP, Dr. J. F. Masi

Space & Missile System Organization (1)
Air Force Unit Post Office
Los Angeles, California 90045
Attention: Technical Data Center

Office of Research Analyses (OAR) (1)
Holloman Air Force Base
New Mexico 88300
Attention: Library
RRRRD

U. S. Air Force (1)
Washington, D. C.
Attention: Library

U. S. Air Force
Washington, D. C.
Attention: Col. C. K. Stambaugh
Code AFRST

Commanding Officer (1)
U.S. Army Research Office (Durham)
Box CM, Duke Station
Durham, North Carolina 27706
Attention: Library

U. S. Army Missile Command (1)
Redstone Scientific Information Center
Redstone Arsenal, Alabama 35808
Attention: Document Section

U. S. Army Missile Command
Redstone Scientific Information Center
Redstone Arsenal, Alabama 35808
Attention: Dr. W. Wharton

Commander (1)
U. S. Naval Missile Center
Point Mugu, California 93041
Attention: Technical Library

Commanding Officer (1)
Naval Research Branch Office
1030 E. Green Street
Pasadena, California 91101
Attention: Library

Director (Code 6180) (1)
U. S. Naval Research Laboratory
Washington, D. C. 20390
Attention: Library

Director (Code 6180)
U. S. Naval Research Laboratory
Washington, D. C. 20390
Attention: H. W. Carhart

Director (Code 6180)
U. S. Naval Research Laboratory
Washington, D. C. 20390
Attention: J. M. Krafft

Picatinny Arsenal(1)
Dover, New Jersey 07801
Attention: Library

Picatinny Arsenal
Dover, New Jersey 07801
Attention: I. Forsten

Air Force Aero Propulsion Laboratory(1)
Research & Technology Division
Air Force Systems Command
United States Air Force
Wright-Patterson AFB, Ohio 45433
Attention: APRP (Library)

Air Force Aero Propulsion Laboratory
Research & Technology Division
Air Force Systems Command
United States Air Force
Wright-Patterson AFB, Ohio 45433
Attention: R. Quigley

Air Force Aero Propulsion Laboratory
Research & Technology Division
Air Force Systems Command
United States Air Force
Wright-Patterson AFB, Ohio 45433
Attention: C. M. Donaldson

Space Division (1)
Aerojet-General Corporation
9200 East Flair Drive
El Monte, California 91734
Attention: Library

Space Division
Aerojet-General Corporation
9200 East Flair Drive
El Monte, California 91734
Attention: S. Machlawski

Propulsion Division (1)
Aerojet-General Corporation
P. O. Box 15847
Sacramento, California 95813
Attention: Technical Library
2484-2015A

Propulsion Division
Aerojet-General Corporation
P. O. Box 15847
Sacramento, California 95813
Attention: R. Stiff

Aeronutronic Division of Philco (1)
Ford Corporation
Ford Road
Newport Beach, California 92663
Attention: Technical Information
Department

Aeronutronic Division of Philco
Ford Corporation
Ford Road
Newport Beach, California 92663
Attention: Dr. L. H. Linder

Garrett Corporation (1)
Airesearch Division
Phoenix, Arizona 85036
Attention: Library

Garrett Corporation
Airesearch Division
Phoenix, Arizona 85036
Attention: R. Bullock

Garrett Corporation
Airesearch Division
Phoenix, Arizona 85036
Attention: J. R. Erwin

Garrett Corporation (1)
Airesearch Division
Los Angeles, California 90053
Attention: Library

Garrett Corporation
Airesearch Division
Los Angeles California
Attention: Linwood Wright

Brown University (1)
Providence, R. I. 02912
Attention: Technical Library

Brown University
Providence, R. I. 02912
Attention: Dr. P. F. Maeder

Case Western Reserve University (1)
100900 Euclid Avenue
Cleveland, Ohio 44115
Attention: Technical Library

Case Western Reserve University
100900 Euclid Avenue
Cleveland, Ohio 44115
Attention: Dr. E. Rishatko

Pennsylvania State University (1)
State College, Pennsylvania 16802
Attention: Library

Pennsylvania State University
State College, Pennsylvania 16802
Attention: Dr. M. Seoik

Pennsylvania State University
State College, Pennsylvania 16802
Attention: Dr. J. W. Hall

Pennsylvania State University
State College, Pennsylvania 16802
Attention: Dr. B. Lakshminarayana

Iowa State University (1)
Ames, Iowa 50012
Attention: Library

Iowa State University
Ames, Iowa 50012
Attention: Dr. George Serovy

Air Products & Chemicals Corp. (1)
P. O. Box 538
Allentown, Pennsylvania 18105

Air Products & Chemicals Corp. (1)
P. O. Box 538
Allentown, Pennsylvania 18105
Attention: F. Hyman

California Institute of Technology (1)
Pasadena, California 91109
Attention: Library (Technical)

California Institute of Technology
Pasadena, California 91109
Attention: Dr. A. Acosta

Massachusetts Institute of Technology (1)
Cambridge, Massachusetts 02138
Attention: Library

Massachusetts Institute of Technology
Cambridge, Massachusetts 02138
Attention: Dr. R. W. Mann

Ford Motor Company (1)
American Road
Dearborn, Michigan 48127

Ford Motor Company (1)
American Road
Dearborn, Michigan 48127
Attention: Mr. M. Ference, Jr.

University of Denver (1)
Denver Research Institute
P. O. Box 10127
Denver, Colorado 80210
Attention: Security Office

Fairchild Stratost Corporation (1)
Aircraft Missiles Division
Hagerstown, Maryland
Attention: Library 21740

Research Center (1)
Fairchild Hiller Corporation
Germantown, Maryland
Attention: Library 20767

Research Center
Fairchild Hiller Corporation
Germantown, Maryland
Attention: Ralph Hall 20767

General Dynamics/Convair (1)
P. O. Box 1128
San Diego, California 92112
Attention: Library

General Dynamics/Convair
P. O. Box 1128
San Diego, California 92118
Attention: Frank Dore

Missiles and Space Systems Center (1)
General Electric Company
Valley Forge Space Technology Center
P. O. Box 8555
Philadelphia, Pa. 19101
Attention: Library

Missiles and Space Systems Center
General Electric Company
Valley Forge Space Technology Center
P. O. Box 8555
Philadelphia, Pa. 19101
Attention: A. Cohen

Missiles and Space Systems Center
General Electric Company
Valley Forge Space Technology Center
P. O. Box 8555
Philadelphia, Pa. 19101
Attention: F. Schultz

General Electric Company (1)
Flight Propulsion Lab. Department
Cincinnati, Ohio 45201
Attention: Library

General Electric Company
Flight Propulsion Lab. Department
Cincinnati, Ohio 45201
Attention: D. Suichu

General Electric Company
Flight Propulsion Lab. Department
Cincinnati, Ohio 45201
Attention: Leroy Smith

Hercules Powder Company (1)
Allegheny Ballistics Laboratory
P. O. Box 210
Cumberland, Maryland 21501
Attention: Library

Honeywell, Inc. (1)
Aerospace Division
2600 Ridgeway Road
Minneapolis, Minnesota 55424
Attention: Library

IIT Research Institute (1)
Technology Center
Chicago, Illinois 60616
Attention: Library

IIT Research Institute
Technology Center
Chicago, Illinois 60616
Attention: C. K. Hersh

Kidde Aer-Space Division (1)
Walter Kidde & Company, Inc.
675 Main Street, Belleville, N. J.
07109

Kidde Aer-Space Division
Walter Kidde & Company, Inc.
675 Main Street
Belleville, N. J. 07109
Attention: R. J. Hanville

Ling-Temco-Vought Corporation (1)
P. O. Box 5907
Dallas, Texas 75222
Attention: Library

Lockheed Missiles and Space Co. (1)
P. O. Box 504
Sunnyvale, California 94087
Attention: Library

Lockheed Propulsion Company (1)
P. O. Box 111
Redlands, California 92374
Attention: Library,

Lockheed Propulsion Company
P. O. Box 111
Redlands, California 92374
Attention: H. L. Thackwell

Marquardt Corporation (1)
16555 Saticoy Street
Box 2013 - South Annex
Van Nuys, California 91409

Marquardt Corporation
16555 Saticoy Street
Box 2013 - South Annex
Van Nuys, California 91409
Attention: L. R. Bell, Jr.

Aerospace Corporation (1)
2400 E. El Segundo Blvd.
Los Angeles, California 90045
Attention: Library-Documents

Aerospace Corporation
2400 E. El Segundo Blvd.
Los Angeles, California 90045
Attention: J. G. Wilder

Arthur D. Little, Inc. (1)
20 Acorn Park
Cambridge, Massachusetts 02140
Attention: Library

Arthur D. Little, Inc.
20 Acorn Park
Cambridge, Massachusetts 02140
Attention: A. C. Tobey

Astropower Laboratory (1)
McDonnell-Douglas Aircraft Company
2121 Paularino
Newport Beach, California 02163
Attention: Library

ARO, Incorporated (1)
Arnold Engineering Development Center
Arnold AF Station, Tennessee 37389
Attention: Library

Susquehanna Corporation (1)
Atlantic Research Division
Shirley Highway & Edsall Road
Alexandria, Virginia 22314
Attention: Library

Battelle Memorial Institute (1)
505 King Avenue
Columbus, Ohio 43201
Attention: Report Library, Room 6A

Beech Aircraft Corporation (1)
Boulder Facility
Box 631
Boulder, Colorado 80301
Attention: Library

Beech Aircraft Corporation
Boulder Facility
Box 631
Boulder, Colorado 80301
Attention: Douglas Pope

Bell Aerosystems, Inc. (1)
Box 1
Buffalo, New York 14240
Attention: Library

Bell Aerosystems, Inc.
Box 1
Buffalo, New York 14240
Attention: T. Reinhardt

Bell Aerosystems, Inc.
Box 1
Buffalo, New York 14240
Attention: W. M. Smith

Bellcomm (1)
955 L'Enfant Plaza, S.W.
Washington, D. C. 20020
Attention: Library

Bellcomm
955 L'Enfant Plaza, S.W.
Washington, D. C. 20020
Attention: H. S. London

Boeing Company (1)
Space Division
P. O. Box 868
Seattle, Washington 98124
Attention: Library

Boeing Company
Space Division
P. O. Box 868
Seattle, Washington 98124
Attention: J. D. Alexander

Boeing Company
Space Division
P. O. Box 868
Seattle, Washington 98124
Attention: C. F. Tiffany

Boeing Company (1)
1625 K Street, N.W.
Washington, D. C. 20006

Boeing Company (1)
P. O. Box 1680
Huntsville, Alabama 35801

Boeing Company
P. O. Box 1680
Huntsville, Alabama 35801
Attention: Ted Snow

Chemical Propulsion Info. Agency (1)
Applied Physics Laboratory
8621 Georgia Avenue
Silver Spring, Maryland 20910

Chemical Propulsion Info. Agency
Applied Physics Laboratory
8621 Georgia Avenue
Silver Spring, Maryland 20910
Attention: Tom Reedy

Chrysler Corporation (1)
Missile Division
P. O. Box 2628
Detroit, Michigan 48232
Attention: Library

Chrysler Corporation
Missile Division
P. O. Box 2628
Detroit, Michigan 48232
Attention: John Gates

Chrysler Corporation
Space Division
P. O. Box 29200
New Orleans, Louisiana 70129
Attention: Librarian

Martin-Marietta Corporation (1)
(Baltimore Division)
Baltimore, Maryland 21203
Attention: Library

Denver Division (1)
Martin-Marietta Corporation
P. O. Box 179
Denver, Colorado 80201
Attention: Library

Denver Division
Martin-Marietta Corporation
P. O. Box 179
Denver, Colorado 80201
Attention: Dr. Morgenthaler

Denver Division
Martin-Marietta Corporation
P. O. Box 179
Denver, Colorado 80201
Attention: F. R. Schwartzberg

Orlando Division (1)
Martin-Marietta Corporation
Box 5827
Orlando, Florida 32802
Attention: Library

Orlando Division
Martin-Marietta Corporation
Box 5827
Orlando, Florida 32802
Attention: J. Fern

Western Division (1)
McDonnell Douglas Aircraft Co., Inc.
3000 Ocean Park Blvd.
Santa Monica, California 90406
Attention: Library

Western Division
McDonnell Douglas Aircraft Co., Inc.
3000 Ocean Park Blvd.
Santa Monica, California 90406
Attention: R. W. Hallet

Western Division
McDonnell Douglas Aircraft Co., Inc.
3000 Ocean Park Blvd.
Santa Monica, California 90406
Attention: G. W. Burke

McDonnell Douglas Aircraft Corporation
P. O. Box 516
Lambert Field, Missouri 63166
Attention: Library

McDonnell Douglas Aircraft Corporation
P. O. Box 516
Lambert Field, Missouri 63166
Attention: R. A. Herzmark

Rocketdyne Division (1)
North American Rockwell, Inc.
6633 Canoga Avenue
Canoga Park, California 91304
Attention: Library, Dept. 596-306

Rocketdyne Division
North American Rockwell, Inc.
6633 Canoga Avenue
Canoga Park, California 91304
Attention: Dr. R. J. Thompson

Rocketdyne Division
North American Rockwell, Inc.
6633 Canoga Avenue
Canoga Park, California 91304
Attention: S. F. Iacobellis

Space & Information Systems Div. (1)
North American Rockwell
12214 Lakewood Blvd.
Downey, California 90214
Attention: Library

Northrop Space Laboratories (1)
3401 West Broadway
Hawthorne, California 90250
Attention: Library

Northrop Space Laboratories
3401 West Broadway
Hawthorne, California 90250
Attention: Dr. William Howard

Purdue University (1)
Lafayette, Indiana 47907
Attention: Library (Technical)

Purdue University
Lafayette, Indiana 47907
Attention: Dr. Bruce Reese

Rocket Research Corporation (1)
Willow Road at 116th Street
Redmond, Washington 98052
Attention: Library

Rocket Research Corporation
Willow Road at 116th Street
Redmond, Washington 98052
Attention: F. McCullough, Jr.

Stanford Research Institute (1)
333 Ravenswood Avenue
Menlo Park, California 94025
Attention: Library

Stanford Research Institute
333 Ravenswood Avenue
Menlo Park, California 94025
Attention: Dr. Gerald Marksman

Thiokol Chemical Corporation (1)
Redstone Division
Huntsville, Alabama 35809
Attention: Library

Thiokol Chemical Corporation
Redstone Division
Huntsville, Alabama 35809
Attention: John Goodloe

TRW Systems, Incorporated
1 Space Park
Redondo Beach, California 90278
Attention: Tech. Library
Doc. Acquisitions

TRW Systems, Incorporated
1 Space Park
Redondo Beach, California 90278
Attention: D. H. Lee

United Aircraft Corporation (1)
Corporation Library
400 Main Street
East Hartford, Connecticut 06108
Attention: Librarian

United Aircraft Corporation
400 Main Street
East Hartford, Connecticut 06108
Attention: Dr. David Rix

United Aircraft Corporation
400 Main Street
East Hartford, Connecticut 06108
Attention: Erle Martin

United Aircraft Corporation
400 Main Street
East Hartford, Connecticut 06108
Attention: Frank Owen

United Aircraft Corporation
400 Main Street
East Hartford, Connecticut 06108
Attention: Wm. E. Taylor

United Aircraft Corporation (1)
Pratt & Whitney Division
Florida Research & Development Center
P. O. Box 2691
West Palm Beach, Florida 33402
Attention: Library

United Aircraft Corporation
Pratt & Whitney Division
Florida Research & Development Center
P. O. Box 2691
West Palm Beach, Florida 33402
Attention: R. J. Coar

United Aircraft Corporation
Pratt & Whitney Division
Florida Research & Development Center
P. O. Box 2691
West Palm Beach, Florida 33402
Attention: Dr. Schmitke

United Aircraft Corporation (1)
United Technology Center
P. O. Box 358
Sunnyvale, California 94038
Attention: Library

United Aircraft Corporation
United Technology Center
P. O. Box 358
Sunnyvale, California 94038
Attention: Dr. David Altman

Vickers Incorporated
Box 302
Troy, Michigan 48084

Vought Astronautics
Box 5907
Dallas, Texas 75221
Attention: Library