


# Using NASA's Molecular Adsorber Coating technology during thermal vacuum testing to protect critical laser flight optics on the ATLAS instrument

CONFERENCE PAPER 10748-14 | MONDAY, AUGUST 20, 2018

**Nithin S. Abraham, Doris E. Jallice**  
NASA Goddard Space Flight Center

Systems Contamination: Prediction, Control, and Performance | Session 04, Contamination Control Methods and Measurements I  
2018 SPIE Optics + Photonics: Optical Engineering + Applications Conference | San Diego Convention Center, San Diego, California, USA

# Project Team Members

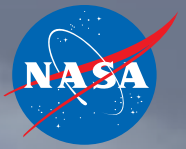

TEAM MEMBER	COMPANY AFFILIATION & ORGANIZATION CODE	PROJECT ROLE	TEAM MEMBER	COMPANY AFFILIATION & ORGANIZATION CODE	SUPPORT ROLE
<b>Nithin Abraham</b>	<b>NASA Goddard Space Flight Center</b> Code 546 Contamination and Coatings Engineering Branch	MAC Technologist/ Thermal Coatings Engineer	<b>Alfred Wong</b>	<b>Stinger Ghaffarian Technologies, Inc</b> Code 546 Contamination and Coatings Engineering Branch	Spray Application/ Thermal Coatings Engineer
<b>Doris Jallice</b>	<b>NASA Goddard Space Flight Center</b> Code 541 Materials Engineering Branch	Chemical Analysis Materials Engineer	<b>Mark Hasegawa</b>	<b>NASA Goddard Space Flight Center</b> Code 546 Contamination and Coatings Engineering Branch	Thermal Coatings Engineering Group Lead
<b>Paul Pless</b>	<b>NASA Goddard Space Flight Center</b> Code 541 Materials Engineering Branch	Chemical Analysis Materials Technician	<b>BonnieBlue Valentin-Santiago</b>	<b>Stinger Ghaffarian Technologies, Inc</b> Code 546 Contamination and Coatings Engineering Branch	ATLAS Contamination Control Engineer
<b>Deepak Patel</b>	<b>NASA Goddard Space Flight Center</b> Code 545 Contamination and Coatings Engineering Branch	ATLAS Thermal Engineer	<b>David Hughes</b>	<b>NASA Goddard Space Flight Center</b> Code 546 Contamination and Coatings Engineering Branch	ATLAS Contamination Control Engineer
<b>Matt Garrison</b>	<b>NASA Goddard Space Flight Center</b> Code 545 Contamination and Coatings Engineering Branch	ATLAS Thermal Engineer	<b>Brandon Stergiou</b>	<b>Stinger Ghaffarian Technologies, Inc</b> Code 546 Contamination and Coatings Engineering Branch	ATLAS Contamination Control Technician
<b>Heather Bradshaw</b>	<b>NASA Goddard Space Flight Center</b> Code 545 Contamination and Coatings Engineering Branch	ATLAS Thermal Engineer	<b>Dong-Shiun Lin</b>	<b>Stinger Ghaffarian Technologies, Inc</b> Code 546 Contamination and Coatings Engineering Branch	ATLAS Contamination Control Analyst

The Molecular Adsorber Coating (MAC) is a sprayable coatings technology that was developed at NASA Goddard Space Flight Center (GSFC). The coating was designed to address molecular contamination concerns on or near sensitive surfaces and instruments within the spacecraft for flight or ground-based applications in vacuum conditions. This paper will discuss the use of NASA's MAC technology to isolate and protect the critical laser flight optics of the Advanced Topographic Laser Altimeter System (ATLAS) instrument on the Ice, Cloud, and land Elevation Satellite-2 (ICESat-2). MAC was strategically used during thermal vacuum (TVAC) testing efforts to reduce the risk of contaminating the laser optical components from non-baked items and other unknown outgassing sources from the chamber environment. This paper summarizes the design and implementation efforts, and the chemical analysis of the MAC samples that were used during two recent TVAC tests for the ICESat-2/ATLAS mission.

- **Keywords:** *molecular adsorber coating, molecular adsorbers, getters, MAC, zeolite, coatings technology, outgassing, molecular contamination, vacuum contamination, thermal vacuum, TVAC, ICESat-2, ATLAS, vacuum chambers, chamber facility, flight optics, laser optics, optical components*

# Presentation Outline



<b>INTRODUCTION</b>	<ul style="list-style-type: none"><li>▪ ATLAS Instrument</li><li>▪ Molecular Adsorber Coatings</li></ul>
<b>APPROACH</b>	<ul style="list-style-type: none"><li>▪ Purpose</li><li>▪ Sample Fabrication &amp; Exposure</li><li>▪ Sample Location</li><li>▪ Sample Configuration</li><li>▪ Temperature Profile</li></ul>
<b>TEST METHODS</b>	<ul style="list-style-type: none"><li>▪ Solvent Rinse Methods</li><li>▪ Chemical Analysis Methods</li></ul>
<b>RESULTS &amp; DISCUSSION</b>	<ul style="list-style-type: none"><li>▪ Solvent Rinse Results</li><li>▪ Molecular Adsorption Capacity</li><li>▪ Chemical Analysis Results</li><li>▪ Comparison to Contamination Monitoring Methods</li></ul>
<b>SUMMARY</b>	<ul style="list-style-type: none"><li>▪ Conclusions</li><li>▪ Future Work</li></ul>


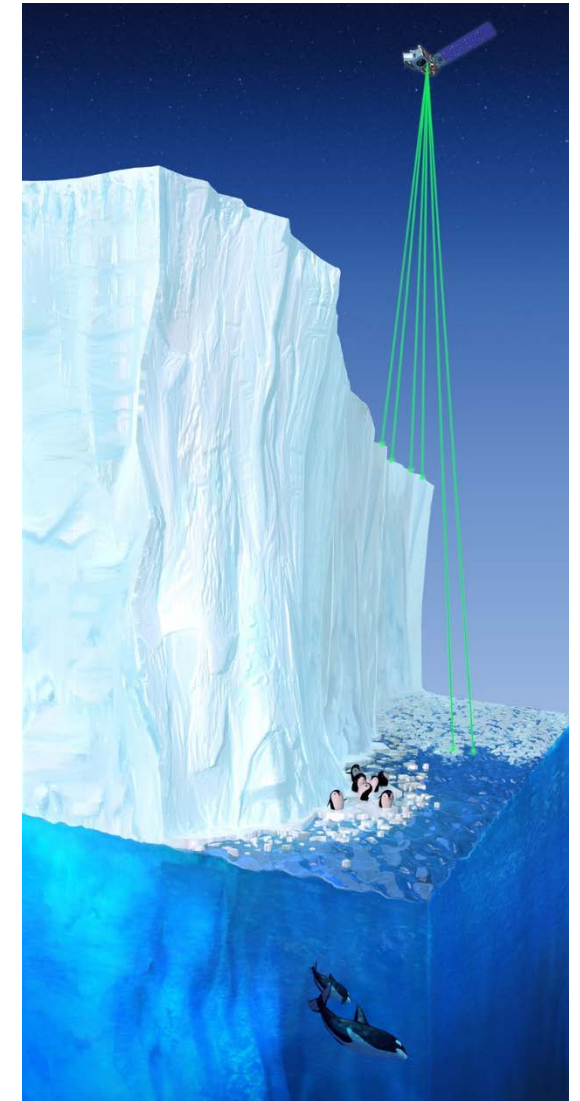


IMAGE CREDIT: NASA/GSFC




# Introduction

- ATLAS Instrument
- Molecular Adsorber Coatings

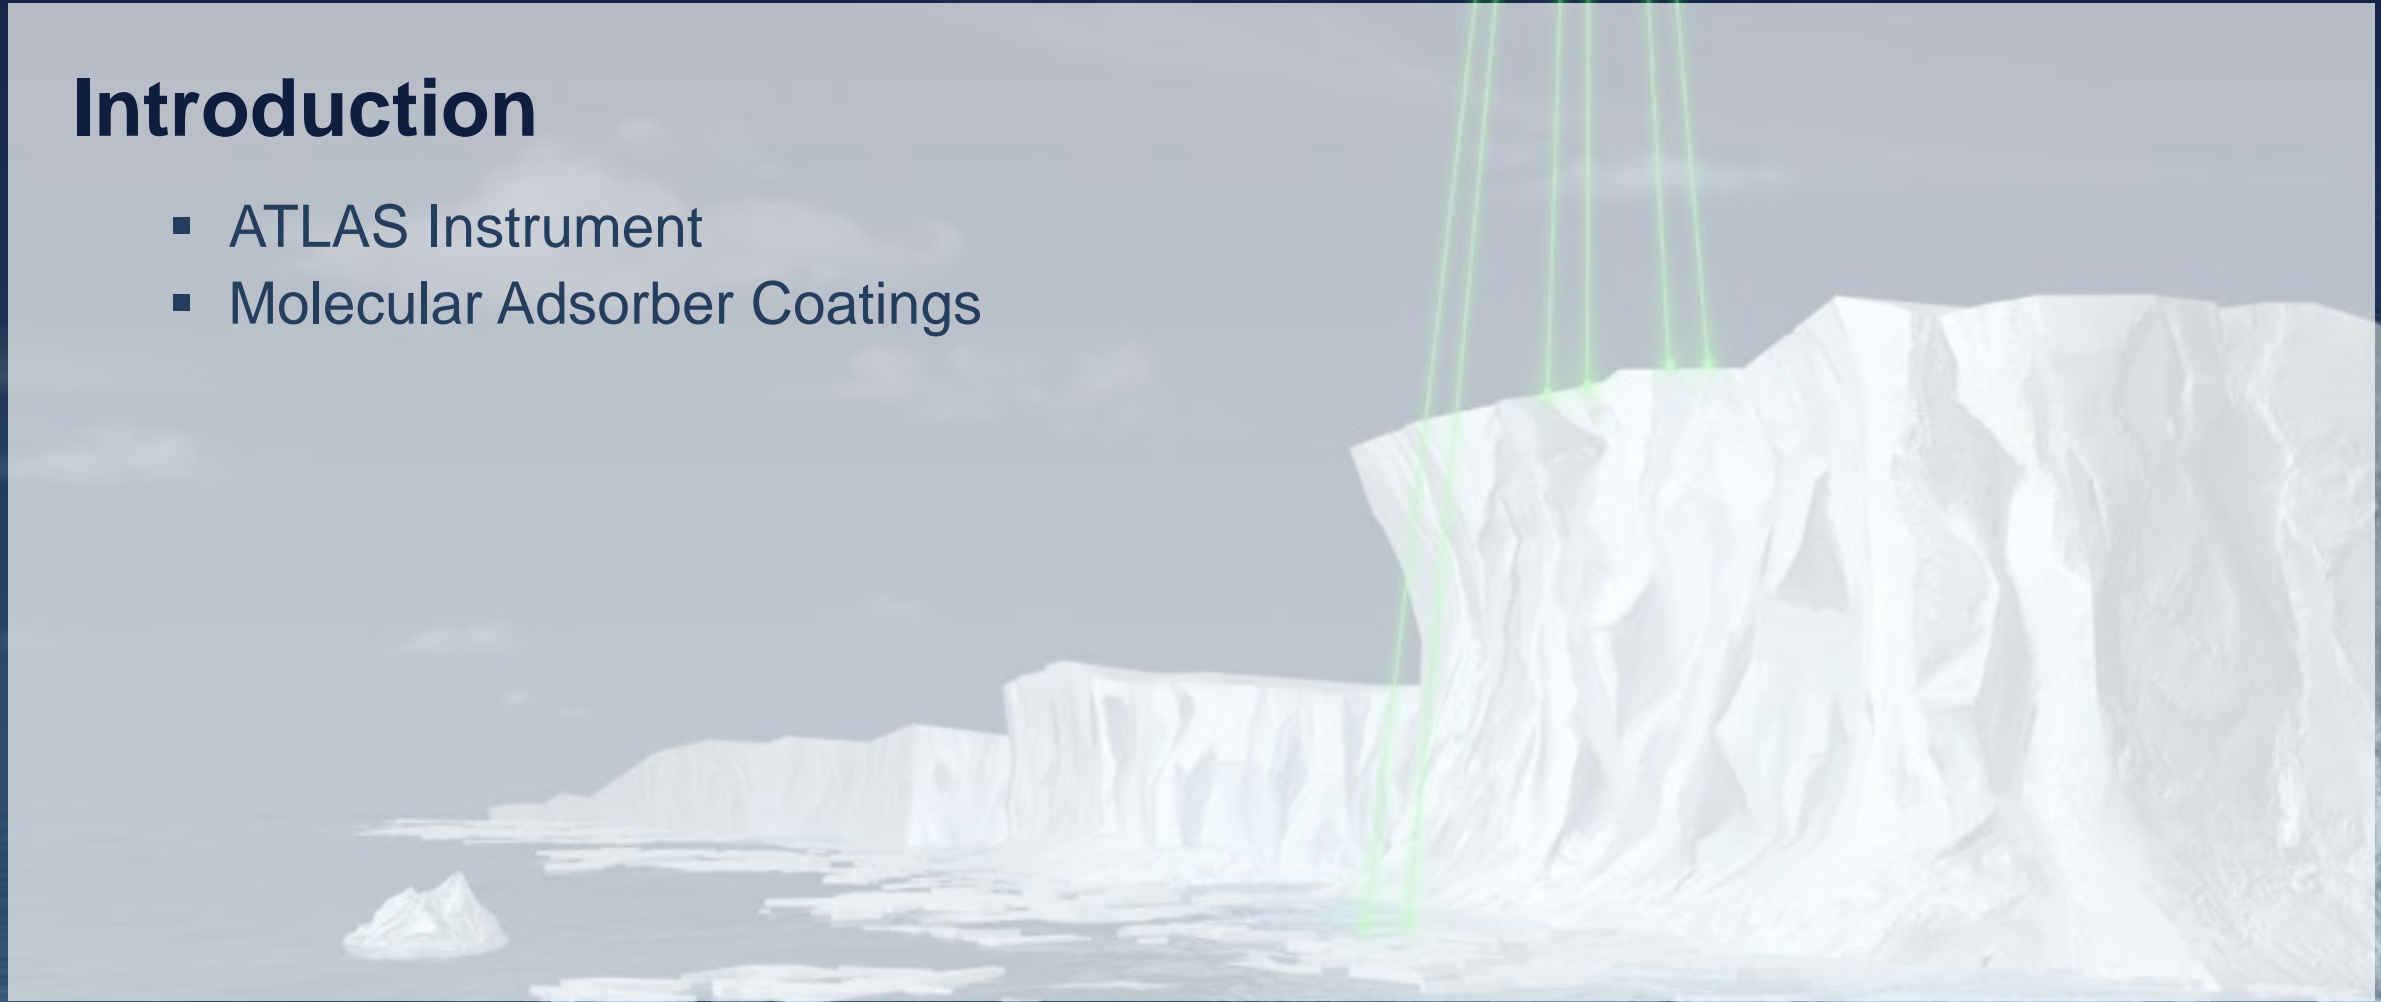

# ATLAS Instrument

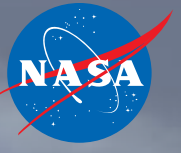

## ■ ICESat-2

- Ice, Cloud and land Elevation Satellite-2
- NASA mission that will study the **cryosphere** to investigate the changes in the Earth's frozen and icy regions due to the warming climate

## ■ ATLAS

- Advanced Topographic Laser Altimeter System
- Built by **NASA Goddard Space Flight Center**
- Sole instrument on ICESat-2 spacecraft that will measure the height of:
  - *Glaciers*
  - *Ice sheets*
  - *Sea ice*
  - *Rain forests*
  - *Deserts*
  - *Urban areas*


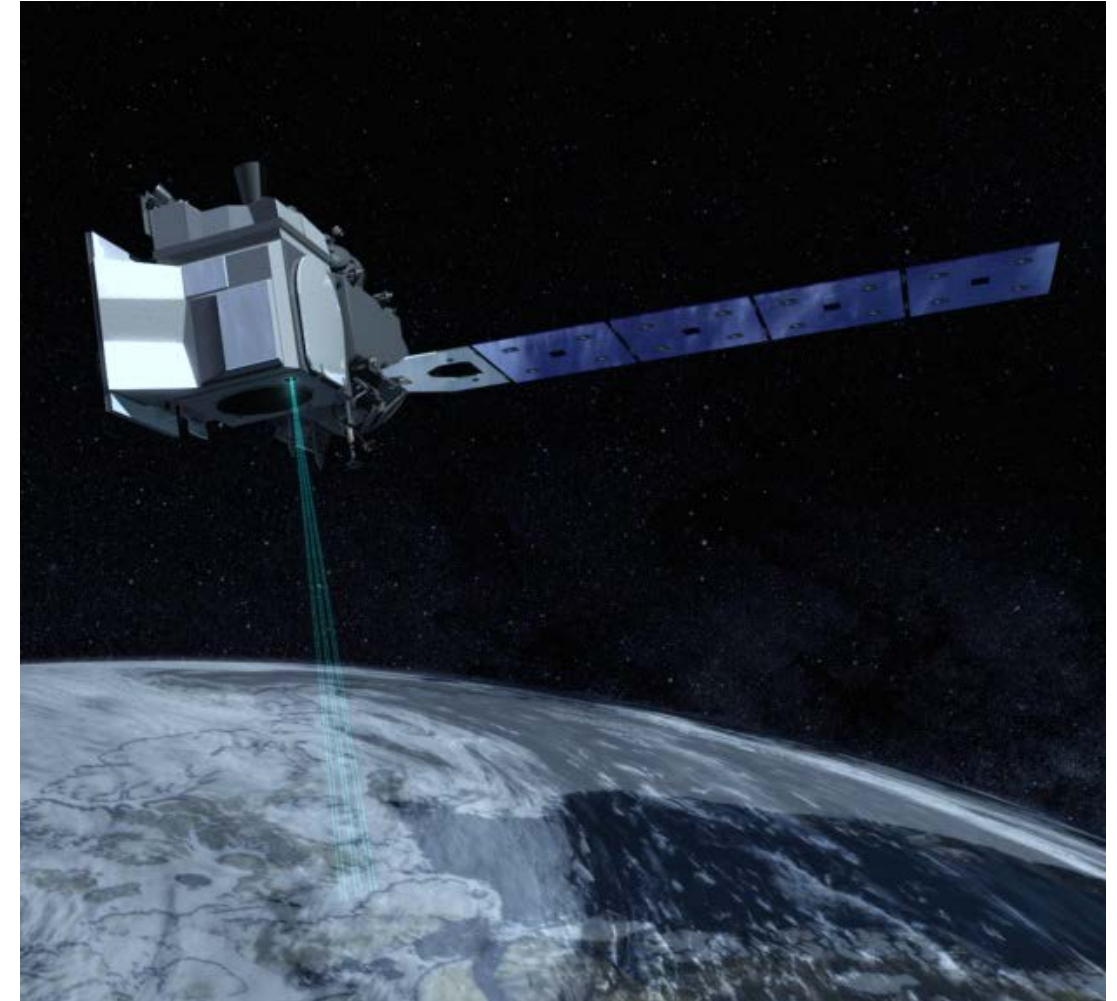


IMAGE CREDIT: NASA/GSFC

# ATLAS Instrument

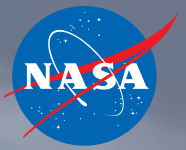

- Instrument's three main tasks are to:

- Send laser pulses of **visible green light** to Earth
- Catch returning photons using its precisely aligned beryllium telescope
- Record travel time of each returned photon to calculate distance between the spacecraft and Earth

Wavelength	532 nm
Beams	Single laser split into 6 beams & arranged into 3 pairs
Travel Rate	10,000 pulses/sec
Measurement	Taken every 0.7 m along ground path
Photons Sent	About 200 trillion
Photons Return	About a dozen


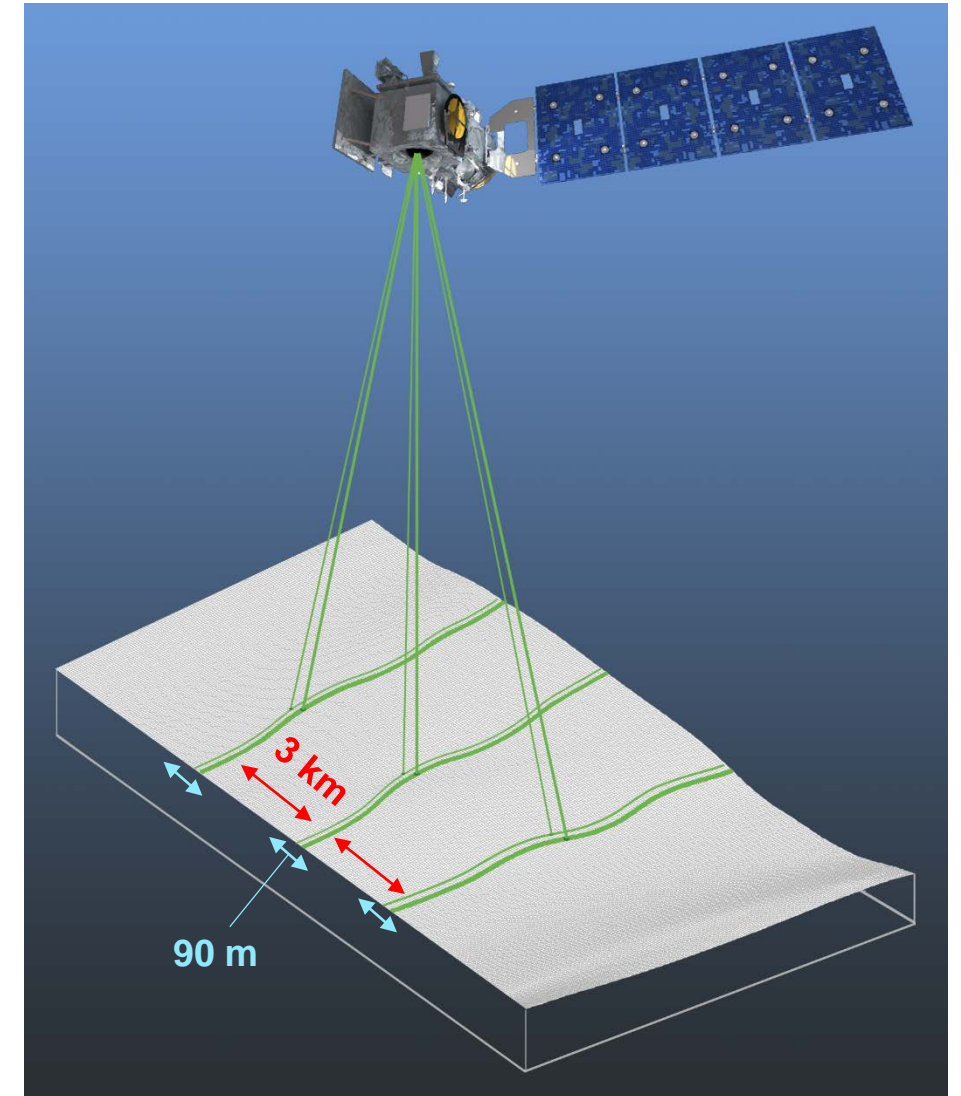


IMAGE CREDIT: NASA/GSFC



# ATLAS Instrument

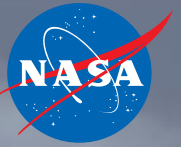

Prior to sending the laser beam down to Earth:

- Photons must first travel through a **series of critical optical components**, such as lenses and mirrors, along the instrument's optical bench in order to:
  - Align the laser and the telescope
  - Check the wavelength of the laser
  - Start the timing mechanism
  - Determine the size of the ground footprint
  - Split the single laser into 6 beams

Therefore, protecting the critical laser flight optics on the ATLAS instrument is important to the successful operation of the satellite

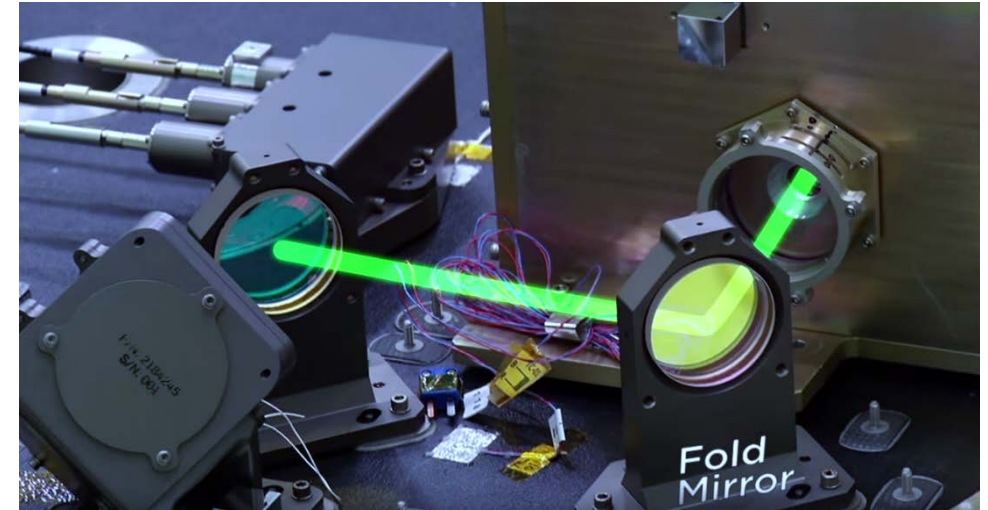


IMAGE CREDIT: NASA/GSFC



*Shown in the above images is an animated green laser beam making several turns as it travels through the laser optical components on the optical bench of the ATLAS instrument.*



## POTENTIAL PROBLEM

Catastrophic impacts of contamination result in laser induced optical damage and performance degradation in spaceflight laser systems

**Molecular contaminants**, such as silicones and aromatic hydrocarbons, are particularly known to damage laser optics




## PROPOSED MITIGATION

Consequently, it is important to reduce the risk of exposure from potential molecular contaminants throughout the various phases of a NASA mission, particularly during the I&T phases of the project

A contamination control mitigation method that was proposed was the **strategic placement of MAC samples** during TVAC testing of ATLAS hardware in vacuum test chambers

# Molecular Adsorber Coatings

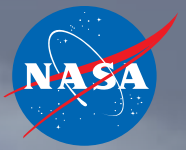

## ■ Molecular Adsorber Coating (MAC)

- Sprayable coatings technology
- Developed by NASA Goddard Space Flight Center
- Addresses molecular outgassing concerns
- Comprised of zeolite-based, porous materials
- Passively captures molecular contaminants
- Has low outgassing materials
- Effective in trapping high molecular weight chemical species, such as hydrocarbons, silicones, plasticizers, and other outgassed constituents from common spaceflight materials
- Used in **on-orbit spaceflight applications**, particularly on or near sensitive surfaces and components on the spacecraft, such as instrument cavities, electronics boxes, and detectors




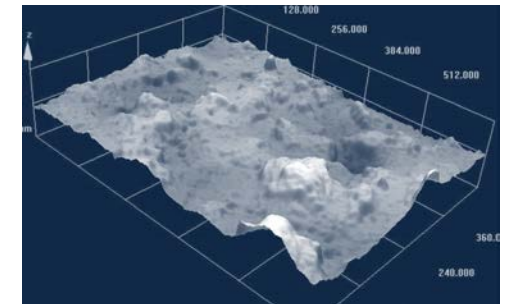


IMAGE CREDIT: NASA/GSFC

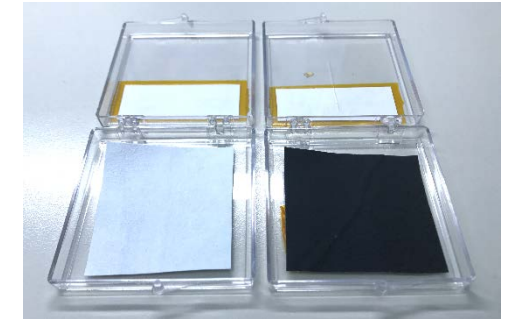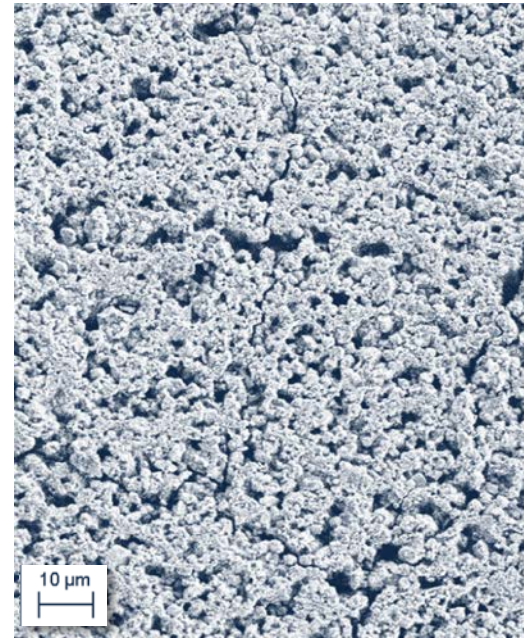


**Ionospheric Connection Explorer (ICON):** MAC plates were installed in the Far Ultraviolet (FUV) instrument to address on-orbit material outgassing concerns

# Molecular Adsorber Coatings

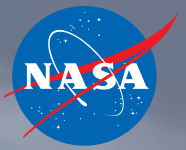

- MAC has also been extensively used in **ground-based applications** as a passive getter material during TVAC testing to mitigate the risk of molecular contamination on many NASA missions

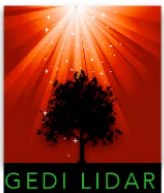

	NASA MISSION	TVAC PURPOSE	YEAR
<b>JWST</b>	James Webb Space Telescope	Used during testing of optical ground support equipment (OGSE), thermal pathfinder (TPF), and optical telescope element and integrated science (OTIS) instruments	2017 2016 2015 2014
<b>GOLD</b>	Global-scale Observations of the Limb and Disk	Used during instrument level testing	2017
<b>GEDI</b>	Global Ecosystem Dynamics Investigation Lidar	Used during component level testing	2016
<b>NICER</b>	Neutron star Interior Composition Explorer	Used during component level testing	2015
<b>MMS</b>	Magnetosphere Multiscale Mission	Used during component level testing	2014




# Approach

- Purpose
- Sample Fabrication & Exposure
- Sample Location
- Sample Configuration
- Temperature Profile



# Purpose

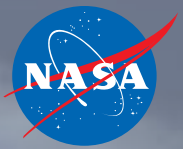

- MAC samples were deployed during two TVAC tests to **isolate and protect the critical laser flight optics** on the ATLAS instrument from outgassing sources
  - Potential sources may originate from commonly used spaceflight materials and components, TVAC test set-up and chamber environment, or from other unknowns
  - Time-temperature bake-outs were performed on most items prior to the tests; however, it does not completely eliminate the possibility of outgassing, especially from materials comprised of **silicones or elastomers**
  - Potential sources may also contribute to **molecular reflection** that would not be indicative of the on-orbit flight case due to the confined space and warm walls of the chamber
  - Location of **existing facility scavenger cold plates** would not isolate critical optical components from all possible outgassing sources

## POTENTIAL OUTGASSING SOURCES

- |                     |                    |
|---------------------|--------------------|
| ■ Staking Compounds | ■ Isolator Systems |
| ■ Adhesives         | ■ Batteries        |
| ■ Epoxies           | ■ Non-Baked Items  |
| ■ Cables & Wires    | ■ Unknown Residues |


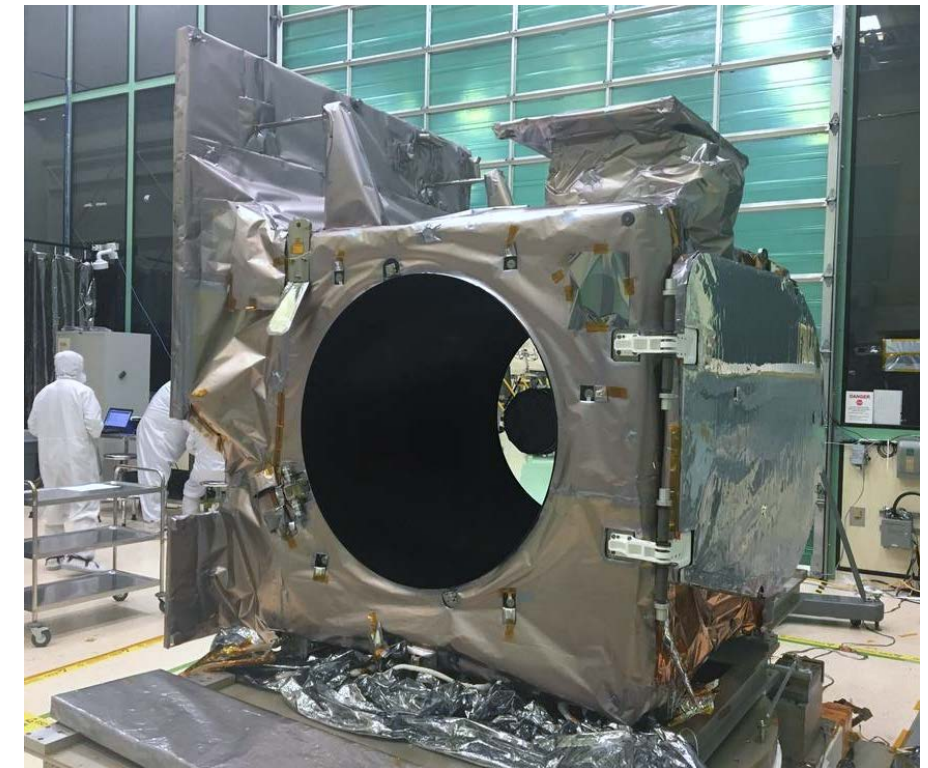


IMAGE CREDIT: NASA/GSFC

# Sample Fabrication & Exposure

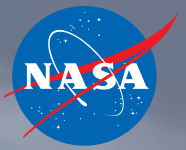

- NASA GSFC custom-fabricated samples coated with the white version of MAC

COATING TYPE	MAC-W
SUBSTRATE	Aluminum Alloy
COATING THICKNESS	6.2 mils
COATING AREA	95.2 cm <sup>2</sup>




IMAGE CREDIT: NASA/GSFC

- One sample was exposed during each of the ATLAS TVAC tests (2 samples used total)

TVAC TEST ID	CHAMBER ID	SAMPLE INSTALLATION	EXPOSURE TIME
TVAC A	X	Mid 2017	~ 50 days
TVAC B	Y	Late 2017	~ 30 days



# Sample Location

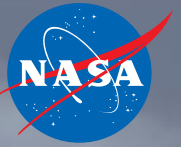

- For each TVAC test, a MAC sample was installed in a **strategic location** that would best isolate and protect the critical laser flight optics during testing in the chamber facility
- The location of the MAC sample is identified by the **white dashed rectangle** as shown in the ATLAS thermal instrument model



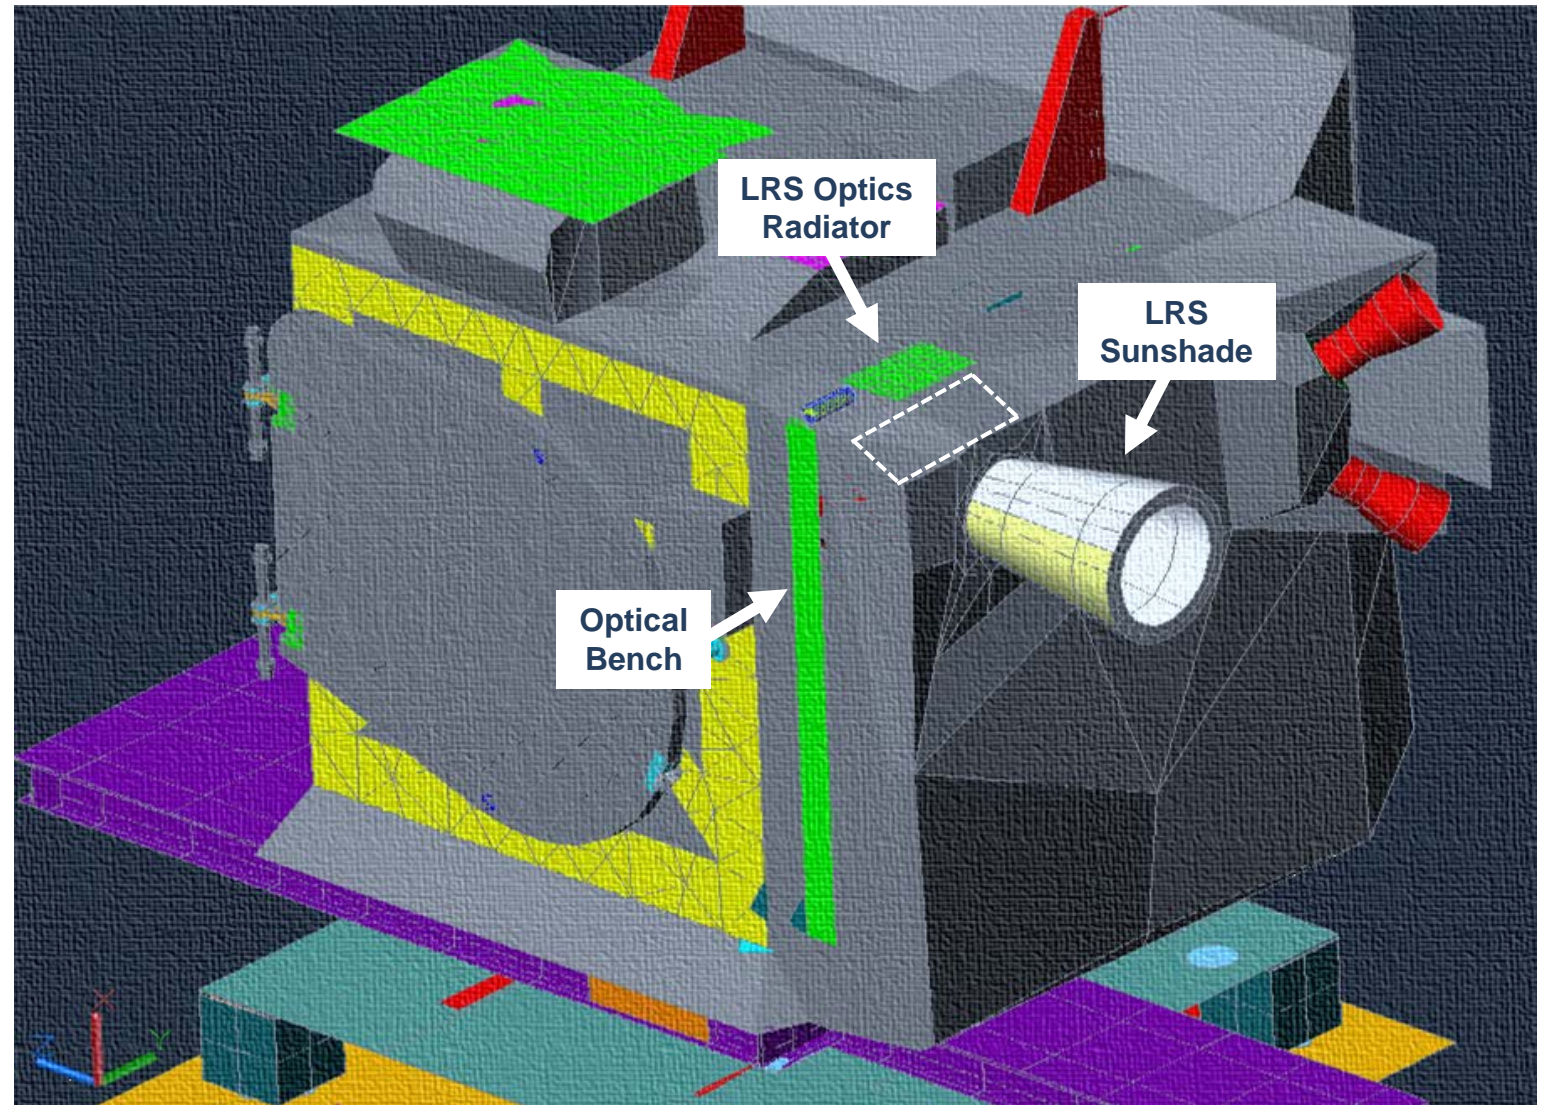


IMAGE CREDIT: NASA/GSFC

# Sample Location

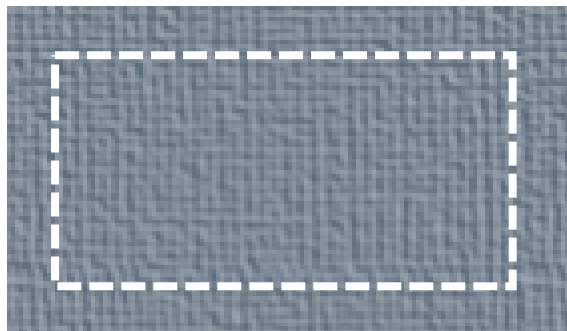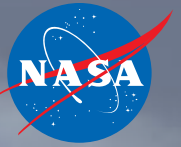

- The critical pathway for the transmit optics components on the optical bench is housed below the **blanket vent** (*these components direct the laser from its source on the instrument*)


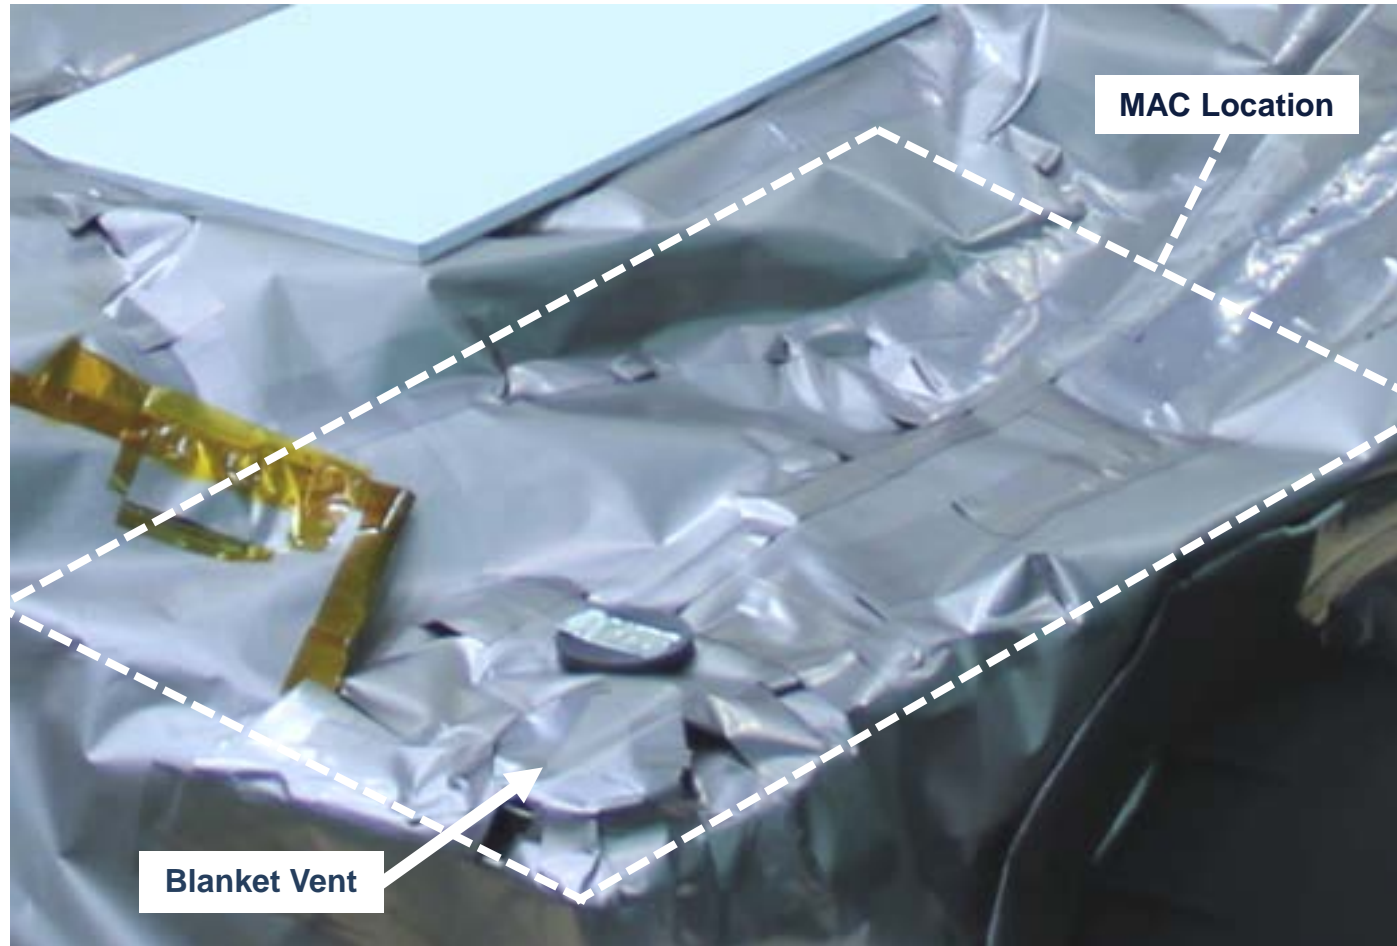


IMAGE CREDIT: NASA/GSFC






# Sample Configuration

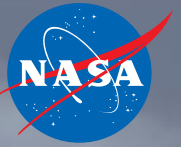

- An oval shaped **blanket channel** was constructed using VDA SLI material
- The purpose of the fabricated channel is ***to restrict the amount of outgassed species from the test environment*** that may contaminate the critical transmit optics along the vent path

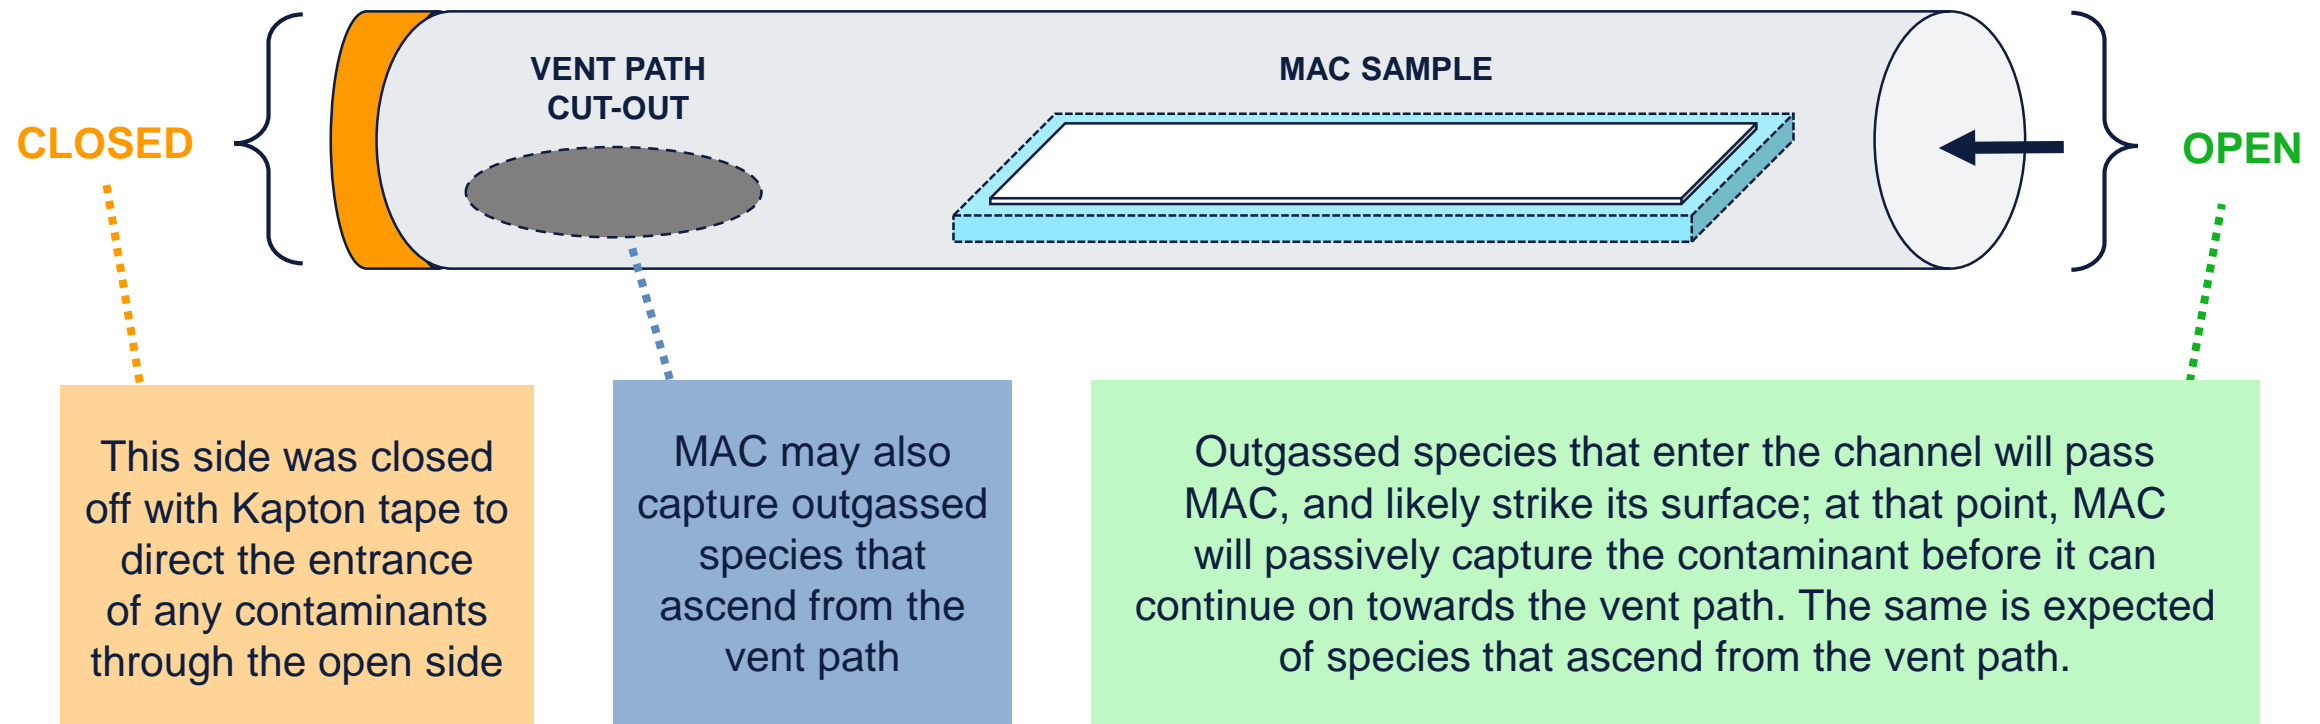



# Sample Configuration



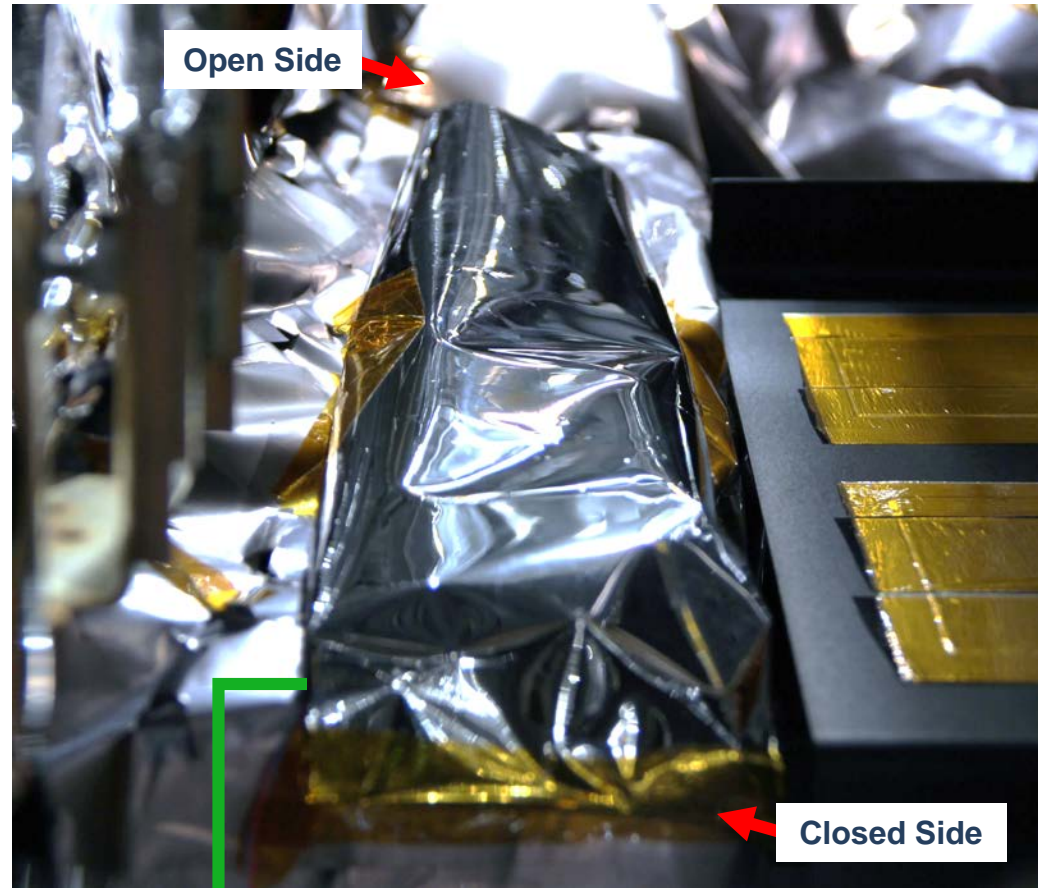



IMAGE CREDIT: NASA/GSFC

TEST ID	SAMPLE ID	SAMPLE INSTALLATION	EXPOSURE TIME
TVAC A	MAC # 1	Mid-2017	~ 50 days
TVAC B	MAC # 2	Late-2017	~ 30 days

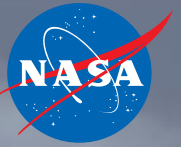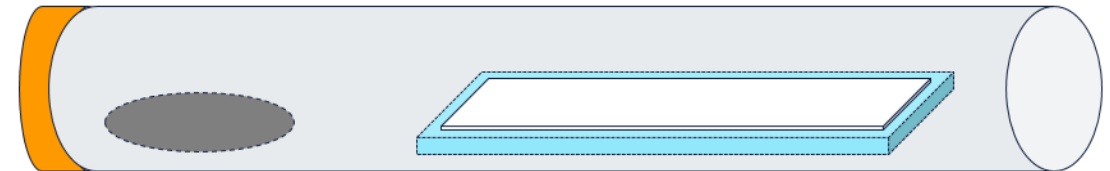


Shown is the blanket channel  
(with the MAC sample) installed  
prior to the start of TVAC B

# Temperature Profile

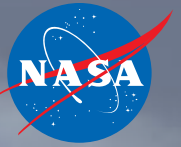

**MAC # 2 Sample Temperature Profile**

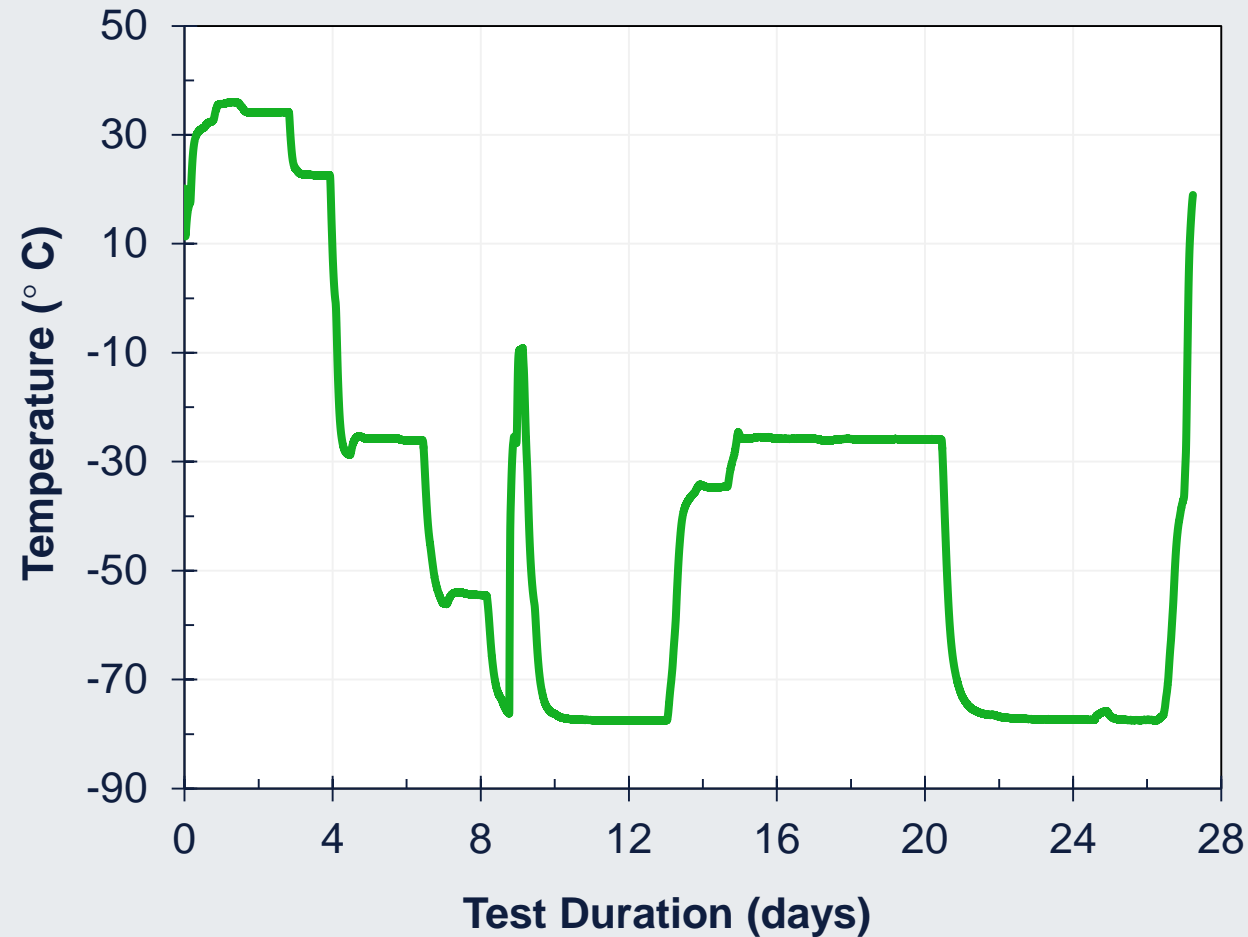

**Maximum Temperature: + 36 °C**

**Minimum Temperature: - 78 °C**

- A thermocouple was attached to monitor sample temperatures throughout the duration of the tests
- MAC # 1 from TVAC A was exposed to a similar temperature profile


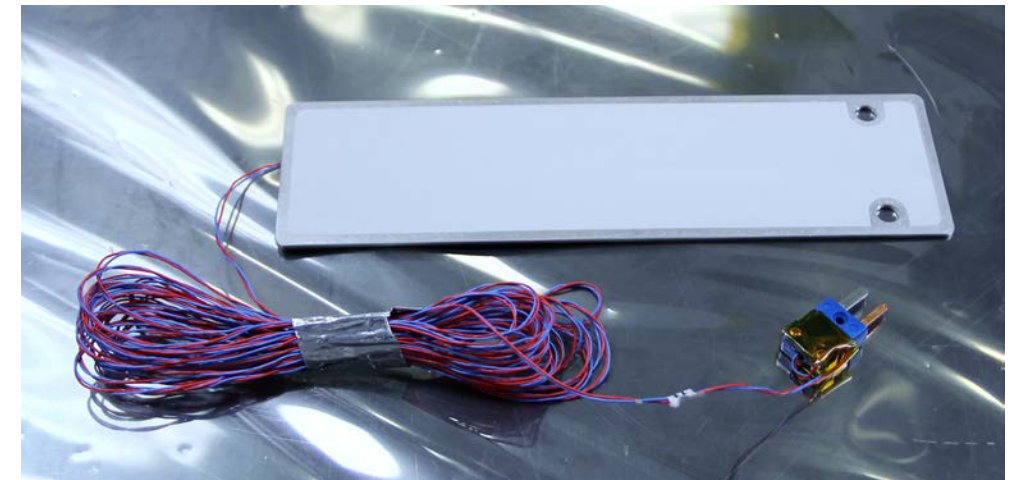


IMAGE CREDIT: NASA/GSFC


# Test Methods

- Solvent Rinse Methods
- Chemical Analysis Methods



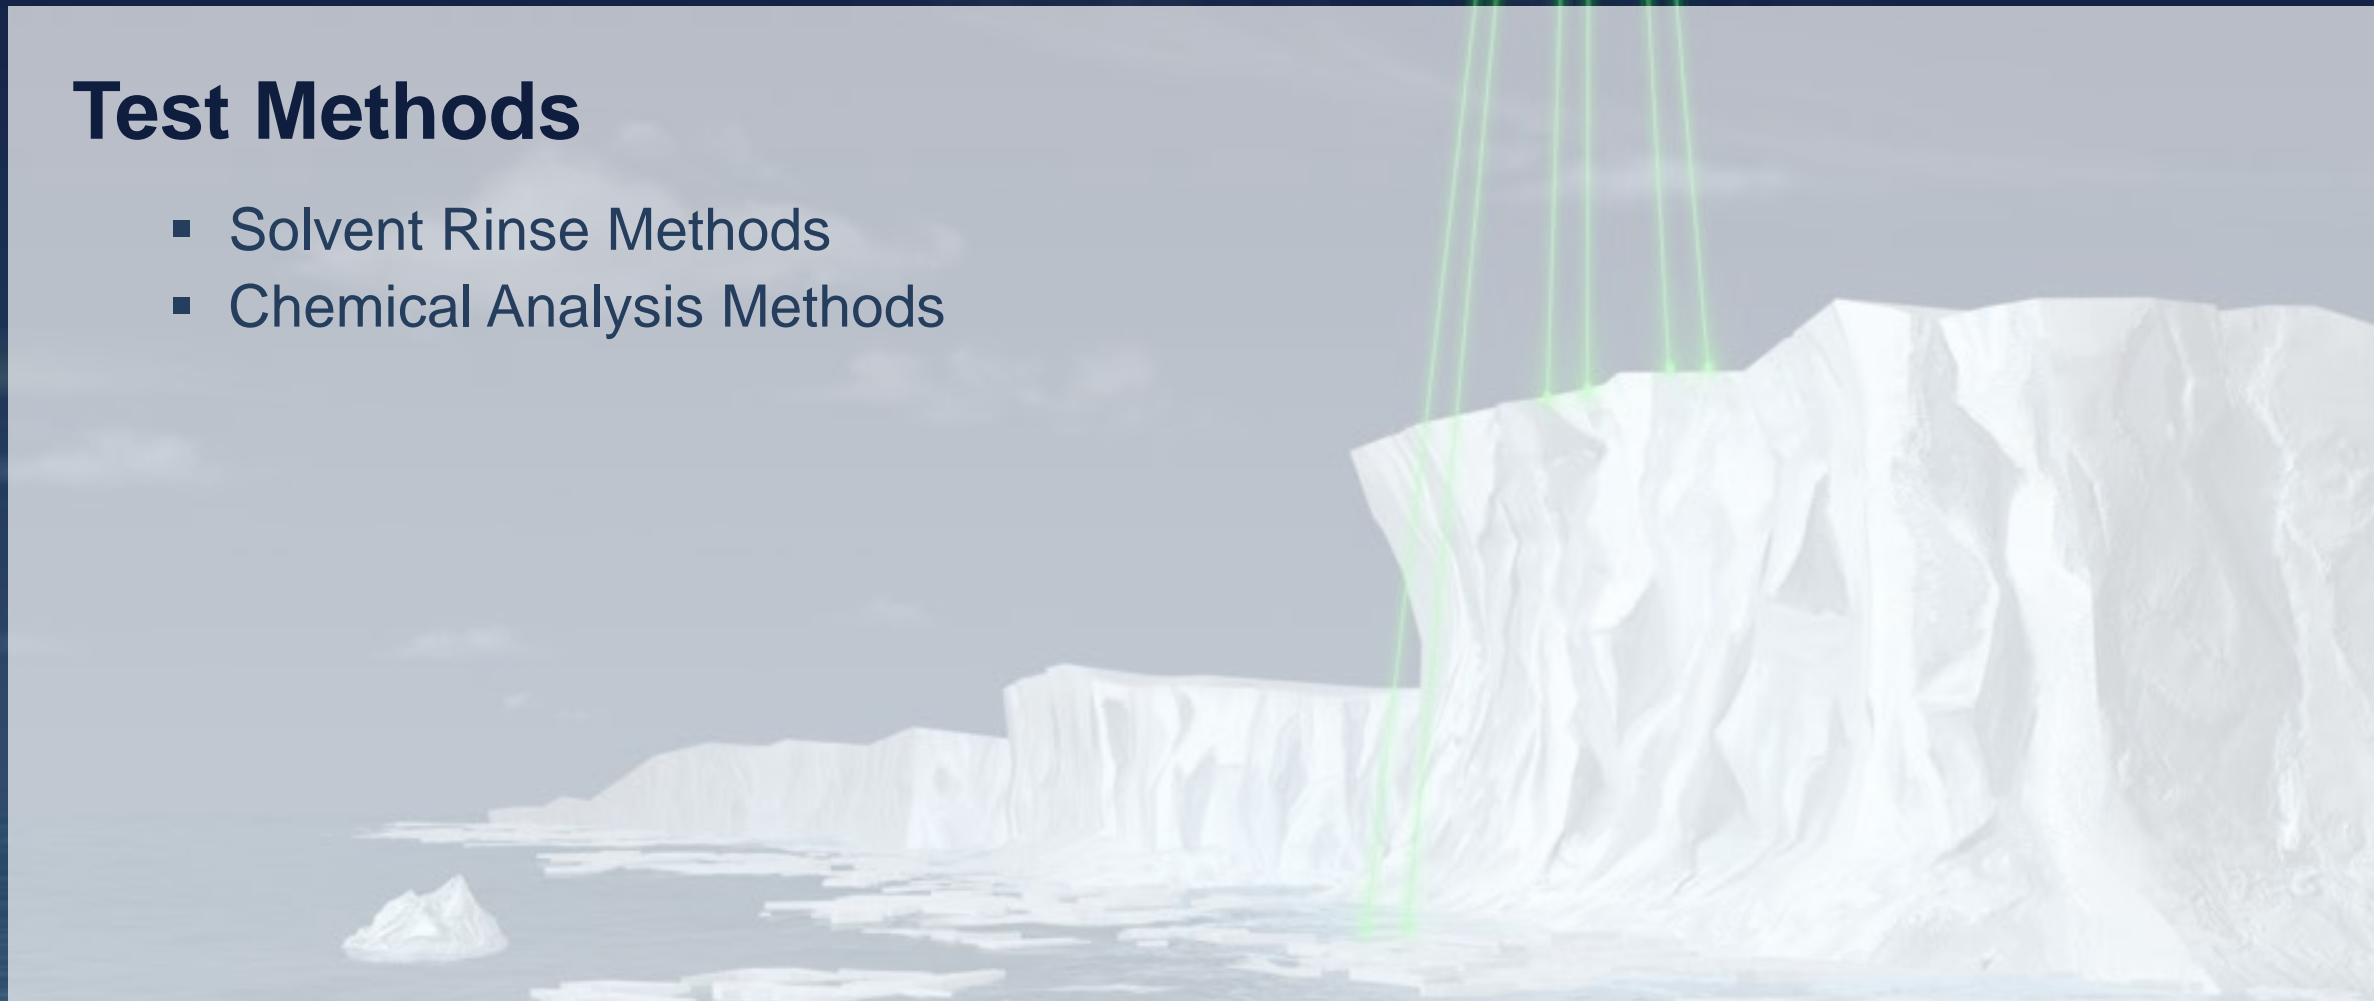

# Solvent Rinse Methods

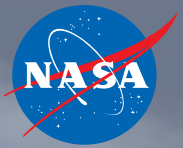


- The surface of the coating was directly rinsed **4 times** with optima grade **chloroform**
- This method was used **to extract contaminants** that were adsorbed on MAC – but only those that can be dissolved with the selected organic solvent
- Previous solvent rinse test efforts have demonstrated that:
  - Chloroform is effective in dissolving **common species of interest**, such as hydrocarbons and silicones
  - Multiple solvent rinses remove additional contaminants from MAC
  - Dissolved species from multiple rinses decrease with each consecutive rinse

## MAC Control Sample

- Coated at the same time as the other two
- Not exposed to any chamber facility
- Establishes a baseline reference
- Provides insight into the adsorbed residual contaminants due to handling or from exposure to **offgassed species** that are present in ambient, non-vacuum environments, such as a laboratory


SAMPLE ID	TVAC EXPOSURE	SAMPLE CONDITION	ANALYSIS DATE
MAC # 0	No TVAC	Control	August 2017
MAC # 1	TVAC A	Contaminated	August 2017
MAC # 2	TVAC B	Contaminated	March 2018

# Solvent Rinse Methods

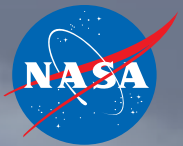


RINSE TYPE	TOTAL RINSES	RINSE NUMBER	RINSE SOLVENT
Single	1	Rinse 1	Chloroform
Triple	3	Rinses 2, 3, 4	Chloroform

## DETERMINING THE MASS OF THE NON-VOLATILE RESIDUE FROM THE SOLVENT RINSES

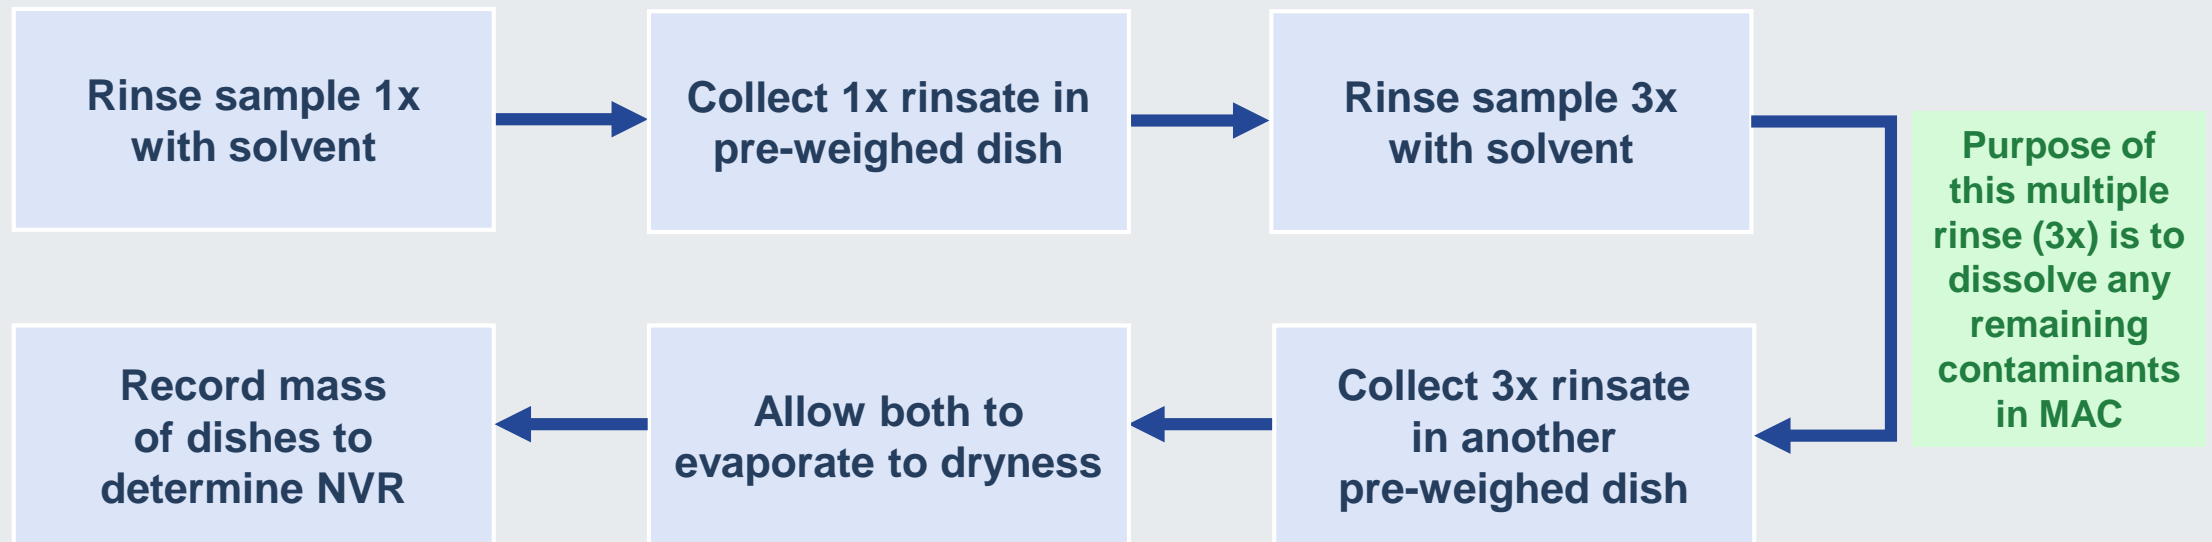


# Chemical Analysis Methods

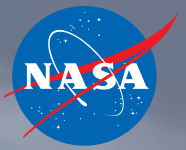

- NVR from the samples were also evaluated using two chemical analysis methods to obtain a **general approximation** of the types and relative amounts of contaminants in the NVR


METHOD	FTIR ANALYSIS	PYROLYSIS GC/MS ANALYSIS
	Fourier Transform Infrared Spectroscopy	Pyrolysis-Gas Chromatography/Mass Spectrometry
INSTRUMENT	Thermo Fisher Scientific Nicolet 6700	Shimadzu Scientific Instruments QP2010 Ultra and GL Sciences Optic-4 Inlet

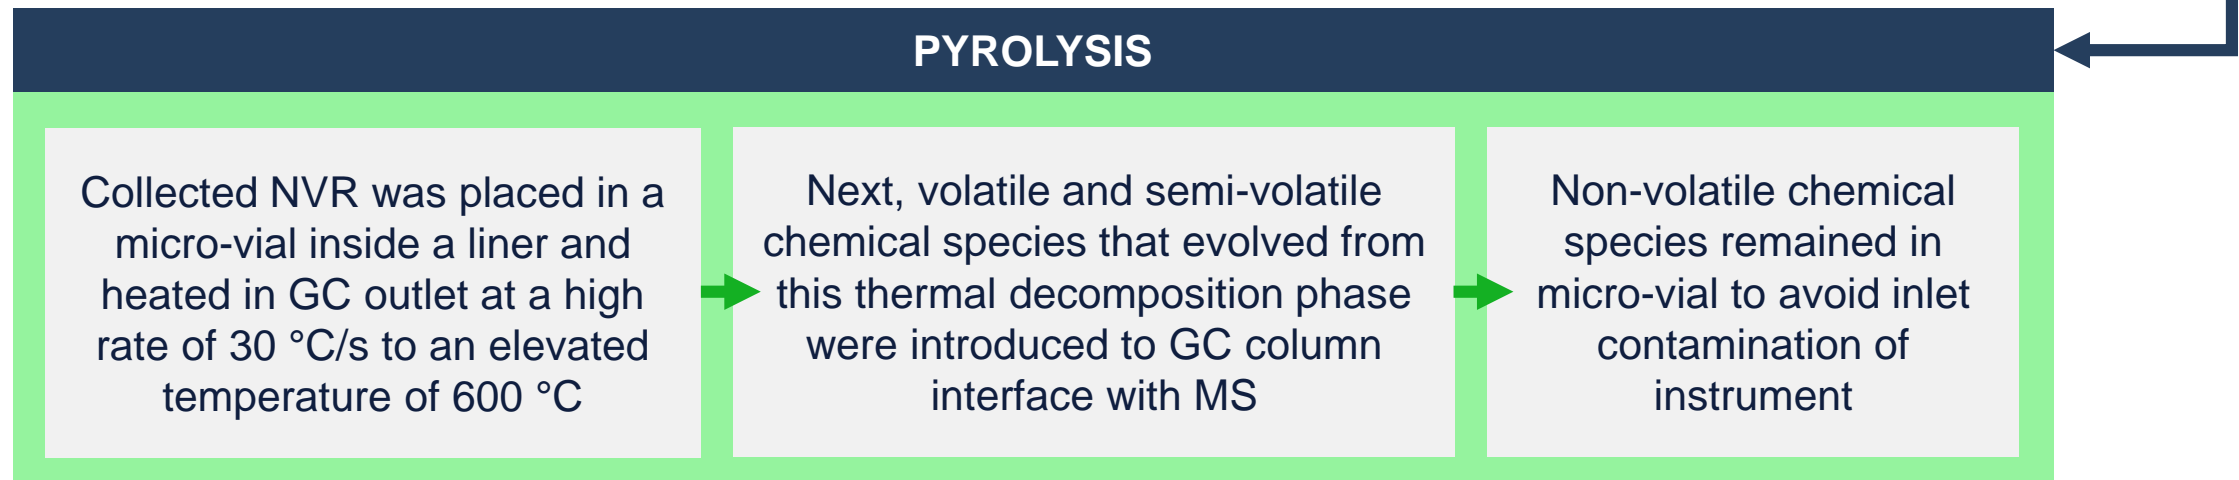





## Results & Discussion

- Solvent Rinse Results
- Molecular Adsorption Capacity
- Chemical Analysis Results
- Comparison to Contamination Monitoring Methods

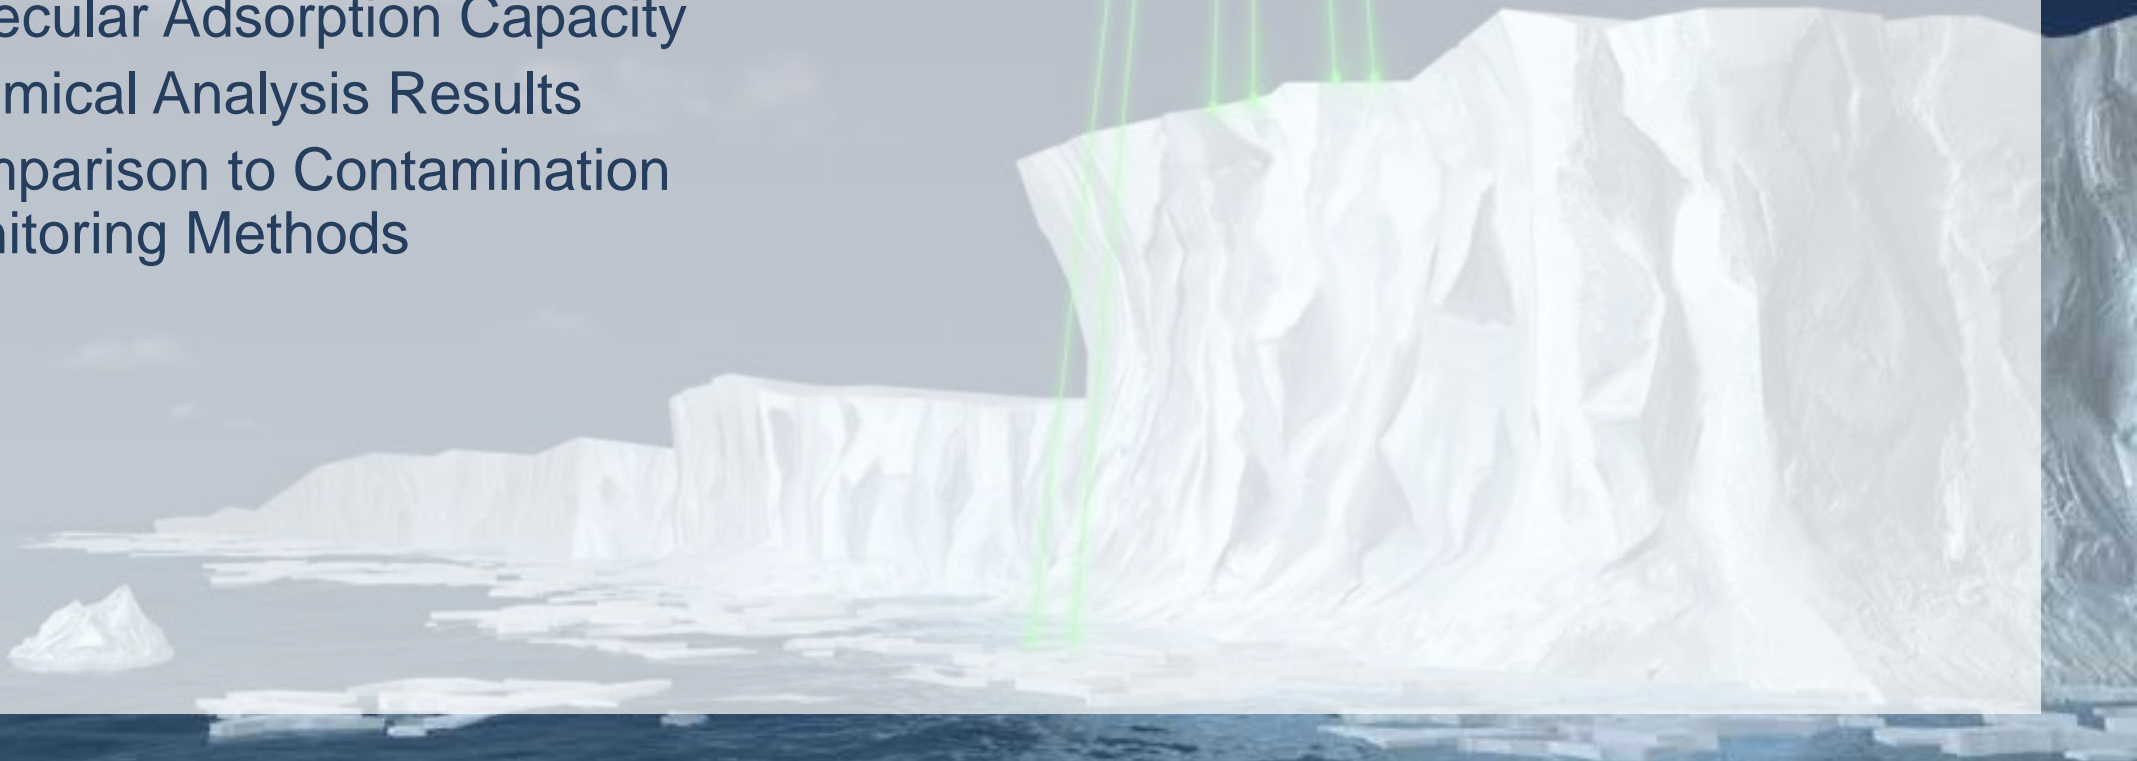

# Solvent Rinse Results

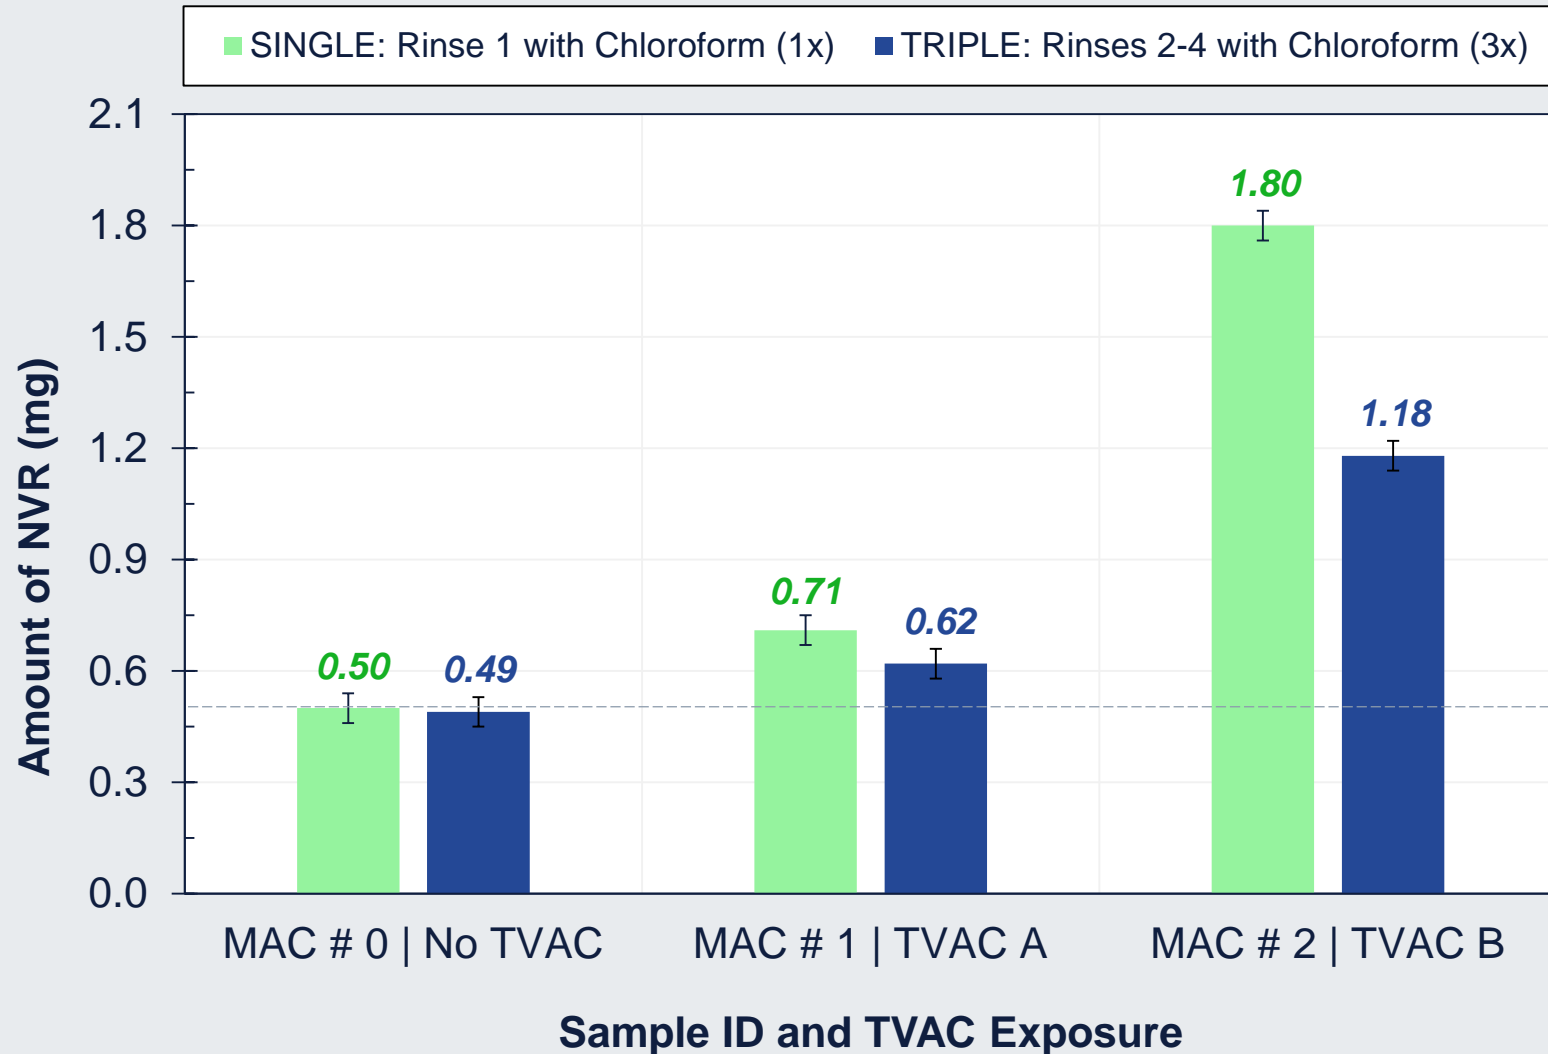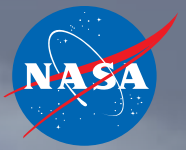

The error bars are associated with the weighing uncertainty of  $\pm 0.04$  on the laboratory balance that was used for the gravimetric measurements



## SINGLE RINSE

TEST ID	ADJUSTED NVR
TVAC A	0.21 mg
TVAC B	1.30 mg

The control sample was subtracted for the adjusted NVR shown

- Amount collected during TVAC B was about **6.2 times greater** than TVAC A
- Similar trends were observed for 3x rinse runs of exposed TVAC samples
- Decreasing NVR for 3x rinse suggests that most of the contaminants were removed in the initial 1x rinse

# Solvent Rinse Results

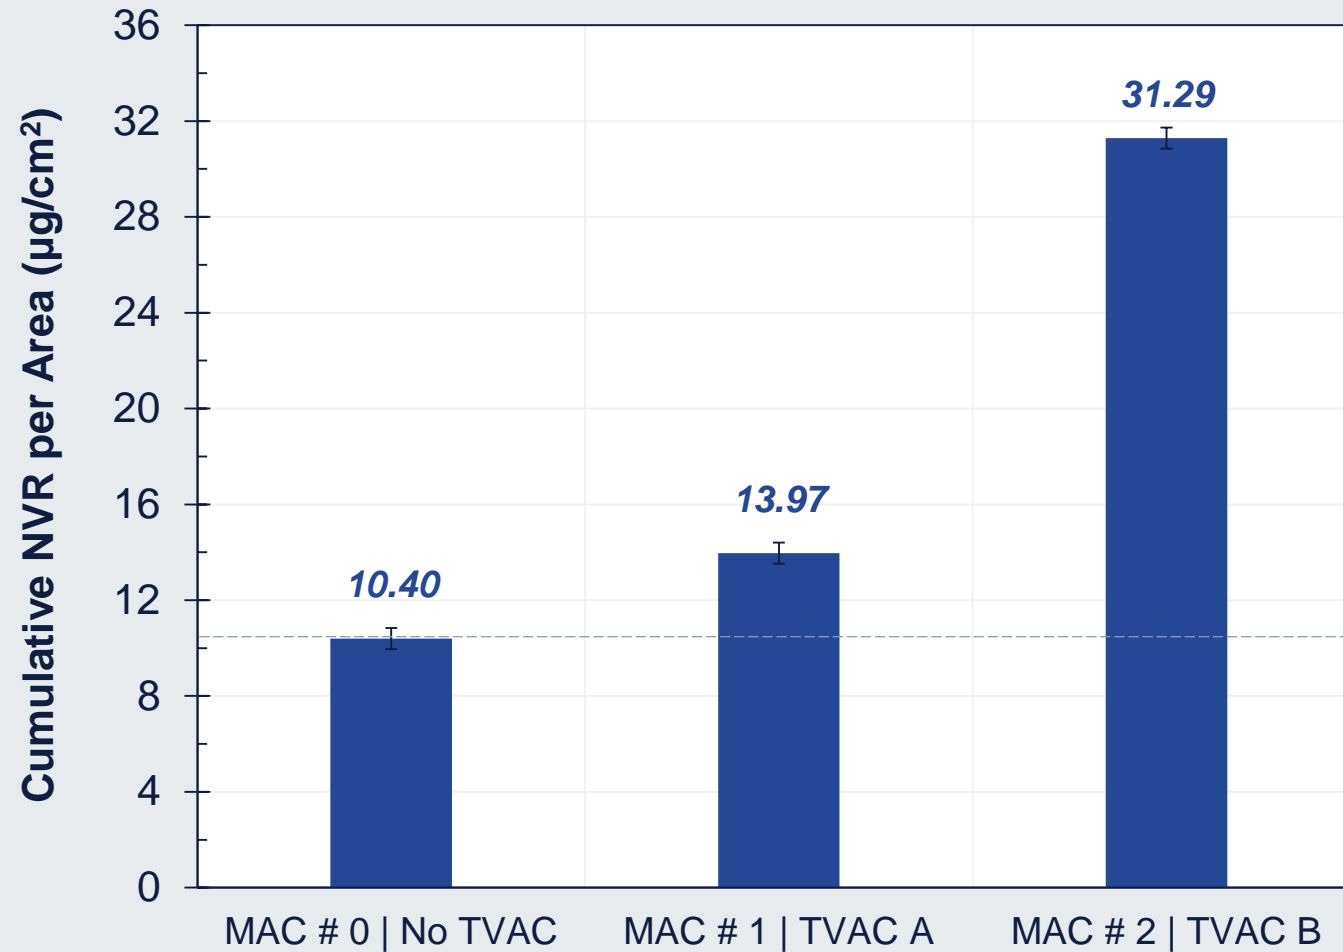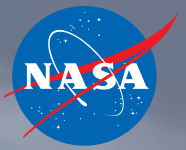


Sample ID and TVAC Exposure

SAMPLE ID	CUMULATIVE NVR
MAC # 0	0.99 mg ± 0.04
MAC # 1	1.33 mg ± 0.04
MAC # 2	2.98 mg ± 0.04


- Sample exposed during **TVAC B** captured the most contaminants, even though, it was exposed for a shorter test duration
- Some possible reasons for this may include differences in the test facility, chamber size, temperature variations, and sample handling procedures
- MAC # 2 results are about:
  - 3 times greater than control sample
  - 2.3 times greater than MAC #1




# Molecular Adsorption Capacity

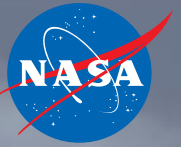

- Past studies have involved saturating MAC samples with **stearyl alcohol** as the test contaminant source under vacuum conditions
- Stearyl alcohol is an 18-chain hydrocarbon that is representative of outgassed species that are commonly found in spaceflight applications
- The experimental data shown suggests that the molecular adsorption capacity of MAC is **directly proportional** to coating thickness

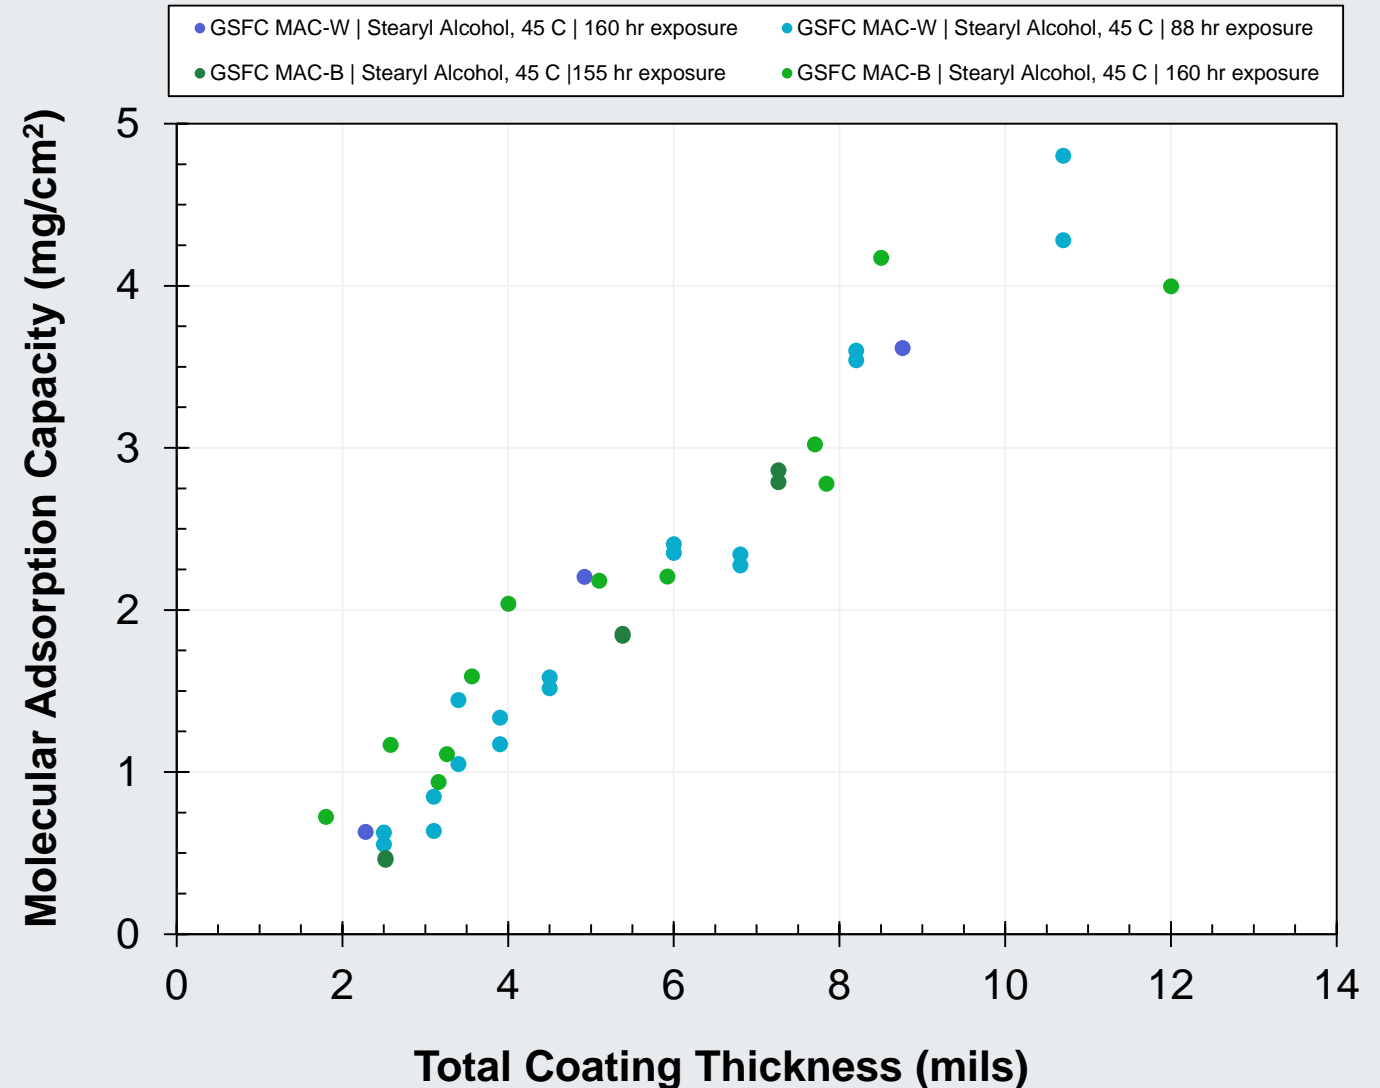


# Molecular Adsorption Capacity

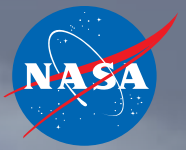


- The predicted vacuum molecular adsorption properties of the MAC samples that were used during the ATLAS TVAC tests are shown below:

Coating Thickness	6.2 mils
Coating Area	95.2 cm <sup>2</sup>
Estimated Molecular Adsorption Capacity in Vacuum	2.4 mg/cm <sup>2</sup>
Estimated Maximum Mass	~ 228 mg

However, this assumes that the majority of the species collected during the tests are long-chain hydrocarbons similar to stearyl alcohol

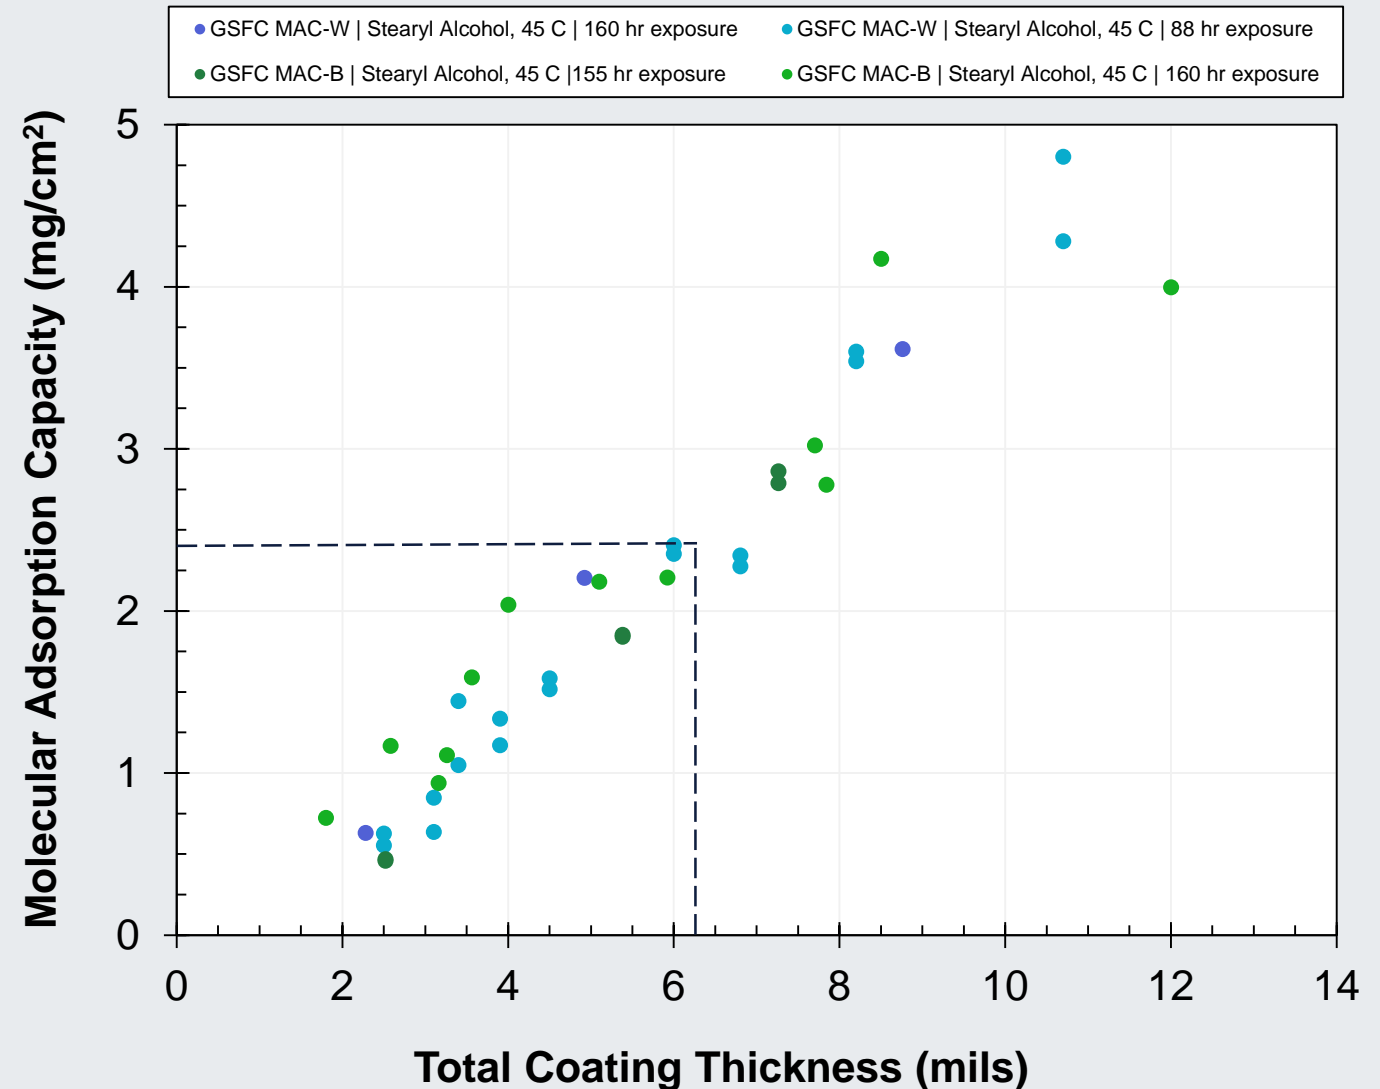

# Molecular Adsorption Capacity

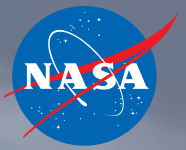

- The **saturation ratio** is defined as the ratio of the cumulative NVR per coating area to the estimated experimental molecular adsorption capacity (in vacuum conditions)
- The results suggest that the MAC samples that were deployed during the TVAC tests were **not significantly contaminated** with outgassed species **to complete saturation of the pores in the coating**
- Nevertheless, the chemical species that were collected during TVAC were isolated from further contaminating the critical laser flight optics on the ATLAS instrument

SAMPLE	ESTIMATED SATURATION RATIO
MAC # 1	0.6 %
MAC # 2	1.3 %




## SOME CONSIDERATIONS

- Not all of the adsorbed contaminants will be removed with multiple solvent rinses
- Not all of the adsorbed contaminants will be long-chain hydrocarbons similar to the experiment contaminant



# Chemical Analysis Results

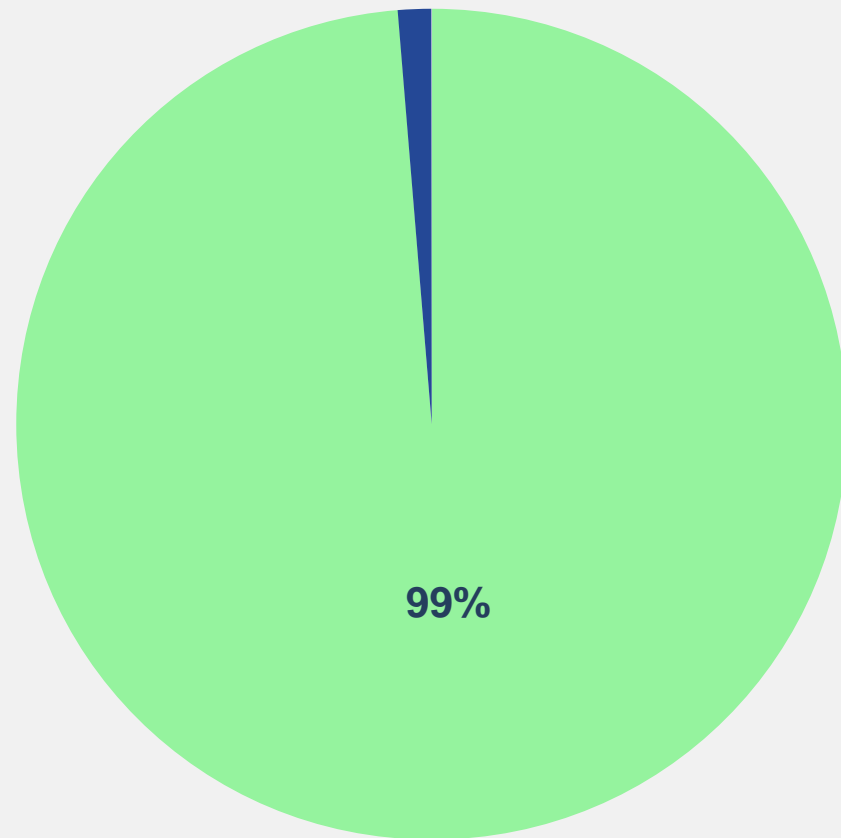



■ Hydrocarbons

■ Misc. Chemical Species

## MAC # 0 Control Sample

- Shown is the percent distribution of chemical species for the single solvent rinse of the control sample
- Results indicate that 99% is comprised of **primarily hydrocarbons** that may have been adsorbed from exposure to the ambient environment during its storage period or due to sample handling
- Remaining 1% of miscellaneous species are likely room environmental compounds
- Similar trends were observed for 3x rinse of control sample (as well as the two vacuum exposed samples)

# Chemical Analysis Results

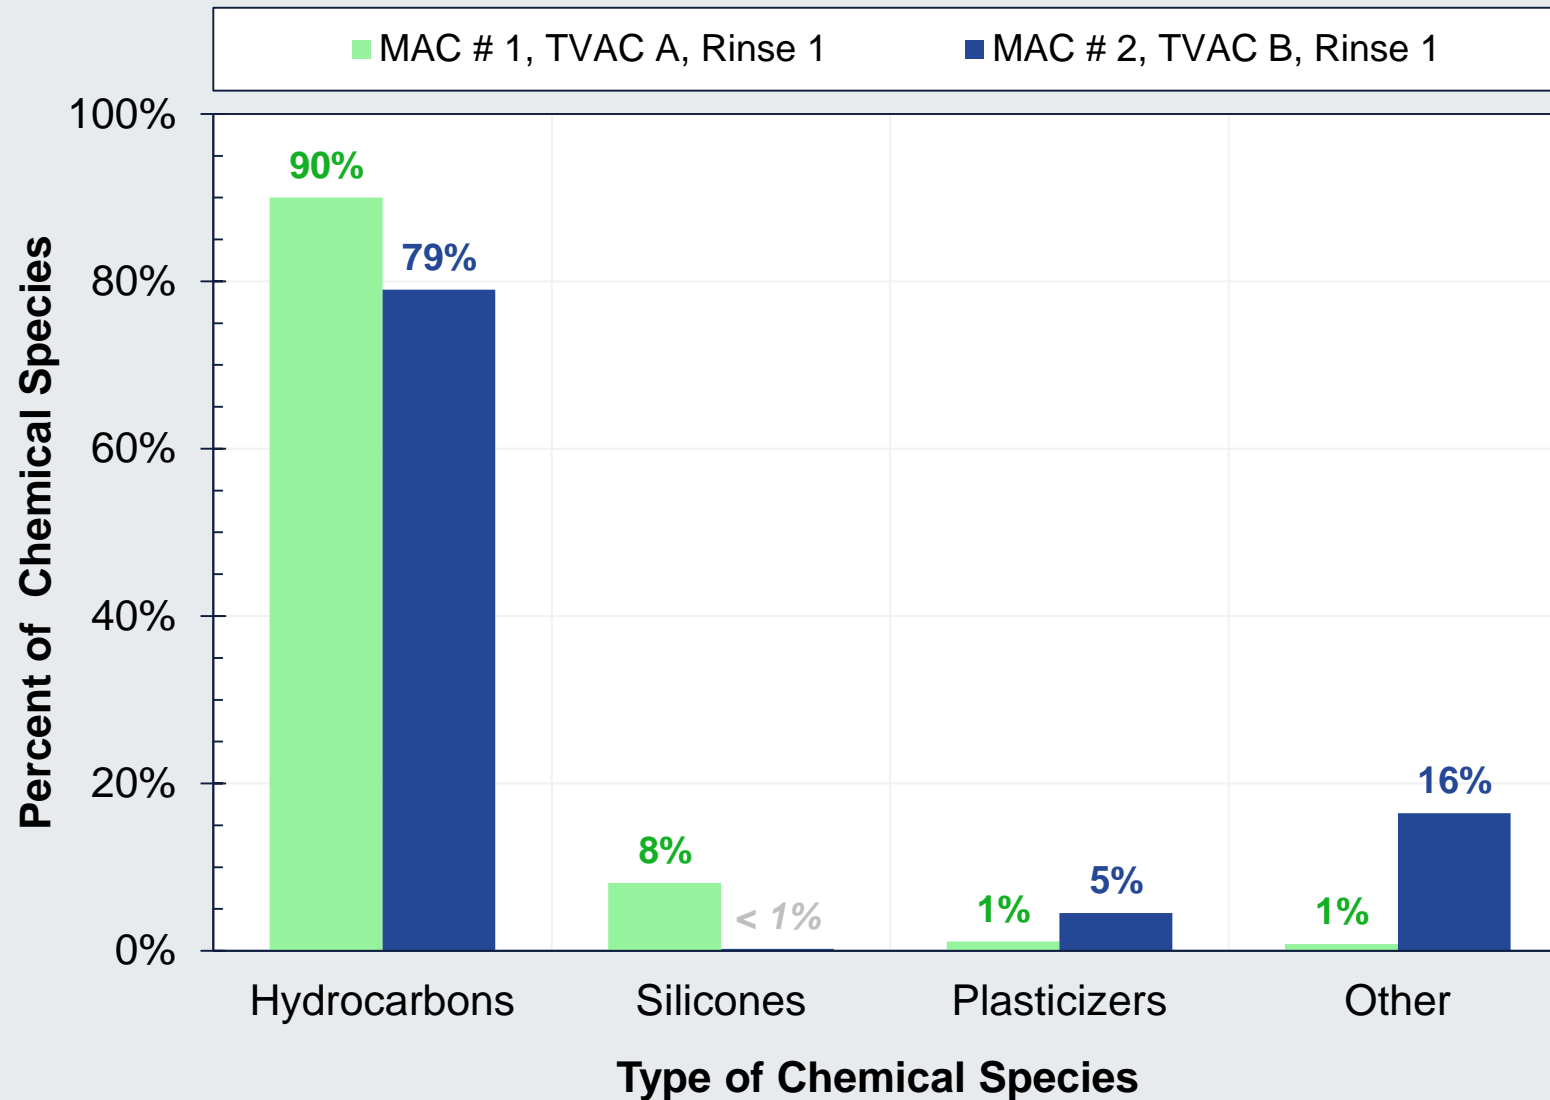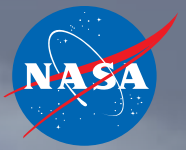



## Both TVAC Tests

- Most abundant type of chemical species were **hydrocarbons**

## TVAC A

- Second most abundant species at 8% were **silicones**, such as **methyl phenyl silicones** and **methyl silicones**, that are commonly sourced from lubricants, elastomers, and adhesives
- Remaining least abundant species at 2% consisted of **plasticizers**, such as **phthalate-based species**, and **other** miscellaneous chemical constituents, such as **palmitate-based species**

# Chemical Analysis Results

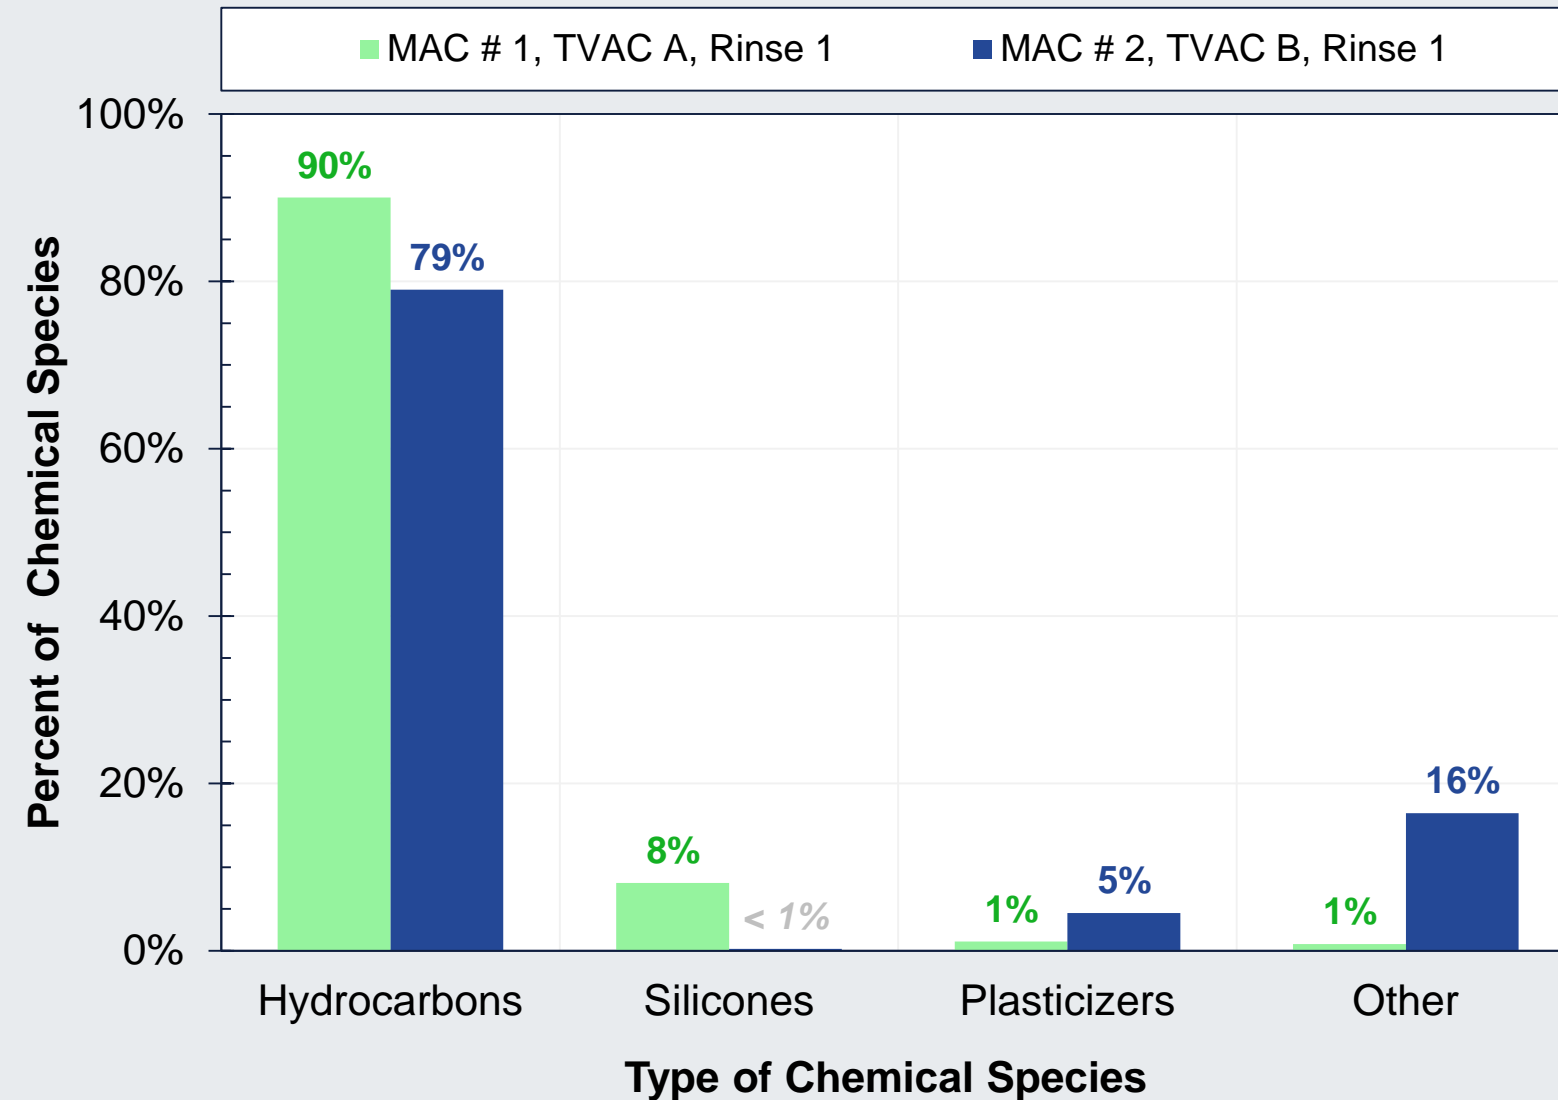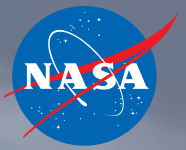


## TVAC B

- Second most abundant species were “other” at 16%, specifically handling contaminants, which consisted of mostly **palmitate-based species**, such as **isopropyl palmitate**, which are commonly found in cosmetics (i.e. emollients, moisturizers, thickening agents), lubricants, rubber, and latex
  - “Other” also included methyl palmitate, butyl palmitate, and isopropyl myristate
- Third most abundant species at 5% include **phthalate-based plasticizers**, such as **di(2-ethylhexyl) phthalate**
- Least abundant species identified were silicone-based compounds at 0.2%





# Chemical Analysis Results

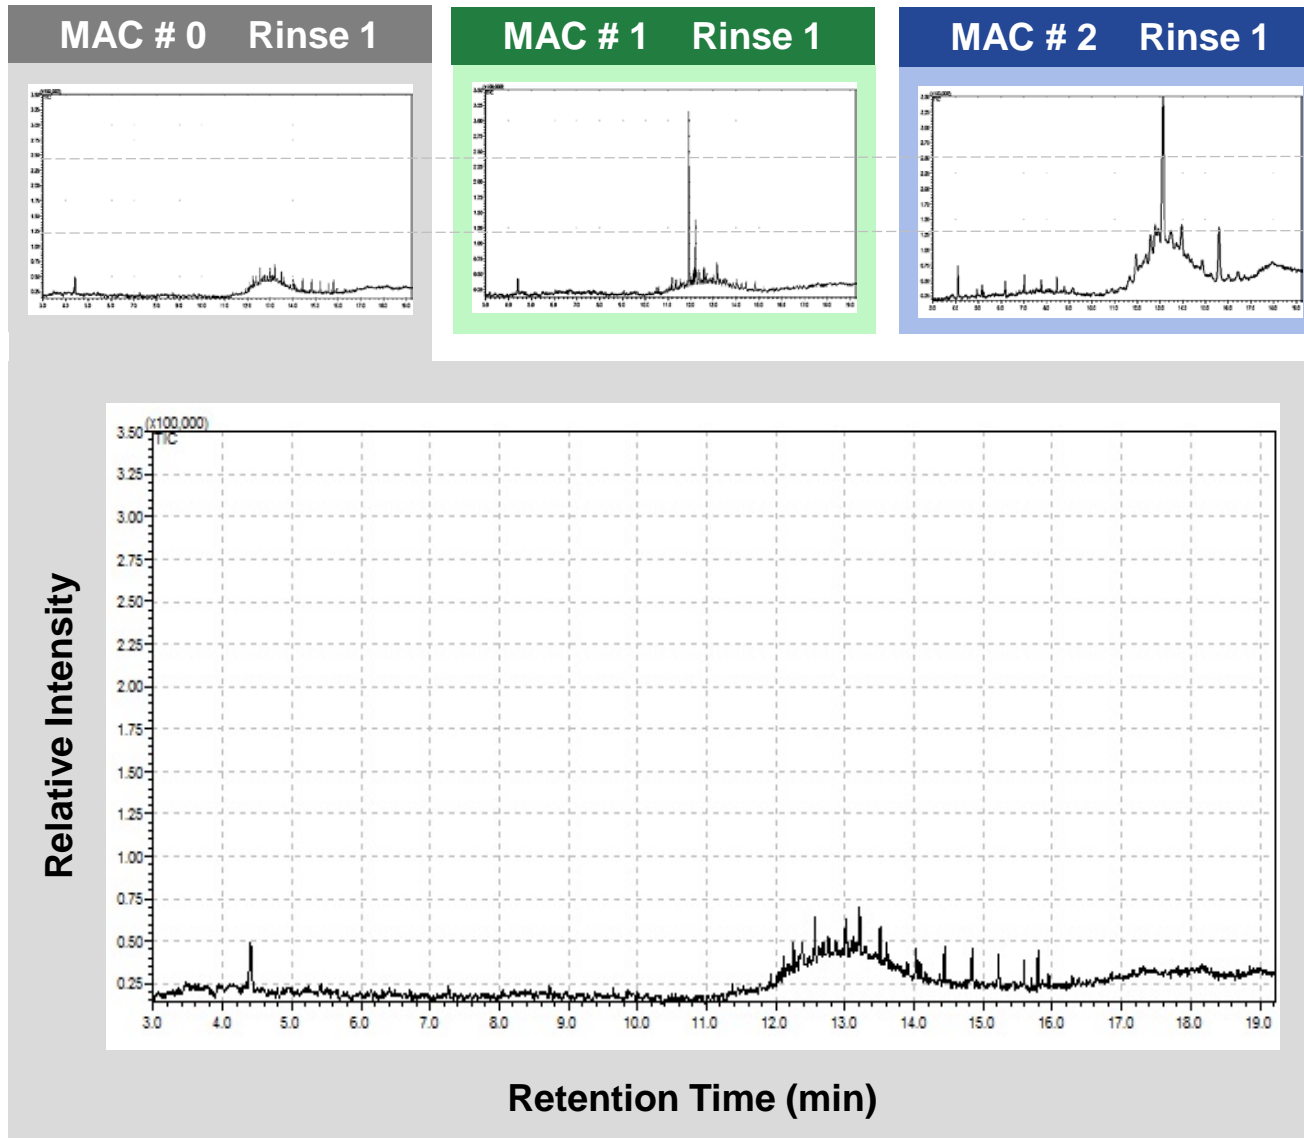

## MAC Control Sample


- GC/MS plot shows the **lowest** relative intensity, or compound abundance, of identified species
- Mostly hydrocarbon peaks

# Chemical Analysis Results

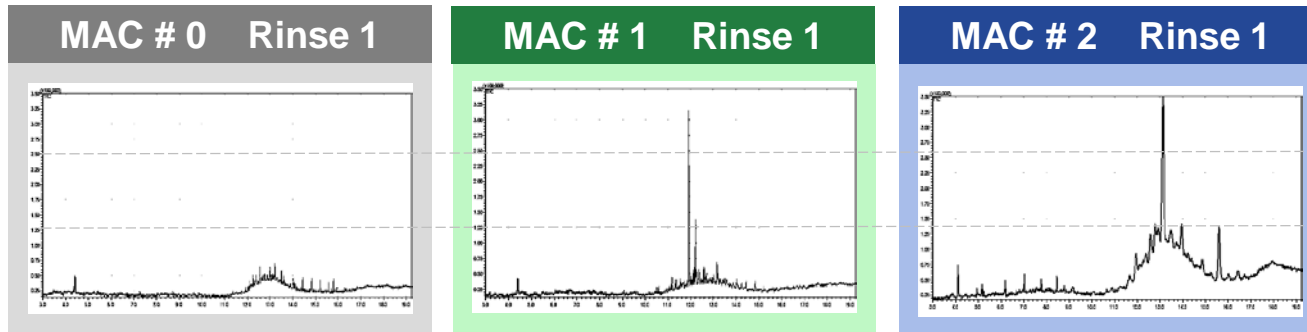
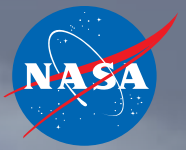


## MAC # 1 from TVAC A

- GC/MS plot shows additional peaks at a greater relative intensity when compared to the control sample
- Mostly hydrocarbon peaks
- Highest intensity peak present for **silicones**, such as **methyl phenol silicone** at around 11.9 min

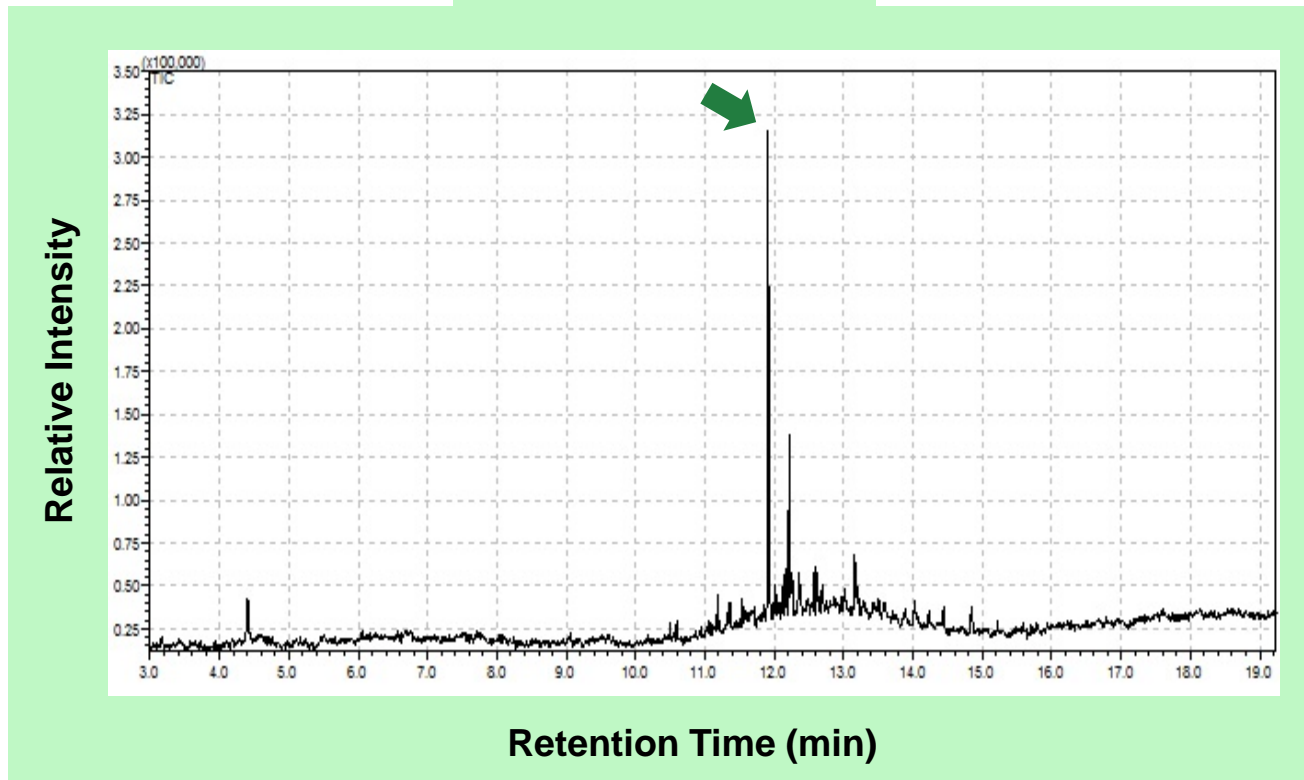

# Chemical Analysis Results

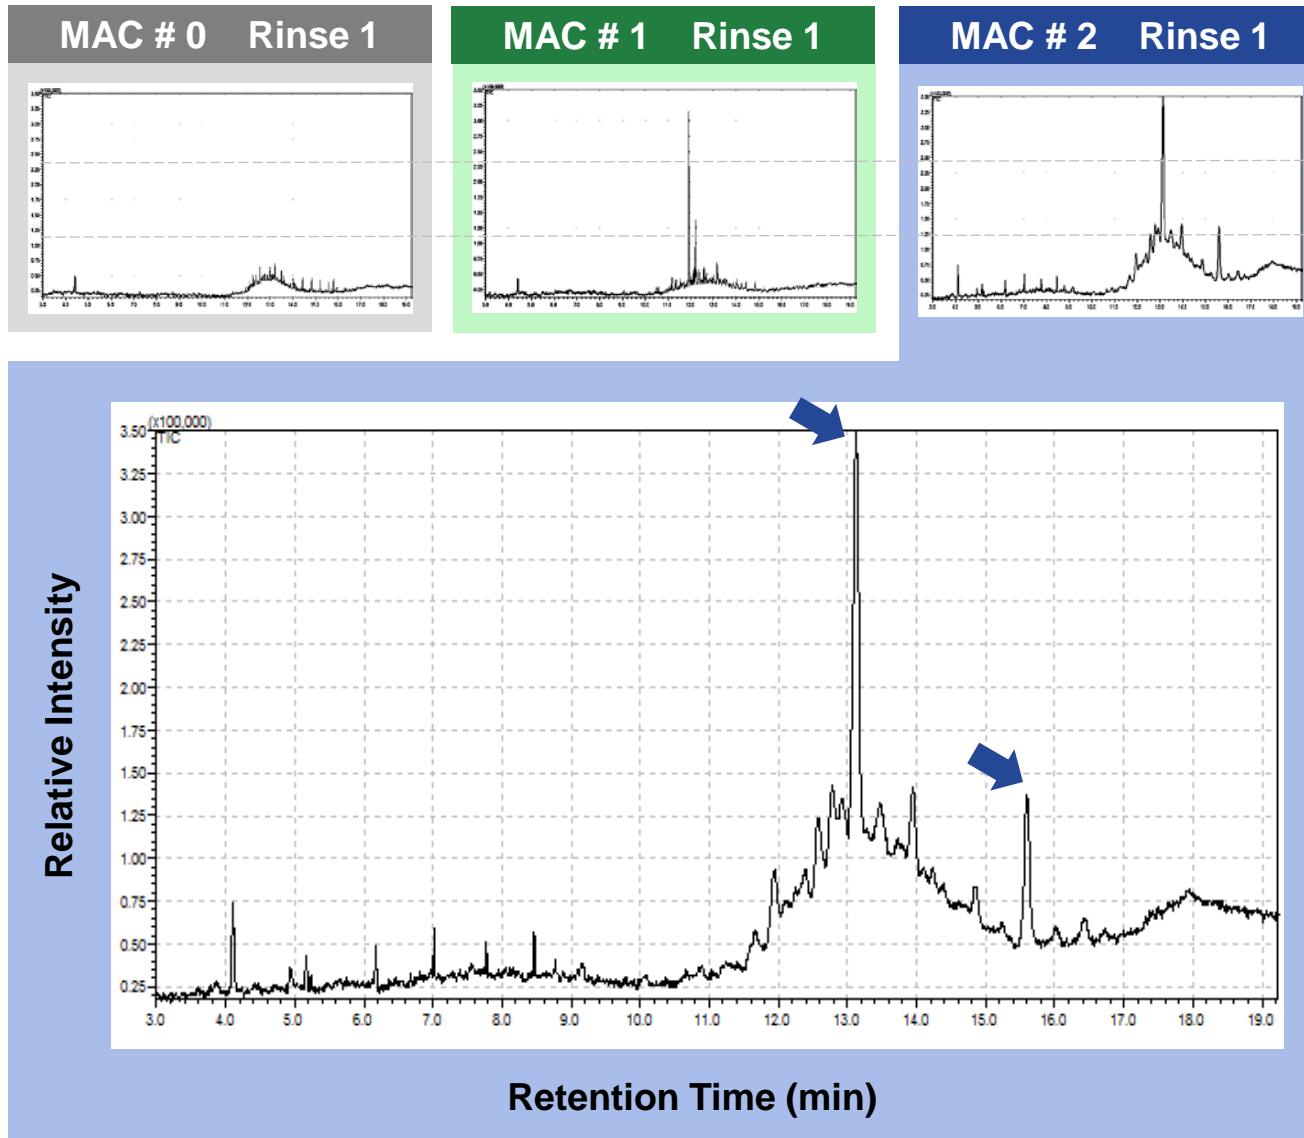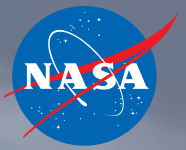

## MAC # 2 from TVAC B

- GC/MS plot shows the greatest relative intensity of species when compared to control sample and first TVAC sample
- Again, mostly hydrocarbon peaks
- Many high intensity peaks present for **palmitate-based species**, such as **isopropyl palmitate** at around 13.2 min
- High intensity peaks also present for **plasticizers**, such as **di(2-ethylhexyl) phthalate** at around 15.6 min




# Comparison to Contamination Monitoring Methods



- MAC results were compared against typical contamination control monitoring methods, which are often used during spaceflight vacuum chamber testing

Monitoring Method	Witness Foil	Scavenger Plate	Cold Finger
Description	Witness Sample	Cold panel cooled by LN2	Small cylindrical device cooled by LN2
Purpose	Used to collect NVR representative of what may be found on the hardware	Used to collect the majority of the outgassed contamination throughout the TVAC test	Used to collect residual outgassing during the last several hours of the TVAC test
NVR Rinse	Chloroform	Isopropyl Alcohol	Isopropyl Alcohol
Chemical Analysis	FTIR & GC/MS	FTIR & GC/MS	FTIR & GC/MS

# Comparison to Contamination Monitoring Methods

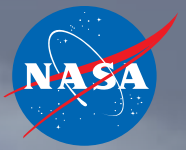

- Comparison provides **additional verification** of the identified contaminant species from the MAC samples that were installed for the two TVAC tests

	TVAC A			TVAC B				
	MAC Sample	TVAC Witness Foil	TVAC Scavenger Plate	MAC Sample	TVAC Witness Foil	TVAC Bake-Out Scavenger Plate	TVAC Bake-Out Cold Finger	Post TVAC Chamber Cert Cold Finger
	<i>Chloroform</i>	<i>Chloroform</i>	<i>Isopropyl Alcohol</i>	<i>Chloroform</i>	<i>Chloroform</i>	<i>Isopropyl Alcohol</i>	<i>Isopropyl Alcohol</i>	<i>Isopropyl Alcohol</i>
Hydrocarbons	X	X	X	X		X	X	X
Silicones	X	X	X	X	X	X	X	
Plasticizers	X	X	X	X	X	X	X	X
Other	X	X		X	X	X	X	X

# Comparison to Contamination Monitoring Methods



- A solvent rinse NVR comparison was made between the witness foils and the MAC samples given that they are **both passive collection methods**
- Witness foils were deployed during the start of each test and placed in a subject location near the ATLAS instrument in the chamber facility; however, the MAC samples and witness foils **were not installed in the same location**


TEST ID	WITNESS FOIL <i>Rinse 1 with Chloroform</i>	MAC SAMPLE <i>Rinse 1 with Chloroform</i>	
TVAC A	0.10 $\mu\text{g}/\text{cm}^2$ $\pm 0.02$	2.20 $\mu\text{g}/\text{cm}^2$ $\pm 0.44$	22x
TVAC B	0.07 $\mu\text{g}/\text{cm}^2$ $\pm 0.02$	13.65 $\mu\text{g}/\text{cm}^2$ $\pm 0.44$	195x

For MAC, the control sample was subtracted for the adjusted NVR per coating area

- The significantly larger relative amounts that were collected on MAC **do not** provide conclusive evidence that condensation would have taken place on the instrument due to **physical and chemical differences between the coating and the hardware surface**
- However, results **do** suggest that MAC may serve as a **better method for both mitigation and indication of contaminant threats**
- Unlike other typical monitoring methods, contaminants that are passively captured within the coating during TVAC are **less likely to be released during warm-up activities to ambient pressures**

# Summary

- Conclusions
- Future Work

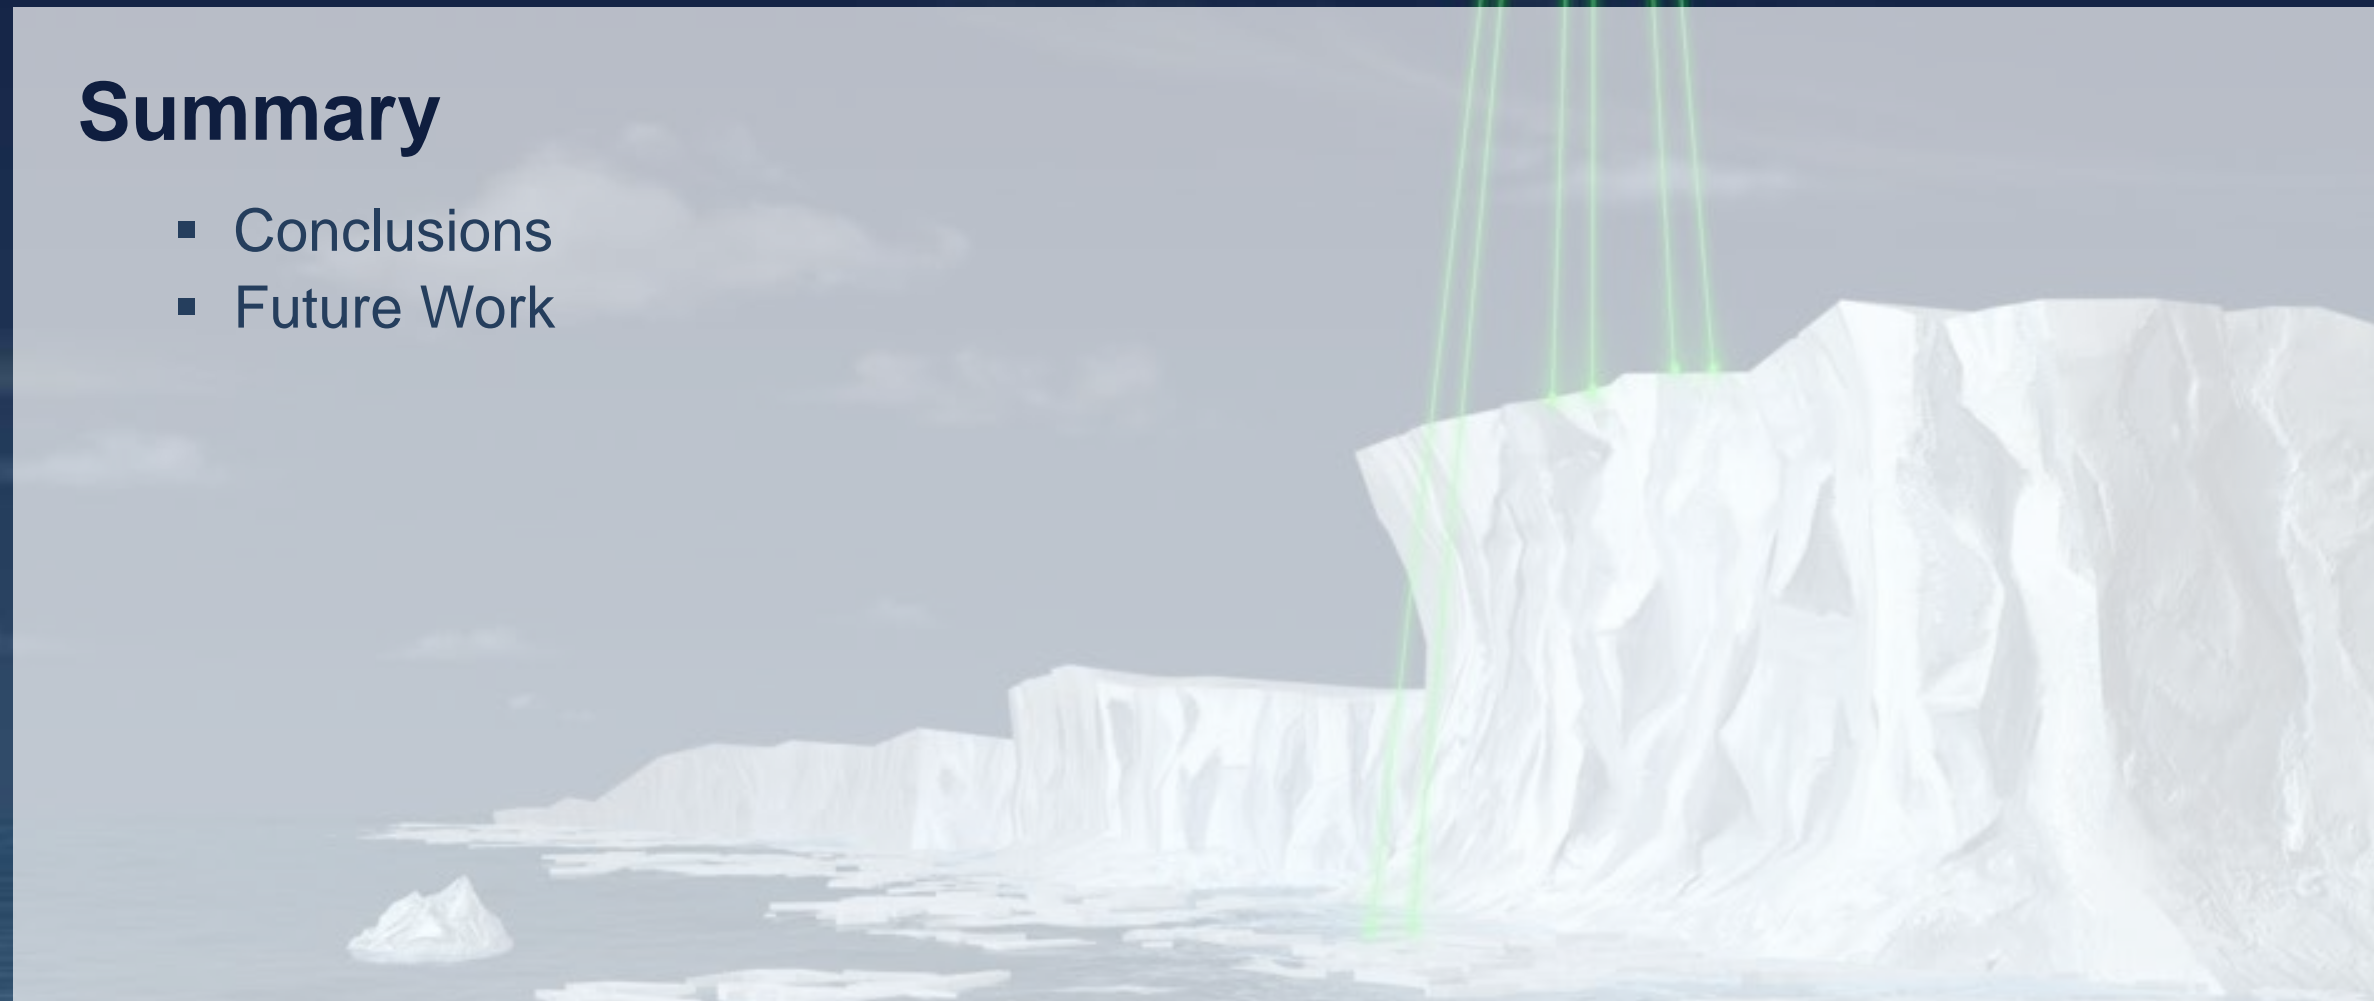



# Conclusions



- The use of the MAC technology during ATLAS TVAC testing was effective in protecting the critical laser flight optics
- The identified chemical species that were captured by MAC isolated the transmit optics components from potential molecular contamination
- The continued use of the MAC technology as both a **mitigator and indicator** for outgassed molecular contaminants is recommended during vacuum chamber tests of spaceflight hardware for future NASA missions

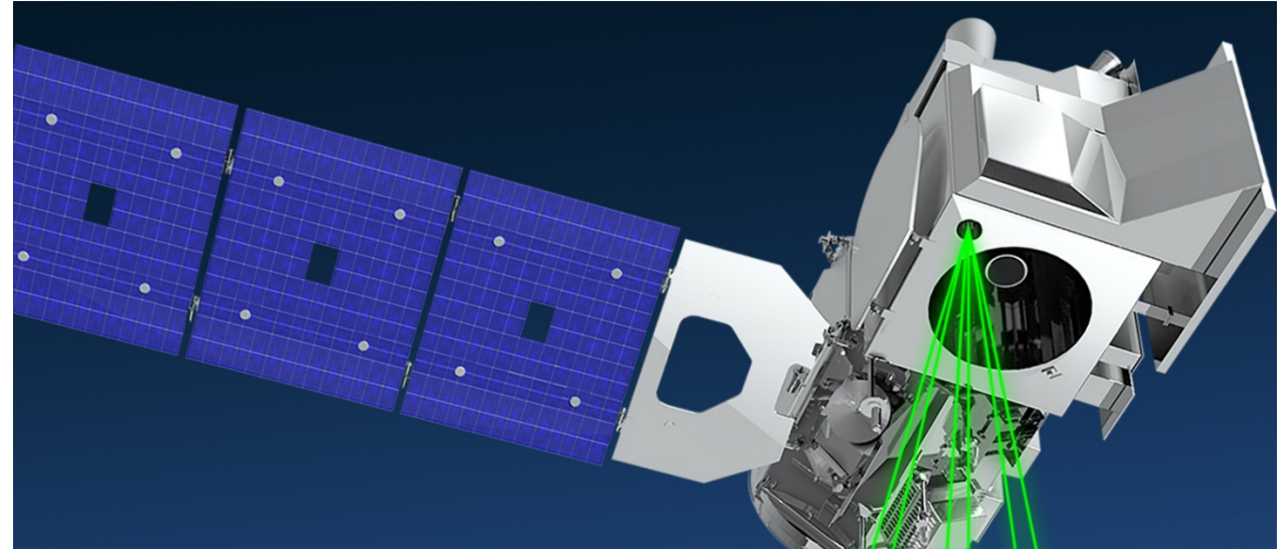



IMAGE CREDIT: NASA/GSFC

## FUTURE WORK

- Explore alternative methods of identifying the collected contaminants on MAC, such as via thermal desorption techniques or the use of other organic solvents

# Questions?

# Acronyms

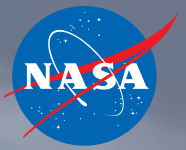

▪ ATLAS	Advanced Topographic Laser Altimeter System
▪ FTIR	Fourier Transform Infrared Spectroscopy
▪ FUV	Far Ultraviolet
▪ GC/MS	Gas Chromatography/Mass Spectrometry
▪ GEDI	Global Ecosystem Dynamics Investigation Lidar
▪ GOLD	Global-scale Observations of the Limb and Disk
▪ GSFC	Goddard Space Flight Center
▪ I&T	Integration and Test
▪ ICESat-2	Ice, Cloud, and Land Elevation Satellite 2
▪ ICON	Ionospheric Connection Explorer
▪ JWST	James Webb Space Telescope
▪ LN2	Liquid Nitrogen
▪ LRS	Laser Reference System
▪ MAC	Molecular Adsorber Coating
▪ MAC-W	White Molecular Adsorber Coating
▪ MMS	Magnetosphere Multiscale Mission
▪ NASA	National Aeronautics and Space Administration
▪ NICER	Neutron star Interior Composition Explorer
▪ NVR	Non-Volatile Residue
▪ OGSE	Optical Ground Support Equipment
▪ OTIS	Optical Telescope Element And Integrated Science
▪ SGT	Stinger Ghaffarian Technologies
▪ SLI	Single Layer Installation
▪ TPF	Thermal Pathfinder
▪ TVAC	Thermal Vacuum
▪ VDA	Vapor Deposited Aluminum


# References



1. National Aeronautics and Space Administration, "ICESat-2: Fact Sheet", Accessed 1 June 2018, <[https://icesat-2.gsfc.nasa.gov/sites/default/files/page\\_files/ICESat-2%20Fact%20Sheet.pdf](https://icesat-2.gsfc.nasa.gov/sites/default/files/page_files/ICESat-2%20Fact%20Sheet.pdf)>
2. National Aeronautics and Space Administration, "ICESat-2: How It Works", Accessed 1 June 2018, <<https://icesat-2.gsfc.nasa.gov/how-it-works>>
3. National Aeronautics and Space Administration, "ICESat-2: Space Lasers", Accessed 1 June 2018, <<https://icesat-2.gsfc.nasa.gov/space-lasers>>
4. National Aeronautics and Space Administration, "ICESat-2: Technical Specs", Accessed 1 June 2018, <<https://icesat-2.gsfc.nasa.gov/science/specs>>
5. National Aeronautics and Space Administration, "ICESat-2: Instrument", Accessed 1 June 2018, <<https://icesat.gsfc.nasa.gov/icesat2/instrument.php>>
6. National Aeronautics and Space Administration, "A Laser Beam's Path Through NASA's ICESat-2", Accessed 1 June 2018, <<https://www.nasa.gov/feature/goddard/lasers-path-through-icesat-2>>
7. National Aeronautics and Space Administration, "ICESat-2 (Ice, Cloud and land Elevation Satellite-2)", Accessed 1 June 2018, <<https://directory.eoportal.org/web/eoportal/satellite-missions/i/icesat-2>>
8. Markus, T. et al. "The Ice, Cloud, and land Elevation Satellite-2 (ICESat-2): Science requirements, concept, and implementation", Remote Sensing of Environment, Volume 190, pg 260–273 (March 2017)
9. Canham, J. S., "Investigation of Contamination Efforts on Laser Induced Optical Damage in Space Flight Lasers", Earth Science and Technology Conference for NASA Earth Science Technology Office (June 2004)
10. Abraham, N. S., Hasegawa, M. M., and Straka, S. A., "Development and testing of molecular adsorber coatings", Proc. SPIE 8492, Optical System Contamination: Effects, Measurements, and Control 2012, 849203 (October 2012)
11. Abraham, N. S., Hasegawa, M. M., and Straka, S. A., "Black molecular adsorber coatings for spaceflight applications", Proc. SPIE 9196, Systems Contamination: Prediction, Measurement, and Control 2014, 91960F (September 2014)
12. Abraham, N. S., Hasegawa, M. M., and Secunda, M. S., "Application of the Molecular Adsorber Coating technology on the Ionospheric Connection Explorer program", Proc. SPIE 9952, Systems Contamination: Prediction, Control, and Performance 2016, 99520D (September 2016)
13. Abraham, N. S., "NASA Applications of Molecular Adsorber Coatings", Contamination, Coatings, Materials Science, and Planetary Protection Workshop (July 2015)
14. Abraham, N. S., "NASA Applications of Molecular Adsorber Coatings", Thermal and Fluids Analysis Workshop (August 2015)
15. Abraham, N. S., Hasegawa, M. M., Wooldridge, E. M., and Henderson-Nelson, K. A., "The use of the Molecular Adsorber Coating technology to mitigate vacuum chamber contamination during Pathfinder testing for the James Webb Space Telescope", Proc. SPIE 9952, Systems Contamination: Prediction, Control, and Performance 2016, 99520C (September 2016)
16. Abraham, N. S., "Application of Molecular Adsorber Coatings in Chamber A for the James Webb Space Telescope", Contamination, Coatings, Materials Science, and Planetary Protection Workshop (July 2017)
17. Abraham, N.S., "Thermal Coatings Report TCR # 730", NASA GSFC Code 546 (April 2016)
18. Jallice, D., "Materials Engineering Report MEB # 17572", NASA GSFC Code 541 (August 2017)
19. Jallice, D., "Materials Engineering Report MEB # 18711", NASA GSFC Code 541 (March 2018)
20. National Institutes of Health, "Isopropyl Palmitate", Pub Chem Open Chemistry Database, Accessed 1 June 2018, <[https://pubchem.ncbi.nlm.nih.gov/compound/isopropyl\\_palmitate#section=Top](https://pubchem.ncbi.nlm.nih.gov/compound/isopropyl_palmitate#section=Top)>
21. Colony, J.A., "Analysis of Nonvolatile Residue (NVR) from Spacecraft Systems", NASA Technical Memorandum 86184 (January 1985)
22. Kruger, R., "Evaluating a contamination hazard with a residual gas analyzer", NASA Technical Memorandum 19790016899 (January 1978)
23. Mucciacciaro, T., "ATLAS Chemical Analysis Report", NASA GSFC Code 540 (July 2017)
24. Mucciacciaro, T., "ATLAS Chemical Analysis Report", NASA GSFC Code 540 (February 2018)
25. Knipple, J. "Materials Engineering Report MEB # JK-295", NASA GSFC Code 541 (August 2017)
26. Jallice, D., "Materials Engineering Report MEB # 18-009", NASA GSFC Code 541 (February 2018)
27. Jallice, D., "Materials Engineering Report MEB # 18-011", NASA GSFC Code 541 (February 2018)



## Contact Information

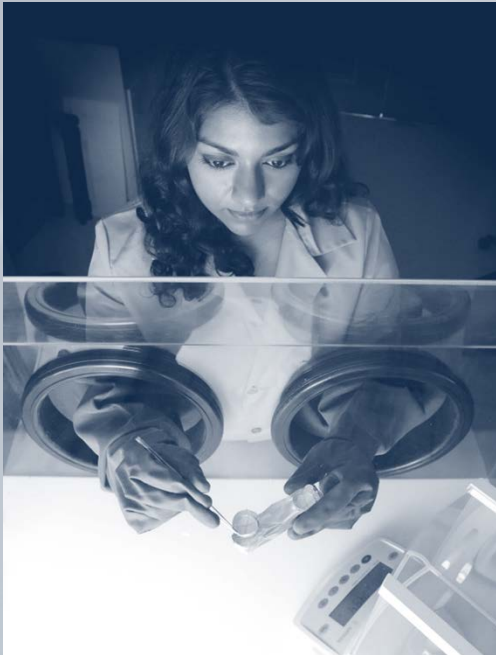

**Nithin S. Abraham**  
*Coatings Engineer*

**NASA Goddard Space Flight Center**  
Contamination and Coatings Engineering Branch  
Code 546 | Greenbelt, Maryland 20771 USA  
E-mail [nithin.s.abraham@nasa.gov](mailto:nithin.s.abraham@nasa.gov)  
Phone (301) 614-7070

IMAGE CREDIT: NASA / PAT IZZO