

NASA CR-  
747869

# TECHNOLOGY

RESEARCH  
and

DEVELOPMENT

INCORPORATED  
LIFE SCIENCES DIVISION

SPECIAL REPORT

An Automated System for Pulmonary Function Testing


(NASA-CR-147869) AN AUTOMATED SYSTEM FOR  
PULMONARY FUNCTION TESTING (Technology,  
Inc., Houston, Tex.) 120 p HC \$5.50

N76-31935

CSCL 09B

Unclas

G3/61 03427

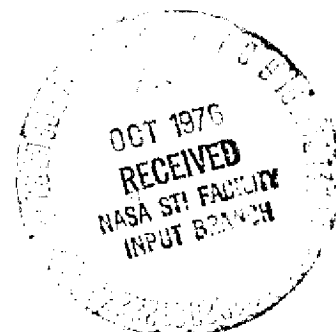

November 21, 1974

CONTRACT NAS 9-13291

National Aeronautics and Space Administration  
Johnson Spacecraft Center

TECHNOLOGY INCORPORATED  
LIFE SCIENCES DIVISION  
HOUSTON, TEXAS

26  
11/21/74


SPECIAL REPORT

An Automated System for Pulmonary Function Testing


November 21, 1974

CONTRACT NAS 9-13291

PREPARED BY:

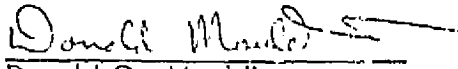  
Donald G. Mauldin  
Research Engineer

APPROVED BY:

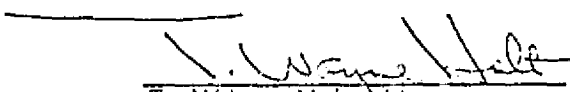  
T. Wayne Holt, Manager  
Houston Branch

SPECIAL REPORT

An Automated System for Pulmonary Function Testing

November 21, 1974

CONTRACT NAS 9-13291

National Aeronautics and Space Administration  
Lyndon B. Johnson Space Center  
Houston, Texas 77058

## INTRODUCTION

The integrity and proper function of the body are dependent upon adequate oxygen uptake and delivery to tissues by the cardiopulmonary system. The primary function of the lung is to arterialize the mixed venous blood through elimination of carbon dioxide and addition of oxygen. This is achieved by ventilation which is a function of volume and distribution of respired air in the ventilated alveoli. An additional important factor is the distribution of pulmonary blood flow. Postural position affects ventilation perfusion relationships. The space environment, which has been likened to bed rest, is expected to affect pulmonary function in a manner similar to assuming the supine position.

A demonstration of a potential experiment to quantitate pulmonary function was accepted for the Space Shuttle Concept Verification Test III. This report describes the system used in this experiment.

## EXPERIMENTAL DESIGN

The design of an experiment for Space Shuttle flights requires that special attention be given to three areas: 1) time limitations for experimental activity, 2) ease of operation, 3) data reliability. To optimize these three areas without compromising experimental results, the hardware arrangement shown in Figures 1, 2, and 3 was constructed and implemented with the computer program listed in Appendix III.

To minimize subject interaction with the hardware and thus minimize both time expended and possible operator error, measurements were integrated so that only two subject activities are necessary. The first requires the subject to place a mouthpiece in his mouth and exhale completely to residual volume (RV) without inhaling. The subject

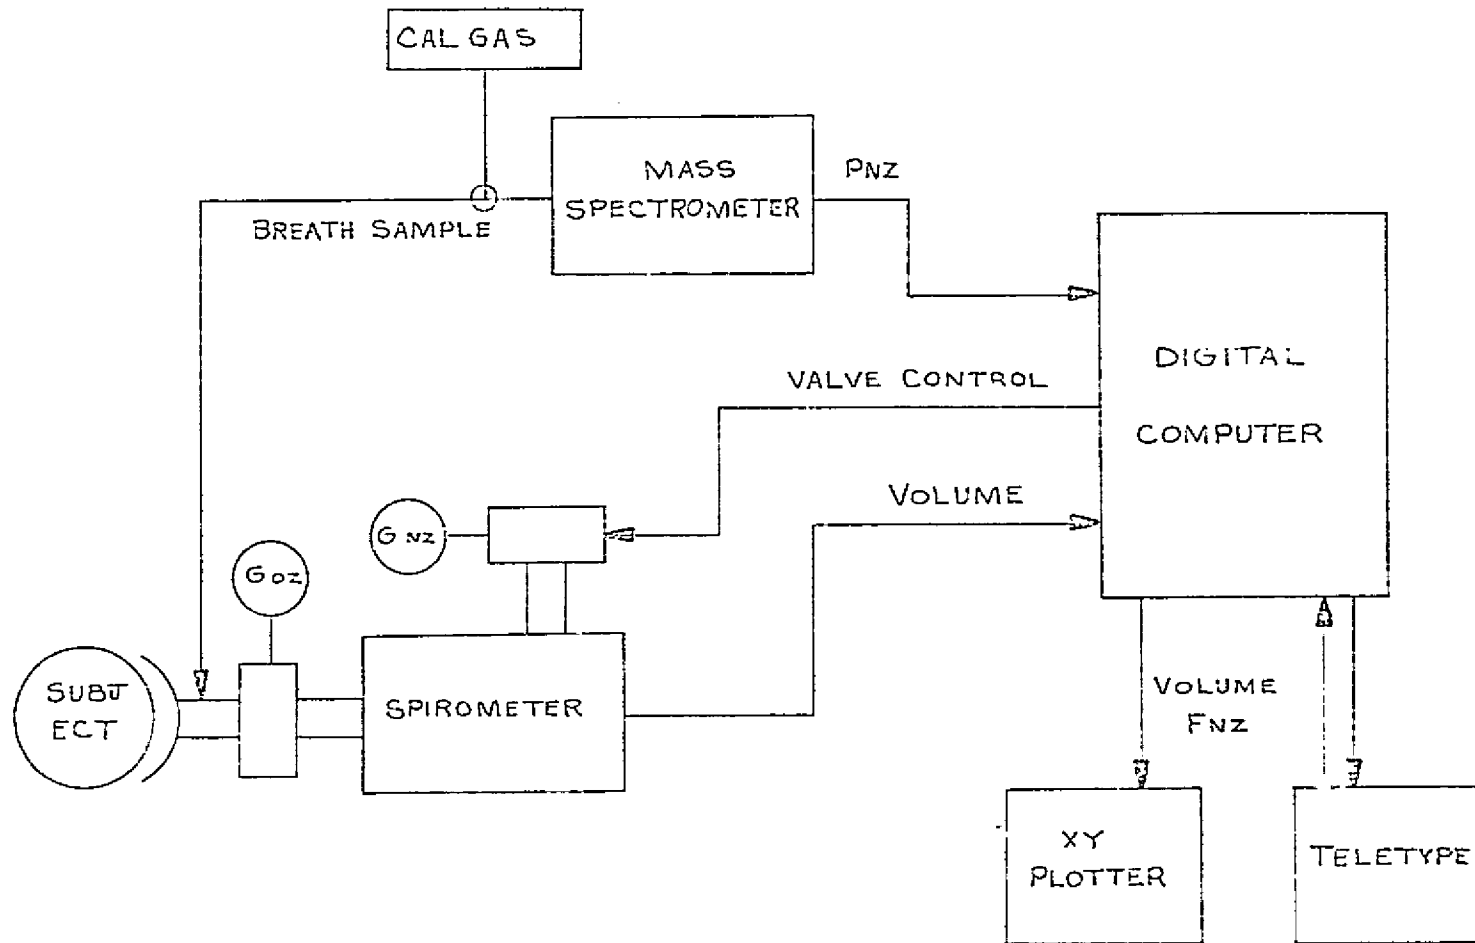


FIGURE 1.



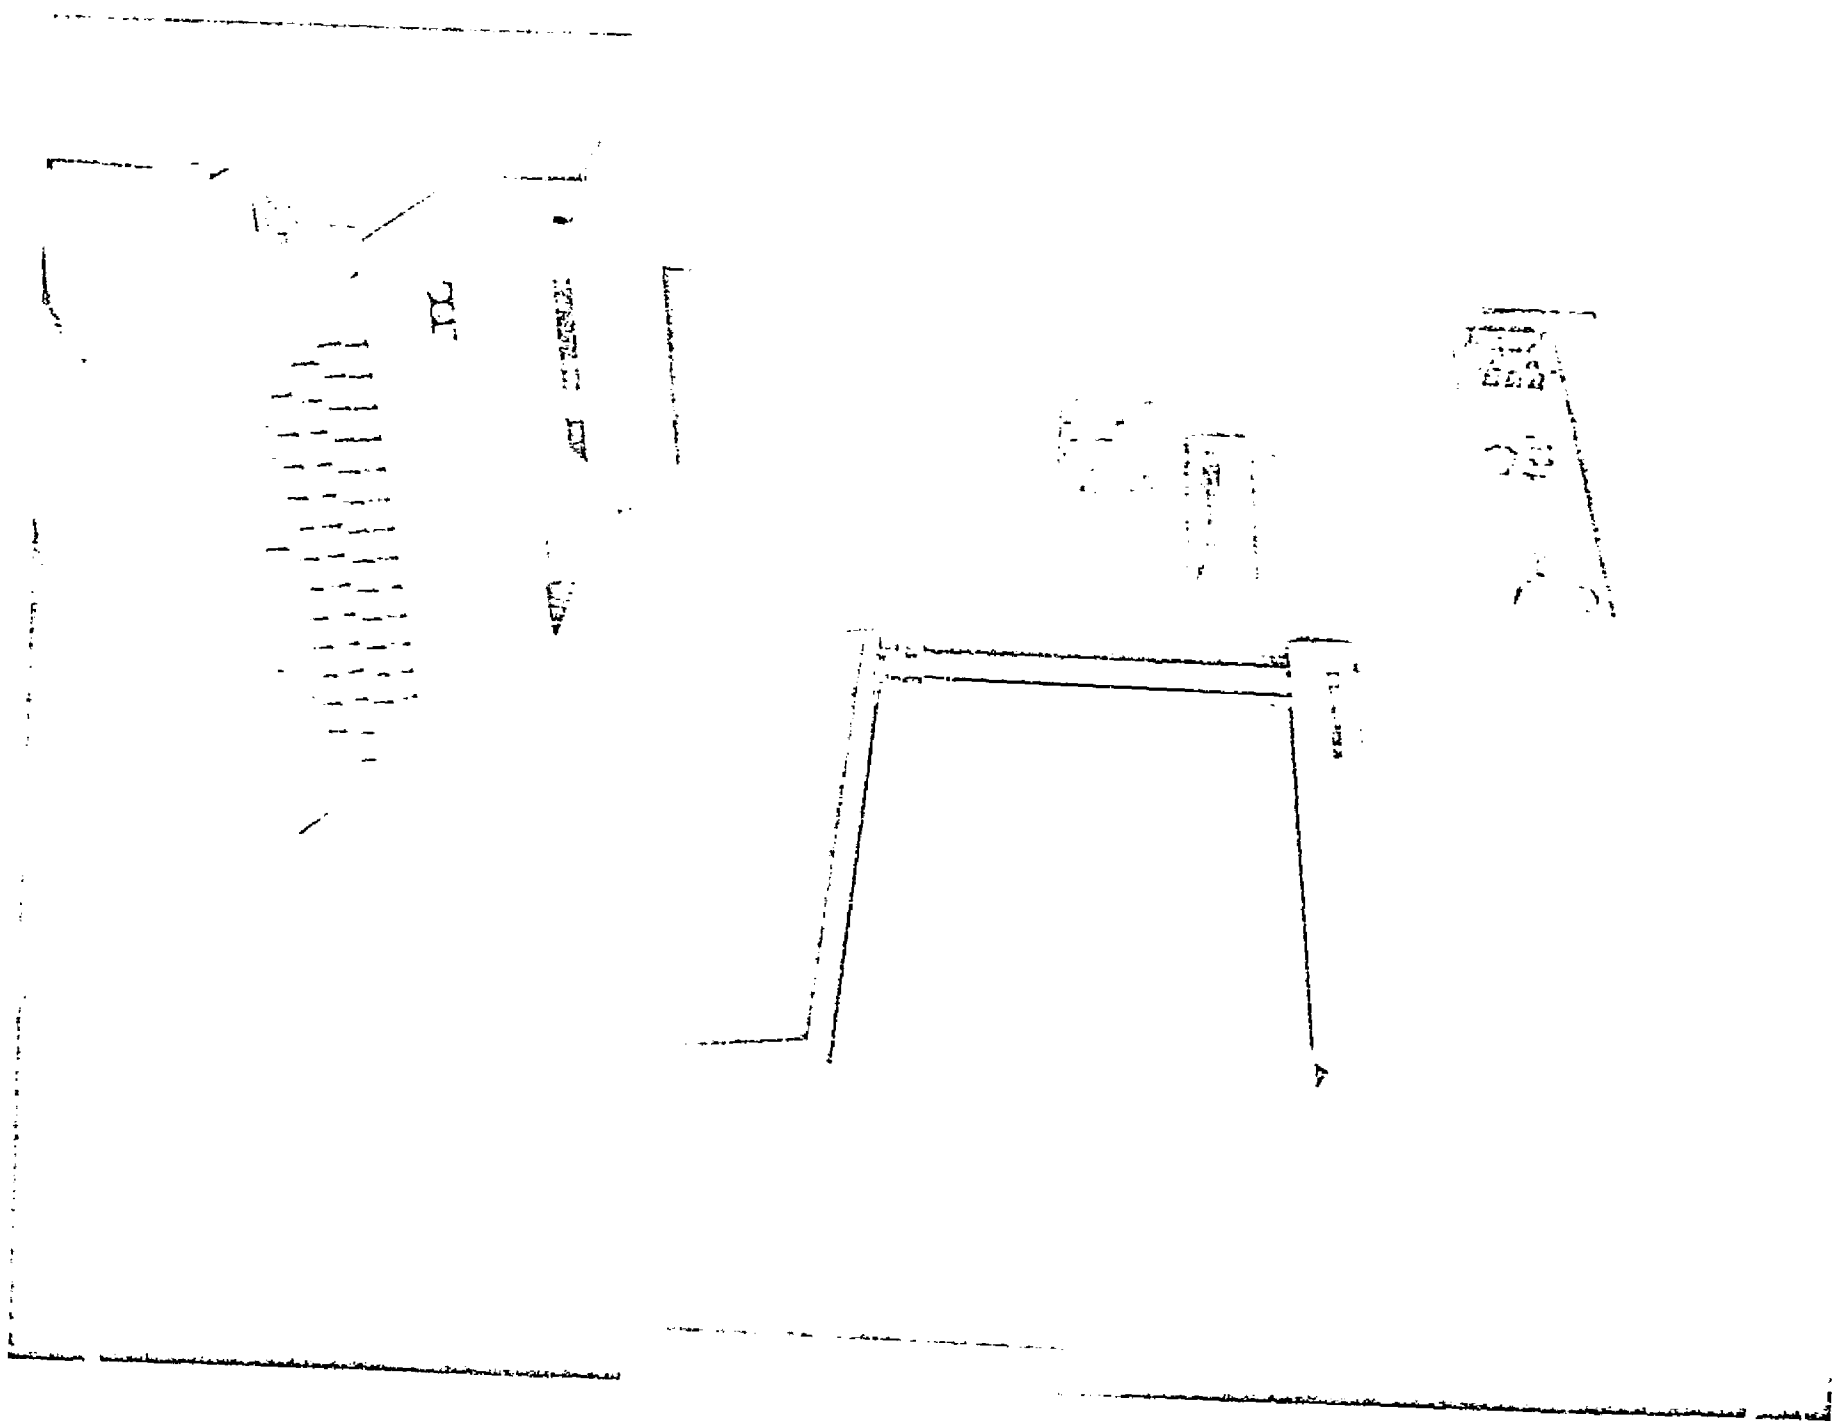


Figure 3

then takes a full inhalation of oxygen (inspiratory capacity) and again exhales completely to RV. After this initial maneuver, the subject continues to breathe normally through the mouthpiece for approximately 3 minutes. Data from this activity are used to quantitate the parameters defined in Table I. Traditionally, the single-breath maneuver and the nitrogen washout are conducted as two separate tests. By combining the two into a single procedure, the total test time is significantly reduced. The second subject activity requires the subject to take a complete inhalation and then exhale as completely and as rapidly as possible. The parameters defined in Table II are calculated from this forced vital capacity (FVC) maneuver. The parameters defined in Table III are derived from primary measurements.

TABLE I

<u>Measurement</u>	<u>Definition</u>
Residual Volume (RV)	The volume of air remaining in the lungs after a complete exhalation.
N <sub>2</sub> Delta	The change in nitrogen concentration (%) between 0.75 liters and 1.25 BTPS liters of the first exhalation after the first inhalation of 100% oxygen.
Closing Volume (CV)	The volume of air displaced from the apices following airway collapse at bases near the end of a full exhalation to RV.



TABLE I  
(cont.)

<u>Measurement</u>	<u>Definition</u>
VA/RV	The amount of alveolar oxygen ventilation required to washout one liter of residual volume from the lungs.
Vital Capacity	The maximum volume of air that can be exhaled starting from full inspiration.

TABLE II

<u>Measurement</u>	<u>Definition</u>
Forced Vital Capacity (FVC)	The maximum volume of air that can be exhaled in the smallest possible time.
Forced Expired Volume - 1 Sec (FEV <sub>1</sub> )	The maximum volume of air that can be exhaled in 1 second.
Maximum Expiratory Flow Rate (MEFR)	The mean flow rate between 0.2 liters and 1.2 liters of the forced vital capacity maneuver.
Maximum Midexpiratory Flow Rate (MMFR)	The mean flow rate for the middle half of the forced vital capacity maneuver.

TABLE III

<u>Measurement</u>	<u>Definition</u>
Total Lung Capacity (TLC) (TLC = RV + VC)	The total volume of the lungs at full inspiration.
FEV <sub>1</sub> /FVC %	The percent of forced vital capacity that can be exhaled in 1 second.
FVC/VC %	The ratio of forced vital capacity to vital capacity expressed as a percentage.
CV/VC %	The ratio of closing volume to vital capacity expressed as a percentage.
CC/TLC %	The ratio of the sum of residual volume and closing volume to total lung capacity expressed as a percentage.

For ease of operation, the computer program structure has five independent modules, each called by a single key-in on the teletype. If some malfunction should occur during the use of a module, that module can be restarted by a key-in, increasing data reliability.

#### HARDWARE

The hardware configuration for this experiment is shown in Figure 1. The spirometer is used to measure the volume of each breath, and is the same type used in Skylab

Experiment M171. A fixed collector, magnetic sector mass spectrometer is used to provide continuous definition of gas composition (fractions of  $N_2$ ,  $O_2$ ,  $CO_2$ , and  $H_2O$ ). The sample catheter for this mass spectrometer is inserted into the subject's valve assembly, so gas fractions represent concentrations at the mouth. The mass spectrometer was built by Perkin-Elmer as a breadboard unit for Skylab Experiment M171.

Mass spectrometer and spirometer analog data are received and analyzed by a PDP-8I computer with 4096 word memory, extended arithmetic element, teletype, and a special analog input-output interface. The analog interface contains four analog to digital (A/D) conversion channels, a clock that provides 40 millisecond sampling intervals, and six digital to analog channels. Since this interface is not standard hardware, program routines using these options would need modifications to allow their use on other computers.

For acquisition of analog data, a dual-slope integrating A/D converter is used. This A/D converter is very slow but is relatively immune to noise, and it provides excellent accuracy for low level signals while retaining a wide dynamic range. Two control words must be sent to the A/D converter to initiate a sample, and two words of data read back. First, a 12-bit number is loaded into the accumulator; then instruction 6537 (octal) executed. This instruction sends the 12-bit word to a DAC (not used in this program) and reads back a 12-bit word from the A/D converter. This word is the mantissa from the previous conversion, and must be saved. A second control word, described in Table IV, is then loaded into the accumulator and instruction 6537 (octal) executed. This initiates a sample, and transfers a 12-bit "mantissa descriptor" to the accumulator. Completion of A/D conversion sets a flag. Execution of instruction 6533 while this flag is set will clear the flag and cause the next instruction to be skipped.

Decoding of this mantissa requires that the mantissa be treated as a positive binary fraction, with the radix point at the left of the most significant bit. The "mantissa descriptor" must then be decoded to determine how many zeroes are to be inserted between the radix point and the most significant mantissa bit. A "mantissa descriptor" that is all zeroes indicates the mantissa expressed as a fraction is correct. For a non-zero descriptor, the descriptor should be shifted left, counting the number of shifts until a one is shifted out of the descriptor. This number of zeroes should be inserted between the radix point and the most significant mantissa bit. The resultant fraction can then be used as a fraction of full scale voltage. For example, a mantissa of 3213 (octal) and a descriptor of 0000 would yield a binary fraction of .011010001011 of full scale, while a mantissa of 3213 (octal) and a descriptor of 2000 (octal) would represent a binary fraction of .00011010001011 of full scale.

The interface contains two sets of DAC's, with each set containing three channels. Each channel has a 0- +5 volt output range, with a resolution of 5 mv. The output data word for these DAC's has a 10-bit mantissa in the most significant bits, with the two least significant bits selecting the output channel. To send an analog signal from the computer, the data word is put in the accumulator, then instruction 6065 for set 1 or 6075 for set 2 executed. The use of each DAC channel by this program is shown in Table V.

TABLE IV

MSB BIT	CH1	W	L8	L4	CH2	CH3	CH4	
	0	1	2	3	4	5	6	7
<u>Bit</u>	<u>Function</u>							
0-CH1	Enable Analog Input Channel 1							
1-W	Do not start conversion until 40 msec clock pulse.							
3-L8	Do not integrate more than 8 msec.							
4-L4	Do not integrate more than 4 msec (requires Bit 3-L8 to be set).							
5-CH2	Enable Analog Channel 2.							
6-CH3	Enable Analog Channel 3							
7-CH4	Enable Analog Channel 4							

Restrictions

1. Only one of bits 0, 4, 5, 6 should be set.
2. To limit integration time to 4 msec, both bits 3 and 4 should be set.

TABLE V

<u>Channel (Bits 10, 11)</u>	<u>IOT</u>	<u>Function</u>
00	6065	F <sub>N2</sub> , Y Channel of X-Y Plotter
01	6065	Volume, X Channel of X-Y Plotter
10	6065	Sent to Amplifier with a Gain of 2, then to DVM.
00	6075	To Spirometer Valve Driver 0000 - Open Valve 7770 - Close Valve
01	6075	To X-Y Plotter Pen Control , 000i Pen Down 7771 - Pen Up

---


A special interface was constructed to allow control of external devices and to condition analog signals. It is represented schematically in Figures 4 and 5. This interface contains a solenoid driver to allow the computer to control the spirometer dump valve, a power source for the potentiometer on the spirometer, a buffer amplifier for the spirometer potentiometer, and an amplifier with a gain of 2 to boost 0 to +5 volt DAC output for display on a 0 to +10V meter.

#### PROGRAM

The computer program for system control, data acquisition, and data analysis consists of a group of six modules, four of which operate on a central data buffer, one for mass spectrometer calibration, and one idle loop, as shown in Appendix I-1. On initiation, the program resets various flags and I/O receivers, opens the spirometer valve, and enters an idle state waiting for another module to be called by an unsolicited control key-in. This loop is also entered at the completion of other modules. Modules called by recognized key-ins are summarized in Table VI.

The calibration routine samples the mass spectrometer nitrogen analog output every 40 msec. The sampled datum is then converted to percent, and stored. In addition, the concentration is scaled and output on the DAC for display on the digital volt meter (DVM), with 10V corresponding to 100% nitrogen. A P key-in will cause a type out of the most recently sampled nitrogen fraction. Rapid calibration of the mass spectrometer is possible by sampling gas of known nitrogen content. Either an S or CTRL S key-in will terminate this routine.

ORIGINAL PAGE IS  
OF POOR QUALITY

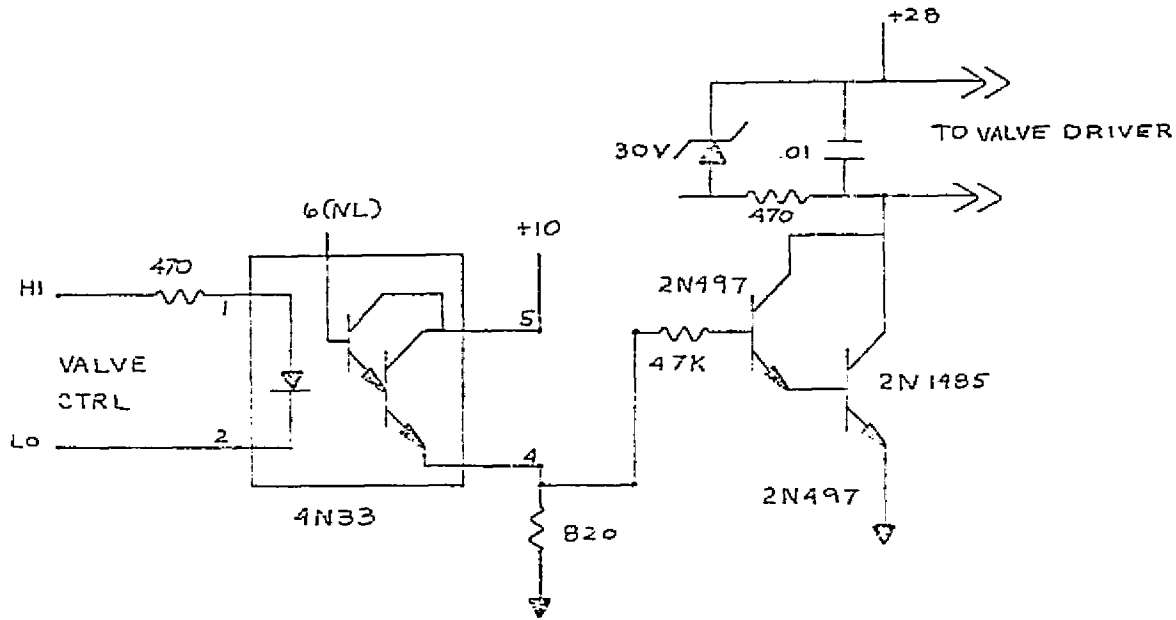

PDP-8 PFT INTERFACE



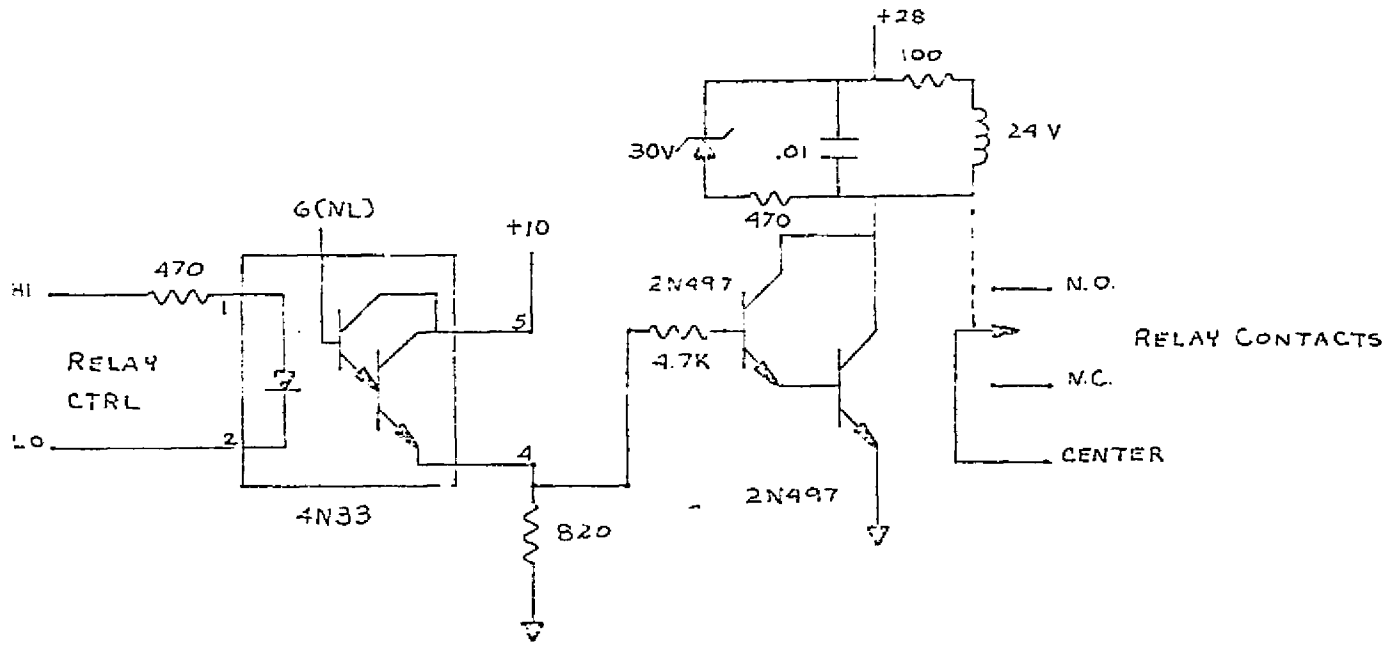


Figure 4

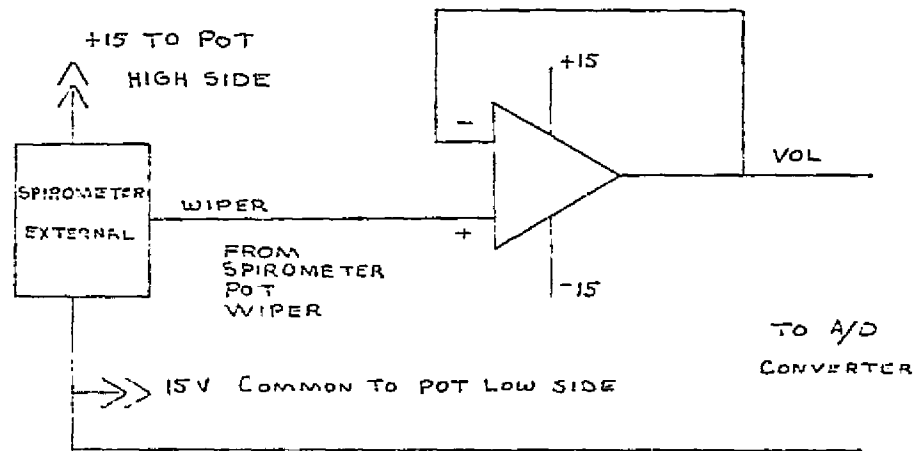

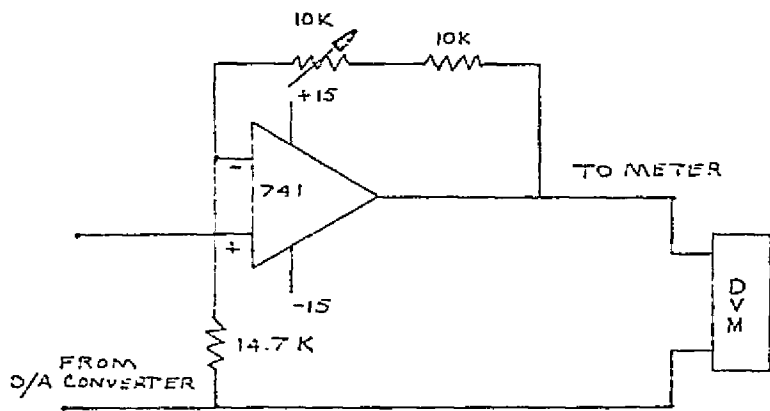

PFT INTERFACE

ORIGINAL PAGE IS  
OF POOR QUALITY

Figure 5

TABLE VI

<u>Key-In</u>	<u>Module Called</u>
CTRL C	Calibration
CTRL I	Initialize, Clear Data Buffer
CTRL F	Forced Vital Capacity
CTRL W	Nitrogen Washout
CTRL R	Report Data
CTRL S	Stop Whatever Module is in Progress. Begin Idle

The four other modules of this program all operate on a central data buffer. The initialization module sets the entire data buffer to zero.

The forced vital capacity module monitors a single breath, from the point of maximal inhalation to maximal exhalation. On initiation, this routine closes the spirometer valve and begins sampling spirometer displacement (volume) every 40 msec. Data are not saved until a sample above a threshold (120 millivolts) is detected, indicating the beginning of a breath. Each sample is then saved sequentially until there is no increase in volume for 0.5 second, signifying the end of the maneuver. At this time, the valve is opened and analysis begun. First, the sampled data are scanned and the maximum spirometer displacement found. This value is converted to liters BTPS and stored in the data buffer as FVC. Then, the sample occurring 1 second after the start of the maneuver is extracted, converted to liters BTPS, and stored in the buffer as FEV<sub>1</sub>. Next, elapsed time values for one-quarter and three-quarters of FVC are found. The time between two points is determined by the number of samples between them and the fixed sampling rate of 40 msec/sample. MMFR is

calculated by dividing 0.5 FVC by the time between 0.25 FVC and 0.75 FVC. The above procedure is then repeated for 0.2 liters and 1.2 liters of the FVC to permit calculation of MEFR. The routine then exits to the idle state.

The nitrogen washout routine incorporates two separate procedures into one subject activity. As described earlier, the subject places the mouthpiece in his mouth, exhales completely to residual volume; inhales  $O_2$  to full inspiratory capacity from an oxygen demand regulator, and again exhales completely. The subject then breathes normally until the procedure is completed, inhaling oxygen, and then exhaling into the spirometer.

The first analysis procedure requires waveform analysis of the instantaneous nitrogen concentration at the mouth versus volume exhaled for the first exhalation after 100% oxygen inhalation. The second procedure requires calculating the total volume of nitrogen exhaled during 100% oxygen breathing, and then calculating residual volume by nitrogen dilution.

Both procedures involve operations on data pairs of nitrogen concentration and volume. A potential problem exists when using instantaneous gas concentration and volume data pairs. Any gas analyzer has a delay time required for the gas sample to pass through the sample catheter to the analysis chamber and then be analyzed as evidenced by an analog output. Because of this delay, analog data at the mass spectrometer output represent gas concentrations which were sampled in the past. The time delay is relatively constant for a given mass spectrometer, but can vary from a few milliseconds to seconds, depending on such considerations as catheter length, sample flow rate, inlet rate and electrometer rise time. To avoid a problem in this program, volume and nitrogen are sampled every 40 msec. The volume sample is used by a spirometer control subroutine but is not used with

the corresponding nitrogen sample for calculations. Instead, it is placed at the end of a First In, Last Out Queue, and a volume sample taken from the other end of the queue. This effectively delays the volume signal by a time of  $N \cdot SI$ , where  $N$  is the queue length and  $SI$  is the sampling interval, resulting in data pairs which are phased in time. The mass spectrometer used in this experiment had a total delay time of approximately 500 msec, so a queue of length 12 was used, resulting in a 480 msec delay.

Upon entry, the module begins monitoring volume/nitrogen data pairs as described above. No computations are done until after the first end of breath is sensed by monitoring spirometer position as in the FVC module. Because the subject breathes ambient air before the first test maneuver, nitrogen concentration at the mouth following the end of his first exhalation can be used as the nitrogen concentration in his lungs. This nitrogen concentration is stored for later use in calculating residual volume. After this initial exhalation of ambient air, no calculations are performed until the next exhalation which is the first one following oxygen inspiration from RV to TLC. All volume/nitrogen concentration data pairs for this exhalation are stored for later analysis.

After the subject begins inhaling 100% oxygen, it is necessary to compute the total amount of nitrogen exhaled. This accumulation is initiated by the same logic that initiates storing of all data samples for a breath waveform. The spirometer control subroutine returns a spirometer displacement of 0 liters unless an exhalation is occurring. Thus, for any 40 msec time period, volume exhaled during the period is simply the difference in a volume sample and the previous volume sample. A negative difference occurs at the end of a breath, when the spirometer begins returning volume values of 0 liters and is treated as zero volume difference. The volume of nitrogen exhaled during a 40 msec period is then computed by multiplying that volume difference by the properly phased

nitrogen concentration. These 40 msec nitrogen volumes are accumulated from initiation until the end of the washout. The criterion for ending the washout is the occurrence of two successive breaths with maximum nitrogen fractions less than 0.02. To preclude terminating the test prematurely, these two successive breaths must also occur at least 2.75 minutes after the washout begins.

After criteria for washout termination have been met, analysis of the collected data begins with analysis of the first exhalation after oxygen inhalation. The volume array is scanned and the maximum volume located, converted to BTPS liters and stored as Vital Capacity (VC). Then volume/nitrogen fraction pairs corresponding to 0.75 liters and 1.25 liters are found. The nitrogen fraction sampled at 0.75 liters is subtracted from the nitrogen fraction at 1.25 liters, and the difference stored as N<sub>2</sub> delta, or the slope of the alveolar plateau. Next, volumes 1.5 liters and 2.5 liters less than the vital capacity are found. A linear regression routine computes the best straight line expressing nitrogen concentration as a function of volume in this one liter volume. The line is extrapolated toward residual volume to locate the last volume/nitrogen fraction pair for which sampled nitrogen fraction is less than nitrogen fraction computed from the linear regression curve using the corresponding volume. The volume from this pair is subtracted from vital capacity and the difference stored as closing volume. The single-breath data pairs are plotted on an X-Y plotter as nitrogen concentration versus volume.

Residual volume is computed using a nitrogen dilution technique implemented with the following formula.

$$RV = \frac{V_{N_2} - .0312 T}{F_{N_2}(\text{init}) - F_{N_2}(\text{final})} - 0.2$$

$V_{N_2}$  = Total volume of nitrogen exhaled during the washout.

$.0312 T$  = Amount of nitrogen washed out of blood and tissues.  
T is time in minutes.

$F_{N_2}$  (init) = Initial alveolar nitrogen concentration.

$F_{N_2}$  (final) = Alveolar nitrogen concentration after washout.

Because of the small amount of core memory available, it was necessary to use two approximations in deriving this formula from traditional equations. The factor,  $.0312 T$ , is traditionally a correction factor based on subject body surface area and time of washout. A mean body surface area for the expected subject group is used with actual time of washout to determine the volume of nitrogen washed out of the tissues. The constant, 0.2 liters, is an approximation of anatomical dead space.

The report module computes secondary data from data in the data buffer. Results of all measurements are then printed on the teletype. An example of this output superimposed on a single-breath plot is shown in Figure 6.

## IMPROVEMENTS

Implementation of this system on a different computer would allow certain improvements to be realized. The PDP 8-1 used in this system was designed in the mid-1960's, and is quite large by current standards. By using a current minicomputer, the size and power requirements for the computer could be reduced by 80%, with no loss in capability. By using a different A/D conversion system, analog signals could be sampled at a higher rate. This would allow better definition of flow rates and the single-breath washout curve. Extra memory for program storage and a higher sampling rate would also allow additional measurements such as dead space computation and plotting of flow-volume loops.

50

RV +1.59 LITERS BTPS  
 N2 DELTA+ +.24 %  
 CV +.75 LITERS BTPS  
 VA/RV +15.8  
 VC +5.98 LITERS BTPS  
 TLC + 7.5 LITERS BTPS  
 FVC +5.71 LITERS BTPS  
 FEV1 +4.53 LITERS BTPS  
 FEV1/FVC +79.3 %  
 FVC/VC +95.4 %  
 MEFR + 9.7 BTPS LITERS/SEC  
 MMFR + 3.9 BTPS LITERS/SEC  
 CV/VC +13.1 %  
 CC/TLC +31.4 %

SINGLE BREATH O<sub>2</sub> WASHOUT OF PULMONARY N<sub>2</sub>

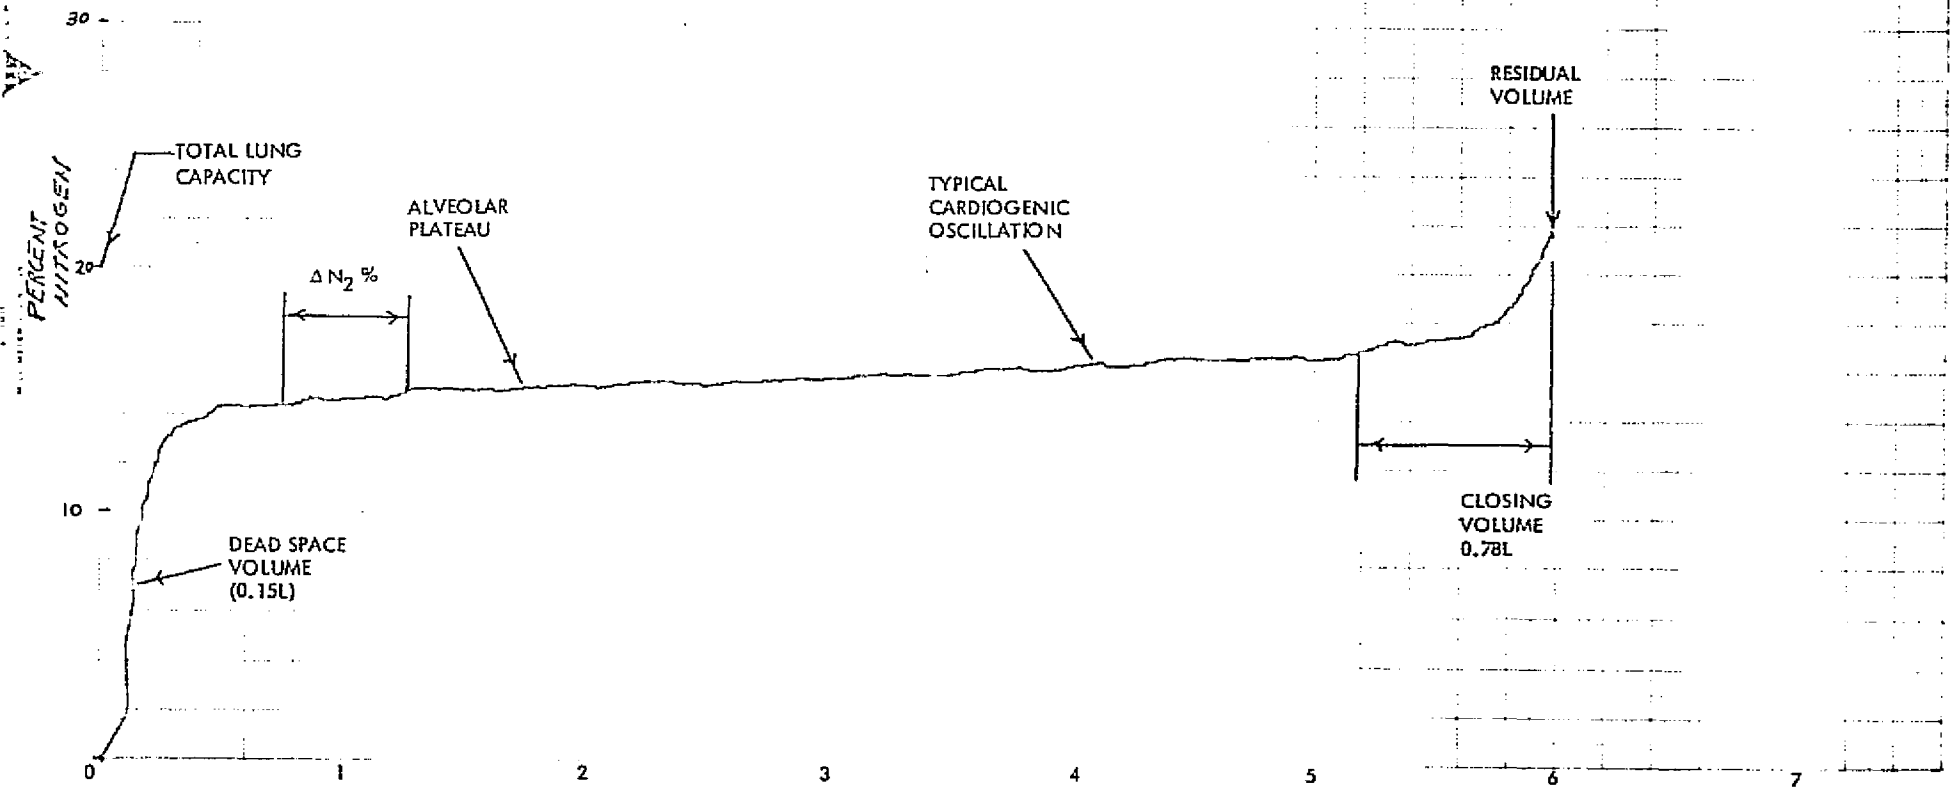



Figure 6 - Expired Volume - L, BTPS

APPENDIX I  
Program Flow Charts




ORIGINAL PAGE IS  
OF POOR QUALITY


22

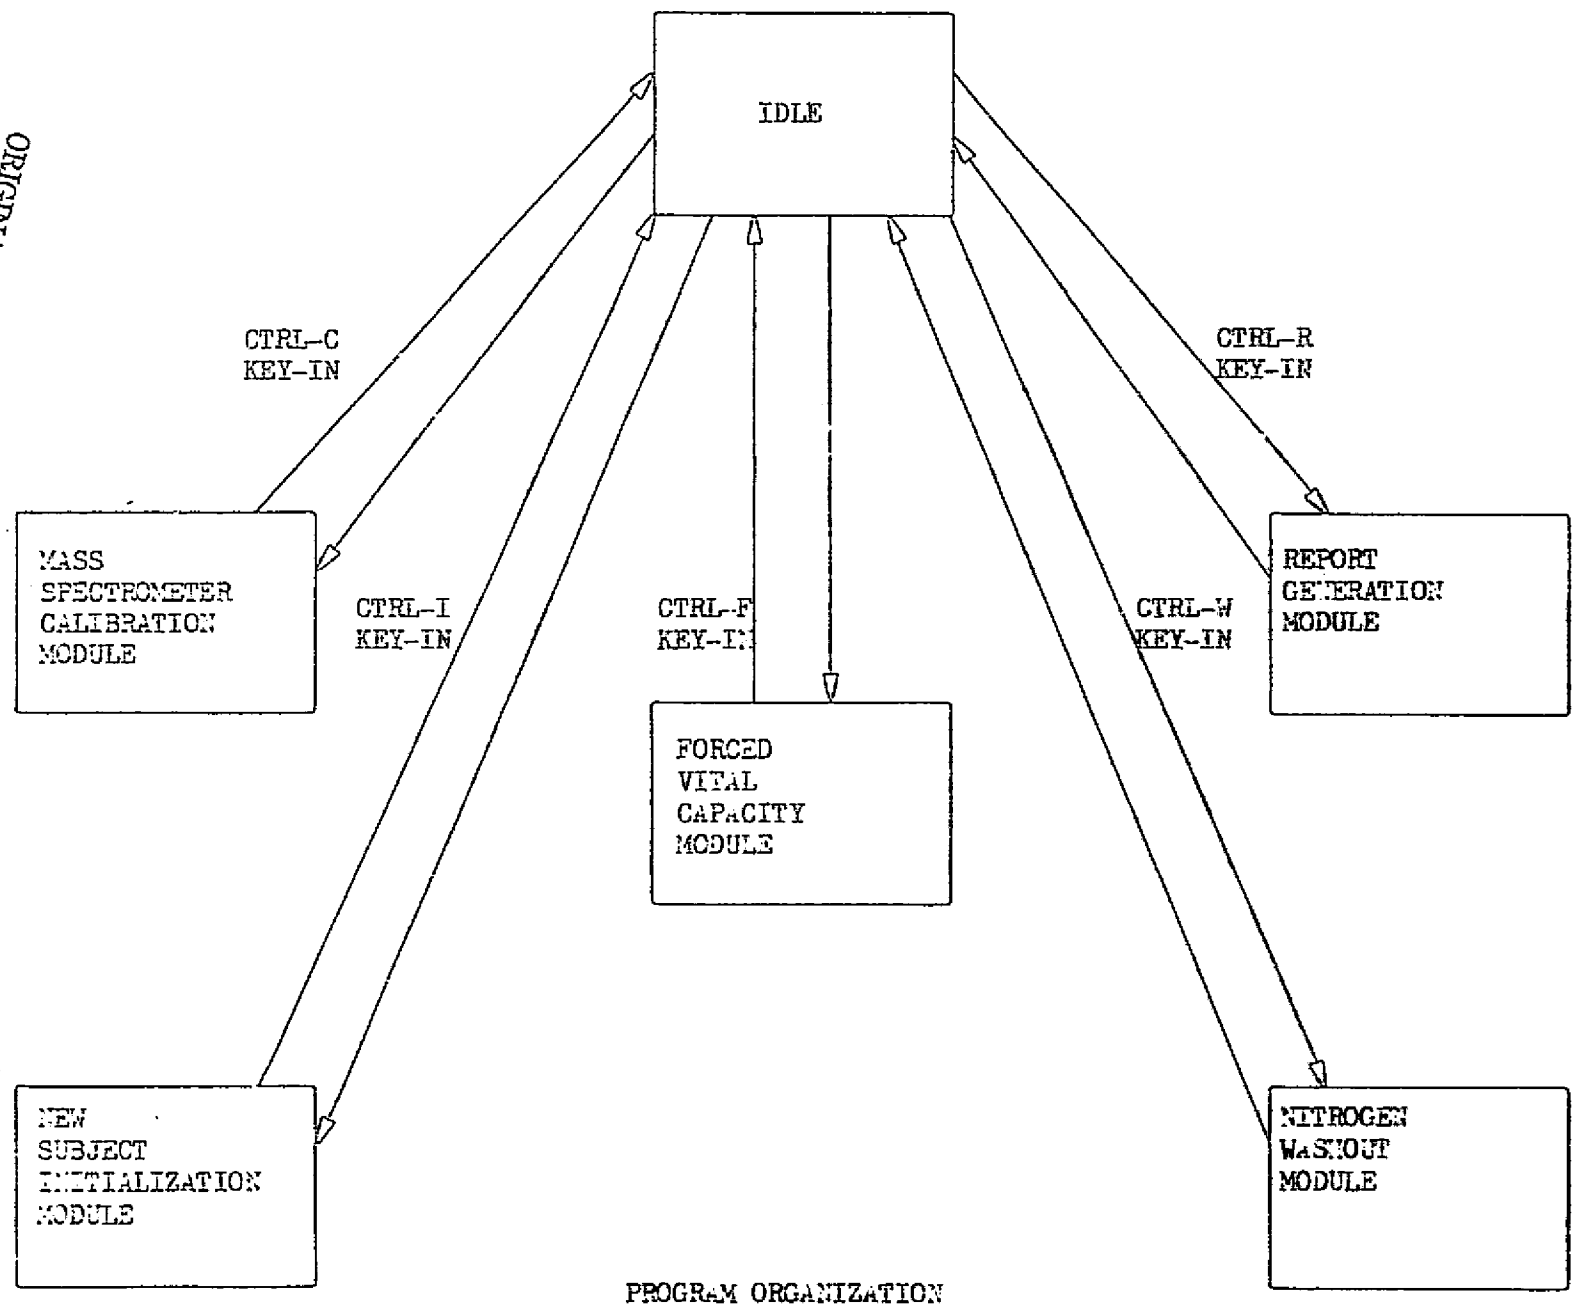

PROGRAM ORGANIZATION

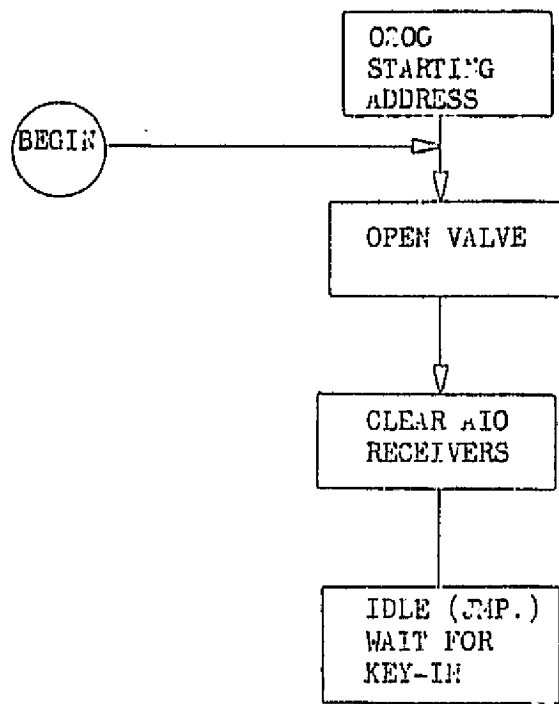


IDLE MODULE

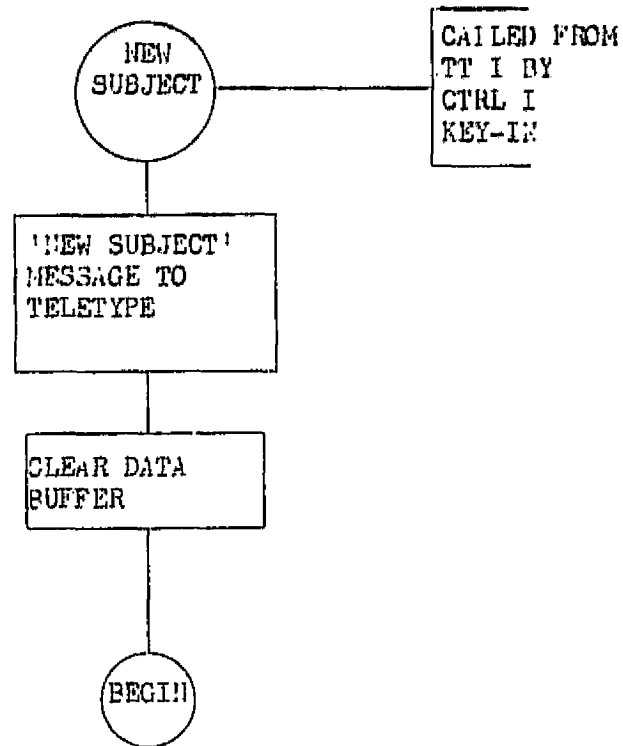


NEW SUBJECT INITIALIZATION MODULE

ORIGINAL PAGE IS  
OF POOR QUALITY

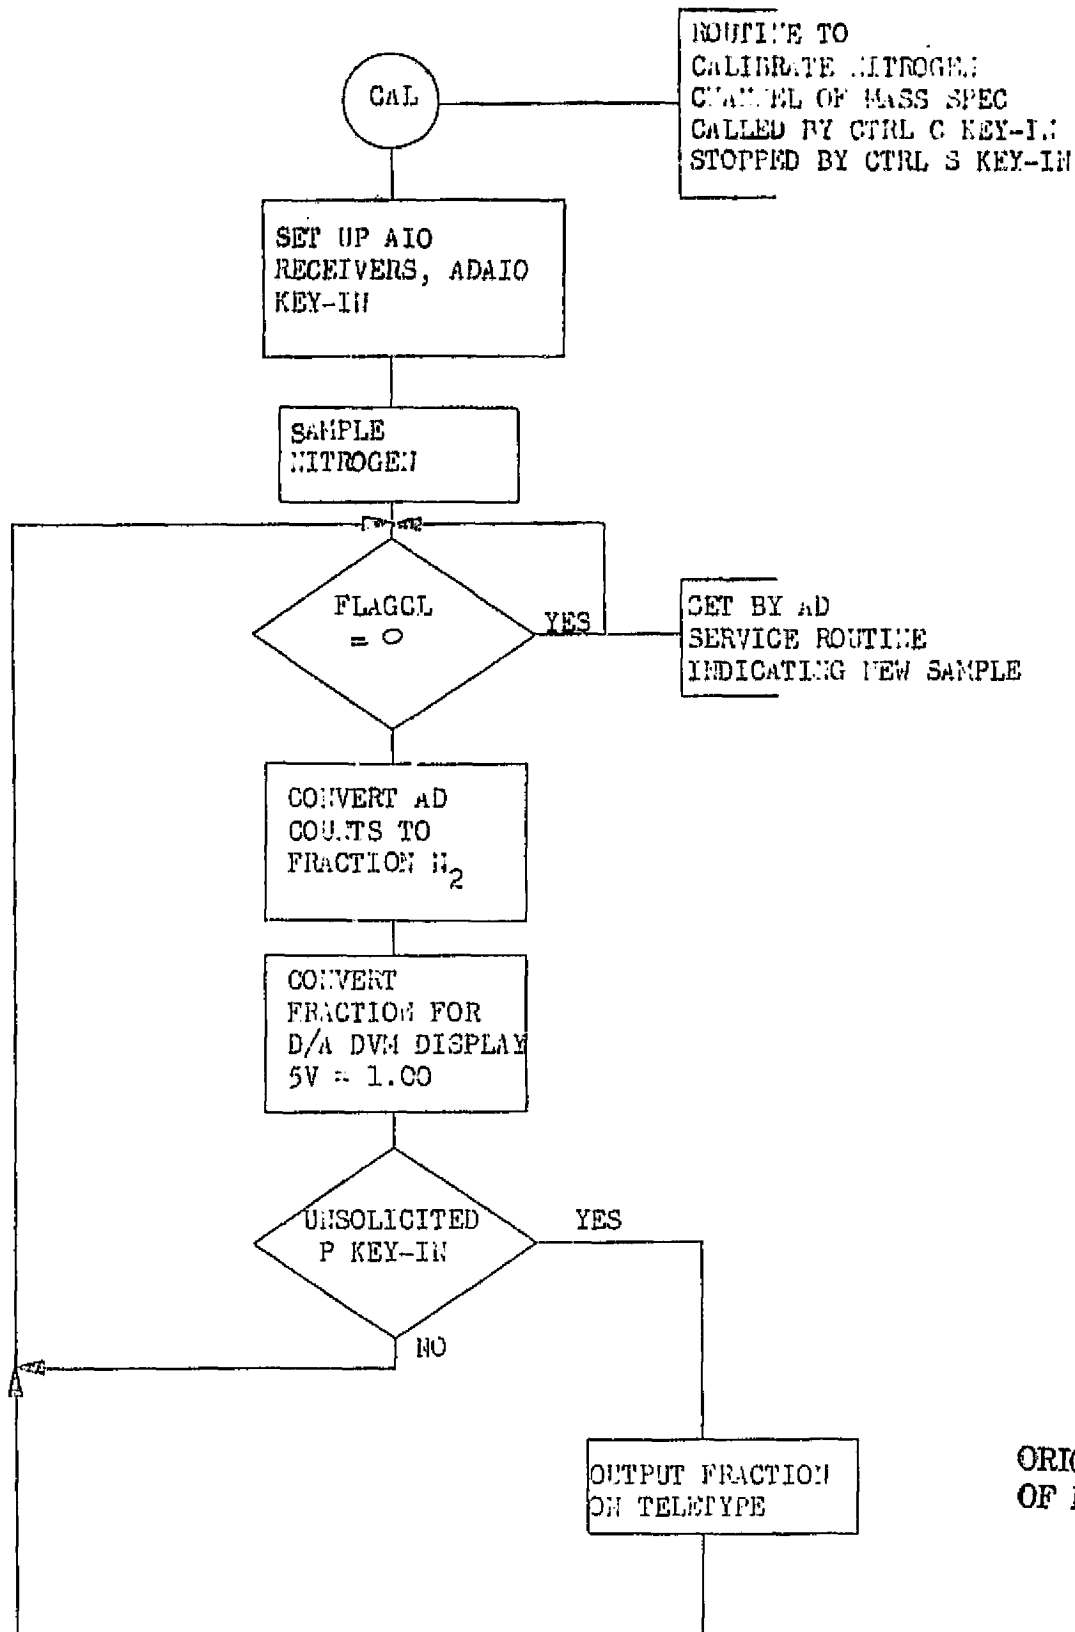



ORIGINAL PAGE IS OF POOR QUALITY

MASS SPECTROMETER CALIBRATION MODULE

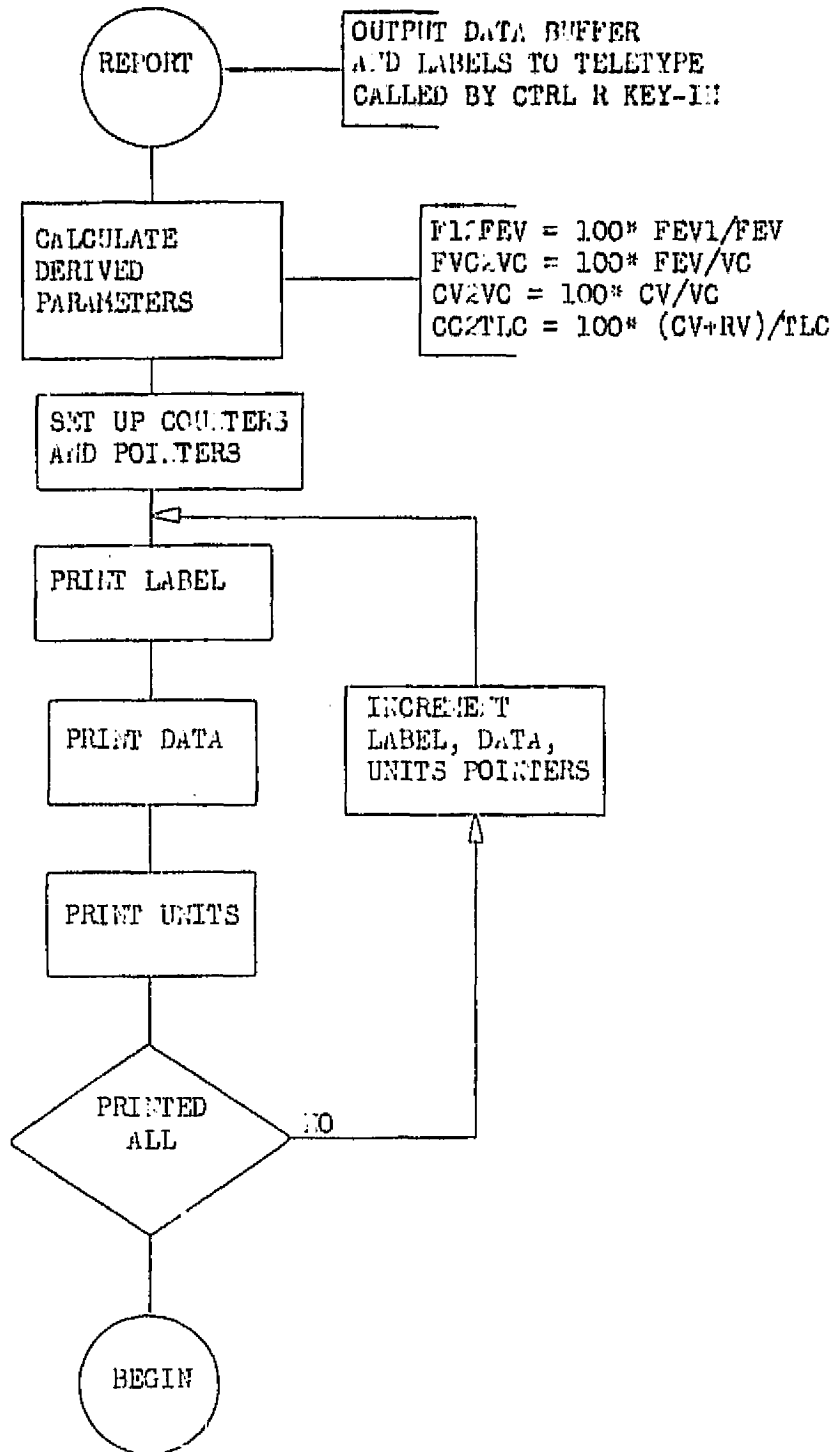


REPORT GENERATION MODULE

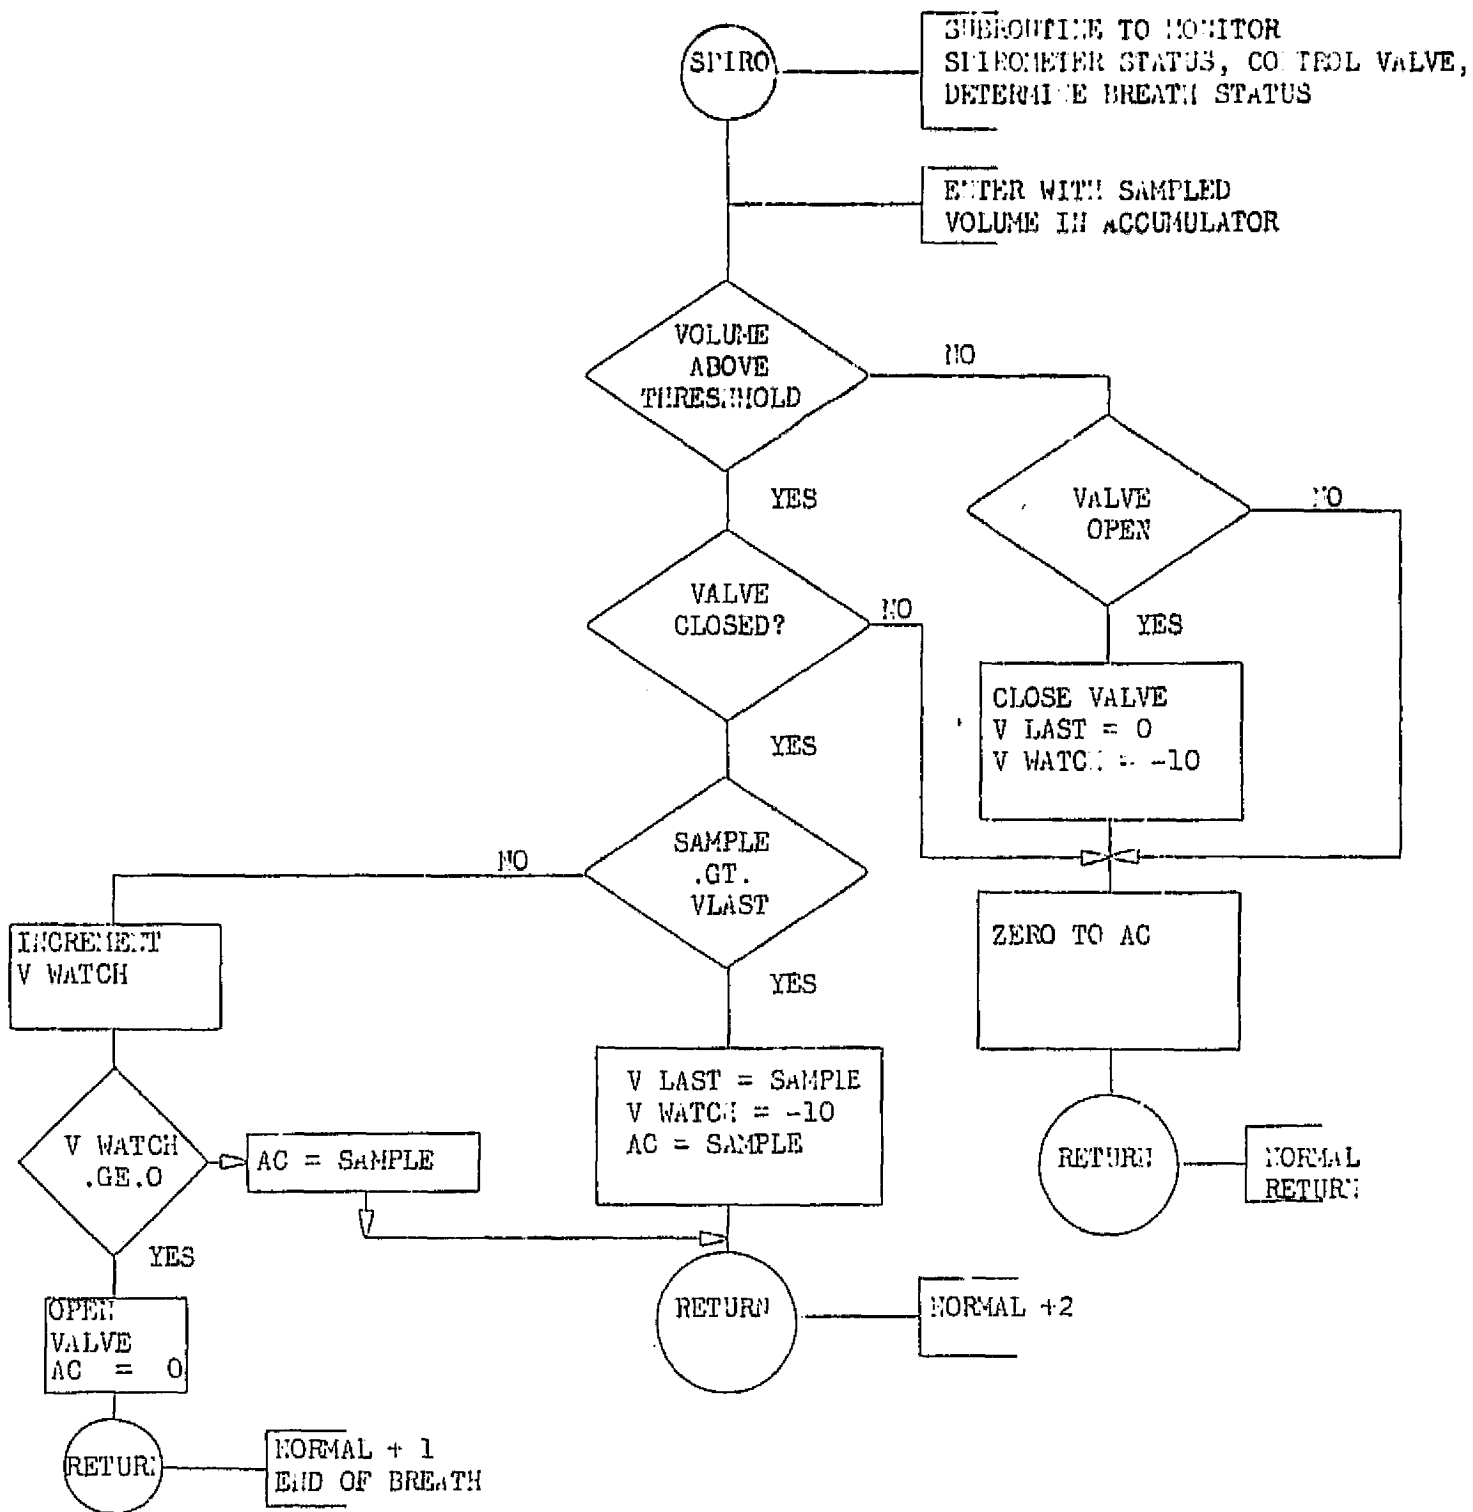


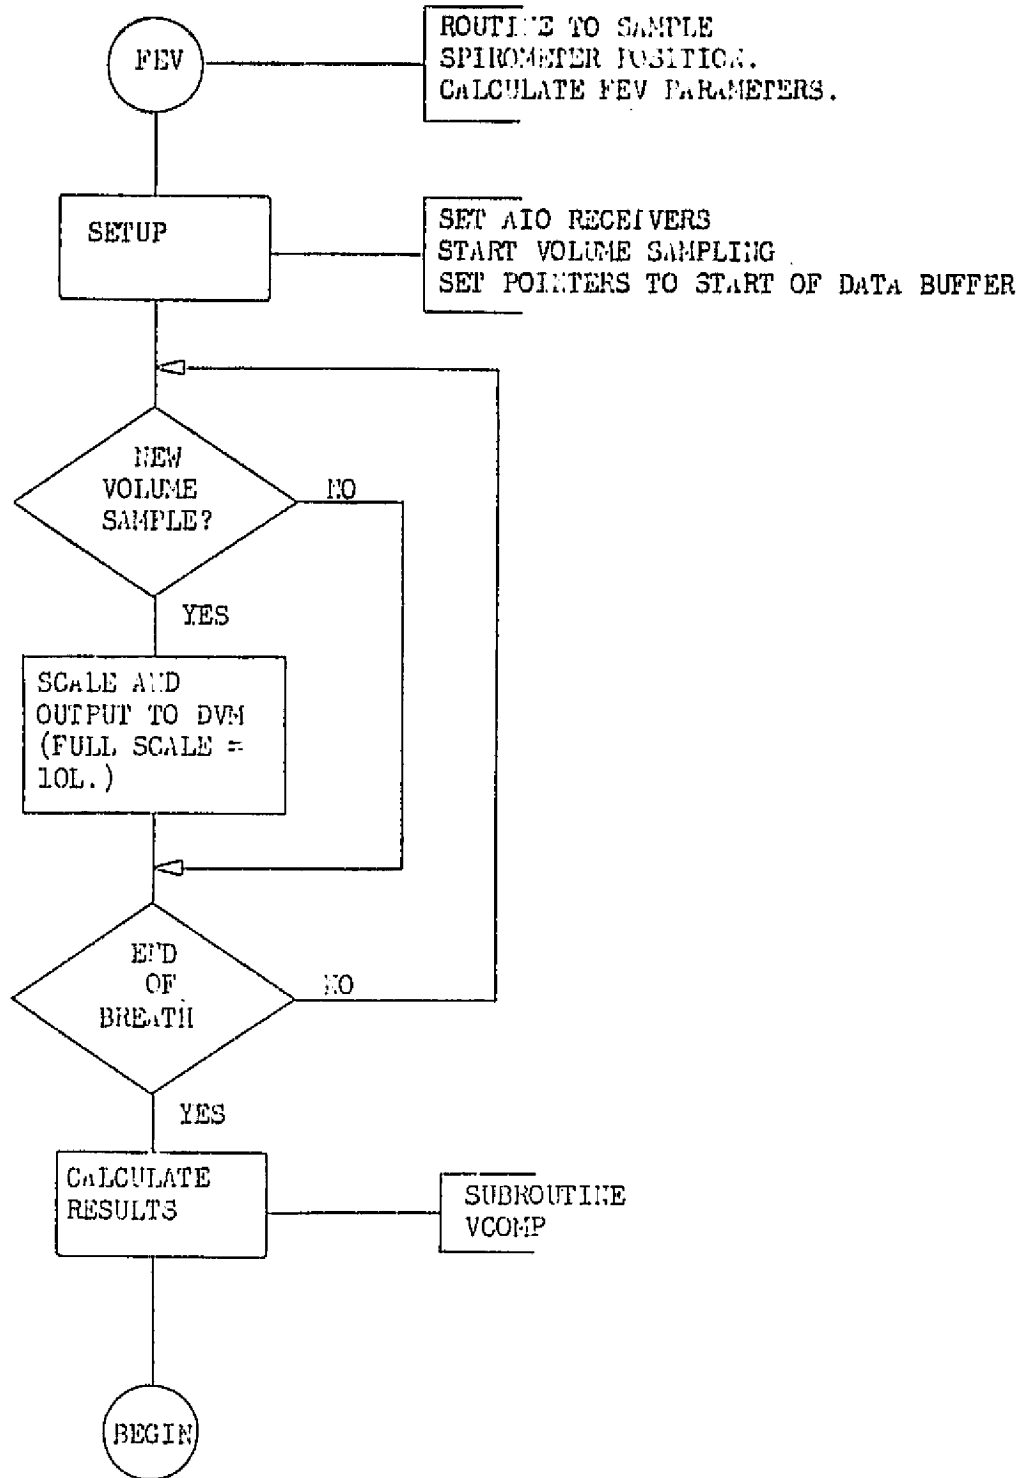


FORCED VITAL CAPACITY MODULE

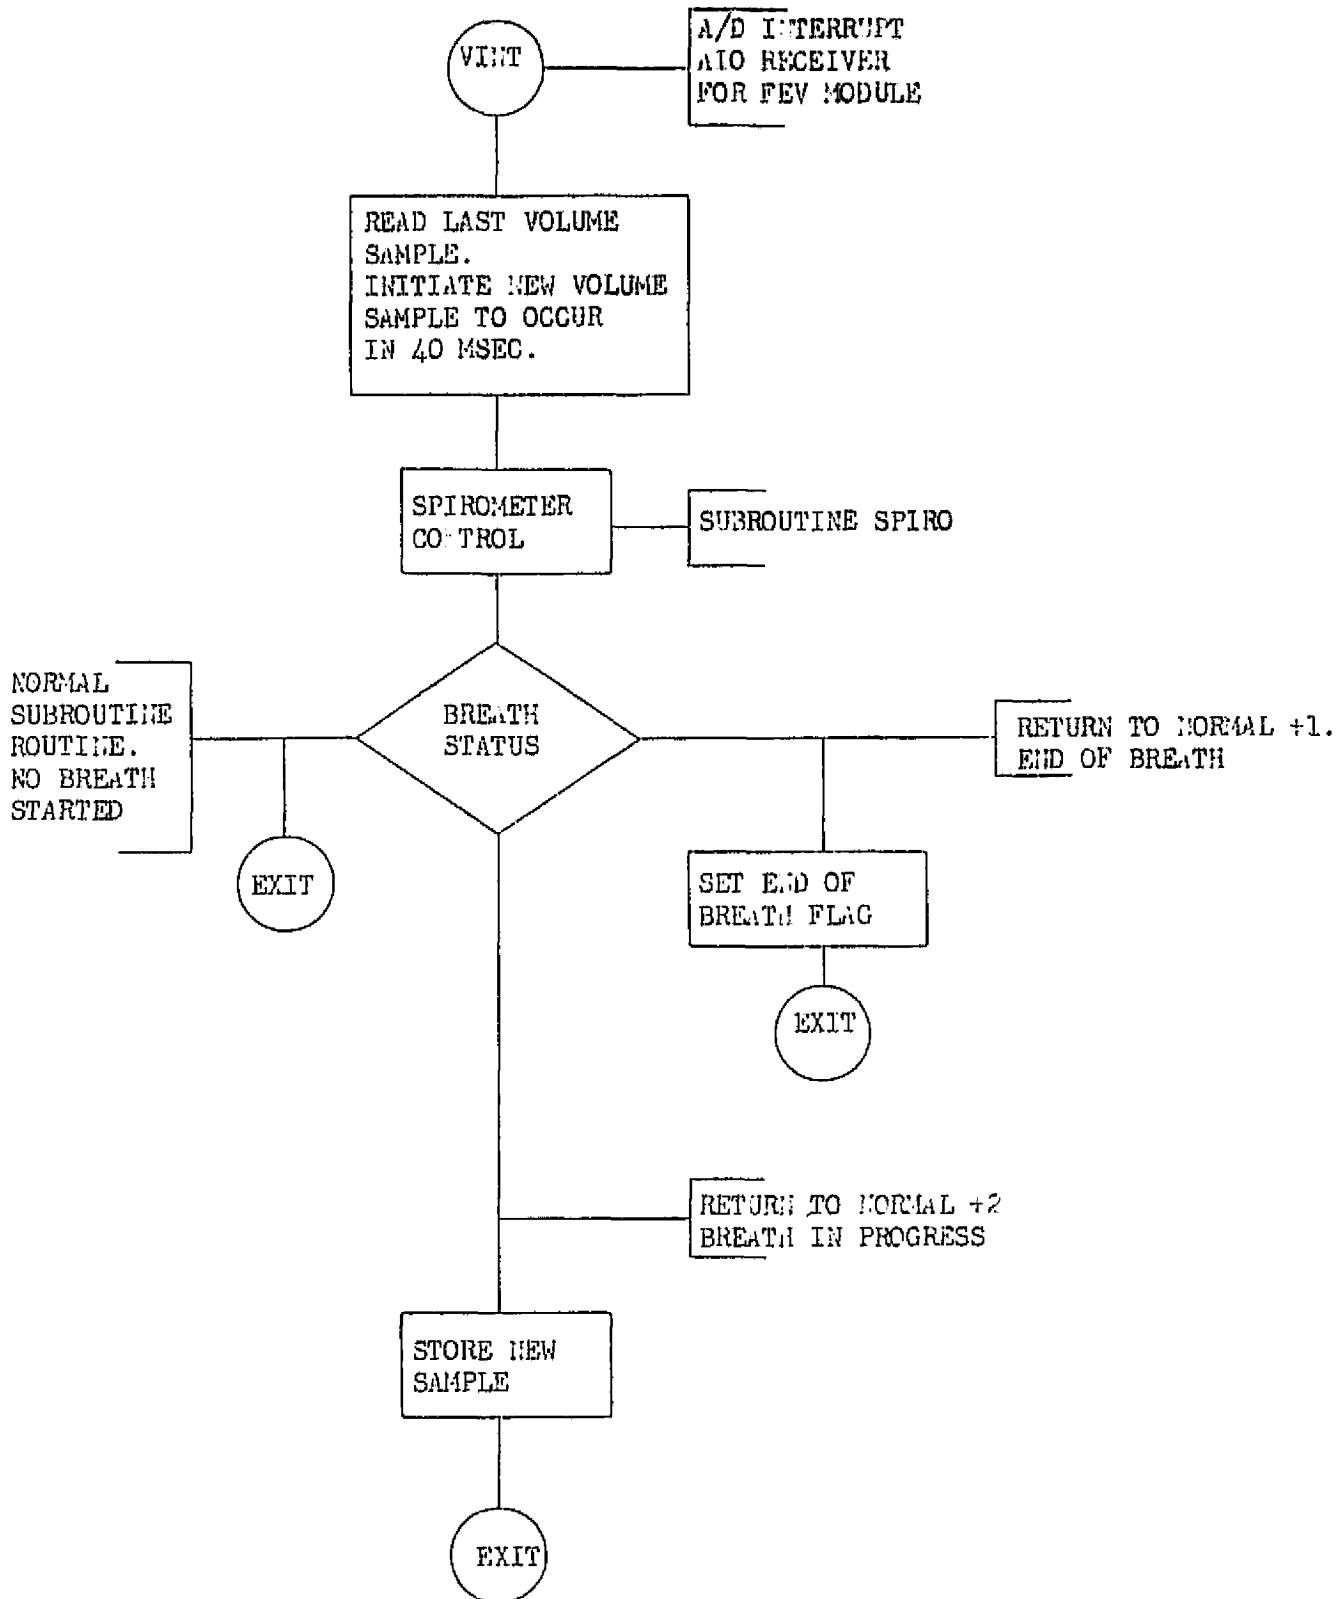




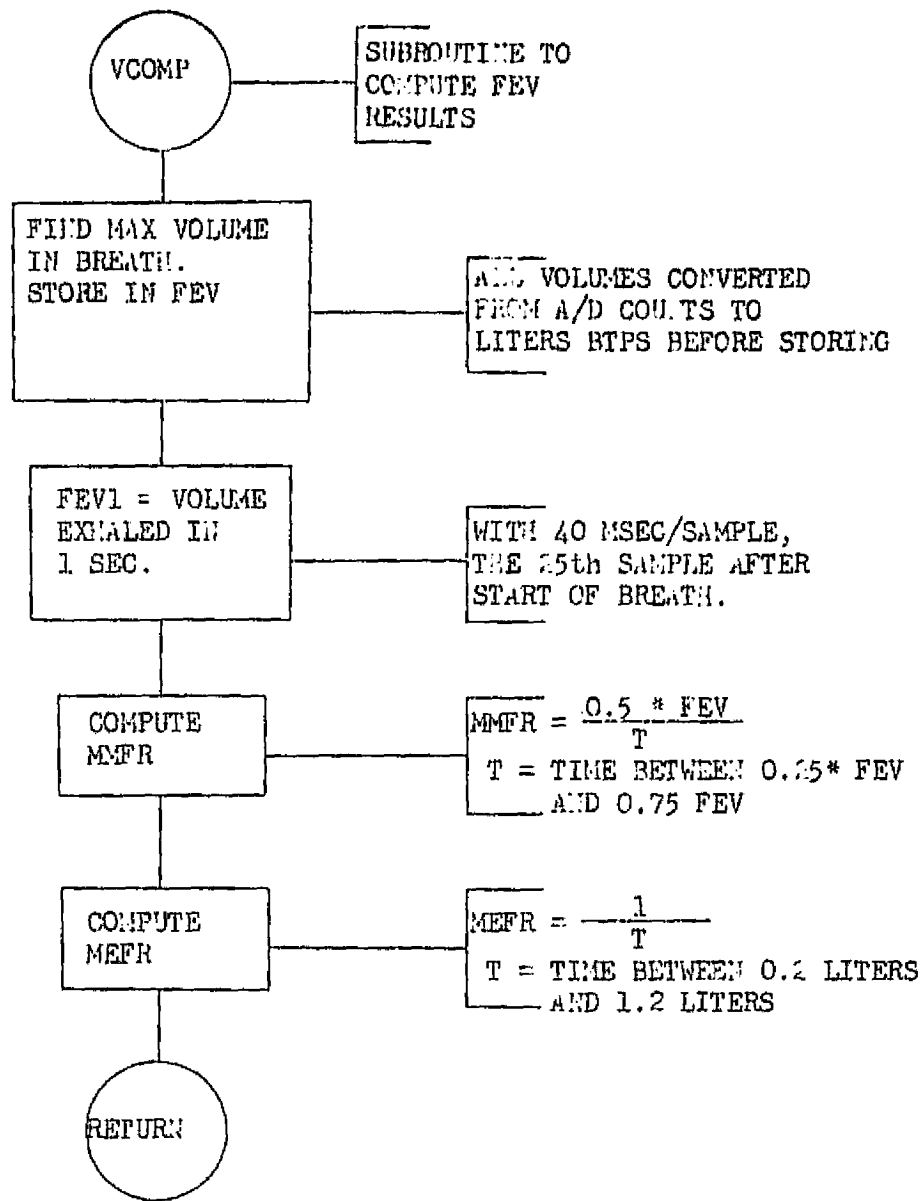


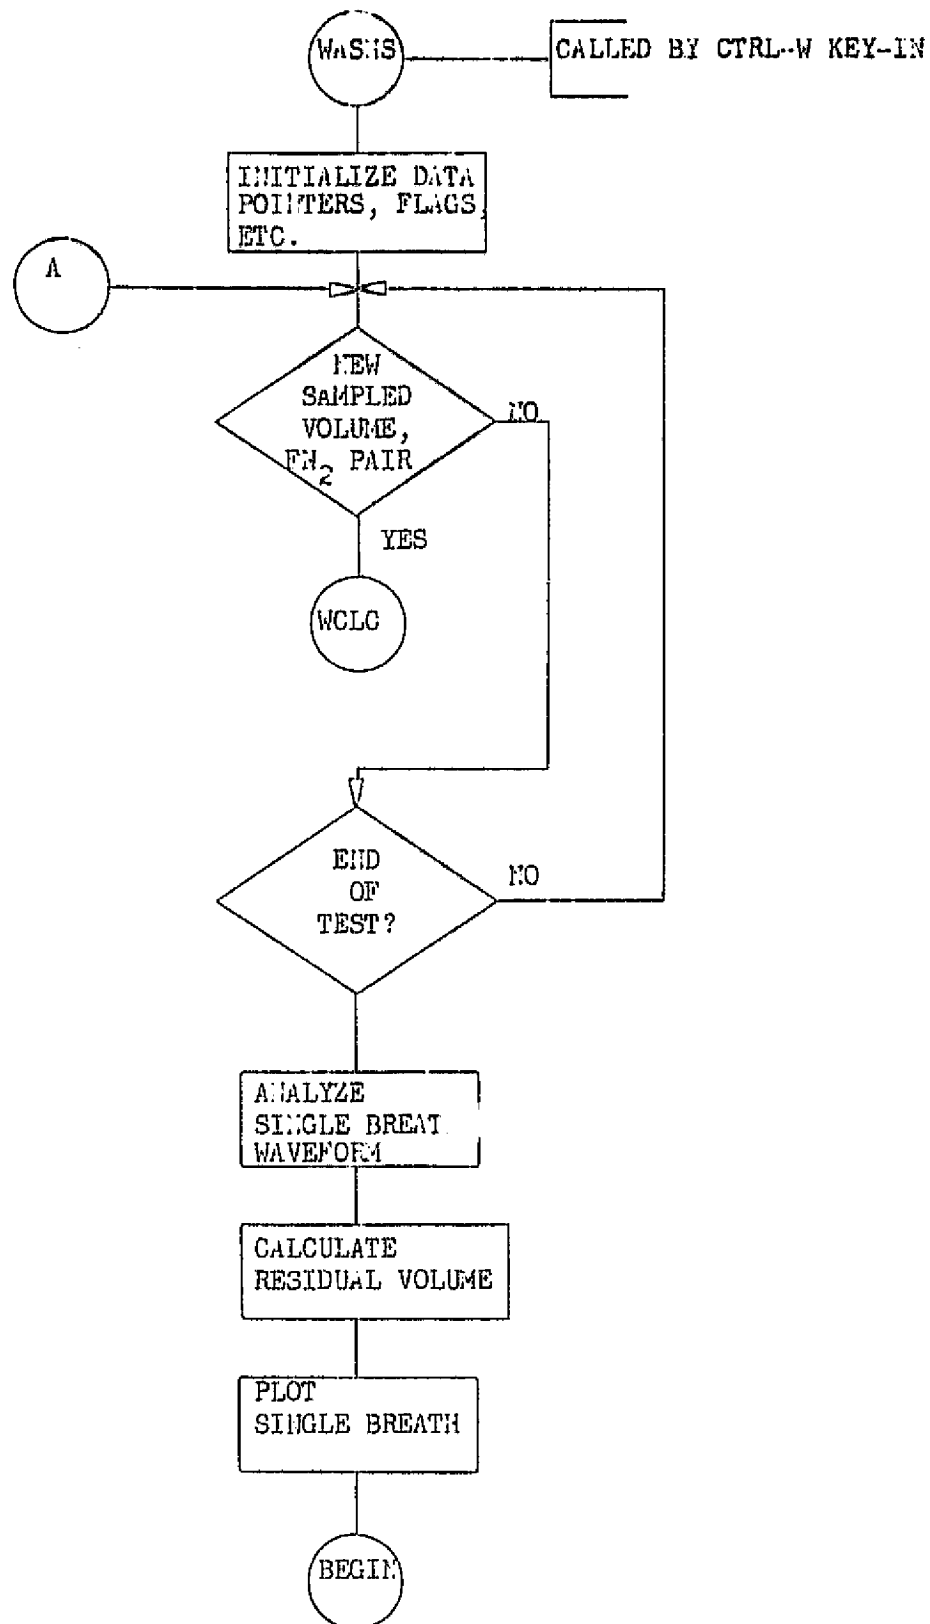


NITROGEN WASHOUT MODULE

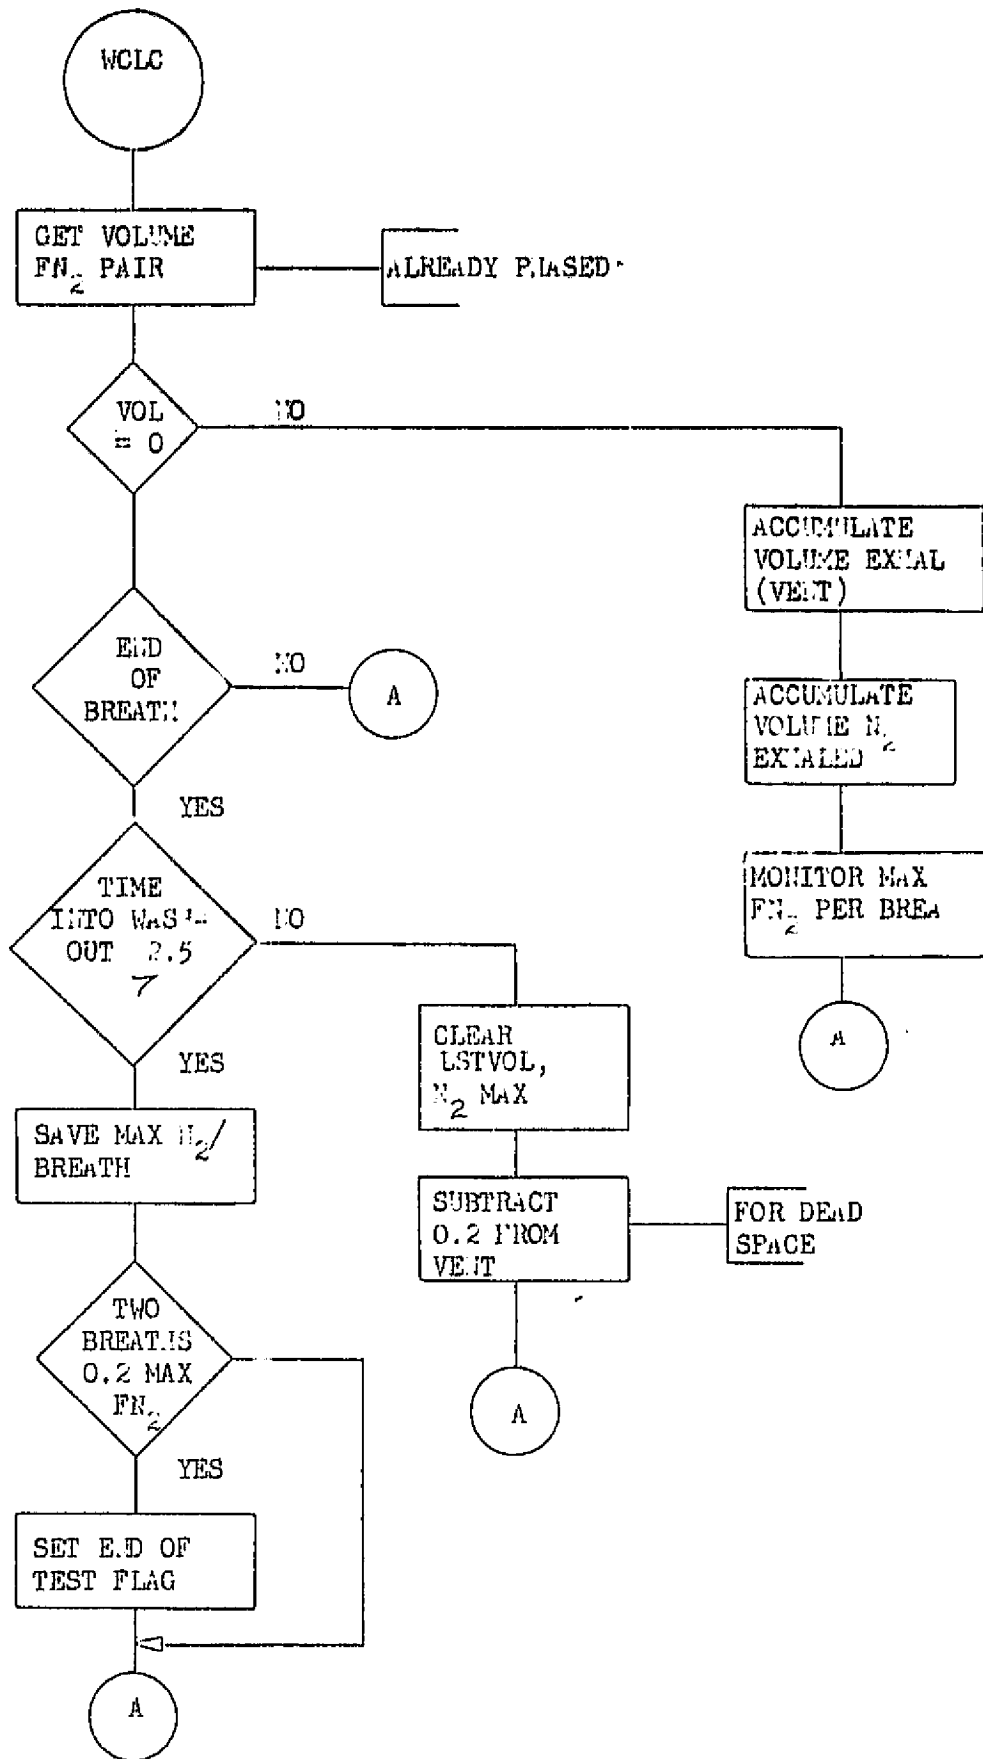


ORIGINAL PAGE IS OF POOR QUALITY

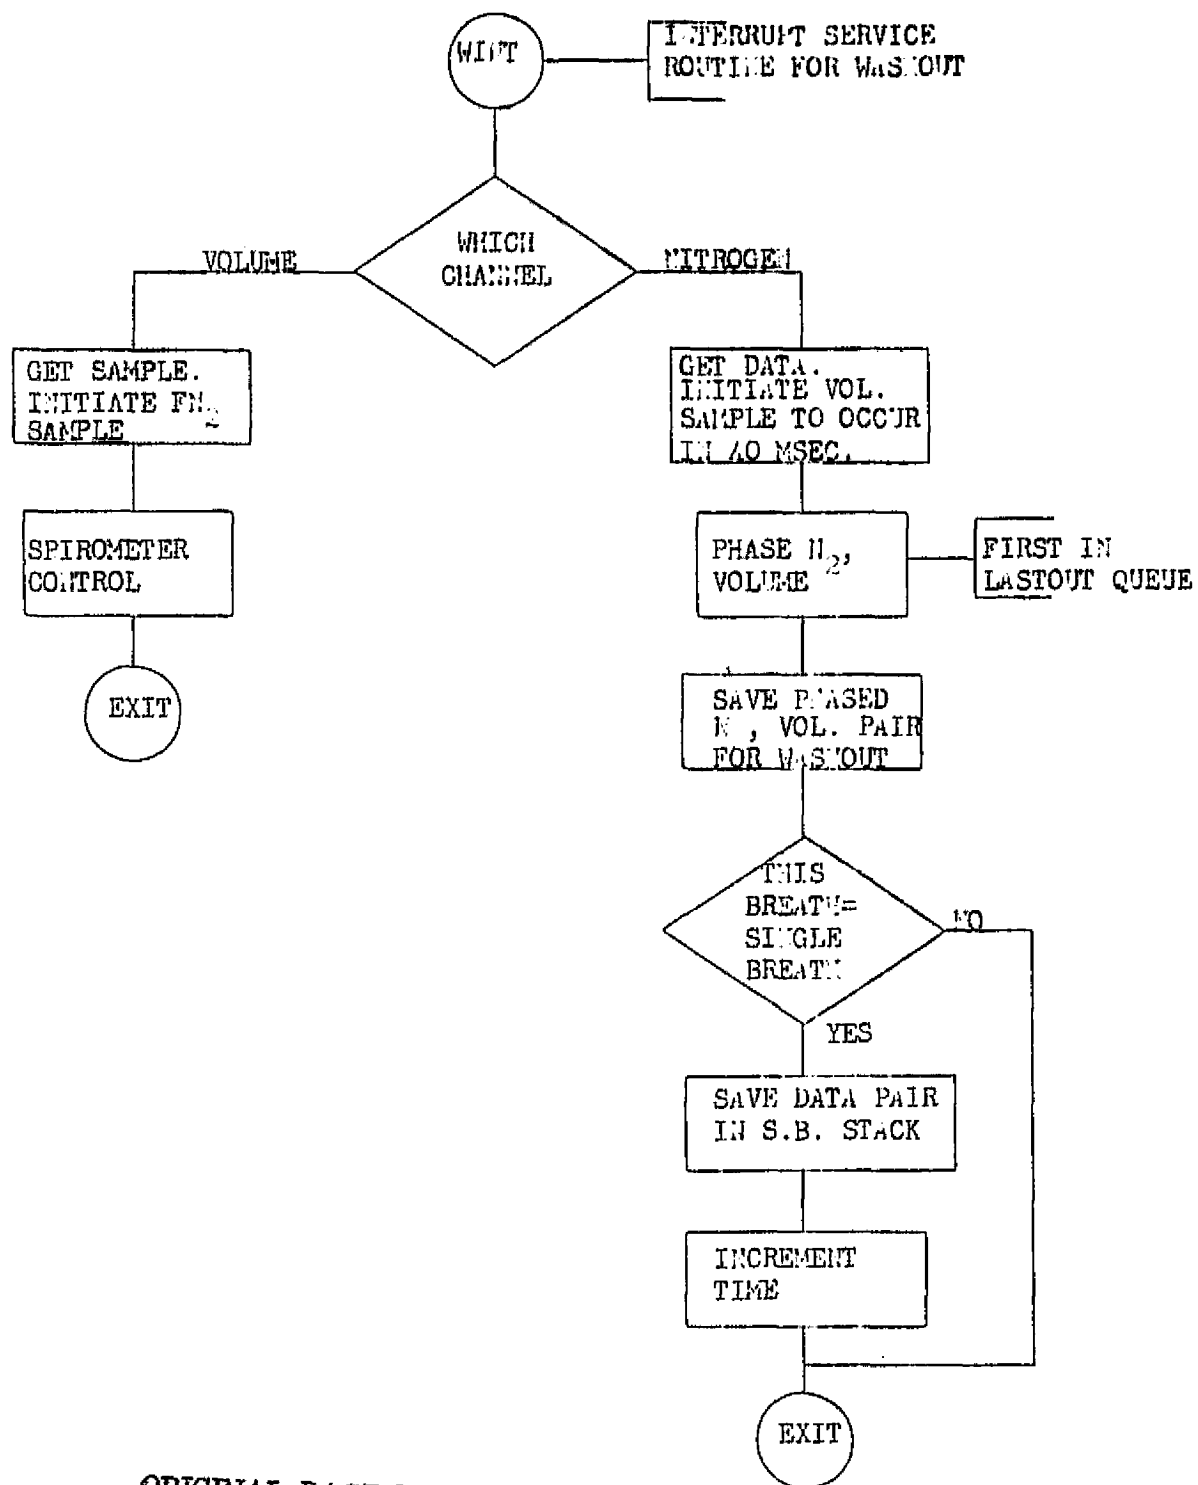

ORIGINAL PAGE IS  
OF POOR QUALITY

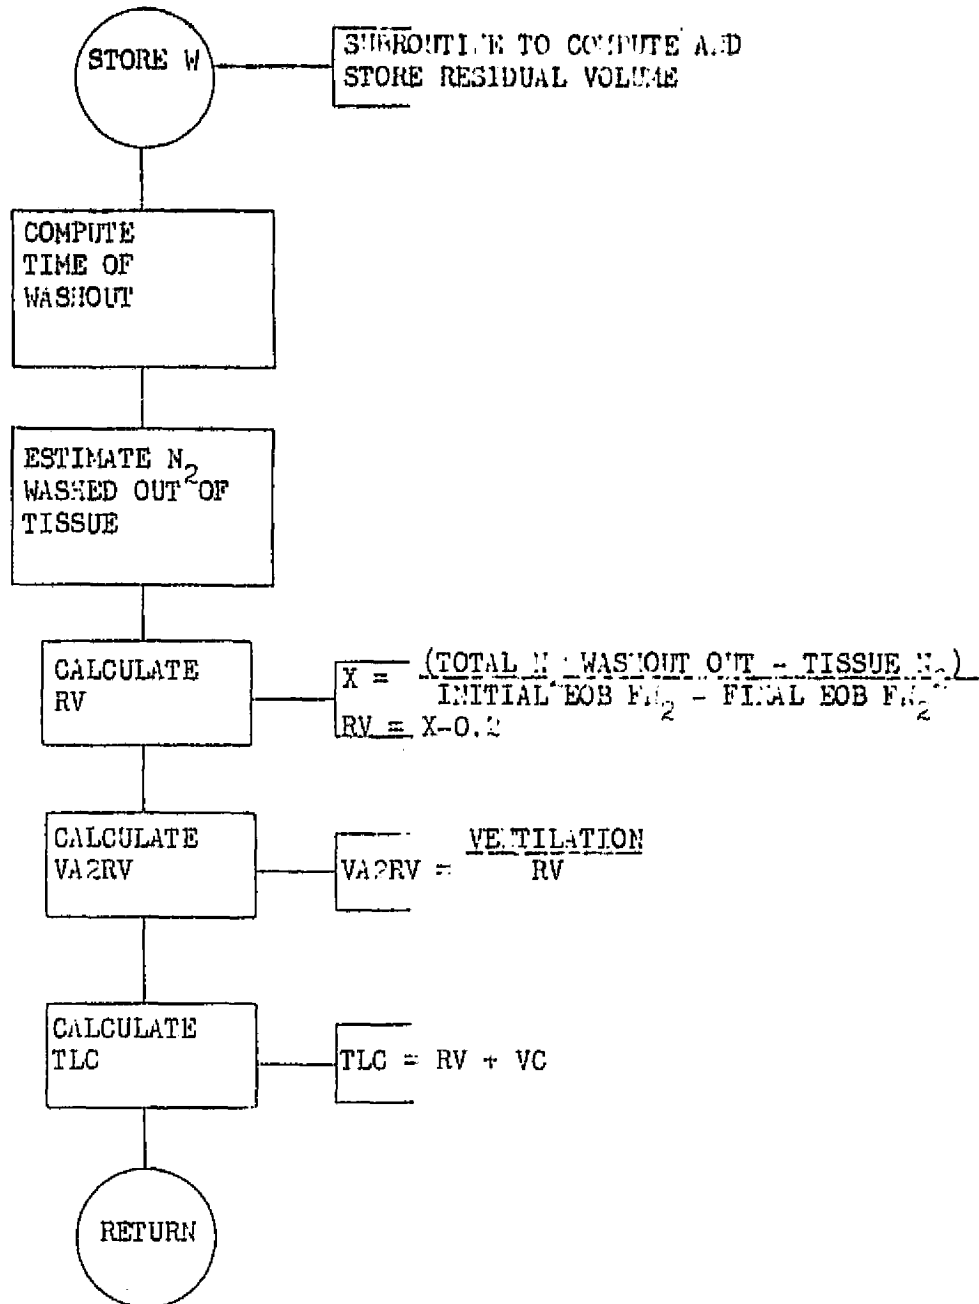

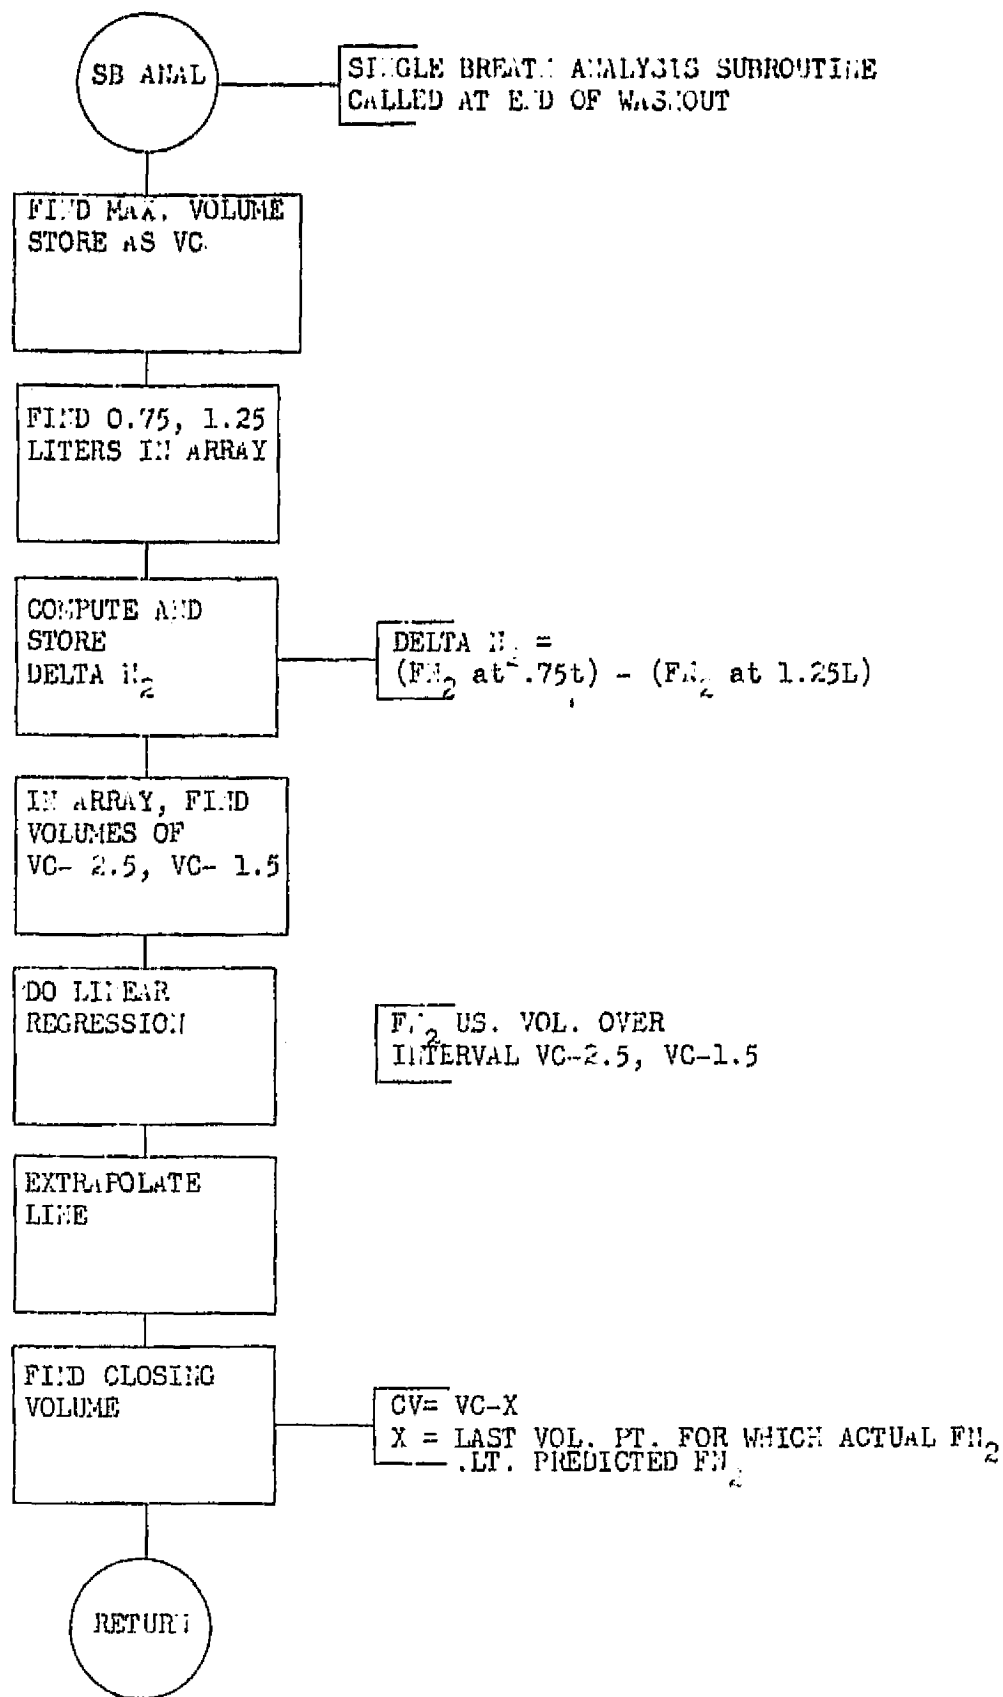

APPENDIX II  
Operating Instructions

Q (DISPLAY XLSF\$1-001

) + )

1-001

DATE 9/25/74

PULMONARY FUNCTION

PREPARATION

- OBS
1. Contact STDN to verify GM2, G02, CAL GAS, & VACUUM PUMP are ON
  2. INTERFACE PANEL:  
POWER SW - ON  
DVM - counter fluctuating
  3. OXYGEN REGULATOR:  
SUPPLY SW - ON  
SUPPLY 100% OXYGEN SW - 100% OXYGEN (verify)  
FLOW SW - NORMAL (verify)  
OXYGEN SUPPLY PRESSURE ind -  $200 \pm 25$  PSIA (verify)

CAUTION

Follow next steps in exact order or Mass Spectrometer may vent and preclude proper experiment operation

4. RESPIRATORY MONITORING ANALYZER:  
BYPASS LINE vlv (red handled vlv on left) - open (90 deg CW)  
INLET CAPILLARY vlv (red handled vlv on right) - open (90 deg CW)  
ANALYZER POWER SW - ON  
AMPLIFIER POWER SW - ON  
CATHETER SELECT SW - INLET B  
ANODE CURRENT ADJUST cont - CW till meter reads approximately 9-10 microamps anode current
5. After 30 min warmup period:  
Turn on Video  
ION PUMP CURRENT - 200-250 microamps (verify)

PROCESSING

ORIGINAL PAGE IS OF POOR QUALITY



1-002

DATE 9/23/74

6. XY PLOTTER:
  - POWER SW - ON (red lt - on)
  - Place chart paper to lower left of chart bed
  - Remove cap from XY Plotter pen
  - CHART SW - ON (amber lt - on)
  - SERVO SW - ON (amber lt - on)
7. COMPUTER:
  - POWER SW (key lock) - ON
8. Go to PROGRAM LOADING INSTRUCTIONS on page 1-5
9. TTY:
  - Depress CNTL key and then C key (maintaining CNTL key depressed)
  - XY plotter drives to Y = 50% M2 and X = 7 Liters Volume
- RESPIRATORY MONITORING ANALYZER:
  - Sample calibration gas with known FN2 using catheter A (red lt - on)
- Note: FN2 of present CAL GAS is  $0.8610 \pm 0.002$ 
  - RANGE CURRENT ADJUST cont - adjust until cal gas FN2 is observed on INTERFACE PANEL DVM and/or on TTY after depressing the P key
  - CATHETER SELECT SW - INLET B (green lt - on)
10. Remove blue and gold respiratory hoses from storage and attach blue hose to OXYSE - CAREFULLY quick disconnect and gold hose to EXHALATION HOSE quick disconnect. Attach other ends of hoses to yiv assembly. Attach Mass Spectrometer to yiv assembly. Attach respiratory yiv with O2 using TEST MASK position on O2 regulator

1-003

DATE 9/23/74

SUBJ 11. Sit in front of RESPIRATORY VLV  
ASSEMBLY

12. Washout Test

OBS

TTY:

Depress CNTL key and then I key  
(maintaining CNTL key depressed)  
Depress CNTL key and then W key  
(maintaining CNTL key depressed)

SUBJ

Place nose clamp on  
Inspire room air, hold breath, then  
place mouthpiece in MOUTH and seal  
lips over mouthpiece  
Exhale slowly to Residual Volume (RV),  
inspire Vital Capacity (VC) of  
oxygen and again exhale to RV (10-  
15 sec)  
Following initial maneuver, relax and  
breathe normally until washout is  
complete. Washout is complete when  
XY Plotter automatically plots out  
single breath washout test. Care-  
fully remove Ross Spectrometer Cap-  
alliance. Disconnect blue hoses &  
VLV assembly and stop

13. Forced Vital Capacity Test

OBS

TTY:

Depress CNTL key and then F key  
(maintaining CNTL key depressed)  
Place FVC hose and cardboard mouth-  
piece on apparatus

SUBJ

Wet cardboard mouthpiece with tongue.  
Hold mouthpiece hose assembly to  
side of mouth, inspire VC of ambient  
air, normally hold breath, seal  
lips on mouthpiece, then forcibly  
exhale to RV. Both flow and volume  
should be at maximum effort

DATE 10/02/74

1-004

OBS 14. Print\_Report

TTY:  
Depress CNTL key and then R key  
(Maintaining CNTL key depressed)  
Annotate printout with name of subject  
and date  
Turn off Video

POWERDOWN

- OBS
1. TTY:  
Slide TTY into storage position
  2. XY PLOTTER:  
SERVO SW - OFF  
POWER SW - OFF  
Put cap back on XY Plotter pen
  3. RESPIRATORY MONITORING ANALYZER:  
ANODE CURRENT ADJUST cont - 0  
CATHETER SELECT SW - REMOTE  
AMPLIFIER POWER SW - OFF  
ANALYZER POWER SW - OFF  
INLET CAPILLARY VIV (red handled  
VIV on right) - close (90 deg CW)  
BYPASS LINE VIV (red handled VIV on  
left) - close (90 deg CW)
  4. OXYGEN REGULATOR:  
SUPPLY SW - OFF
  5. INTERFACE PANEL:  
POWER SW - OFF
  6. Contact STON to verify O2, GN2, CAL  
GAS, & vacuum pump are off
  7. Clean washout valve and mouthpiece with  
sterile wipe and ston
  8. stow FVC hose, discard cardboard mouth-  
piece and debris of experiment

\*\*\* Command completed. \*\*\*

ORIGINAL PAGE IS  
OF POOR QUALITY

1-005

DATE 9/23/74

PROGRAM LOADING INSTRUCTIONS

Nominal Startup

NOTE: After nominal shutdown program will still be in memory

1. SING STEP SW - normal (top of SW depressed)
2. SING INST SW - normal (top of SW depressed)
3. Put 200 (000 010 000 000) in SWITCH REGISTER
4. Depress LOAD ADD
5. PROGRAM COUNTER (PC) should contain 200
6. Verify high speed paper tape reader is disengaged (sprocket cover up)
7. Depress START

Program should be functioning correctly (PC holding at 213 - 000 010 001 011)

\* If program is not functioning correct-ly proceed to Loading Binary Tapes procedure below \*

Loading Binary Tapes

NOTE: If BINARY LOADER is in memory, proceed to step 1 below. If BINARY LOADER is not in memory proceed to Loading Binary Loader procedure on page 1-7

1. Put 7777 (111 111 111 111) in SWITCH REGISTER
2. Depress LOAD ADD

ORIGINAL PAGE IS  
OF POOR QUALITY  
41\*

1-006

DATE 9/23/74

3. PROGRAM COUNTER should read 7777<sub>8</sub>
4. Place paper tape floating point package (DIGITAL 8-25-F-BIN, FLOATING PACKAGE 2) in reader, with arrow up, pointing from right to left, sprocket holes over sprucket, and tape leader over read head (leader is the portion of tape with two rows of holes, one at the front side of the tape)
5. Depress START
  - \* If tape does not read to data portion \*
  - \* of tape, depress STOP, LOAD ADD, \*
  - \* then START \*
6. Tape should read to end and reader stop
  - \* If tape does not read, perform Loading \*
  - \* Binary Loader procedure on page 1-7 \*
7. When tape stops, LINK should be illuminated, and all accumulator lights should be out
  - \* If not, a parity error occurred. \*
  - \* Start over on step 1 of Loading \*
  - \* Binary Tapes procedure on page 1-5 \*
8. Remove tape from reader
9. Place PFT Program paper tape in reader, with arrow up, pointing from right to left, sprocket holes over sprocket, and tape leader over read head
10. Verify 7777<sub>8</sub> (111 111 111 111) in SWITCH REGISTER

11. Depress LOAD ADD
12. PROGRAM COUNTER should read 7777
13. Depress START
14. Tape should read to end and reader stop
  - \* If tape does not read, perform \*
  - \* Loading Binary Loader procedure \*
  - \* below \*
15. When tape stops, LINK should be illuminated, and all accumulator lights should be out.
  - \* If not, a parity error occurred. \*
  - \* Start over on step 1 of Loading \*
  - \* Binary Tapes procedure on page 1-5\*
16. Remove tape from reader and rewind by hand
17. Proceed to Nominal Startup procedure on page 1-5

#### Loading Binary Loader

NOTE: Loading BINARY LOADER requires depositing and examining data in memory using the panel switches

MEMORY CHECK TO SEE IF RIM LOADER IS IN CORE

1. Put 7756 (111 111 101 110) in SWITCH REGISTER
2. Depress LOAD ADD
3. Verify 7756 in PROGRAM COUNTER

**ORIGINAL PAGE IS  
OF POOR QUALITY**

1-008

DATE 9/23/74

4. Depress EXAM repeatedly and verify the following MEMORY BUFFER (MB) readout sequence. If VERIFY fails, perform TO CHANGE A SINGLE LOCATION procedure on page 1-9

MEMORY BUFFER (MB)

7200 (111 010 000 000)  
6011 (110 000 001 001)  
5357 (101 011 101 111)  
6012 (110 000 001 010)  
7106 (111 001 000 110)  
7006 (111 000 000 110)  
7510 (111 101 001 000)  
5374 (101 011 111 100)  
7006 (111 000 000 110)  
6011 (110 000 001 001)  
5367 (101 011 110 111)  
6012 (110 000 001 010)  
7420 (111 100 010 000)  
3776 (011 111 111 110)  
3376 (011 011 111 110)  
5357 (101 011 101 111)

5. PUT 7755 (111 111 101 110) IN SWITCH REGISTER

ORIGINAL PAGE IS  
OF POOR QUALITY

1-009

DATE 9/23/74

6. Depress LOAD ADD
7. Place BINARY LOADER paper tape in reader, with arrow up, pointing from right to left, sprocket holes over sprocket, and tape leader over read head (leader is the portion of tape with two rows of holes, on at the front side of the tape)
8. Depress START
9. Tape will read completely through
10. Depress STOP
11. Go to Loading Binary Tapes procedure on page 1-5

TO CHANGE A SINGLE LOCATION

1. Put address in SWITCH REGISTER
2. Depress LOAD ADD
3. Put data in SWITCH REGISTER
4. Depress DEP
5. Return to MEMORY CHECK TO SEE IF RIM LOADER IS IN CORE, page 1-7, step 1

TO LOAD ENTIRE RIM LOADER

1. Put 7750 (111 111 101 110) in SWITCH REGISTER
2. Depress LOAD ADD



1-010

DATE 9/23/74

3. In sequence for the following, verify PROGRAM COUNTER is correct, set SWITCH REGISTER to correct value, address 05F

PROGRAM COUNTER	SWITCH REGISTER
7756 (111 111 101 110)	7200 (111 010 000 000)
7757 (111 111 101 111)	6911 (110 000 001 001)
7760 (111 111 110 000)	5357 (101 011 101 111)
7761 (111 111 110 001)	6012 (110 000 001 010)
7762 (111 111 110 010)	7106 (111 001 000 110)
7763 (111 111 110 011)	7006 (111 000 000 110)
7764 (111 111 110 100)	7510 (111 101 001 000)
7765 (111 111 110 101)	5374 (101 011 111 100)
7766 (111 111 110 110)	7006 (111 000 000 110)
7767 (111 111 110 111)	6011 (110 000 001 001)
7770 (111 111 111 000)	5367 (101 011 110 111)
7771 (111 111 111 001)	6012 (110 000 001 010)
7772 (111 111 111 010)	7420 (111 100 010 000)
7773 (111 111 111 011)	3776 (011 111 111 110)
7774 (111 111 111 100)	3376 (011 011 111 110)
7775 (111 111 111 101)	5357 (101 011 101 111)

4. Perform Loading Binary Loader on  
page 1-7

APPENDIX III  
Program Listing

1 /PULMONARY FUNCTION TEST  
 2 /HARDWARE-PDP-8I PERKIN ELMER MASS SPEC. SPIROMETER  
 3 /  
 4 XY PLOTTER.DM1  
 5  
 6  
 7  
 8

9 /  
 10 1000 DEFINE NEW INSTRUCTIONS  
 11 2000 FIXMRI FADD=1000  
 12 3000 FIXMRI FSUB=2000  
 13 3000 FIXMRI FMPY=3000  
 14 4000 FIXMRI FMUL=3000  
 15 5000 FIXMRI FDIV=4000  
 16 6000 FIXMRI FGET=5000  
 17 0000 FIXMRI FPUT=6000  
 18 7000 FEXT=0000  
 19 7000 FNORM=7000  
 20 0000 FEXIT=0000  
 21 6537 SAMPLE=6537  
 22 6065 DAC=6065  
 23 4407 FENTER=4407  
 24 7501 MQA=7501  
 25 7421 MQL=7421  
 26 6075 CTRL=6075  
 27  
 28  
 29  
 30  
 31  
 32  
 33  
 34  
 35  
 36  
 37

38 /DESCRIPTION OF SOME SUBROUTINES  
 39 /CONVRT  
 40 /ENTER WITH MANTISSA IN MQ. EXP(FROM AD)  
 41 /IN AC. RETURNS 12BIT UNSIGNED UMBER  
 42 /IN AC  
 43 /UNPACK  
 44 /ENTER WITH 12 BIT UNSIGNED NUMBER IN AC  
 45 /RETURNS WITH FPAC CONTAINING NORMALIZED  
 46 /FRACTION CORRESPONDING TO AC/4896

PREVIOUS PAGE BLANK NOT FILMED

```

47      EJECT
48      0001
49      00001 5402      *1
50      00002 1000      JMP I ,+1
51      00002 1000      SERVIC
52
53      0005 *5
54      00005 7400      7400
55      00006 7200      7200
56      00007 5600      5600
57
58
59
60      7345 *7345
61      07345 3416      3416
62      07346 5744      5744
63      /PATCH TO FPP FOR OUTPUT
64      /VIA AUTO INDEX REG 16
65      /FOR USE WITH LEAST SQUARES ROUTINE
66      0020 *20
67      00020 0000 N.      0:0:0
68      00021 0000
69      00022 0000
70      00023 0000 EXY.0:0:0
71      00024 0000
72      00025 0000
73      00026 0000 EX.0:0:0
74      00027 0000
75      00028 0000
76      00029 0000 EY.      0:0:0
77      00030 0000
78      00031 0000
79      00032 0000
80      00033 0000
81      00034 0000 EX2.      0:0:0
82      00035 0000
83      00036 0000 *65
84
85      /DEFINE SOME SUBROUTINE CALLS BY MNEMONICS
86
87
88      4465 UNPACK=JMS I .:WD2PLT
89      00065 3144
90      4466 FOUT=JMS I .: FOUTS
91      00066 0213
92      4467 SPIRO=JMS I .:SPIROS
93      00067 0400
94      5470 BEGIN=JMP I .:INIT
95      00070 0200
96      4471 BTPS=JMS I .:BTPSR
97      00071 1732
98      4472 FIX=JMS I .:FIX
99      00072 1536
100     4473 READY=JMS I .:RPTCK
101     00073 0557

```

ORIGINAL PAGE IS  
OF POOR QUALITY

```

02 4474 FLOAT-JMS I :FLTR
03 00074 2152
04 00075 0000 MSG1. 0
05 00076 0000 MSG2. 0
06 00077 0000 MS1PK. 0
07 00100 0000 MS2PK. 0
08
09
10
11 00101 1026 XIPT. MIT
12 00102 1043 FRMSG. TIO+1
13 00103 0000 KEYIN.0
14 00104 0114 WAITPT.WAIT
15 00105 3547 FRIBT. FRIBR-1
16 00106 0000 INPUT.0
17 00107 0077 K77.77
18 00110 0000 LASTSM.0
19 00111 1026 ADAIO. MIT
20 4512 OUTPUT-JMS I
21 00112 0657 NGPT.MESSAG
22 00113 0620 N2SAM.62C
23 DELAY.
24 00114 0000 WAIT.2000
25 4515 CONVRT-JMS I :AD21WD
26 00115 0474
27
28
29
30 00116 7774 K7774.7774
31 00117 0003 K3.3
32 00120 7455 MINUSS.-333
33
34
35
36
37
38
39 00121 0000 EXP.0
40 00122 0000 MANTIS.0
41 00123 0000
42 00124 0000 NEG210.0000:0000:0000
43 00125 0000
44 00126 0000
45
46 00127 0000 VALVE.0
47 00128 0000 OPEN.0
48 00131 7770 CLOSE.7770
49 00132 4000 HOLLMS.4000
50 00133 0000 DVM.0
51 00134 1572 RDLOOP.LOOPAD
52 00135 4000 VSTART.DATA
53 4536 FLTVOL-JMS I :SD2VOL
54 00136 1737
55 00137 0013 F2047.0013
56 00140 3777 3777
    
```

```

/MMSG1.MMSG2 POINT TO MESSAGES IN QUEUE.
/MS1PK.MS2PK SAY IF PACKED ASCII OR NOT
/0 PACKED, 1 NOT PACKED
/POINTER TO EXIT FROM INTERRUPT SERVICE
/ENTRY POINT
/AIO RECEIVER FOR UNSOLICITED KLY-IN. NON CTRL
/FOR USE USING FPP TYPE OUTS. PUT THIS IN 10
/KEY IN BUFFER
/A CONSTANT
/WHICH CHANNEL WAS SAMPLED LAST
/AIO SCVR FOR A-D
/POINTER TO OUTPUT SCHEDULER
/CONSTANT TO SELECT AD CHANNEL N2
/SAYS WAIT FOR 40 MSEC CLOCK TO SAMPLE
/MASK FOR DRC. CHANNEL SELECT IN OTHER BITS
/A CONSTANT. AIO CHANNEL FOR DVM OUTPUT
/NEGATIVE OF ASCII S. USED TO STOP VARIOUS TESTS
    
```

```

/A BUFFER FOR AD DATA AND CONVET
/5V GIVES 1.79545X100 %N2
    
```

ORIGINAL PAGE IS  
OF POOR QUALITY

157 00141 7777 7777  
 158 00142 0000 VVHI.0  
 159 00143 0000 VVFO.0  
 160 00144 0000 FKAC.0:0:0  
 161 00145 0000  
 162 00146 0000  
 163 00147 7462 MINUSN. -316  
 164 00150 0003 VVPR10.3:3:100:0000 ✓6.5L/10V  
 165 00151 3100  
 166 00152 0000

✓CONSTANTS FROM HERE ON OUT USED BY WASHOUT ROUTINE  
 ✓NO STORAGE LEFT AT THAT ROUTINE

174 00153 0000 VVKEY.0  
 175 00154 0000 VVKEY.0  
 176 00155 0000 VVKEY.0  
 177 00156 0000 NTIBAL.0:0:0  
 178 00157 0000  
 179 00158 0000  
 180 00161 2640 DUMAD. 2640  
 181 00162 5320 VVSTORE.5320  
 182 00163 5350 NSTORE.5350  
 183 00164 5377 NLAST.5377  
 184 00165 5350 NSTART.5350  
 185 00166 5347 WVLAST.5347  
 186 00167 5320 VVFIRST.5320  
 187 00170 5317 NWLST.5317  
 188 5317 NWLST1=5317  
 189 00171 4557 WASTOR. 4550  
 190 00172 3777 WASTOR.DATA-1  
 191 00173 0007 F:0017:0100:0  
 192 00174 3100  
 193 00175 0000  
 194 4575 DACHC=JMS 1 .:DACH  
 195 00176 1524

196		0200	*200		
197					
199					
200				/PROGRAM INITIATION	
201				/ALSO, RETURN FROM DIFFERENT MODULES	
202					
203	00200	7200	INIT.CLA		
204	00201	7200	CLA		
205	00202	6002	IOF		
206	00203	1130	TAD OPEN	/OPEN VALVE	
207	00204	6075	CTRL		
208	00205	3127	DCA VALVE		
209	00206	1154	TAD ADLOOP	/CLEAR AIO RECEIVERS	
210	00207	3111	DCA ADAIO		
211	00209	3103	DCA KEYIN		
212	00211	6001	ICM	/TURN ON INTERRUPT	
213	00212	5212	JMP	/IDLE	

214			EJECT		
215	00213	00J0	FOUTS,0		
216	00214	3062	DCR 02	/C(55)=0 NO CRLF	
217	00215	7010	BAR	/NOT =0 CRLF	
218	00216	3055	DCR 55	/C(62)=#DIGITS	
219	00217	1235	TAD STORP	/WHERE TO PUT THE ASCII	
	00220	3010	DCR 16		
	00221	1076	TAD MSG2		
	00222	7640	SZA CLA		
	00223	5221	JMP .-2	/BUFFER READY	
223					
226					
227					
228					
229					
230					
231	00224	4400	JMS I 0		
232	00225	7300	CLA CLL		
233	00226	3416	DCR I 16		
234	00227	7201	CLA IAC		
235	00230	7010	BAR	/SET LINK	
236	00231	7201	CLA IAC		
237	00232	1235	TAD STORP		
238	00233	4512	OUTPUT		
239	00234	5613	JMP I FOUTS		
240	00235	3547	STORP. PRTRFR-1		
241					
242					
243					
244					
245					

ORIGINAL PAGE IS  
OF POOR QUALITY



```

246          EJECT
247
248
249          /ROUTINE TO PRINT OUTPUT ON TELETYPE
250
251
252 00236 7300 REPORTS,CLA CLL
253 00237 3103          DCA KEYIN
254 00240 1134          TAD ADLOOP
255 00241 3111          DCA ADAIO
256 00242 4777          JMS AUX          /SUBROUTINE TO COMPUTE DERIVED VARIABLES
257 00243 1315          TAD NUMOUT
258 00244 7041          CIA
259 00245 3314          DCA OUTCT          /SET EXIT LOOP COUNTER
260 00246 1312          TAD NAMESP          /SET POINTERS TO FORMAT OUTPUT
261 00247 3010          DCA 10
262 00250 1311          TAD FRP
263 00251 3011          DCA 11
264 00252 1310          TAD DIGP
265 00253 3012          DCA 12
266 00254 1313          TAD UNITP
267 00255 3013          DCA 13
268 00256 1307          TAD DAPT
269 00257 3306          DCA DATUM
270 00260 7300 OVERY,  CLA CLL
271 00261 4473          READY
272 00262 1410          TAD I 10          /GET LABEL
273 00263 4512          OUTPUT          /PRINT IT
274 00264 4407          FENTER
275 00265 5700          PGST I DATUM          /GET DATUM
276 00266 0000          FEXIT
277 00267 2306          SE DATUM; ISZ DATUM; ISZ DATUM
278 00270 2306
279 00271 2306
280 00272 7300          CLA CLL
281 00273 1411          TAD I 11          /GET Y OF EX.Y FORMAT
282 00274 7421          INCL
283 00275 1412          TAD I 12          /GET X
284 00276 4456          FOUT          /FLOATING POINT OUTPUT
285 00277 7300          CLA CLL
286 00300 4473          READY
287 00301 1413          TAD I 13          /GET UNITS
288 00302 4512          OUTPUT          /PRINT THEM
289 00303 2314          ISZ OUTCT          /THROUGH?
290 00304 5200          JNF OVERY          /NO
291 00305 5470          BEGIN          /YES, BEGIN IDLE
292 00306 0000          DATUM,0
293 00307 1200          DAPT,RV
294 00310 0522          DIGP,DIG-1
295 00311 0540          FRP,FR-1
296 00312 0732          NAMESP,NAMES-1
297 00313 1153          UNITP,UNIT-1
298 00314 0000          OUTCT,0
299 00315 0016          NUMOUT,16

```

300			EJECT	
301				
302				
303				
304				
305			/NEW SUBJECT ROUTINE	
306			/CALLED BY CTRL-I KEYIN	
307			/CLEARS DATA BUFFER	
308				
309				
310				
311				
312	00316	7300	NEWS, CLA CLL	
313	00317	1335	TAD NEWPT	/PRINT "NEW SUBJECT"
314	00320	4512	OUTPUT	
315	00221	7240	CLA CMA	
316	00323	1307	TAD DAPT	/SET POINTERS
317	00323	3010	DCA 10	
318	00324	1315	TAD NUMOUT	
319	00325	7041	CIA	/AND COUNTER
320	00326	3314	DCA OUTCT	
321				/CLEAR A VARIABLE
322	00327	3410	NEWS, DCA I 10; DCA I 10; DCA I 10	
323	00330	3410		
324	00331	3410		
325	00332	2314	ISZ OUTCT	/THROUGH?
326	00332	5327	JMP NEWS	/NO
327	00334	5470	BEGIN	/YES. BEGIN IDLE
328	00335	0762	NEWPT, NEWS	

ORIGINAL PAGE IS  
OF POOR QUALITY

```

329          EJECT
330
331
332
333          /ROUTINE TO SCALE DATA AND COMPUTE SUMS FOR LINEAR
334          /REGRESSION FOR USE IN CLOSING VOLUME CALCULATION
335          /
336          /X=VOLUME
337          /Y=NITROGEN FRACTION
338          /
339          /ENTERED WITH SAMPLED N2 IN M3, SAMPLED VOLUME IN AC
340
341          00336 0000 SUMS.      0
342          00337 3372          DCA XHOLD
343          00340 7501          M3A
344          00341 4465          UNPACK
345          00342 4407          FENTER
346          00343 3124          FMUL N2PR10 /CONVERT NITROGEN TO FRACTION
347          00344 6144          FPUT FKAC /SAVE
348          00345 1031          FADD EY /ADD TO SUM Y
349          00346 6031          FPUT EY
350          00347 0000          FEXIT
351          00350 1372          TAD XHOLD /CONVERT VOLUME TO LITERS
352          00351 4536          FITVOL
353          00352 4471          DTFS
354          00353 4407          FENTER
355          00354 6121          FPUT EXP /SAVE
356          00355 1026          FADD EX /SUM X
357          00356 6026          FPUT EX
358          00357 5121          FGET EXP
359          00360 3121          FMUL EXP
360          00361 1034          FADD EX2 /SUM X**2
361          00362 6034          FPUT EX2
362          00363 5121          FGET EXP
363          00364 3144          FMUL FKAC
364          00365 1023          FADD EXY /SUM XY
365          00366 6023          FPUT EXY
366          00367 0000          FEXIT
367          00370 2021          ISZ N+1
368          00371 5736          JMP I SUMS
369          00372 0000 XHOLD,0
    
```

370	00377	1341			
371		0400	*400		
372	00400	0000	SPIROS. 0		
373				/ENTER THIS SUB AFTER	
374				/MONITORING POSITION. 0-10V CHANNEL	
375				/WITH MANTISSA IN MO. EXPONENT IN AC	
376				/ENTER WITH INTERRUPT OFF	
377				/EXITS	
378				/1. NORMAL-SPIRO DUMPING	
379				/OR BELOW THRESH	
380				/2. NORMAL+1 EOS	
381				/JUST OPEN VALVE	
382				/3. GOOD DATA IN AC	
383				/THIS DATA RETURNDE IN AC	
384				/AS A 12 BIT POSITIVE NUMBER	
385	00401	4515	CONVRT	/WITH 7777 INDICATING 10 V	
386	00402	3266	DCA VTEMP	/MAKE ONE WORD	
387	00403	7100	CLL		
388	00404	1266	TAD VTEMP	/SCALE RIGHT FOR MANIPULATIONS	
389	00405	7010	RAR		
390	00406	7421	MQL	/SAVE FOR LATER USE	
391	00407	7200	CLA		
392	00410	7501	MCA		
393	00411	1270	TAD VTHRS	/IS SPIROMETER FULLY DUMPED?(BELOW THRESHMOLD)	
394	00412	7710	SPA CLA		
395	00413	5250	JMP VBELCN	/YES	
396	00414	1127	TAD VALVE	/IS VALVE OPEN? (DUMPING)	
397	00415	7041	CIA	/ (SPIRO ABOVE THRESH TO BE HERE)	
398	00416	1130	TAD OPEN		
399	00417	7650	SNA CLA		
400	00420	5600	JMP I SPIROS	/YES VALVE OPEN SO DUMPING. NORMAL EXIT. V=0	
401	00421	7501	MCA	/NOT DUMPING SO EXHALATION IN PROGRESS	
402	00422	7041	CIA		
403	00422	1266	TAD VLAST		
404	00424	1273	TAD K10		
405	00425	7700	SNA CLA	/SAMPLES IN A ROW WITH NO	
406	00427	5240	JMP NOCHG	/MORE THAN 10 COUNTS CHANGE	
407	0043	1273	TAD WAIT	/MORE THAN 10 CTS INCREASE SO	
408	00430	3271	DCA WATCH	/RESET COUNTERS	
409	00431	7501	MCA		
410	00432	5265	DCA VLAST	/AND COMPARISON VALUE	
411	00433	7200	OK. CLA		
412	00434	1266	TAD VTEMP	/GET VALUE	
413	00435	2300	ISE SPIROS	/AND EXIT TO NORMAL +2	
414	00436	2200	ISE SPIROS		
415	00437	5000	JMP I SPIROS		
416	00440	7200	NOCHG. CLA	/NOT MOVED MORE THAN 10 CTS	
417	00441	2271	ISE WATCH	/IS IT 10 TIMES IN A ROW???	
418	00442	5233	JMP OK	/NO. TAKE BREATH IN PROGRESS EXIT	
419	00443	1130	TAD OPEN	/YES. END OF BREATH	
420	00444	6073	CTRL	/OPEN VALVE. SAVE VALVE STATUS	
421	00445	3127	DCA VALVE		
422	00446	2300	ISE SPIROS	/TAKE NORMAL + 1 EXIT	
423	00447	5600	JMP I SPIROS		
424	00450	1127	VBELCN. TAD VALVE	/COMES HERE IF WAS DUMPED	

425	00451	7041		CIA	
426	00452	1150		TAD OPEN	/IS VALVE OPEN ?? (DUMPING)
427	00453	7500		SZA CLA	
428	00454	5600		JMP I SPIROS	/NO. VALVE CLOSED. WAITING FOR BREATH. EXIT
429	00455	7200	VCLOSE.	CLA	/YES. VALVE OPEN.
430	00456	1272		TAD KWAIT	
431	00457	3271		BCA WATCH	/RESET POINTERS
432	00460	3265		BCA VLAST	
433	00461	1131		TAD CLOSE	/CLOSE VALVE
434	00462	6075		CTRL	
435	00463	3127		BCA VALVE	
436	00464	5600		JMP I SPIROS	/EXIT
437	00465	0000	VLAST.0		
438	00466	0000	VTEMP.0		
439	00467	0000	VSHIFT.0		
440	00470	7754	VTHRESH.-24		
441	00471	0000	WATCH.0		
442	00472	7770	KWAIT.7770		
443	00473	0004	K10.4		

```

444          EJECT
445          /ROUTINE TO PACK A/D DATA INTO ONE WORD
446          /ENTER WITH EXPONENT IN AC
447          /MANTISSA IN MO
448          /RETURNS .2 BIT NUMBER IN AC
449          /POSITIVE
450          /7777 IS FULL SCALE, NOT MINUS 1
451 00474 0000 AD21WD. 0
452 00475 3266          DCA VTEMP          /SAVE EXPONENT
453 00476 3267          DCA VSHIFT
454 00477 1266          TAB VTEMP          /IS EXPONENT ZERO?
455 00500 7450          SNA
456 00501 5320          JMP NOSHFT
457 00502 2267          L... VSHIFT
458 00503 7004          RAL
459 00504 7420          SHL
460 00505 5302          JMP .-3
461 00506 7309          CLR CLL
462 00507 1267          TAB VSHIFT          /SHIFTED THIS MANY TIMES
463 00510 7041          CIA
464 00511 3267          DCA VSHIFT          /MAKE IT A COUNTER AND SHIFT
465 00512 7501          MOA
466 00513 7100          CLL
467 00514 7010          SRA
468 00515 2267          ISZ VSHIFT
469 00516 5313          JMP .-3
470 00517 7421          MOA
471 00520 7300          NOSHFT.CLR CLL
472 00521 7501          MOA
473 00522 5674          JMP I AD21WD
    
```

ORIGINAL PAGE IS  
OF POOR QUALITY

```

474          EJECT
475
476
477 /FORMAT CONSTANTS IN F FORMAT, FDIG.FR
478 00523 0003 DIG.3:3:3:3:3:3:3:3:3:3:3:3
479 00524 0003
480 00525 0003
481 00526 0003
482 00527 0003
483 00530 0003
484 00531 0003
485 00532 0003
486 00533 0003
487 00534 0003
488 00535 0003
489 00536 0003
490 00537 0003
491 00540 0003
492 00541 0002 FR.2:2:2
493 00542 0002
494 00543 0002
495 00544 0001          1:2
496 00545 0002
497 00546 0001          1:2:2
498 00547 0002
499 00550 0002
500 00551 0001          1:1:1
501 00552 0001
502 00553 0001
503 00554 0001          1:1:1
504 00555 0001
505 00556 0001
506
507
508
509
510 00557 0000 RPTCK.B
511 00558 7200          CLA
512 00559 1076          TAB MSG2          /WAIT LOOP DURING REPORT FOR ITT
513 00562 7640          SZA CLA          /TO OUTPUT DATA
514 00565 5368          JMB .-3
515 00564 5757          JMB 1 RPTCK
516 00563 4040 L.TENT LITERS BTPCO
517 00566 1411
518 00567 2405
519 00570 2223
520 00571 4003
521 00572 2420
522 00573 2374
523 00574 7600

```

```

524      8600 *600
525
526
527      /INTERRUPT SERVICE FOR TTY KEYBOARD
528
529
530 00600 6036 TTL.   KRB
531 00601 3106      DCA INPUT
532 00602 1106      TAD INPUT
533 00603 1256      TAD M232
534 00604 7710      SPA CLA      /CONTROL CHARACTER?
535 00605 5212      JMP CTRL1  /YES
536 00606 1103      TAD KEYIN
537 00607 7640      SZA CLA      /PIO SPECIFIED?
538 00610 5503      JMP I KEYIN  /YES
539 00611 5501      JMP I XITPT  /NO, FORGET IT
540
541 00612 1106 CTRL1. TAD INPUT  /CTRL CHARACTER, JUMP INDIRECT THROUGH
542 00613 0107      AND K77    /TABLE BELOW
543 00614 1222      TAD OFFSET
544 00615 3221      DCA .+4
545 00616 1621      TAD I .+3
546 00617 3221      DCA .+2
547 00620 5621      JMP I .+1
548 00621 0090      0
549 00622 0623 OFFSET. .+1
550 00623 1026      XIT
551 00624 1026      XIT      /CTRL A
552 00625 1026      XIT      /" B
553 00626 1400      CALLS   /CTRL C
554 00627 1026      XIT:XIT /D, E
555 00630 1026
556 00631 1600      FEVS    /CTRL F
557 00632 1026      XIT
558 00633 1026      XIT
559 00634 0316      NEWS
560 00635 1026      XIT:XIT:XIT:XIT:XIT
561 00636 1026
562 00637 1026
563 00640 1026
564 00641 1026
565 00642 1026      XIT
566 00643 1026      XIT
567 00644 1026      XIT
568 00645 0236      REPORTS /REPORT
569 00646 0200      INIT    /STOPS ALL IMMEDIATE
570 00647 1026      XIT:XIT:XIT
571 00650 1026
572 00651 1026
573 00652 2350      WASHS
574 00653 1026      XIT:XIT:XIT
575 00654 1026
576 00655 1026
577 00656 7546 M232, -232

```



```

578          EJECT
579
580
581
582          /ROUTINE TO PLACE AN ASCII MESSAGE ON PRINT QUEUE
583          /ENTER WITH ADDRESS OF MESSAGE IN AC
584          /ZERO LINK. DATA IS PACKED TWO CHAR PER WD
585          /NON-ZERO LINK 1 CHAR PER WD
586
587
588
589
590 00657 0000 MESSAG.0
591 00660 3320          DCA HOLD
592 00661 6002          IOF
593 00662 7010          EAR
594 00663 3321          DCA LINKMG
595 00664 1075          TAD MSG1
596 00665 7640          SZA CLA          /PRINTING?
597 00666 5300          JMP QUE          /YES
598 00667 1320          TAD HOLD          /NO
599 00670 3075          DCA MSG1          /ADDRESS OF MESSAGE
600 00671 1321          TAD LINKMG          /PACKED?
601 00672 7440          SZA
602 00673 7201          CLA IAC          /NO
603 00674 3077          DCA MS1PK
604 00675 6046          TIS          /TO GET AN INTERRUPT GOING
605 00676 6001          ION
606 00677 5657          JMP I MESSAG
607 00700 1076 QUE.TAD MSG2
608 00701 7640          SZA CLA
609 00702 5313          JMP LOSTMG          /QUE HAS ALREADY FULL
610 00703 1320          TAD HOLD          /QUEUE NOT FULL
611 00704 3076          DCA MSG2          /PUT ADDRESS IN MSG2 AND
612 00705 1321          TAD LINKMG
613 00706 7440          SZA
614 00707 7201          CLA IAC
615 00710 3100          DCA MS2PK          /AND PACKED FLAG IN MSG2PK
616 00711 6001          ION
617 00712 5657          JMP I MESSAG
618 00713 1322 LOSTMG. TAD LOSTPT          /NO ROOM TO STACK NEW MESSAGE
619 00714 3076          DCA MSG2
620 00715 3100          DCA MS2PK
621 00716 6001          ION
622 00717 5657          JMP I MESSAG
623 00720 0000 HOLD.0
624 00721 0000 LINKMG.0
625 00722 0725 LOSTPT.LOST
626 00723 1417 LOST.TEXT CLOST MESSAGE>>>Z
627 00724 2324
628 00725 4015
629 00726 0523
630 00727 2301
631 00728 0725
632 00729 7674

```

ORIGINAL PAGE IS  
OF POOR QUALITY

633	00732	0000	
634			
635			/DATA LABEL POINTERS
636			
637			
638	00733	3342	NAMES.L1:L2:L3
639	00734	0771	
640	00735	1252	
641	00736	1257	L4:L6
642	00737	1264	
643	00740	1271	L7:L8:L9
644	00741	1276	
645	00742	1303	
646	00743	1310	L10:L11:L12
647	00744	1315	
648	00745	1322	
649	00746	1327	L13:L14:L15
650	00747	1354	
651	00750	2707	
652	00751	1662	CALMSG.TEXT 'N2 CALIBRATION<>'
653	00752	4003	
654	00753	0114	
655	00754	1102	
656	00755	2201	
657	00756	2411	
658	00757	1716	
659	00760	7476	
660	00761	0000	
661		0760	B=-2
662	00762	1605	NEWMSG.TEXT 'NEW SUBJECT<>'
663	00763	2740	
664	00764	2325	
665	00765	0212	
666	00766	0503	
667	00767	2474	
668	00770	7600	
669	00771	1662	L2.TEXT 'N2 DELTA'
670	00772	4004	
671	00773	0514	
672	00774	2401	
673	00775	0000	

674			EJECT		
675		1000	*1000		
676	01000	3241	SERVIC.DCA AC	/SAVE AC	
677	01001	7010	RAR		
678	01002	3240	DCA LINK	/SAVE LINK	
679	01003	7501	MQR		
680	01004	3237	DCA MQ		
681	01005	1000	TAD 0	/SAVE PC	
682	01006	3236	DCA PC		
683	01007	6533	6533	/AD?	
684	01010	7410	SKP	/NO	
685	01011	5511	JMP I ADAIO	/SEE WHY THE RECEIVERS SHOULD BE RESET	
686	01012	6135	6135	/CLOCK?	
687	01013	7410	SKP	/NO	
688	01014	5220	JMP XIT	/I DONT USE IT	
689	01015	6143	6143	/PRINTER?	
690	01016	7410	SKP		
691	01017	5226	JMP XIT	/DONT USE IT EITHER	
692	01020	6041	TSP	/TTO?	
693	01021	7410	SKP	/NO	
694	01022	5242	JMP TTO	/YES INDEED	
695	01023	6031	KSP	/KEY-IN?	
696	01024	7410	SKP	/LIES. NO INTERRUPT	
697	01025	5777	JMP TTI	/KEYBOARD	
698	01026	7300	XIT.CLA CLL		
699	01027	1237	TAD MO	/RESTORE	
700	01030	7421	MQL	/PUT IT THERE	
701	01031	1240	TAD LINK	/THIS TOO	
702	01032	7004	RAL		
703	01033	1241	TAD AC		
704	01034	6001	ICN		
705	01035	5636	JMP I PC	/CONTINUE	
706	01036	0000	PC,0		
707	01037	0000	MQ,0		
708	01038	0000	LINK,0		
709	01041	0000	AC,0	/STORAGE	

710  
711  
712  
713

/NOTE ONLY ONE LEVEL. ONLY SERVICE CAN TURN INTERRUPTS ON  
/KEEP ALL ROUTINES VERY SHORT

714			EJECT	
715	01042	6042	TTC.TCF	
716	01043	7200	CLA	
717	01044	1077	TAD MSG1PK	
718	01045	7640	SZA CLA	/PACKED DATA?
719	01046	5313	JMP NOTPK	/NO
720	01047	1543	TAD FIRST	/PRINTING LEFT HALF?
721	01050	7740	SZA CLA CLL	
722	01051	5260	JMP RIGHT	/NO
723	01052	1475	TAD I MSG1	/GET WORD
724	01053	7012	RTS:RTS:RTS	/PUT CHARACTER IN RIGHT HALF
725	01054	7012		
726	01055	7012		
727	01056	2343	ISZ FIRST	/NEXT ONE TO BE RIGHT HALF
728	01057	5263	JND DECODE	
729	01060	3343	RIGHT.DCA FIRST	
730	01061	1475	TAD I MSG1	
731	01062	2075	ISZ MSG1	
732	01043	0107	DECODE AND 177	
733	01044	7450	SZA	
734	01065	5330	JMP THRU	/ZERO CHARAC & SAYS END OF MESSAGE
735	01066	3355	DCA CHHOLD	/BUFFER
736	01067	1350	TAD CHHOLD	
737	01070	1351	TAD M74	<<
738	01071	7650	SNA CLA	
739	01072	5311	JMP RETURN	/CODE FOR CR
740	01073	1350	TAD CHHOLD	
741	01074	1352	TAD M75	<>
742	01075	7650	SNA CLA	
743	01076	5332	JMP LF	/LINE FEED
744	01077	1350	TAD CHHOLD	
745	01100	1344	TAD M37	
746	01101	7450	SNA	/RETURN IS CODE 37
747	01102	5311	JMP RETURN	/YES IT IS
748	01103	7510	SZA	
749	01104	1346	TAD M100	
750	01105	1347	TAD M137	
751	01106	6043	TYPE.TLS	
752	01107	7200	CLA	
753	01110	5501	JMP I NITPT	
754	01111	1347	RETURN THE FIRST	
755	01112	5000	JMP OVER	
756	01113	1475	NOTPK.TTC I MSG1	UNPACKED
757	01114	7450	SZA	
758	01115	5330	JMP THRU	/LAST CHARAC
759	01116	2075	ISZ MSG1	
760	01117	5263	JND TAPS	
761	01118	7200	THRU CLA	/RESET FLAG.
762	01101	3343	TAD FIRST	
763	01102	1075	TAD MSG2	
764	01103	7040	SZA CLA	/ANOTHER MESSAGE IN QUE?
765	01104	5274	JND MURNS1	
766	01105	2075	ISZ MSG1	
767	01106	3343	TAD FIRST	
768	01107	5277	TAD MSG1PK	

769	01130	3100		DCA MS2PK
770	01131	5501		JMP I XITPT
771				
772				
773	01132	1353	LF, TAD	K212
774	01133	5506		JMP TYPE
775	01134	1073	HEMMS1, TAD	MSG2
776	01135	3075		DCA MSG1
777	01136	3076		DCA MSG2
778	01137	1100		TAD MS2PK
779	01140	3077		DCA MS1PK
780				
781	01141	3100		DCA MS2PK
782	01142	5242		JMP TTD
783				
784				
785				
786				
787	01143	0000	FIRST, 0	
788	01144	1741	M37, -37	
789	01145	0237	K237, 237	
790	01146	0100	K100, 100	
791	01147	0215	K215, 215	
792	01150	0000	CHHOLE, 0	
793	01151	7704	M74, -74	
794	01152	7702	M76, -76	
795	01153	0212	K212, 212	

ORIGINAL PAGE IS  
OF POOR QUALITY

796			EJECT	
797	01154	0565	UNIT, L:P:L	
798	01155	1172		
799	01156	0565		
800	01157	0760	B:L	
801	01160	0565		
802	01161	0565	L:L:L	
803	01162	0565		
804	01163	0565		
805	01164	1172	P:P:F	
806	01165	1172		
807	01166	1366		
808	01167	1366	F:F:P	
809	01170	1172		
810	01171	1172		
811				
812				
813				
814				
815	01172	4040	P. 'TEXT' <>	
816	01173	4574		
817	01174	7000		
818	01177	0600		
819		1200	*1200	
820				
821				
822			✓DATA BUFFER	
823				
824				
825				
826	01200	0000	RV, 0:0:0	✓RESIDUAL VOL
827	01201	0000		
828	01202	0000		
829	01203	0000	N2DELT, 0:0:0	✓DELTA % N2 750-1250
830	01204	0000		
831	01205	0000		
832	01206	0000	CV, 0:0:0	✓CLOSING VOLUME
833	01207	0000		
834	01208	0000		
835	01209	0000	VACRM, 0:0:0	✓VA-RV
836	01210	0000		
837	01211	0000		
838	01212	0000	VC, 0:0:0	✓VITAL CAPACITY
839	01213	0000		
840	01214	0000		
841	01215	0000	TLC, 0:0:0	✓TOTAL LUNG CAPACITY
842	01216	0000		
843	01217	0000		
844	01218	0000	FEV1, 0:0:0	✓FORCED VITAL CAPACITY
845	01219	0000		
846	01220	0000		
847	01221	0000	FEV1, 0:0:0	✓FEV AT 1SEC
848	01222	0000		
849	01223	0000		
850	01224	0000	F12FEV, 0:0:0	✓FEV1/FVC

851	01231	0000		
852	01232	0000		
853	01233	0000	FVC%VC	0:0:0 /FVC/VC
854	01234	0000		
855	01235	0000		
856	01236	0000	MEFR.0:0:0	/200-700 BTPS L/SEC
857	01237	0000		
858	01240	0000		
859	01241	0000	MMFR.0:0:0	/.25-.75 BTPS L/SEC
860	01242	0000		
861	01243	0000		
862	01244	0000	CV2VC.0:0:0	%
863	01245	0000		
864	01246	0000		
865	01247	0000	CC2TLC.0:0:0	%
866	01250	0000		
867	01251	0000		
868	01252	0326	L3.TEXT	VC
869	01253	4040		
870	01254	4040		
871	01255	4040		
872	01256	4000		
873	01257	2601	L4.TEXT	VA/RV
874	01260	5726		
875	01261	2649		
876	01262	4040		
877	01263	4000		
878	01264	2603	L6.TEXT	VC
879	01265	4040		
880	01266	4040		
881	01267	4040		
882	01270	4000		
883	01271	2414	L7.TEXT	TLC
884	01272	0340		
885	01273	4040		
886	01274	4040		
887	01275	4000		
888	01276	0326	L8.TEXT	VC
889	01277	0340		
890	01280	4040		
891	01281	4040		
892	01282	4000		
893	01283	0665	L9.TEXT	RESPI
894	01284	2601		
895	01285	4040		
896	01286	4040		
897	01287	4000		
898	01288	0605	L10.TEXT	FEV1/VC
899	01291	2661		
900	01292	5736		
901	01293	2603		
902	01294	4000		
903	01295	0626	L11.TEXT	FVC/VC
904	01296	0657		
905	01297	2603		

906	01320	4040	
907	01321	4000	
908	01322	1505	L12. TEXT 'MEFR
909	01323	0622	
910	01324	4040	
911	01325	4040	
912	01326	4000	
913	01327	1515	L13. TEXT 'MMFR
914	01328	0622	
915	01329	4040	
916	01330	4040	
917	01331	4000	
918	01332	0326	L14. TEXT 'CP/WC
919	01333	5726	
920	01334	0340	
921	01335	4040	
922	01336	4000	

ORIGINAL PAGE IS  
OF POOR QUALITY



```

923          EJECT
924
925          /COMPUTATION OF DERIVED VARIABLES
926          /CALLED BY REPORT
927
928
929 01341 0000 AUX.0
930 01342 4407 FENTER
931 01343 5225 FGST FEM1 /F12FEV=FEM1*100/FEV
932 01344 4222 FDIW FEM1
933 01345 3173 FMUL F100
934 01346 6250 FPST F12FEV
935 01347 5222 FGST FEM1
936 01350 4214 FDIW VC /FVC2VC=100*FEV/VC
937 01351 3173 FMUL F100
938 01352 6233 FPST FVC2VC
939 01353 5208 FGST CV
940 01354 4214 FDIW VC
941 01355 3173 FMUL F100 /CV2VC=100*CV/VC
942 01356 6244 FPST CV2VC
943 01357 5208 FGST CV
944 01360 1200 FADD BV /CO2TLC=100*(BV+CV)/TLC
945 01361 4217 FDIW TLC
946 01362 3173 FMUL F100
947 01363 6247 FPST CO2TLC
949 01364 0000 FEXIT
949 01365 5741 JMP I AUX
950
951 01366 4040 F. TEXT ' BTPS LITERS/SEC<>'
952 01367 0224
953 01370 2023
954 01371 4014
955 01372 1124
956 01373 0522
957 01374 2557
958 01375 2395
959 01376 0374
960 01377 7600
    
```

961	1400	*1400		
962				
963				
964			/ROUTINE TO CALIBRATE MASS SPECTROMETER NITROGEN	
965			/CHANNEL. THE MASS SPEC USED WITH THIS PROGRAM	
966			/HAS A VARIABLE ION CURRENT. SO IT WAS EASIER TO	
967			/CHANGE IT THAN THE CONVERSION FACTOR. FOR SOME MASS SPECTROMETERS,	
968			/THIS ROUTINE SHOULD CHANGE THE CONVERSION FACTOR. N2PRI0.	
969				
970				
971				
972				
973	01400	7300	CALS,CLA CLL	
974	01401	1371	TAD CALMPT	
975	01402	4512	OUTPUT	
976	01403	7240	CLA CMA	
977	01404	0116	AND K7774.	
978	01405	6065	DAC	/SEND FULL SCALE VOLTAGES TO XY PLOTTER
979	01406	7001	IAC	/CHANNELS
980	01407	6065	DAC	
981	01410	7200	CLA	
982	01411	1323	TAD CALMPT	
983	01412	5103	DCR KEVIN	/SET RTI AIO RECEIVER
984	01413	1321	TAD CALN2	
985	01414	3111	DCR ADAD10	/SET AD AIO RECEIVER
986	01415	1113	TAD N2SAM	/INITIATE A SAMPLE
987	01416	6537	SAMPLE	
988	01417	7200	CLA	
989	01420	1113	TAD N2SAM	
990	01431	6537	SAMPLE	
991	01422	7200	CLA	
992	01423	3313	DCR FLAGCL	/CLEAR SAMPLE FLAG
993	01424	6001	ICR	
994	01425	7200	CLA	/WAIT LOOP
995	01426	1313	TAD FLAGCL	/NEW SAMPLE? FLAG SET BY INTERRUPT SERVICE
996	01427	7650	SND CLA	
997	01430	5225	JMP -3	/NO WAIT
998	01431	3313	DCR FLAGCL	/YES PROCESS
999	01432	1322	TAD NHOLD	/GET SAMPLE
1000	01433	4465	UNPACK	
1001	01434	4407	FENTER	
1002	01435	3124	FNAL N2PRI0	/CONVERT TO FRACTION
1003	01436	6015	FPUT FN2CL	/AND SAVE
1004	01437	0000	SEMIT	
1005	01440	4576	DCR N2	/SUBROUTINE TO SEND TO DVM
1006	01441	7200	CLA	
1007	01442	1314	TAD TYPFLG	
1008	01443	7650	SND CLA	/ANY KEYINS?
1009	01444	5225	JMP RPT	
1010	01445	3314	DCR TYPFLG	/YES A P KEYIN
1011	01446	4407	FENTER	
1012	01447	5315	FGET FN2CL	
1013	01450	0000	FEMIT	
1014	01451	7327	CLR CLL IAC CML RTL	
1015	01452	7421	MSL	/SEND FORMAT

1016	01453	7307	CLA CLL IAC RTL	
1017	01454	7120	CLL CML	
1018	01455	4466	FCUT	/PRINT FRACTION
1019	01456	5225	JMF RPT	
1020				
1021				
1022				
1023				
1024	01457	7200	NEWN2, CLA	
1025	01460	6537	SAMPLE	
1026	01461	7421	MCL	/INTERRUPT SERVICE FOR AD IN CAL
1027	01462	1113	TAD N2SAM	
1028	01463	1114	TAD DELAY	
1029	01464	6537	SAMPLE	/START NEW SAMPLE IN 40 MSEC
1030	01465	4515	CONVET	/SET LAST DATUM AND PACK INTO ONE WD
1031	01466	3322	DOA NHOLD	/SAVE IT
1032	01467	7001	IAC	
1033	01470	3313	DOA FLGCL	/SET NEW SAMPLE FLAG
1034	01471	5501	JMF I MITPT	/EXIT FROM INTERRUPT SERVICE
1035				
1036				
1037				
1038	01472	7200	CALXIT, CL6	/ATTN AIO RECEIVER
1039	01473	1106	TAD INPUT	
1040	01474	1120	TAD MINUSE	/WAS IT AN S
1041	01475	7640	SZA CLA	
1042	01476	5303	JMF NOSTOP	/NO
1043	01477	3103	DOA KEYIN	/YES EXIT FROM CAL
1044	01500	1134	TAD ADLOOP	
1045	01501	3111	DOA ADAIO	
1046	01502	5470	BEACH	
1047				
1048				
1049				
1050	01503	7200	NOSTOP, CLA	
1051	01504	1106	TAD INPUT	
1052	01505	1320	TAD MINUSE	/WAS IT A 20
1053	01506	7640	SZA CLA	
1054	01507	5501	JMF I MITPT	/NO
1055	01510	7001	IAC	
1056	01511	3314	DOA FARELG	/YES SET PRINT FLAG
1057	01512	5501	JMF I MITPT	
1058				
1059	01513	0000	FLGCL,0	
1060	01514	0000	TYZFLG,0	
1061	01515	0000	PHZCL,0:0:0	
1062	01516	0000		
1063	01517	0000		
1064	01500	7460	MINUSE,-320	
1065	01521	1457	CALN2,NEWN2	
1066	01522	0000	NHOLD,0	
1067	01523	1472	CALMTP,CAURIT	
1068				
1069				
1070				

ORIGINAL PAGE IS  
OF POOR QUALITY

1071					
1072	01524	0000	DACN,0	FENTER	MULTIPLY N2 FRACTION BY 2047
1073	01525	4407		FMUL F2047	
1074	01526	3137		FENCT	
1075	01527	0A00		FIX	MAKE IT A SIGNED 12 BIT NUMBER
1076	01530	4472		SAL	NON AN UNSIGNED NUMBER
1077	01531	7004		AND K7774	MASK
1078	01532	0116		TAD DVM	ADD DVM CHANNEL
1079	01533	1153		DAC	SEND TO DVM
1080	01534	6065			
1081	01535	5724		JMP I DACN	

```

1082          EJECT
1083
1084
1085          /ROUTINE TO CONVERT FLOATING NUMBERS TO SIGNED 12 BIT INTEERS
1086
1087
1088 01536 0000  FIXX.0
1089 01537 7200          CLR
1090 01540 1044          TAD 44          /GET EXPONENT
1091 01541 7540          SZA SMA          /EXPONENT .GT. 0
1092 01542 5345          JMP .+3
1093 01543 7200          CLR          /NUMBER LESS THAN 1 (ABS VALUE) EXIT
1094 01544 5364          JMP 0+1          /WITH ZERO IN AC
1095 01545 1370          TAD N13          /EXPONENT .GT. 0 COMPARE TO 13
1096 01546 7450          SNA
1097 01547 5363          JMP 0          /EQUAL TO 13 45 CONTAINS ANSWER
1098 01550 7500          SLD
1099 01551 5365          JMP ERR          /NUMBER TOO BIG FOR 12 BITS
1100 01552 3044          DCA 44          /HOW MANY TIMES TO SHIFT RIGHT
1101 01553 7100  GG,    CLR
1102 01554 1045          TAD 45          /GET MSB
1103 01555 7510          SRA
1104 01556 7020          CML          /PRESERVE SIGN
1105 01557 7010          RAR          /SHIFT
1106 01560 3045          DCA 45
1107 01561 2044          ISZ 44          /THROUGH?
1108 01562 5353          JMP GG          /NO
1109 01563 1045  D,     TAD 45          /YES GET NUMBER
1110 01564 5730          JMP I FIXX          /EXIT
1111 01565 7340  ERR,   CLR CLL CMA          /NOT FINABLE
1112 01566 5736          JMP I FIXX
1113 01567 5363          JMP 0
1114 01570 7785  M13.-17
1115 01571 0751  CALMPT,CALMSG
1116
1117
1118
1119          /SERVICE ROUTINE FOR AD WHILE NO ONE USES AD
1120          /TO KEEP FROM LOSING SYNC
1121 01572 7200  LOOPAD,CLR
1122 01573 6537          SAMPLE
1123 01574 7200          CLR
1124 01575 1161          TAD DUMAD
1125 01576 6537          SAMPLE
1126 01577 5591          JMP I NITPT

```

ORIGINAL PAGE IS  
OF POOR QUALITY

```

1127          1600      *1600
1128
1129
1130
1131
1132          ✓FEV ROUTINE, CONSISTING OF THREE PARTS
1133          /
1134          /      1. WAIT LOOP-MONITORS SAMPLED DATA BUFFER
1135          /      AND UPDATES DVM WITH LATEST VOLUME.
1136          /      AT END OF BREATH, INITIATES COMPUTATION ROUTINE.
1137          /
1138          /      2. A/D INTERRUPT SERVICE-RECEIVES AND STORES SAMPLED
1139          /      DATA. INITIATES SAMPLES, AND CONTROLS
1140          /      SPIROMETER VALVES.
1141          /
1142          /      3. CALCULATIONS-COMPUTES FEV PARAMETERS
1143
1144
1145
1146          01600  7300  FEVS, CLR CLL
1147          01601  1253  TAD FEVNET
1148          01602  4512  OUTPUT
1149          01603  6537  SAMPLE          ✓INITIATE VOLUME SAMPLE
1150          01604  7200  CLR
1151          01605  1132  TAD VOLUME
1152          01606  6537  SAMPLE
1153          01607  7200  CLR
1154          01610  1252  TAD VADALO
1155          01611  3111  DCA ADALO          ✓SET A/D RECEIVERS
1156          01612  1251  TAD WKEYIN
1157          01613  3103  DCA WKEYIN
1158          01614  3230  DCA WEOB
1159          01615  3153  DCA WKEY          ✓CLEAR FLAGS
1160          01616  3154  DCA WKEY
1161          01617  1130  TAD OPEN
1162          01620  6075  CTRL              ✓OPEN VALVE UNTIL FIRST SAMPLE COMPLETE
1163          01621  3127  DCA VALVE
1164          01622  4256  FIRST, JMS WELDR
1165          01623  7200  FLWAIT, CLR
1166          01624  1152  TAD WKEYIN
1167          01625  7640  SCA CLR
1168          01626  5254  JMP FLEKIT
1169          01627  1247  TAD WUSE          ✓NEW SAMPLE? NOT IF WUSE=MIN
1170          01630  7041  CIA
1171          01631  1246  TAD MIN
1172          01632  7540  SMA SCA
1173          01633  5267  JMP WOLC          ✓YES. GO DISPLAY IT
1174          01634  7200  CLR
1175          01635  1250  TAD WEOB          ✓END OF BREATH?
1176          01636  7650  SMA CLR
1177          01637  5223  JMP FLWAIT       ✓NO. GO WAIT SOME MORE
1178          01640  3250  DCA WEOB
1179          01641  1134  TAD ADLOOP       ✓YES CLEAR A/D A/D RECEIVER
1180          01642  3111  DCA ADALO
1181          01643  6001  IOP

```

1182	01644	4777*	JMS WCOMP	/GO COMPUTE DATA.
1183	01645	5254	JMP FLEXIT	
1184	01646	0000	WIN.0	/USED BY INT. SERVICE TO STORE DATA
1185	01647	0000	WUSE.0	/USED BY WAIT LOOP TO DISPLAY DATA
1186	01650	3000	WEOB.0	
1187	01651	2244	WKEYIN.WKEY	
1188	01652	1711	WADALO.WINT	
1189	01653	1276	WEMPT.L0	
1190				
1191				
1192				
1193	01654	6002	FLEXIT.IOF	
1194	01655	5470	BEGIN	
1195				
1196				
1197			/SETUP ROUTINE	
1198				
1199				
1200	01656	0000	NEWBR.0	
1201	01657	7300	CLA CLL	
1202	01658	6002	IOF	
1203	01659	1135	TAD WSTART	
1204	01662	3246	DCA WIN	/RESET DATA STORAGE POINTERS
1205	01663	1135	TAD WSTART	
1206	01664	3247	DCA WUSE	
1207	01665	6001	ICH	
1208	01666	5656	JMP I NEWBR	
1209				
1210				
1211				
1212				
1213	01667	7300	WCLC.CLA CLL	
1214	01670	1647	TAD I WUSE	/GET SAMPLED DATA
1215	01671	2247	ISZ WUSE	
1216	01672	4536	PLT4OL	/SCALE IT TO LITERS
1217	01673	4471	BTB	
1218	01674	4407	FENTER	
1219	01675	4306	PCW FIG	/10 LITERS =FULL SCALE
1220	01676	3137	SMUL FRC47	/FULL SCALE =3347 COUNTS
1221	01677	0000	FENIT	
1222	01700	4472	FIG	
1223	01701	7004	ROL	/D0C WANTS 12 BIT POSITIVE NUMBER
1224	01702	0110	AND 67774	
1225	01703	1135	TAD WTI	/SEND TO DMM
1226	01704	6055	DAT	
1227	01705	5223	JMP RLWAIT	
1228	01706	0004	FIG.4	
1229	01707	2420	3420	
1230	01711	0000	0000	

1231			EJECT		
1232	01711	7200	WINT.	CLA	/INTERRUPT SERVICE FOR AD DURING FEV
1233	01712	1132		TAD VOLUME	
1234	01713	6537		SAMPLE	/GET LAST VALUE AND INITIATE NEW SAMPLE
1235	01714	7421		MOL	
1236	01715	1132		TAD VOLUME	
1237	01716	1114		TAD DELAY	
1238	01717	6537		SAMPLE	
1239	01720	4467		SEIRO	/CALL SPIROMETER SUBROUTINE
1240	01721	5501		JMP I XITPT	/FEV NOT STARTED
1241	01722	7410		SNP	/END OF BREATH
1242	01723	5327		JMP STORE	/STORE NEW DATA POINT
1243	01724	7240		CLA CMA	
1244	01725	3250		DOA WEOB	/SET END OF BREATH FLAG
1245	01726	5501		JMP I XITPT	
1246					
1247					
1248					
1249	01727	2246	STORE USE MIN		/INCREMENT STORAGE POINTER AND
1250	01730	3643	DOA I MIN		/SAVE DATA
1251	01731	5501		JMP I XITPT	
1252					
1253					
1254					
1255					
1256	01732	0000	B. SR. 0		
1257	01733	4407		FENTER	
1258	01734	3353		FMUL BTPSFC	/CONVERT LITERS TO BTPS LITERS
1259	01735	0000		FEXIT	
1260	01736	5732		JMP I BTPSR	
1261					
1262					
1263					
1264					
1265					
1266	01737	0000	SD2VOL. 0		
1267	01740	7100		OLL	
1268	01741	7010		RAR	/CONVERT 12 BIT POSITIVE SAMPLE TO
1269	01742	3045		DOA 45	/FLOATING POINT LITERS
1270	01743	7010		RAR	
1271	01744	3046		DOA 46	/MAKE FLOATING POINT FRACTION OF FULL SCALE
1272	01745	3044		DOA 44	
1273	01746	4407		FENTER	
1274	01747	7000		FDOEN	
1275	01750	3100		FMUL VLPRI0	/MUL BY VOLUME AT FULL SCALE
1276	01751	0000		FEXIT	
1277	01752	5737		JMP I SD2VOL	
1278	01753	0001	BTPSFC.	0001	
1279	01754	2100		2100	
1280	01755	0400		0400	/1.000
1281					
1282					
1283					
1284					
1285					



1286					
1287					
1288	01756	0000	CLSUM.0		/ROUTINE TO CLEAR LEAST SQUARES SUMS
1289	01757	1367		TAD NP	/PUT HERE BECAUSE NO ROOM AT ROUT
1290	01760	3010		DCR 10	
1291	01761	1370		TAD NC	
1292	01762	7371		DCR NCI	
1293	01763	3410		DCR I 10	
1294	01764	2371		ISZ NCI	
1295	01765	5363		JMP .-2	
1296	01766	5756		JMP I CLSUM	
1297	01767	0017	NP.N-1		
1298	01770	7761	NC.-17		
1299	01771	0000	NCI.0		

ORIGINAL PAGE IS  
OF POOR QUALITY

/PULMONARY FUNCTION TEST

PAL8-V98 11/21/74 PAGE 7

```

1300 01777 2000
1301      2000      *2000
1302
1303
1304      /COMPUTATION SUBROUTINE FOR FEV
1305
1306
1307
1308
1309 02000 0000 /COMP.2
1310 02001 4777 /FIND MAX VOLUME IN THIS BREATH
1311 02002 000 /LAST DATA POINT ADDRESS
1312 02003 1661 /MAX I WPOINT
1313      4536 /PLT/VOL
1314 02004 4471 /BTPS
1315 02005 4407 /CENTER
1316 02006 6777 /FEV1 FEV1
1317 02007 0000 /MAX DATA POINT IN LITERS BTPS
1318      1175 /FEV1
1319 02008 1060 /DATA BUFFER FIRST SAMPLE ADDRESS
1320 02009 0000 /DATA BUFFER FIRST SAMPLE ADDRESS
1321 02010 1661 /21(OCTAL). 25 DECIMAL SAMPLES INTO BUFFER
1322 02011 4536 /15 ONE SECON. GET THAT VOLUME
1323 02012 4471 /AND MAKE IT BTPS LITERS
1324 02013 4407 /BTPS
1325 02014 4407 /CENTER
1326 02015 0000 /FEV1 FEV1
1327 02016 0000 /FEV1 FEV1
1328 02017 0000 /FEV1 FEV1
1329 02018 0000 /FEV1 FEV1
1330 02019 0000 /FEV1 FEV1
1331 02020 0000 /FEV1 FEV1
1332 02021 0000 /FEV1 FEV1
1333 02022 0000 /FEV1 FEV1
1334 02023 0000 /FEV1 FEV1
1335 02024 0000 /FEV1 FEV1
1336 02025 0000 /FEV1 FEV1
1337 02026 0000 /FEV1 FEV1
1338 02027 0000 /FEV1 FEV1
1339 02028 0000 /FEV1 FEV1
1340 02029 0000 /FEV1 FEV1
1341 02030 0000 /FEV1 FEV1
1342 02031 0000 /FEV1 FEV1
1343 02032 0000 /FEV1 FEV1
1344 02033 0000 /FEV1 FEV1
1345 02034 0000 /FEV1 FEV1
1346 02035 0000 /FEV1 FEV1
1347 02036 0000 /FEV1 FEV1
1348 02037 0000 /FEV1 FEV1
1349 02038 0000 /FEV1 FEV1
1350 02039 0000 /FEV1 FEV1
1351 02040 0000 /FEV1 FEV1
1352 02041 0000 /FEV1 FEV1
1353 02042 0000 /FEV1 FEV1
1354 02043 0000 /FEV1 FEV1

```

```

1355 02056 0000          FEXIT
1356 02057 5600          JMP I WCOMP
1357
1358 02060 0031          K31,
1359 02061 0000          K25.31
1360 02062 0000          VPOINT.0
1361 02063 0000          FGTR.0:0:0
1362 02064 0000
1363 02065 0000          F3QTR.0:0:0
1364 02066 0000
1365 02067 0000
1366 02070 7777          FPT25.7777:2000:0
1367 02071 2000
1368 02072 0000
1369 02073 0000          FPT75.0:0000:0
1370 02074 3000
1371 02075 0000
1372 02076 7776          FPT2.7776:3146:3147
1373 02077 3146
1374 02100 3147
1375 02101 0001          FIPT2.1:2314:6315
1376 02102 2314
1377 02103 6315
1378
1379
1380
1381 02104 0000          SEARCH.0          /ENTER WITH VOL DESIRED IN FLOATING AC
1382 02105 4407          FENTER
1383 02106 6347          FSUB WANT
1384 02107 0000          FEXIT
1385 02110 7201          CLR IAC
1386 02111 1135          TAD VSTART
1387 02112 3261          DCA VPOINT
1388 02113 3346          DCA FIRST1
1389
1390
1391
1392 /XXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXX
1393 /
1394 /DONT CHANGE THIS STUFF WITHOUT LOOKING AT SBANAL
1395 /IT USES THIS ROUTINE ALSO
1396
1397
1398 02114 7200          RPTR.          CLR          /INDEX THROUGH POINTS UNTIL FIND
1399 02115 1001          TAD I VPOINT          /FIRST ONE GREATER THAN DESIRED VOLUME
1400 02116 4036          FLTVOL
1401 02117 4471          STPS
1402 02120 4407          FENTER
1403 02121 2347          FSUB WANT
1404 02122 0000          FEXIT
1405 02123 7200          CLR
1406 02124 1045          TAD 45
1407 02125 7700          SNA CLR
1408 02126 5341          JNB BIGGER          /FOUND IT
1409 02127 7046          CNY

```

ORIGINAL PAGE IS  
OF POOR QUALITY

1410	02130	3346		DCR FIRST1	
1411	02131	2261		ISC WPOINT	
1412	02132	1261		TAD WPOINT	
1413	02133	7041		CIA	
1414	02134	1771		TAD WDEE	/ARE WE THROUGH ARRAY?
1415	02135	7549		SHR 52R	
1416	02136	5314		JMP RPTR	/NO
1417	02137	7290	BAD.	CLR	/YES AND WILL FIND IT
1418	02140	5704		THE I SEARCH	
1419	02141	1340	BIGGER.	DCR FIRST1	/FOUND IT
1420	02142	7650		SHR CLA	
1421	02143	5337		JMP BAD	
1422	02144	1261		TAD WPOINT	/GET ITS ADDRESS AND RETURN
1423	02145	5704		JMP I SEARCH	
1424	02146	0000	FIRST1.0		
1425	02147	0000	WANT.0:0:0		
1426	02150	0000			
1427	02151	0000			
1428					
1429					
1430					
1431					
1432					
1433					
1434					
1435					
1436					
1437	02152	0000	FLTR.	0	/FLOAT A SIGNED 12 BIT NUMBER
1438	02153	3045		DCR 45	/PUT IN LEADING AS MSB
1439	02154	3046		DCR 46	/CLEAR LSB
1440	02155	1363		TAD 013	
1441	02156	3044		DCR 44	/EXPONENT TO PUT RADIX PT BETWEEN MSB,LSB
1442	02157	4407		ENTER	
1443	02160	7000		ENTER	/NORMALIZE
1444	02161	0000		EXIT	
1445	02162	5752		JMP I FLTR	
1446	02163	0013	013.13		

```

1447      EJECT
1448 02171 1647
1449 02172 1236
1450 02173 1241
1451 02174 2200
1452 02175 1225
1453 02176 1222
1454 02177 2277
1455      2200 *2200
1456      /CALCULATES FLOW BETWEEN VOLUMES POINTED AT BY VFHI,VFLO
1457
1458
1459
1460 02200 0000 FLO,C
1461 02201 7200   CLR
1462 02202 3044   DCA 44
1463 02203 3045   DCA 45;DCA 46
1464 02204 3046
1465 02205 1142   TAD VFHI
1466 02206 7650   SNA CLR
1467 02207 5600   JMP I FLO
1468 02210 1143   TAD VFLO
1469 02211 7459   SNA
1470 02212 5600   JMP I FLO
1471 02213 7041   CLR
1472 02214 1142   TAD VFHI
1473 02215 4474   FLOAT
1474 02216 4407   FENTER
1475 02217 3274   FMUL FPTS40
1476 02220 6144   FPUT FKAC
1477 02221 0000   FEXIT
1478 02222 1543   TAD I VFLO
1479 02223 4530   FLT/MOL
1480 02224 4471   STPS
1481 02225 4407   FENTER
1482 02226 6241   FPUT FLTEMP
1483 02227 0000   FEXIT
1484 02230 7200   CLR
1485 02231 1542   TAD I VFHI
1486 02232 4530   FLT/MOL
1487 02233 4471   STPS
1488 02234 4407   FENTER
1489 02235 3241   FSUB FLTEMP
1490 02237 4144   FDIK FKAC
1491 02237 0000   FEXIT
1492 02240 5600   JMP I FLO
1493 02241 0000 FLTEMP,C:0:0
1494 02242 0000
1495 02243 0000
    
```

ORIGINAL PAGE IS  
 OF POOR QUALITY

1496			EJECT	
1497	02244	7200	WKEY, CLA	
1498	02245	1106	TAD INPUT	
1499	02246	7421	MQL	
1500	02247	7501	MQA	
1501	02250	1120	TAD MINUSS	
1502	02251	7640	SZA CLA	
1503	02252	5256	JMP .+4	
1504	02253	7001	IAC	
1505	02254	3153	DCA WKEY	
1506	02255	5501	JMP I XITPT	
1507	02256	7501	MQA	
1508	02257	1147	TAD MINUSN	
1509	02260	7640	SZA CLA	
1510	02261	5265	JMP .+4	
1511	02262	7001	IAC	
1512	02263	3154	DCA WKEY	
1513	02264	5501	JMP I XITPT	
1514	02265	7501	MQA	
1515	02266	1777	TAD MINUSP	
1516	02267	7640	SZA CLA	
1517	02270	5501	JMP I XITPT	
1518	02271	7001	IAC	
1519	02272	3155	DCA WKEY	
1520	02273	5501	JMP I XITPT	
1521	02274	7774	FPT040, 7774	
1522	02275	2436	2436	
1523	02276	5606	5606	

```

1524      EJECT
1525
1526      /ROUTINE TO SCAN VOLUME SAMPLED DATA AND FIND MAX
1527
1528
1529      02277  0000  MAX,0
1530      02300  7200          CLA
1531      02301  1135          TAD VSTART      /SET POINTERS AT START
1532      02302  3344          DCA WU
1533      02303  3345          DCA VM
1534      02304  1135          TAD VSTART
1535      02305  3346          DCA
1536      02306  1746          TAD I WMP
1537      02307  7100          CLL
1538      02310  7010          RAR
1539      02311  3345          DCA VM
    
```

XX

```

1546      /DONT CHANGE THIS STUFF WITHOUT AT LEAST CHECKING
1547      /VC COMPUTATION IN SBANAL
1548      /SBANAL USES THIS STUFF
1549
1550
    
```

```

1551      02312  2344  NEW,   ISE WU          /GET NEXT
1552      02313  7200          CLA
1553      02314  1344          TAD WU
1554      02315  7041          CIA
1555      02316  1776          TAD WUSE
1556      02317  7750          SPA SNA CLA    /HAVE WE LOOKED AT THEM ALL
1557      02320  5337          JNP LVMX      /YES
1558      02321  1744          TAD I WU      /NO GET NEXT
1559      02322  7100          CLL
1560      02323  7010          RAR
1561      02324  1747          DCA WSV      /SCALE RIGHT FOR SIGNED ARITHMETIC
1562      02325  1347          TAD WSV      /SAVE IT
1563      02326  7041          CIA
1564      02327  1345          TAD VM
1565      02330  7750          SPA CLA
1566      02331  5312          JNC NEW,     /LESS THAN
1567      02332  1347          TAD WSV      /GREATER THAN
1568      02333  3345          DCA VM
1569      02334  1344          TAD WU
1570      02335  3346          DCA WMP
1571      02336  5312          JMP NEW,
1572      02337  7200  LVM,   CLA
1573      02340  1346          TAD WMP
1574      02341  3776          DCA WUSE
1575      02342  1346          TAD WMP
1576      02343  5677          JNC I MAX,
1577      02344  0000  WU,0
1578      02345  0000  VM,0
    
```

1579 02346 0000 VMP.0  
1580 02347 0000 VSV.0

ORIGINAL PAGE IS  
OF POOR QUALITY



```

1581 /START OF WASHOUT ROUTINE      CALLED BY CTRL-W
1582 /SUBPROGRAMS
1583 /1. INTERRUPT SERVICE-SAMPLES O2,N2 PAIRS, STICKS DATA AWAY
1584 /      ALSO ON SECOND BREATH (FIRST AFTER INHALING O2, ST. ES ALL DATA PAIRS
1585 /2. IDLE LOOP-AS SAMPLES COME IN, KEEPS TRACK OF MAX N2 FRACTION FOR
1586 /      CURRENT BREATH, DISPLAYS IT ON MM. ACCUMULATES TOTAL NITROGEN EXHALED.
1587 /3. SBANAL-ANALYZES SB WAVEFORM FOR NO. OF PEAKS, CLOSING VOLUME
1588 /4. C/V'S-CALCULATES CLOSING VOLUME
1589 /5. STOREW-COMPUTES RV
1590 /6. PLOT-KY PLOT OF SINGLE BREATH
1591
1592
1593
1594
1595
1596
1597
1598 02358 7200  WASHS.CLA          /N2 WASHOUT
1599 02351 4775'  JMS INTSU          /SETUP FLAGS FRO INTRPT ROUT
1600 02352 1365  TAD WADAIO
1601 02353 3111  DCA ADAIO          /ATO RC/RS
1602 02354 1366  TAD WKEY
1603 02355 3103  DCA KEVIN
1604 02356 4774'  JMS LOOPSU        /SET UP MORE CONSTANTS
1605 02357 6537  SAMPLE
1606 02360 1132  TAD VOLUME
1607 02361 1114  TAD DELAY
1608 02362 6537  SAMPLE
1609 02363 6001  ICM
1610 02364 5773'  JMP WLOOP
1611
1612
1613
1614
1615 02365 2600  WADAIO.WINT
1616 02366 2244  WKEY.WKEY
1617 02373 2400
1618 02374 3035
1619 02375 3000
1620 02376 1647
1621 02377 1520
1622 02402 2406  W2402
1623 02400 7200  WLOOP.CLA
1624 02401 1152  TAD WKEY
1625 02402 7040  SZA CLA THROUGH
1626 02403 7040  BEGIN
1627 02404 1165  TAD WSTART
1628 02405 7041  CIA
1629 02406 1163  THRU WSTORE      /IS THERE A SAMPLE PAIR 1  LE ANALYZED
1630 02407 7740  SZA WCLA
1631 02410 5221  JMP WYES          /YES
1632 02411 1567  TAD WFIN          /NO. IS TEST COMPLETE
1633 02412 7450  SNA
1634 02413 5200  JMP WLOOP        /NO
1635 02414 6002  IOP              /YES

```

1636	02415	4777	JMS SBANAL	/ANALYZE SB WAVEFORM
1637	02416	4776	JMS STOREH	/COMPUTE RV
1638	02417	4775	JMS FPLOT	/PLOT SB WAVEFORM
1639	02420	5470	BEGIN	
1640				
1641				
1642				
1643				
1644				
1645	02421	7200	WCLC. CLA	
1646	02422	1165	TAD NSTART	/VOLUME,N2 PAIRS ARE STORED IN A QUEUE
1647	02423	3372	DOA NUSEP	/TO BE USED BY WCLC
1648	02424	1167	TAD WFIRST	/QUEUE STARTS AT NSTART,WFIRST
1649	02425	3373	DOA WUSEP	
1650	02426	6002	IOF	
1651	02427	1772	TAD I NUSEP	
1652	02428	3371	DOA NNUSE	
1653	02429	1773	TAD I WUSEP	
1654	02432	3370	DOA WNUSE	
1655	02433	1165	TAD NSTART	
1656	02434	7041	CLA	
1657	02435	1163	TAD NSTORE	
1658	02436	7041	CLA	
1659	02437	3365	DOA WC	
1660	02440	7240	CLA CMA	
1661	02441	1165	TAD NSTART	
1662	02442	3011	DOA 11	
1663	02443	1165	TAD NSTART	
1664	02444	3010	DOA 10	
1665	02445	7240	CLA CMA	
1666	02446	1167	TAD WFIRST	
1667	02447	3013	DOA 13	
1668	02450	1167	TAD WFIRST	
1669	02451	3012	DOA 12	
1670	02452	1410	TAD I 10	
1671	02453	3411	DOA I 11	
1672	02454	1412	TAD I 12	
1673	02455	3413	DOA I 13	
1674	02456	2305	ISE WC	
1675	02457	5252	JMP I-5	
1676				
1677				/THE ABOVE WERE
1678				/TO MOVE THE DATA DOWN THE LIST
1679	02460	7240	CLA CMA	
1679	02461	1163	TAD NSTORE	/INCREMENT NSTORE,WSTORE SO INTERRUPT SERVICE PUTS
1680	02462	3163	DOA NSTORE	/THEN IN RIGHT PLACE
1681	02463	7240	CLA CMA	
1682	02464	1163	TAD WSTORE	
1683	02465	3162	DOA WSTORE	
1684	02466	6001	ION	
1685	02467	1370	TAD WUSE	/DID SPIRO SERVICE ROUTINE RETURN 0 VOL
1686	02470	7450	SNA	
1687	02471	5774	JMP WZERO	/YES, WAS DUMPING OR NO BREATH
1688	02472	4536	FLTMOL	/NO. GET VOLUME TO BTPS LITERS
1689	02473	4471	BTPS	
1690	02474	4407	REITER	

PULMONARY FUNCTION TEST

691	02475	6144	FPUT FKAC	/SAVE
692	02476	2343	FSUB LSTVOL	/SUBTRACT LAST VOLUME
693	02477	6346	FPUT VOLDIF	/HOW MUCH EXHALED LAST 40 MSEC
694	02500	1354	FADD VENT	/SUMMED OVER WASHOUT
695	02501	6354	FPUT VENT	
696	02502	5144	FGET FKAC	
697	02503	6343	FPUT LSTVOL	
698	02504	0000	FEMIT	
699	02505	7240	CLR CMA	
700	02506	3364	DCR BREATH	/EXHALATION FLAG
701	02507	1371	TAD WNUSE	
702	02510	4465	UNPACK	
703	02511	4407	FENTER	
704	02512	3124	FMUL NZPR10	/GET PHASED N2 SAMPLE
705	02513	6144	FPUT FKAC	
706	02514	3346	FMUL VOLDIF	/N2 VOL THIS TIME FRAME =FN2*DELTA V
707	02515	1351	FADD NZSUM	/SUM OVER WASHOUT
708	02516	6351	FPUT NZSUM	
709	02517	5144	FGET FKAC	
710	02520	2361	ZSUB NZMAX	/CHECK N2 CONCENTRATION
711	02521	0000	FEMIT	
712	02522	1045	TAD 45	/NEED MAX FN2 FOR EACH BREATH
713	02523	7510	SPH	
714	02524	5200	JMP WLOOP	
715	02525	4407	FENTER	
716	02526	5144	FGET FKAC	
717	02527	6351	FPUT NZMAX	/IF WAS HIGHER SAVE IT
718	02530	0000	FEMIT	
719	02531	4576	DACH2	/OUTPUT ON METER
720	02532	7200	CLR	
721	02533	1154	TAD WNKCY	/FLAG SET NONZERO ON FIRST EOB
722	02534	7440	SPH	
723	02535	5200	JMP WLOOP	
724	02536	4407	FENTER	
725	02537	5361	FGET NZMAX	
726	02540	6156	TENT NTIDAL	/MAX N2, FIRST EXHALATION IS AMBIENT N2 FRACTION
727	02541	0000	FEMIT	/USED IN WASHOUT EQUATION
728	02542	5200	JMP WLOOP	
729	02543	0000	LSTVOL.0:0:0	
730	02544	0000		
731	02545	0000		
732	02546	0000	VOLDIF.0:0:0	
733	02547	0000		
734	02550	0000		
735	02551	0000	NZSUM.0:0:0	
736	02552	0000		
737	02553	0000		
738	02554	0000	VENT.0:0:0	
739	02555	0000		
740	02556	0000		
741	02557	0000	ET.0:0	
742	02560	0000		
743	02561	0000	NZMAX.0:0:0	
744	02562	0000		
745	02563	0000		

ORIGINAL PAGE IS  
OF POOR QUALITY

## PULMONARY FUNCTION TEST

PAL8-V98 11/21/74 PAGE 8-3

1746	02564	0000	BREATH.0
1747	02565	0000	WC.0
1748	02566	0000	WSTOP.0
1749	02567	0000	WFIN.0
1750	02570	0000	WUSE.0
1751	02571	0000	WUSE.0
1752	02572	0000	WUSEP.0
1753	02573	0000	WUSEP.0

1754	02574	3062			
1755	02575	3400			
1756	02576	3200			
1757	02577	3250			
1758		2500		PAGE	
1759	02600	7200	NINT.CLA		
1760	02601	1344	TAD LSTCH	/WHICH VOL OR N2	
1761	02602	7640	SZA CLA		
1762	02603	5240	JMP MSINT	/LAST CHANNEL WAS NITROGEN	
1763	02604	7040	CMA		
1764	02605	3344	DCA LSTCH	/LAST CHANNEL WAS VOLUME	
1765	02606	6537	SAMPLE	/SAMPLE N2. GET VOLUME DATA	
1766	02607	7421	MOL		
1767	02610	1115	TAD N2SAM		
1768	02611	6537	SAMPLE		
1769	02612	4467	SPIRO	/USE FOR SPIRO CONTROL	
1770	02613	5217	JMP TOOLO	/NO DATA THERE	
1771	02614	5231	JMP EOB	/END OF BREATH	
1772	02615	3795	SLEAF.DCA I INSERT	/SAVE VOLUME SAMPLE AT END OF QUEUE	
1773	02616	5581	JMP I NITPT	/RETURN FROM INTERRUPT	
1774					
1775					
1776					
1777	02617	7200	TOOLO.CLA		
1778	02620	1154	TAD UNKEY	/UNKEY IS FLAG 0-NO BREATHS	
1779				/1 WAITING FOR DUMP AFTER FIRST EXHALATION	
1780				--1 THROUGH FIRST BREATH AND RESET POINTERS	
1781	02621	7750	SFA SNA CLA		
1782	02622	5215	JMP SLEAF		
1783	02623	4777	JMS INTSU	/ONLY GETS HERE ONCE. THE FIRST ZERO VOL AFTER	
1784				/THE FIRST EXHALATION	
1785	02624	7240	CLA CMA	/RESETS Sums AND POINTERS AFTER AMBIENT EXHALATION	
1786	02625	3344	DCA LSTCH		
1787	02626	7240	CLA CMA		
1788	02627	3154	DCA UNKEY		
1789	02630	5215	JMP SLEAF		
1790					
1791					
1792					
1793					
1794	02631	7200	EOB.CLA		
1795	02632	1154	RAD UNKEY	/FIRST EOB? THE ONE WHERE AMBIENT GAS EXHALED	
1796	02633	7640	SZA CLA		
1797	02634	5215	JMP SLEAF	/NO	
1798	02635	7201	CLA IAC	/YES SET FLAG SAYING ONE EXHALATION	
1799	02636	3154	DCA UNKEY		
1800	02637	5215	JMP SLEAF		
1801					
1802					
1803					
1804					
1805					
1806				/COMES HERE WHEN SAMPLED DATA TO GET IS NITROGEN	
1807	02640	3344	MSINT.DCA LSTCH		
1808	02641	6537	SAMPLE		

1809	02642	7421	MOL	
1810	02643	1132	TAD VOLUME	
1811	02644	1114	TAD DELAY	/SAMPLE VOLUME AT NEXT 48 MSEC TICK
1812	02645	6537	SAMPLE	/ALSO GET NITROGEN DATA
1813	02646	4515	CONVRT	/PACK INTO ONE WORD
1814	02647	3345	DCA NB	/SAVE IT
1815	02650	1164	TAD NLAST	
1816	02651	7041	CIA	/IS THERE ROOM IN THE QUEUE
1817	02652	1163	TAD NSTORE	
1818	02653	7700	SMA CLA	
1819	02654	5776	JMP ABORT	/NO
1820	02655	1345	TAD NB	
1821	02656	3563	DCA I NSTORE	/PUT N2 AT END
1822	02657	1346	TAD VOLBFR	/GET VOLUME FROM FIRST IN, LAST OUT STACK
1823	02660	3562	DCA I VSTORE	/PUT IN QUEUE. THIS VOLUME WAS DELAYED BY
1824				/THE FILO STACK TO PHASE IT WITH N2 SIGNAL
1825	02661	1366	TAD NLAG	/NLAG-THE LENGTH OF THE STACK
1826	02662	7041	CIA	
1827	02663	1365	TAD INSERT	/WHERE THE BUFFER WAS STUCK
1828	02664	3010	DCA I0	
1829	02665	7040	CMA	/SET AUTOINDEX TO MOVE BUFFER UP
1830	02666	1010	TAD I0	
1831	02667	3011	DCA I1	
1832	02670	1366	TAD NLAG	/HOW MANY TIMES THROUGH LOOP
1833	02671	7041	CIA	
1834	02672	3345	DCA NB	
1835	02673	1410	TAD I 10	/MOVE THEM
1836	02674	3411	DCA I 11	
1837	02675	2745	ISE NB	
1838	02676	5273	JMP .-3	
1839	02677	1343	TAD SB	/IS THIS THE FIRST BREATH AFTER O2 INHALATION
1840	02700	7542	SMA SCA	
1841	02701	5334	SMA NOSB	/NO. ALREADY DONE
1842	02702	7700	SMA CLA	
1843	02703	5329	SMA NOSBST	/B-NO START
1844	02704	1562	TAD I VSTORE	/VOLUME ZERO?
1845	02705	7650	SMA CLA	
1846	02706	5323	JMP WFINIS	/YES. FINISHED SB ACQUISITION
1847	02707	1541	TAD INSTR	/GET N2 POINTER
1848	02710	7041	CIA	
1849	02711	1170	TAD NMLST	
1850	02712	7750	SMA SMA CLA	/ROOM FOR ONE MORE PAIR???
1851	02713	5323	JMP WFINIS	/NO. END IT
1852	02714	3341	ISE INSTR	/INCREMENT POINTERS
1853	02715	2342	ISE NOSTP	
1854	02716	1562	TAD I VSTORE	/GET PHASED N2,MOL PAIRS AND STORE
1855	02717	3743	DCA I VSTORE	
1856	02720	1563	TAD I NSTORE	
1857	02721	3741	DCA I WASTE	
1858	02722	3334	JMP NOSB	/EXIT
1859	02723	7201	CIA IAC	/THROUGH SB. SET FLAG
1860	02724	3343	DCA SE	
1861	02725	5334	JMP NOSB	
1862	02726	1562	TAD I VSTORE	/THIS LOOP DOESNT LET SB START UNTIL BREATH DOES
1863	02727	7550	SMA CLA	

WST.

WFINIS.

NOSBST.

1864	02730	5334		JMP NOSB	
1865	02731	7040		CMA	
1866	02732	3343		DCR SB	
1867	02733	5304		JMP WST	
1868					
1869					
1870					
1871	02734	7200	NOSB.	CLA	/EXIT
1872	02735	2162		ISE WSTORE	
1873	02736	2163		ISE NSTORE	/INCREMENT POINTERS
1874	02737	4775		JMS TIMINC	/INCREMENT TIME FOR END OF TEST CHECK
1875	02740	5501		JMP I MITPT	
1876					
1877					
1878					
1879					
1880					
1881					
1882	02741	0000	WNSR. 2		
1883	02742	0000	WNSR. 2		
1884	02743	0000	SB. 9		
1885	02744	0000	LATCH. 0		
1886	02745	0000	NS. 0		
1887	02746	0000	WOLEFR. 0:0:0		
1888	02747	0000			
1889	02750	0000			
1890	02751	0000	0:0:0		
1891	02752	0000			
1892	02753	0000			
1893	02754	0000	0:0:0		
1894	02755	0000			
1895	02756	0000			
1896	02757	0000	0:0:0		
1897	02760	0000			
1898	02761	0000			
1899	02762	0000	0:0:0		
1900	02763	0000			
1901	02764	0000			
1902	02765	2762		INSERT WOLEFR+14	
1903	02766	0014		MLAG. 14	/THESE 2 CTRL DELAY
1904	02767	0003		L15. TEST ACC.TLC	
1905	02769	3724			
1906	02771	1403			
1907	02772	4040			
1908	02773	4000			

ORIGINAL PAGE IS  
OF POOR QUALITY

1909	02775	3134		
1910	02776	3527		
1911	02777	3600		
1912		5000	*3000	
1913	05000	0000	INTSU.0	
1914	05001	1171	TAD INSTRP	
1915	05002	3777	DOA INSTR	/SET UP SINGLE BREATH POINTERS
1916	05003	1172	TAD INSTEP	
1917	05004	3776	DOA INSTE	
1918	05005	1167	TAD INFIRST	/SET UP WASHOUT POINTERS
1919	05006	3162	DOA INSTORE	
1920	05007	1166	TAD INSTART	
1921	05008	3160	DOA INSTORE	
1922	05009	1231	TAD NUMZRO	
1923	05010	3230	DOA INBI	/CLEAR DATA AREAS
1924	05011	1232	TAD STZRO	
1925	05012	3013	DOA IN	
1926	05013	3410	DOA IN10	
1927	05014	1230	TAD INBI	
1928	05015	3212	DOA INE	
1929	05016	1232	TAD INBUMP	
1930	05017	3012	DOA IN	
1931	05018	1234	TAD INDOT	
1932	05019	3230	DOA INBI	
1933	05020	3410	DOA IN10	
1934	05021	3230	DOA INBI	
1935	05022	5234	DOA INE	
1936	05023	5000	DOA ININTSU	
1937	05024	0000	MS1.0	
1938	05025	7751	NUMZRO. - 21	
1939	05026	2742	STZRO. 55-1	
1940	05027	2550	INBUMP. INBUMP-1	
1941	05028	7750	INDOT. - 10	
1942				
1943				
1944				
1945				
1946				
1947	05029	0000	LOOPSU.0	
1948	05030	0100	DOA IN	
1949	05031	1705	TAD IN	
1950	05032	2205	TAD IN	/RAISE PEN
1951	05033	7200	DOA IN	/PUT PEN IN ORIGIN
1952	05034	6200	DOA IN	
1953	05035	7001	DOA IN	
1954	05036	2000	DOA IN	
1955	05037	1207	TAD INST	
1956	05038	3010	DOA IN	
1957	05039	1200	TAD IN	
1958	05040	2201	DOA IN	
1959	05041	3410	DOA IN10	
1960	05042	2201	DOA IN	
1961	05043	5001	DOA IN	
1962	05044	2100	DOA IN	
1963	05045	0100	DOA IN	



1964	03056	5635	JMP I LOOPSU
1965	03057	2542	ZST. LSTWOL-1
1966	03060	7753	ZNM. -25
1967	03061	0000	ZC. 0

C. 2

ORIGINAL PAGE IS  
OF POOR QUALITY

```

1968          EJECT
1969
1970
1971          ✓THIS ROUTINE ENTERED AFTER A ZERO VOLUME RETRIEVED
1972
1973
1974
1975
1976 03062 7200 WZERO.CLA
1977 03063 1774      TAD BREATH
1978 03064 7650      SNA CLA          ✓FIRST ZERO RETURN AFTER A BREATH (EOB)?
1979 03065 5773      JMP WLOOP        ✓YES  EXIT
1980 03066 3774      DCA BREATH      ✓NO CONTINUE
1981 03067 1772      TAD ET          ✓HAS ENOUGH TIME PASSED TO END WASHOUT
1982 03070 7650      SNA CLA        ✓(4896*48 MSEC)
1983 03071 5310      JMP ZLEAVE     ✓NO
1984 03072 4407      FENTER
1985 03073 5771      RGET N2MAX     ✓YES TIME SAYS OK TO END
1986 03074 2331      PSUB PT02     ✓HAS MAX N2 IN THAT BREATH .LT.0.92
1987 03075 0000      FENIT
1988 03076 7200      CLA
1989 03077 1045      TAD 45
1990 03100 7700      SNA CLA
1991 03101 5310      JMP ZLEAVE     ✓NO
1992 03102 1330      TAD ZFRS      ✓YES IT WAS.      IT THE FIRST ONE.
1993 03103 7640      SCA CLA
1994 03104 5325      JMP ZFIN      ✓NO IT WAS NOT.  ZFIN WAS SET BY THE PREVIOUS BREATH
1995 03105 7001      IAC
1996 03106 3339      DCA ZFRS      ✓IT WAS THE FIRST OF TWO IN A ROW SO SET ZFRS
1997 03107 5313      JMP ZLEAVE+3  ✓SNIP THE PART THAT RESETS ZFIN
1998 03110 7200 ZLEAVE.CLA
1999 03111 3330      DCA ZFRS      ✓RESET ZFIN TO ASSURE TWO BREATHS IN A ROW
2000 03112 3770      DCA LSTVOL
2001 03113 3767      DCA LSTVOL+1  ✓RESET LSTVOL TO 0. SO NEXT SUBTRACTION FOR
2002 03114 3765      DCA LSTVOL+2  ✓DELTA V IN 48 MSEC DOES NOT GIVE A NEGATIVE
2003 03115 3771      DCA N2MAX
2004 03116 3765      DCA N2MAX+1  ✓RESET N2MAX FOR NEXT BREATH
2005 03117 3764      DCA N2MAX+2
2006 03123 4407      FENTER
2007 03124 5765      RGET VENT
2008 03122 2762      PSUB PT02     ✓SUBTRACT .2 FROM VENTILATION AT END OF BREATH
2009 03127 0000      FENIT        ✓TO GIVE ALVEOLAR VENTILATION (.2 FUDGE FOR DEAD SPACE
2010 03124 5773      JMP WLOOP
2011
2012
2013
2014
2015 03123 7240 ZFIN.CLA CMA
2016 03126 3761      DCA WFIN      ✓END OF WASHOUT FLAG
2017 03127 5773      JMP WLOOP
2018 03130 0000 ZFRS,0
2019 03131 7773 PT02,7773;2436;5606
2020 03132 2456
2021 03133 5606
    
```

```

2022          EJECT
2023
2024          ✓ROUTINE TO KEEP TRACK OF TIME OF WASHOUT
2025
2026
2027
2028 03134 0000 TIMINC.0
2029 03135 1154      TAD LNKEY
2030 03136 7650      SMA CLA      ✓WASHOUT STARTED?
2031 03137 5734      JMP I TIMINC  ✓NO.  EXIT
2032 03140 2750      ISZ ET+1    ✓YES  SUMP 40 MSEC COUNTER
2033 03141 7410      SKP
2034 03142 2772      ISZ ET      ✓THIS ONLY HAPPENS WHEN ET+1 OVERFLOWS
2035 03143 5734      JMP I TIMINC
2036
2037
2038
2039          ✓FLOAT A POSITIVE 12 BIT NUMBER
2040          ✓TO A FRACTION OF 4096
2041
2042
2043
2044 03144 0000 WD2FLT.0
2045 03145 7100      CIL
2046 03146 7010      RAR      ✓SHIFT RIGHT
2047 03147 3045      DCA 45    ✓PUT IN MSB
2048 03150 7010      RAR
2049 03151 3045      DCA 46    ✓PUT THE SHIFTED OFF BIT INTO LSB
2050 03152 3044      DCA 44    ✓ZERO EXPONENT AND
2051 03153 4407      FENTER
2052 03154 7000      ENORM    ✓NORMALIZE
2053 03155 0000      FEXIT
2054 03156 5744      JMP I WD2FLT
    
```

ORIGINAL PAGE IS  
 OF POOR QUALITY

2055  
 2056 03160 2560  
 2057 03161 2567  
 2058 03162 2076  
 2059 03163 2554  
 2060 03164 2563  
 2061 03165 2562  
 2062 03166 2545  
 2063 03167 2544  
 2064 03170 2543  
 2065 03171 2561  
 2066 03172 2557  
 2067 03173 2400  
 2068 03174 2564  
 2069 03175 3441  
 2070 03176 2742  
 2071 03177 2741  
 2072 3200 \*3200  
 2073  
 2074

EJECT

/ROUTINE TO COMPUTE WASHOUT RESULTS FTER TEST  
 STOREN.B

2075  
 2076 03200 8000  
 2077 03201 7200  
 2078 03202 1777  
 2079 03203 3045  
 2080 03204 1776  
 2081 03205 3046  
 2082 03206 1247  
 2083 03207 3044  
 2084 03210 4407  
 2085 03211 7000  
 2086 03212 3244  
 2087 03213 6144  
 2088 03214 5775  
 2089 03215 2144  
 2090 03216 6144  
 2091 03217 5156  
 2092 03220 2774  
 2093 03221 5121  
 2094 03222 5144  
 2095 03223 4121  
 2096 03224 2773  
 2097 03225 6772  
 2098 03226 5771  
 2099 03227 4772  
 2100 03230 6770  
 2101 03231 5767  
 2102 03232 0000  
 2103 03233 7200  
 2104 03234 1045  
 2105 03235 7650  
 2106 03236 5000  
 2107 03237 4407  
 2108 03240 1772  
 2109 03241 6766

CLA  
 TAD ET  
 DCA 45 /((ET\*4896)+(ET+1))\*0.040=TIME OF WASHOUT IN SEC  
 TAD ET+1  
 DCA 46  
 TAD CKZ7  
 DCA 44  
 FENTER  
 FNORM  
 FVAL CONST /CONST=.0312\*.040/60  
 FPUT FKAC /FUDGE FOR BODY N2 WASHED OUT BASED ON TIME OF WO  
 FGET N2SUM  
 FSUB FKAC /SUBTRACT THIS FROM ACCUMULATED EXHALED N2  
 FPUT FKAC  
 FGET NTIDAL /GET FN2 OF FIRST EXHALATION (AMBIENT)  
 FSUB N2MAX /SUBTRACT FN2 OF LAST EXHALATION  
 FRUT EXP  
 FGET FKAC /DIVIDE CORRECTED TOTAL EXHALED N2  
 FRIV EXP /BY THIS DIFFERENCE IN CONCENTRATIONS  
 FSUB FRT2 /SUBTRACT A FUDGE FOR DEAD SPACE  
 FRUT RV /AND WE NOW HAVE FOUND RV  
 FGET VENT  
 FRIV RV  
 FRUT VZRV /VZRV=RV/VENTILATION DURING WASHOUT  
 FGET VC  
 FENT  
 CLA /GOOD VC?  
 TAD 45  
 SNA CLA  
 JMP I STOREW  
 FENTER  
 FADD RV  
 FPUT TLC /YES. TLC=RV\*VC

2110	03242	0000		FEXIT	
2111	03243	5600		JMP I STOREW	
2112					
2113	03244	7761	CONST.7761:2563:6725		/0.0000200
2114	03245	2563			
2115	03246	6725			
2116	03247	0027	CK27.27		

ORIGINAL PAGE IS  
OF POOR QUALITY

```

2117
2118 /ROUTINE TO ANALYZE FIRST EXHALATION AFTER BREATHING 100% O2
2119
2120
2121
2122 03250 0000 SBANAL,0
2123 03251 7200 CLA
2124 03252 1765 TAD W/STR
2125 03253 3764 DCA VUSE /USE FEV ROUTINES TO FIND MAX VOLUME
2126 03254 4763 JMS MAX/ /OF THIS EXHALATION
2127 03255 3341 DCA INDRC
2128 03256 1741 TAD I INDRC
2129 03257 4536 FLTVOL /GET IT. CONVERT TO LITERS BTPS
2130 03260 4471 BTPS
2131 03261 4407 FENTER
2132 03262 6757 FPUT VC /STORE AS VC
2133 03263 5762 FGET FPT75 /USE FEV ROUTINES TO FIND VOLUME
2134 03264 0000 FEXIT /SAMPLES CORRESPONDING TO 0.75.
2135 03265 4761 JMS SEARCH /1.25 FOR N2SLOPE
2136 03266 3337 DCA PT750
2137 03267 4407 FENTER
2138 03270 5762 FGET FPT75
2139 03271 1760 FADD FPT25
2140 03272 1760 FADD FPT25
2141 03273 0000 FEXIT
2142 03274 4761 JMS SEARCH
2143 03275 3340 DCA PT1250 /STORE THESE ADDRESSES IN PT750,PT1250
2144 03276 7201 CLA IAC
2145 03277 1172 TAD W/STRP /FIND DISPLACEMENT FROM START OF ARRAY FOR EACH
2146 03280 7041 CIA
2147 03301 1337 TAD PT750
2148 03302 7510 SPA
2149 03303 7041 CIA
2150 03304 1171 TAD W/STRP /USE THESE DISPLACEMENTS FROM START OF N2
2151 03305 3337 DCA PT750 /ARRAY TO GET CORRESPONDING N2 SAMPLES ADDRESSES
2152 03306 7201 CLA IAC
2153 03307 1172 TAD W/STRP
2154 03310 7041 CIA
2155 03311 1340 TAD PT1250 /FOR BOTH VALUES
2156 03312 7510 SPA
2157 03313 7041 CIA
2158 03314 1171 TAD W/STRP
2159 03315 3340 DCA PT1250 /STORE IN PT750,PT1250
2160 03316 1737 TAD I PT750 /GOING INDIRECTLY. GET THE TWO VALUES
2161 03317 4465 UNPACK
2162 03320 4407 FENTER
2163 03321 3124 FMUL N2PR10 /CONVERT TO FRACTIONS
2164 03322 6144 FPUT FKAC
2165 03323 0000 FEXIT
2166 03324 7200 CLA
2167 03325 1740 TAD I PT1250
2168 03326 4465 UNPACK
2169 03327 4407 FENTER
2170 03330 3124 FMUL N2PR10
2171 03331 2144 FSUB FKAC /TAKE DIFFERENCE

```

2172	03332	3173
2173	03333	6757
2174	03334	0000
2175	03335	4756
2176	03336	5650
2177	03337	0000
2178	03340	0000
2179	03341	0000
2180	03342	7476
2181	03343	7676
2182	03344	7676
2183	03345	2226
2184	03346	4040
2185	03347	4040
2186	03350	4040
2187	03351	4000

FMUL F100  
 FPUT N2DELT  
 FEXIT  
 JMS CVS  
 JMP I SBANAL  
 PT750.0  
 PT1250.0  
 INDRC.0  
 LI. TEXT '<>>>>RV'

/MUL BY 100 TO PUT IN PERCENT  
 /STORE AS N2DELT  
 /GO COMPUTE CLOSING VOLUME

ORIGINAL PAGE IS  
 OF POOR QUALITY

2188			EJECT	
2189	03356	3608		
2190	03357	1203		
2191	03360	2070		
2192	03361	2104		
2193	03362	2073		
2194	03363	2277		
2195	03364	1647		
2196	03365	2742		
2197	03366	1217		
2198	03367	1214		
2199	03370	1211		
2200	03371	2554		
2201	03372	1200		
2202	03373	2076		
2203	03374	2561		
2204	03375	2551		
2205	03376	2560		
2206	03377	2557		
2207		3400	*3400	
2208				
2209				
2210			✓ROUTINE TO PLOT SINGLE BREATH ON XY PLOTTER	
2211				
2212				
2213	03400	0000	FPL0T.0	
2214	03401	7200	CLA	
2215	03402	6065	DAC	✓PEN TO ORIGIN
2216	03403	7001	IAC	
2217	03404	6065	DAC	
2218	03405	6002	IOF	
2219	03406	1171	TAD WNSTP	
2220	03407	3010	DCR 10	✓SET POINTERS TO START OF VOL. FN2 ARRAYS
2221	03410	1172	TAD WNSTP	
2222	03411	3011	DCR 11	
2223	03412	1010	TAD 10	
2224	03413	7041	CIA	
2225	03414	1777	TAD WNSTR	✓GET NUMBER OF POINTS TO PLOT
2226	03415	7041	CIA	
2227	03416	3121	DCR EXP	
2228	03417	1410	TAD I 10	✓GET FIRST PAIR
2229	03420	7421	WGL	
2230	03421	1411	TAD I 11	✓VOLUME IN AC. FN2 SAMPLE IN MG
2231	03422	2121	ISE EXP	✓BUMP COUNTER
2232	03423	4267	JMS PLOT	✓GO PLOT FIRST
2233	03424	4243	JMS PLOT	✓WAIT 99 USEC
2234	03425	1242	TAD DOWN	
2235	03426	6075	CTEL	✓LOWER PEN
2236	03427	1410	TAD I 10	
2237	03430	7421	WGL	
2238	03431	1411	TAD I 11	✓GET NEXT PAIR
2239	03432	4263	JMS PLOT	✓GO PLOT
2240	03433	2121	ISE EXP	✓THROUGH
2241	03434	5224	JMS PLOT	✓NO. GO TO START OF LOOP AND WAIT
2242	03435	1241	TAD UP	✓YES RAISE PEN AND EXIT



/PULMONARY FUNCTION TEST

PAL8-V9B 11/21/74 PAGE 11-3

2243	03430	6075	CTRL
2244	03437	6001	ION
2245	03440	5600	JMP I FPLOT
2246	03441	7771	UP.7771
2247	03442	0001	DOWN.0001

/PULMONARY FUNCTION TEST

PALE-V98 11/21/74 PAGE 11-4

```

2248
2249      03443  0000  EJECT
2250      03444  7201  M$WAIT,0
2251      03445  7040  CLA IAC      /LOOP TO DELAY 86 MSEC
2252      03446  3262  CMA
2253      DCA M$WA      /COUNTER TO -2 >
2254
2255
2256      03447  6533  M$WTR.
2257      03450  5247  6533
2258      03451  6537  JMP -1      /WAIT FOR TWO AD CONVERSIONS AT 46 MSEC EA
2259      03452  7200  SAMPLE
2260      03453  1132  CLA
2261      03454  1114  TAB VOLUME
2262      03455  6537  TAB DELAY
2263      03456  7200  SAMPLE
2264      03457  2262  CLA
2265      03458  5247  (S2 M$WA
2266      03461  5643  JMP M$WTR
2267      JMP -1 M$WAIT
2268      03452  0000  M$WA,0
2269
2270
2271
2272
2273
2274      /ROUTINE TO SCALE VOL,N2 PAIRS AND SEND TO PLOTTER
2275
2276
2277      03463  0000  PLOT,0
2278      03464  3122  DCA MANTIS
2279      03465  7501  M$A      /SAVE VOL SAMPLE
2280      03466  4465  UNPACK
2281      03467  4407  CENTER
2282      03470  3124  FMUL F2047
2283      03471  3137  FMUL F2047
2284      03472  0000  FEXIT
2285      03473  2044  (S2 44
2286      03474  4472  FIX
2287      03475  7100  /INCREMENTING EXPONENT MUL BY 2, GIVING RANGE OF 0-.5
2288      03476  7004  /MAKE AN INTEGER>>>
2289      03477  0116  RAL
2290      03478  3323  AND K7774
2291      03501  1122  POS M$HOLD
2292      03502  4536  TAB MANTIS
2293      03503  4471  FLT/VOL
2294      03504  4407  BTPS
2295      03505  4524  CENTER
2296      03506  3137  /VOL TO BTPS LITERS
2297      03507  0000  FEXIT
2298      03510  4472  FMUL F7
2299      03511  7100  /DIVIDE VOL BY 7, GIVING FRAC OF FULL SCALE
2300      03512  7004  /FRAC OF FULL SCALE COUNTS
2301      03513  0116  RAL
2302      03514  7001  AND K7774
2303      IAC      /POS 12 BIT INTEGER
2304      /SET CHANNEL 1
    
```

ORIGINAL PAGE IS  
OF POOR QUALITY

/PULMONARY FUNCTION TEST

2303	03515	6065	DAC	/SEND IT
2304	03516	7200	CLA	
2305	03517	1323	TAD N2HOLD	
2306	03520	6065	DAC	/SENT N2 VALUE
2307	03521	7200	CLA	
2508	03522	5663	JMP I PLOT	/EXIT
2309	03523	0000	N2HOLD.0	
2310	03524	0003	F7, 3:3400:0000	
2311	03525	3400		
2312	03526	0000		
2313				
2314				
2315				
2316				
2317				
2318	03527	7200	ABORT.CLA	
2319	03530	1333	TAD ABTMPT	
2320	03531	4512	OUTPUT	
2321	03532	5470	BEGIN	
2322	03533	3534	ABTMPT.ABTMG	
2323	03534	2324	ABTMG.TEXT 'STORAGE OVERRUN ABORT(>'	
2324	03535	1722		
2325	03536	0107		
2326	03537	0540		
2327	03540	1726		
2328	03541	0522		
2329	03542	2225		
2330	03543	1640		
2331	03544	0102		
2332	03545	1722		
2333	03546	2474		
2334	03547	7600		
2335	03550	0000	PRTBFR.0:0:0:0:0:0:0:0:0:0:0:0:0:0:0	
2336	03551	0002		
2337	03552	0000		
2338	03553	0000		
2339	03554	0000		
2340	03555	0000		
2341	03556	0000		
2342	03557	0000		
2343	03560	0000		
2344	03561	0000		
2345	03562	0000		
2346	03563	0000		
2347	03564	0000		
2348	03565	0000		
2349	03566	0000		
2350	03567	0000		
2351	03570	0000		
2352	03571	0000		

2353 03577 2741  
 2354 3600 \*3600  
 2355  
 2356  
 2357  
 2358  
 2359  
 2360

/ROUTINE TO COMPUTE CLOSING VOLUMES FROM SINGLE BREATH

2361 03600 0000 CWS. 0  
 2362 03601 4407  
 2363 03602 5777  
 2364 03603 2363  
 2365 03604 0000  
 2366 03605 4776  
 2367 03606 3351  
 2368 03607 4407  
 2369 03610 5777  
 2370 03611 2366  
 2371 03612 0000  
 2372 03613 4776  
 2373 03614 3352  
 2374 03615 1352  
 2375 03616 3353  
 2376 03617 4776  
 2377 03620 1353  
 2378 03621 1350  
 2379 03622 3354  
 2380 03623 1754 C/LOOP. TAD I FSSTRT  
 2381 03624 7421  
 2382 03625 1752  
 2383 03626 4774  
 2384 03627 2354  
 2385 03630 2352  
 2386 03631 1352  
 2387 03632 7041  
 2388 03633 1351  
 2389 03634 7740  
 2390 03635 5223  
 2391 03636 1021  
 2392 03637 4474  
 2393 03640 4407  
 2394 03641 6020  
 2395 03642 0000  
 2396 03643 4315  
 2397 03644 1353  
 2398 03645 3352  
 2399 03646 1353  
 2400 03647 1350  
 2401 03650 3354  
 2402 03651 1754 CKLP.  
 2403 03652 4407  
 2404 03653 4407  
 2405 03654 3124  
 2406 03655 6124  
 2407 03656 0000

```

FENTER
FGET VC
FSUB F1PTS /USING FEV ROUTINES FIND POINT IN VOLUME ARRAY
FEXIT /CORRESPONDING TO (VC-1.5) LITERS AND
JMS SEARCH /((VC-2.5) LITERS
DCA LSEND /THESE VALUES WOULD NEED TO BE ADJUSTED
FENTER /DOWNWARD IF THE ROUTINE WERE TO BE USED WITH
FGET VC /SUBJECTS WITH LARGE CV
FSUB F2PTS
FEXIT
JMS SEARCH
DCA LSSTRT
TAD LSSTRT /GET LEAST SQUARES START AND FINISH ADDRESS
DCA LSSTRT
JMS CLSUM /CLEAR LEAST SQUARES SUMS
TAD LSSTRT
TAD LDEL
DCA FSSTRT
C/LOOP. TAD I FSSTRT
DCL
TAD I LSSTRT /INDEX THROUGH ARRAYS GETTING N2 VOL PAIRS
JMS SUMS /ROUTINE TO DO SUMS FOR LINEAR REGRESSION
ISZ FSSTRT
ISZ LSSTRT
TAD LSSTRT
DCA
DIA /THROUGH?
TAD LSEND
SMA SZA CLA
JMP C/LOOP /NO
TAD N+1 /YES. GET NUMBER OF POINTS
FLOAT
FENTER
FPUT N
FEXIT
JMS LSO /COMPUTE SLOPE, INTERCEPT BASED ON SUMS
TAD LSSTRT /WE NOW HAVE FN2=(SLOPE*VOL)+INTERCEPT
DCA LSSTRT /ON INTERVAL (VC-2.5, VC-1.5)
TAD LSSTRT /RESET POINTERS TO START OF INTERVAL.
TAD LDEL
DCA FSSTRT
TAD I FSSTRT /START OF LOOP TO LOCATE LAST POINT FOR WHICH
UNPACK /ACTUAL SAMPLED N2 IS LESS THAN PREDICTED BY
FENTER /REGRESSION. EXTRAPOLATE BEYOND INTERVAL
FMSL N2PR10
FPUT FKAC /GET SAMPLED N2 IN FLOATING
FEXIT
    
```

/PULMONARY FUNCTION TEST

PALS-V9B 11/21/74 PAGE 12-1

2408	03657	1753	TAD I LSSTR1	
2409	03660	4536	FLTVOL	/GET VOL IN BTFS LITERS
2410	03661	4471	BTFS	
2411	03662	4407	FENTER	
2412	03663	3355	FMUL SLOPE	/MUL BY SLOPE
2413	03664	1360	FADD INT	/ADD INTERCEPT
2414	03665	2144	FSUB FKAC	/SUBTRACT SAMPLED M2
2415	05666	0000	FEXIT	
2416	03667	1045	TAD 45	
2417	03670	7710	SPA CLA	/ABOVE LINE?
2418	03671	5274	JMP CKLP1	/YES
2419	03672	1353	TAD LSSTR1	/NO SAVE THIS POINT AS LAST
2420	03673	3352	FOR LSSTR1	
2421	03674	2353	CKLP1,ISE LSSTR1	
2422	03675	2354	ISE FSSTR1	/BUMP POINTERS
2423	03676	1353	TAD LSSTR1	
2424	03677	7041	CIA	/THROUGH?
2425	03700	1773	TAD WSTR	
2426	03701	7740	S1A S2A CLA	
2427	03702	5251	JMP CKLP	/NO GET NEXT POINT
2428	03703	1752	TAD I LSSTR1	/YES CHECKED TO END OF BREATH
2429	03704	4536	FLTVOL	
2430	03705	4471	BTFS	/GET LAST POINT BELOW TO BTFS LITERS
2431	03706	4407	FENTER	
2432	05707	6144	FPUT FKAC	
2433	03710	5777	FGET VC	
2434	05711	2144	FSUB FKAC	/SUBTRACT FROM VC
2435	03712	6772	FPUT CV	/STORE AS CLOSING VOLUME
2436	03713	0000	FEXIT	
2437	03714	5600	JMP I CVS	
2438				
2439				
2440				
2441				
2442				
2443				
2444	03715	0000	/ROUTINE TO USE SUMS TO CALCULATE SLOPE, INTERCEPT	
2445	03716	4407	LSQ,0	
2446	03717	5026	FENTER	
2447	05720	5026	FGET EX	
2448	03721	6144	FPUT EX	
2449	03722	5020	FPUT FKAC	
2450	03723	3034	FGET N	
2451	03724	2144	FMUL EX2	
2452	03725	6121	FSUB FKAC	
2453	05726	5026	FPUT EXP	
2454	03727	3031	FGET EX	
2455	03730	6144	FMUL EX	
2456	03731	5020	FPUT FKAC	
2457	03732	5023	FGET N	
2458	03733	2144	FMUL EXY	
2459	03734	4121	FSUB FKAC	
2460	03735	6355	FPUT EXP	
2461	03736	5023	FPUT SLOPE	
2462	03737	5023	FGET EX	
			FPUT EXY	

ORIGINAL PAGE IS  
OF POOR QUALITY

2463	03740	6144	FPUT FKAC
2464	03741	5034	FGET EX2
2465	03742	3051	FMUL ZY
2466	03743	2144	FSUB SHAC
2467	03744	4121	FPIV EXP
2468	03745	6760	FPUT INT
2469	03746	0303	F3MIT
2470	03747	5715	JMP I L5Q
2471	03750	0551	LSDEL.551
2472	03751	0000	LSEND.0
2473	03752	0000	LSSTR1.0
2474	03753	0000	LSSTR1.0
2475	03754	0000	FSSTR1.0
2476	03755	0000	SLOPE.0:0:0
2477	03756	0000	
2478	03757	0000	
2479	03760	0000	INT.0:0:0
2480	03761	0000	
2481	03762	0000	
2482	03763	3001	F1PTS.1:3000:0
2483	03764	3000	
2484	03765	0000	
2485	03766	0002	F2PTS.2:2400:0
2486	03767	2400	
2487	03770	0000	
2488	03772	1200	
2489	03773	2742	
2490	03774	0536	
2491	03775	1756	
2492	03776	2104	
2493	03777	1214	
2494		4000	*4000
2495	04000	0000	DATH.0
2496			S

ABORT	3527	EX	0026	F2PT5	3766	L9	1303
ABTMG	3534	EXP	0121	F2047	0137	MANTIS	0122
ABTMPT	3533	EXY	0023	F3GTR	2065	MAXV	2277
AC	1041	EX2	0034	F7	3524	MEFR	1236
ADAD10	0111	EY	0031	GG	1553	MESSAG	0657
ADLOOP	0134	F	1366	HOLD	0720	MGPT	0112
AD21WD	0474	FADD	1000	INDRC	3341	MINUSH	0147
AUX	1341	FDIV	4000	INIT	0200	MINUSP	1520
B	0760	FENTER	4467	INPUT	0106	MINUSS	0120
BAD	2137	FELMPT	1653	INSERT	2765	MMFR	1241
BEGIN	5470	FEVS	1600	INT	3760	MO	1037
BIGGER	2141	FEVT	1222	INTSU	3000	MSG1	0075
BREATH	2564	FEV1	1225	KEYIN	0103	MSG2	0076
BTPS	4471	FEXIT	0000	KHRT	0472	MSINT	2640
BTPSFC	1753	FEXT	0000	K10	0473	MSWA	3462
BTPSR	1732	FGET	5000	K100	1146	MSWAIT	3443
CALMPT	1571	FIRST	1140	K212	1153	MSWTR	3447
CALMSG	0751	FIRST1	2145	K215	1147	MSWT1	3424
CALN2	1521	FIX	3472	K237	1145	MS1PK	0077
CALS	1400	FIXX	1533	K25	2060	MS2PK	0100
CALXIT	1473	FKAC	0144	K3	0117	M13	1570
CALXTP	1523	FLAGCL	1513	K31	2060	K232	0656
CC2TLC	1247	FLEXIT	1654	K77	0107	M37	1144
CHHOLD	1150	FLGCL	1513	K7774	0116	M74	1151
CHLP	3651	FLO	2000	L	0565	M76	1152
CHLP1	3674	FLOAT	4474	LASTSM	0110	N	0020
CK27	3247	FLEST	1622	LF	1132	NAMES	0733
CLOSE	0131	FLTEMP	2241	LINK	1040	NAMESP	0312
CLSUM	1756	FLTR	2152	LINKMG	0721	NB	2745
CONST	3244	FLTRVL	4535	LOOPAD	1572	NB1	3030
CONVRT	4515	FLWRT	1623	LOOPSU	3035	NC	1770
CTRL	0075	FMPY	7000	LOST	0723	NCI	1771
CTRL1	0612	FMUL	3000	LOSTNG	0713	NEWBR	1656
CV	1200	FNORM	7000	LOSTPT	0722	NEWMG	0702
CVLOOP	3623	FN2CL	1515	LSDEL	3750	NEWS1	1134
CVS	3600	FOUT	4466	LSEND	3751	NEWS2	1457
CVBVC	1244	FOUTS	0213	LSQ	3715	NEWPT	0335
C13	2163	FPL0T	3400	LSSTR	3752	NEWS	0316
D	1563	FPT040	2274	LSSTR1	3753	NEWS5	0327
DAC	0065	FPT2	2075	LSTCH	2744	NEWV	2312
DACN	1524	FPT25	2078	LSTVOL	2543	PHOLD	1522
DACN2	4570	FPT75	2075	LWMM	2337	NLAG	2766
DAPT	0307	FPUT	5000	L1	3342	NLAST	0164
DATA	4000	FOTE	2052	L10	1310	NCHG	0440
DATUM	0306	FR	0041	L11	1315	NOSB	2734
DECODE	1063	FRP	0311	L12	1322	NOSBST	2726
DELAY	0114	FRSMG	0102	L13	1327	NOSHPT	0320
DIG	0522	FSSTR	3754	L14	1334	NOSTOP	1503
DIGP	0310	FSUS	3000	L15	2767	NOTPCK	1113
DOWN	3442	FVC2VC	1200	L3	0771	NP	1767
DUMAD	0161	F1PT2	2101	L3	1232	NSTART	0163
DVM	0133	F1PT5	3763	L4	1257	NSTORE	0163
EQ8	2631	F10	1706	L6	1264	NTIDAL	0156
ERR	1565	F100	0173	L7	1271	NUMOUT	0313
ET	2557	F12FEV	1230	L8	1276	NUMERO	3031

NUSEP	2572	TYPE	1106
NWLST	0170	TYPFLG	1514
NWLST1	5317	UNIT	1154
N2DELT	1203	UNITP	0313
N2HOLD	3523	UNPACK	4465
N2MAX	2561	UP	3441
N2PRI0	0124	VADATO	1552
N2SAM	0113	VALVE	0127
N2SUM	2551	VA2RV	1211
N2SUMP	3033	VBELOW	0450
N2ZCT	3034	VC	1214
OFFSET	0622	VCLC	1667
OK	0433	VCLOSE	0455
OPEN	0130	VCOMP	2000
OUTCT	0314	VENT	2554
OUTPUT	4512	VEOB	1650
OVERY	0230	VFHI	0142
P	1172	VFIRST	0187
PC	1030	VFLO	0143
PLOT	3463	VIN	1646
PRTBFB	3530	VINT	1711
PRTBT	0105	VKEY	2244
PT02	3131	VKEYIN	1651
PT1250	3340	VLAST	0465
PT750	3337	VLPRI0	0150
QUE	0700	VM	2345
READY	4473	VMP	2343
REPORT	0236	VNKEY	0154
RETURN	1111	VOLFEB	2746
RIGHT	1060	VOLDIF	2546
RPT	1425	VOLUME	3132
RPTCK	0557	VPKEY	0155
RPTR	2114	VPOINT	2061
RV	1200	VSHIFT	0467
SAMPLE	6537	VSKEY	0153
SB	2743	VSTART	0135
SBANAL	3250	VSTORE	0162
SB2VOL	1737	VSM	3347
SEARCH	3104	VTEMP	0466
SERVIC	1000	VTHRESH	0470
SLEAF	2615	VU	2344
SLOPE	3755	VUSE	1647
SPIRO	4467	VUSEP	2573
SPIROS	0400	VWANT	2147
STORE	1727	VWATCH	0471
STOREW	3200	VADATO	2366
STORP	0235	WAIT	0114
STPO	3032	WAITPT	0104
SUNS	0330	WASHS	2350
THRU	1120	WC	2565
TIMINC	3134	WCLC	2421
TLC	1217	WD2FLT	3144
TOOLO	2617	WFIN	2537
TTI	0600	WFINIS	0723
TTO	1042	WINT	2600

WKEY	2366
WLOOP	2400
WSTR	2741
WSTRP	0171
WNUSE	2571
WST	2704
WSTOP	2566
WLAST	0166
WSTR	2742
WSTRP	0172
WUSE	2570
WZERO	3062
XHOLD	0372
XIT	1026
XITPT	0101
ZC	3061
ZFR	3125
ZFRS	3130
ZLEAVE	3110
ZM1	3060
ZST	3057

ORIGINAL PAGE IS  
OF POOR QUALITY



ERRORS DETECTED: 0  
LINKS GENERATED: 81

ORIGINAL PAGE IS  
OF POOR QUALITY

ABORT	1819	2318*								
ABIMG	2322	2323*								
ABIMPT	2319	2322*								
AC	676	703	789*							
ADATIO	119*	210	255	685	985	1845	1155	1180	1601	
ADLOOP	151*	209	254	1844	1179					
AD2LWD	126	451*	473							
AUX	256	929*	949							
B	661*	880								
BAD	1417*	1421								
BEGIN	94*	291	327	1846	1194	1626	1639	2321		
BIGGER	1408	1419*								
BREATH	1700	1746*	1977	1980						
BTPS	96*	353	1217	1314	1323	1481	1488	1487	1689	2130
	2293	2410	2430							
BTPSFC	1238	1278*								
BTPSR	97	1256*	1280							
CALMPT	974	1115*								
CALMSG	652*	1115								
CALN2	984	1065*								
CALS	553	973*								
CALXIT	1039*	1067								
CALXTP	982	1067*								
CC2TLC	865*	947								
CHOLD	735	736	740	744	792*					
CKLP	2402*	2427								
CKLP1	2418	2421*								
CK27	2062	2116*								
CLOSE	148*	433								
CLSUM	1288*	1296	2376							
CONST	2086	2113*								
CONVRT	125*	385	1030	1913						
CTPL	25*	207	420	434	1162	1958	2235	2243		
CTRL1	535	541*								
CV	832*	939	943	2435						
CVLOOP	2380*	2390								
CMS	2175	2361*	2437							
CM2MC	862*	942								
CI3	1440	1446*								
P	1094	1097	1100*	1113						
DAC	21*	373	980	1088	1226	1952	1954	2215	2217	2303
	2306									
DACN	195	1072*	1031							
DACN2	194*	1005	1719							
DAPT	208	293*	316							
DATA	152	190	2425*							
DATUM	269	275	277	278	279	292*				
DECODE	728	732*								
DELAY	123*	1028	1237	1607	1811	2261				
DIG	294	470*								
DIGP	264	294*								
DOWN	2234	2247*								
DUMAD	180*	1124								
DWT	150*	1079	1225							
EOB	1771	1794*								
ERR	1039	1111*								
ET	1741*	1981	2032	2034	2078	2080				
EX	72*	356	357	2446	2447	2453	2461			
EXP	139*	355	358	359	362	2093	2095	2227	2231	2248

ORIGINAL PAGE IS  
OF POOR QUALITY

	2452	2459	2467							
EXY	69*	364	365	2457	2462					
EX2	78*	368	361	2450	2464					
EY	75*	348	349	2454	2465					
F	807	808	951*							
FADD	10*	348	356	360	364	944	1694	1707	2108	2139
	2140	2413								
FDIV	14*	932	936	940	945	1219	1490	2095	2099	2295
	2459	2467								
FENTER	22*	274	345	354	930	1001	1011	1073	1210	1257
	1273	1315	1324	1335	1341	1347	1353	1382	1402	1442
	1474	1481	1488	1698	1703	1715	1724	1984	2006	2051
	2084	2107	2131	2137	2162	2169	2281	2294	2362	2368
	2393	2404	2411	2431	2445					
FEVMPT	1147	1189*								
FEVS	556	1148*								
FEVT	244*	932	935	1316	1327	1329				
FEV1	847*	931	1325							
FEKIT	19*	276	350	356	940	1004	1013	1075	1221	1259
	1276	1317	1332	1337	1344	1349	1355	1384	1404	1444
	1477	1483	1491	1698	1711	1713	1727	1987	2009	2055
	2102	2110	2134	2141	2165	2174	2294	2297	2365	2371
	2395	2407	2415	2435	2469					
FEXT	17*									
FGST	15*	275	358	362	931	935	939	943	1012	1326
	1329	1336	1343	1348	1696	1709	1716	1725	1985	2007
	2088	2091	2094	2098	2101	2133	2139	2363	2369	2433
	2446	2449	2453	2456	2461	2464				
FIRST	720	727	729	762	787*					
FIRST1	1588	1410	1413	1424*						
FIX	99*	1076	1222	2296	2298					
FIXX	99	1088*	1110	1112						
FKAC	160*	347	363	1470	1490	1691	1696	1705	1709	1716
	2087	2089	2090	2094	2164	2171	2406	2414	2432	2434
	2442	2443	2455	2458	2463	2466				
FLAGCL	992	995	998	1059*						
FLEMIT	1169	1185	1193*							
FLGCL	1033	1038*								
FLO	1309	1352	1460*	1467	1470	1492				
FLOAT	102*	1473	2392							
FLPST	1164*									
FLTEMP	1492	1489	1493*							
FLTR	102	1437*	1445							
FLVOL	153*	352	1216	1313	1322	1400	1479	1496	1668	2129
	2292	2409	2429							
FLUNIT	1165*	1177	1227							
FMPY	12*									
FNUJ	13*	346	359	365	933	937	941	946	1002	1074
	1320	1250	1275	1327	1330	1475	1794	1796	2036	2163
	2170	2172	2202	2293	2296	2405	2412	2447	2450	2454
	2457	2462	2467							
FNORM	18*	1274	1443	2052	2065					
FN2CL	1003	1012	1061*							
FOUT	90*	264	1013							
FOUTS	91	215*	233							
FPLOT	1638	2213*	2245							
FPT040	1475	1521*								
FPT2	1343	1372*	2000	2096						
FPT25	1326	1366*	2139	2140						
FPT75	1370	1369*	2133	2138						





NOSTOP	1842	1859*								
NOTPCK	719	756*								
NP	1289	1297*								
NSTART	184*	1627	1643	1655	1661	1663	1920			
NSTORE	182*	1629	1657	1679	1680	1317	1821	1856	1873	1921
NTIDAL	177*	1726	2091							
NUMOUT	357	299*	318							
NUMZRO	1922	1938*								
MUSEP	1647	1651	1752*							
MWLEST	187*	1849								
MWLST!	188*									
M2DELT	829*	2173								
MCHOLD	2290	2305	2309*							
MEMAX	1710	1717	1725	1743*	1985	2003	2004	2005	2092	
MZFR10	142*	346	1002	1704	2165	2170	2282	2405		
MZBAM	122*	906	989	1027	1767					
MZSUM	1707	1780	1735*	1940	2088					
MZBUMP	1029	1940*								
MZCCT	1951	1941*								
OFFSET	543	543*								
OK	411*	419								
OPEN	147*	306	398	419	426	1161				
OUTCT	259	201	300*	320	325					
OUTPUT	120*	338	273	336	314	975	1143	2320		
OVERN	270*	290								
P	798	805	802	909	810	815*				
PC	692	705	706*							
PLOT	2232	2239	2277*	2508						
PRTBFR	115	240	2305*							
PRTBT	115*									
PT02	1986	2019*								
PTL250	2143	2155	2159	2167	2178*					
PT750	2135	2147	2151	2180	2177*					
QUE	597	607*								
READY	102*	371	266							
REPORT	252*	568								
RETURN	709	747	754*							
RIGHT	722	729*								
RST	994*	1009	1019							
ASTCH	101	510*	515							
SPTR	1019*	1416								
ZV	293	320*	922	2097	2099	2109				
SAMPLE	30*	387	990	1025	1029	1122	1125	1149	1152	1234
	1250	1005	1006	1735	1703	1306	1512	2250	2262	
SP	1000	1060	1091	1024*	1030					
SERIAL	1006	2123*	2171							
CONTROL	154	1267*	1277							
SERACH	1758	1309	1345	1350	1361*	1410	1423	2135	2142	2366
	2572									
SERVIC	59	576*								
SLEAF	1770*	1732	1721	1797	1820					
SLOPE	2412	2460	2470*							
SPIRO	92*	1204	1269							
SPIROS	97	372*	400	413	414	415	422	423	428	436
STORE	1248	1248*								
STOREW	1637	2076*	2100	2111						
STORF	319	237	340*							
STORV	1024	1039*								
SUMS	541*	368	2383							
THPU	734	758	761*							

TIMINC	1874	2028*	2031	2035					
TLC	841*	945	2169						
TOOLO	1770	1777*							
TTI	530*	697							
TTO	112	694	715*	782					
TYPE	751*	755	769	774					
TYPFLG	1007	1010	1056	1060*					
UNIT	297	797*							
UNITP	266	297*							
UNPACK	88*	344	1009	1702	2161	2168	2200	2403	
UP	1949	2242	2246*						
WADAIO	1154	1188*							
VALVE	146*	208	396	421	424	435	1163		
VA2PV	835*	2100							
VBELOW	395	424*							
VC	838*	936	948	2101	2132	2363	2369	2433	
VCCLC	1173	1213*							
VCLOSE	420*								
VCOMP	1182	1309*	1356						
VENT	1694	1895	1733*	2007	2098				
VEOB	1153	1175	1178	1186*	1244				
VFI	158*	1534	1351	1405	1472	1485			
VFIRST	106*	1648	1666	1660	1918				
VELO	159*	1333	1346	1432	1473				
VIN	1171	1184*	1204	1249	1250				
VINT	1198	1252*							
VKEY	1187	1497*	1616						
VKEYIN	1156	1187*							
VLAST	403	410	432	437*					
VLPRI0	164*	1275							
VM	1533	1539	1564	1560	1578*				
VMP	1535	1538	1570	1573	1575	1573*			
VKEY	175*	1150	1512	1721	1778	1788	1795	1799	1963
VOLBFR	1822	1887*	1902						2029
VOLDIF	1693	1705	1732*						
VOLUME	149*	151	1253	1236	1606	1810	2260		
VKEY	176*	1519							
VPOINT	1311	1312	1320	1321	1359*	1387	1399	1411	1412
VSHIFT	459*	453	457	452	464	468			1422
VKEY	174*	1150	1166	1505	1624	1962			
VSTART	152*	1205	1205	1318	1396	1531	1534		
VSTORE	131*	1692	1663	1823	1844	1854	1852	1872	1919
VSP	1561	1532	1537	1592*					
VTEMP	336	388	412	438*	452	454			
VTHRSH	393	440*							
VJ	1552	1551	1553	1558	1369	1577*			
VUSE	1160	1135*	1209	1214	1215	1414	1555	1574	2125
VUSEP	1640	1633	1753*						
VWANT	1393	1403	1425*						
VWATCH	408	417	431	441*					
WADAIO	1600	1615*							
WAIT	114	124*							
WAITPT	114*								
WASHS	573	1598*							
WC	1650	1674	1747*						
WCLC	1331	1645*							
WD2FLT	89	2044*	2054						
WFIN	1632	1749*	2016						
WFINIS	1846	1801	1859*						
WINT	1615	1759*							

ORIGINAL PAGE IS OF POOR QUALITY

WKEY	1602	1616*								
WLOOP	1610	1623*	1634	1714	1723	1728	1979	2010	2017	
WSTR	1847	1852	1857	1882*	1915	2225				
WSTRP	189*	1914	2150	2158	2219					
WNUSE	1652	1701	1751e							
WST	1844*	1867								
WSTOP	1740*									
WLAST	185*									
WSTR	1853	1835	1823*	1917	2124	2425				
WSTRP	190*	1916	2145	2153	2221					
WUSE	1654	1665	1750*							
WZERO	1687	1976*								
W HOLD	342	351	369*							
WIT	111	119	550	551	552	554	555	557	558	560
	561	562	563	564	565	566	567	570	571	572
	574	575	576	688	691	698*				
WITPT	111*	339	753	770	1034	1054	1057	1126	1248	1245
	1251	1506	1513	1517	1520	1773	1875			
ZC	1958	1958	1967*							
ZFIN	1994	2015*								
ZFRS	1992	1996	1999	2018*						
ZLEAVE	1993	1991	1997	1998*						
ZNM	1957	1966*								
ZST	1955	1965*								